



BLUETOOTH SPEAKER

1928 SMALL E3

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF AC PLUG TO WIDE SLOT. FULLY INSERT.

MADE IN CHINA
©2013 RESTORATION HARDWARE, CORTE MADERA, CA 94925 USA

INSTRUCTIONS

PLAYING MUSIC VIA THE AUXILIARY INPUT

The 1928 **SMALL E3** Vintage Bluetooth® Speaker features an auxiliary jack for connecting external audio devices, such as MP3 players, CD players, iPhones or iPods (excluding the 3rd generation iPod® Shuffle), to broadcast through the speakers.

1. Use an audio cable with 3.5 mm stereo plugs on each end of the cord.
2. Plug one end into the Aux-In Jack on the **SMALL E3** Speaker and the other end of the cable into the line-out or headphone jack of your audio device.
3. Adjust the Volume Control on the **SMALL E3** Speaker to obtain the desired volume. Operate all other functions on the audio device as usual, such as selecting a playlist.
4. If you use the Aux-In function while linked via Bluetooth® audio, Bluetooth® audio will be temporarily disconnected once the audio cable is plugged in. Unplugging the cable from the auxiliary jack will enable Bluetooth® audio to resume.

TROUBLESHOOTING GUIDE

SYMPTON	POSSIBLE PROBLEM	SOLUTION
No Sound	The 1928 Vintage Bluetooth® SMALL E3 Speaker is not linked with the Bluetooth®-enabled device.	Go through "Operating the Unit" process to link the speaker.
	The SMALL E3 Speaker could be out of range.	Relocate the SMALL E3 Speaker within an operating range of 30 feet from the Bluetooth® device.
	Volume set too low.	Press the "Volume +" button to increase the sound level.
Sound is distorted.	Volume level is set too high.	Decrease the volume of the speaker.
	Sound source is distorted.	If the source sound file is of poor quality, distortion and noise are easily noticed with high-power speakers, try a different audio source, such as a music CD. If you are using an external sound source, like an older generation iPod, try reducing the output volume on the actual device. Also try turning "Bass Boost" off or change the EQ setting.
Unit gets warm after extended play at high volume.		This is normal but can be solved by turning the speaker off for a period of time or by lowering the volume.

COMPLIANCE WITH FCC REGULATIONS

The 1928 **SMALL E3** Vintage Bluetooth® Speaker complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Statement:

This equipment has been tested and found to comply with the limits for Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: Modifications to this product will void the user's authority to operate this equipment.

POWER SOURCES

This unit operates on AC 120V~ 60Hz. Do not attempt to operate on any other power source. You could cause damage to the unit and void your warranty.

Please be sure the power outlet you plug this unit into is working and receives constant power.

PRODUCT FEATURES

The 1928 **SMALL E3** Vintage Bluetooth® Speaker has the following features:

- Wireless playback of music from any Bluetooth®-enabled device via a wireless connection.
- Up to 33 feet (10 meters) operating range.
- An auxiliary input jack to play music from an iPod or MP3 audio device.
- Volume control.

ACCESSORIES INCLUDED:

- User's Manual
- 3.5mm AUX in cable
- A/C adapter

PRODUCT USE

1. In power-off mode, slide the Power Off to Power On. After about 3 seconds, a beep will be heard and Bluetooth® Status Indicator will flash in amber.
2. To turn the unit off, slide the Power On to Power Off position.

IMPORTANT SAFETY INSTRUCTIONS

1. Read, follow and keep these instructions for the 1928 **SMALL E3** Vintage Bluetooth® Speaker for future reference.
2. Install the **SMALL E3** Speaker in accordance with the manufacturer's instructions.
3. Do not use the **SMALL E3** Speaker near water, and do not expose it to any liquid.
4. Do not block any ventilation openings.
5. Unplug the speaker from the outlet before cleaning. Do not use liquid or aerosol cleaners. Use only a dry cloth to wipe clean.
6. Do not install the **SMALL E3** Speaker near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
7. Do not place the **SMALL E3** Speaker on an unstable cart, stand, tripod, bracket or table. The speaker could fall, causing serious injury to a person as well as damage to the product.
8. Protect the power cord from being walked on or pinched, particularly at plugs and the area where the cord connects to the speaker.
9. Unplug the **SMALL E3** Speaker during lightning storms or when not in use for extended periods of time.
10. Do not defeat the purpose of a polarized or grounding-type plug. A polarized plug has two blades with one visibly wider. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician to replace an obsolete outlet. Only use attachments/accessories specified by the manufacturer for use with the 1928 **SMALL E3** Vintage Bluetooth® Speaker.
11. Do not overload the wall outlet. Use only the power source as indicated.
12. Never push objects of any kind into the speaker's openings, as this could engage voltage points or short-out parts, resulting in a fire or electric shock. Never spill liquids into any of the speaker's openings.
13. In the event of damage to the **SMALL E3** Speaker, unplug the unit from the wall and consult a qualified service technician. The following instances require professional service:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled or objects have fallen into the speaker's openings,
 - c) If the speaker has been dropped or exposed to rain or liquid,
 - d) If the speaker does not operate normally by following the User's Manual. Adjust only those controls that are detailed in the operating instructions. The improper adjustment of internal components commonly results in damage that then requires a service technician to restore the unit to its normal operation.
14. Upon completion of any service or repair to this speaker, ask the technician to perform safety checks to the unit.

PROTECT YOUR FURNITURE

The 1928 **SMALL E3** Vintage Bluetooth® Speaker is equipped with non-skid rubber feet to prevent the object from moving when you adjust the controls. These feet are made from a non-migrating rubber material, which is specially formulated to avoid marks or stains to your furniture. However, certain types of oil-based furniture polishes, wood preservatives or cleaning sprays may cause the rubber material to soften, resulting in marks or residue on the furniture.

To prevent damage to your furniture, we strongly recommend purchasing self-adhesive felt pads, available at hardware stores and home improvement centers. Apply these pads to the bottom of the rubber feet before placing the product on your wooden furniture.

LINKING THE UNIT

To link a Bluetooth®-enabled cell phone or other Bluetooth®-enabled device to the speaker:

1. From the power-off mode, slide to the 'on' position. A Bluetooth® Status Indicator will flash in amber. The speaker is now ready to link to your Bluetooth® device.
 - Turn on the Bluetooth® function of your Bluetooth® device, enabling the search or scan function to locate the **SMALL E3** Speaker.
 - Select **SMALL E3** from the list when it appears on your device's screen. If required, enter the pass code "0000" to connect the **SMALL E3** Speaker with your device.
 - To link with a different Bluetooth®-enabled device, disconnect with the current source by powering off. The Bluetooth® Status Indicator on the speaker will flash rapidly and will then issue 2 short beeps, signaling that the unit is ready to link to a new Bluetooth® source. Repeat the first two, above-listed, steps.
2. In turning on the **SMALL E3** Speaker, a beep will sound as the unit searches for the last linked device. The Bluetooth® Status Indicator will flash amber. Once the speaker locates the Bluetooth® device, a beep will be heard and the Bluetooth® Status Indicator will stop flashing and remain lit (amber) to signal a connection.
3. After successfully linking, you can begin playing music from your Bluetooth® device through the speaker.
4. The default volume level of the speaker will function at low level. Adjust the volume on your Bluetooth® unit or use the interface panel of the **SMALL E3** Speaker to your desired level of volume.

Notes:

1. Refer to the owner's manual of your cell phone, tablet PC, computer or other Bluetooth®-enabled device for wireless operation, as this could vary by product.
2. If your device does not support A2DP (Advanced Audio Distribution Profile), your Bluetooth®-enabled device will not play the music through the speaker, even if connected.
3. If you are linking your computer to the **SMALL E3** Speaker using Bluetooth®, you may need to adjust the volume from your computer's default setting.
4. If broadcasting music from your cell phone, an incoming call will cause the **SMALL E3** Speaker to pause the music and will automatically resume after ending the call.

Re-linking to a cell phone

If your cell phone is already linked with the **SMALL E3** Speaker but became disconnected (even with both Bluetooth® devices enabled), you need to re-link:

1. Turn off the **SMALL E3** Speaker and then turn it on again to initiate a re-link to your cell phone. After 3 seconds, a beep will sound and the Bluetooth® Status Indicator will flash amber. After 2 more seconds, a series of short beeps will be issued as the speaker attempts to connect. The Bluetooth® Status Indicator will stop flashing and remain lit (amber) and a short beep will be heard once the **SMALL E3** Speaker and your cell phone were successfully re-linked.
2. You can also re-link the speaker via the Bluetooth® feature of your cell phone. Refer to the owner's manual of your cell phone for detailed instructions.