



## The ultimate smartphone Hub & Ringer

### QUICK START GUIDE (ENGLISH)

#### Welcome!

Thank you for purchasing Renny HOME™, the most advanced *Bluetooth*® Ringer on the market. Renny HOME™ allows you to connect two phones, and our proprietary Autolinx™ technology connects to your phone "automatically", eliminating the need to manually connect when receiving calls or playing music.\* Renny HOME™ has an incredible range to accommodate most homes when placed in a central location such as a kitchen or living room.\*\* No other product this size offers the phone management technology and audio quality offered by Renny HOME™. Its rechargeable Li battery means you can take Renny HOME™ everywhere, and the optional car cable allows you to have a handsfree *Bluetooth* system in your car with outstanding audio quality for music. We are confident that Renny HOME™ will become one of your favorite phone accessories!

### Procedures, General Operation (M1+M2)

#### Operating Modes

Renny HOME™ has two different Operating Modes to choose from:

1. Mode 1 (M1, or "Music" Mode), entered by sliding the Power Slider to the center position, enables all of your smartphone's sounds to be heard through Renny HOME™ – including text and email notifications, media sounds from games and videos, and music streaming.
2. Mode 2 (M2, or "Ring Only" Mode), entered by sliding the Power Slider to the far left position, keeps all media audio (from games, videos, notifications, etc.) on your smartphone's built-in speaker. This mode only rings when you receive an incoming call, and can still be used with Handsfree Answer™ (discussed

below). **Note: You can not stream music when in Mode 2.**

#### Turning on the device / Installing Antenna / Charging Battery

1. Using the provided USB Charger, plug Renny HOME™ into a powered wall outlet. PLEASE CHARGE FOR AT LEAST 3 HOURS PRIOR TO INITIAL USE.
2. Screw the provided antenna into the Antenna Connector on the left side of the Renny HOME™. **Note:** Renny HOME™ will not work properly without this powerful antenna installed.
3. Switch the power slider on the back of Renny HOME™ to either M1 (Music) or M2 (Ring Only). All buttons glow Blue.
4. Renny HOME™ is designed to always stay on and plugged in, but is also portable. The battery takes about 3 Hours to fully charge when plugged in.

#### Adjusting Volume

1. Press V+ and V- buttons to adjust volume up and down. An audible beep will be heard when Maximum Volume is reached, although additional volume may be possible using your phone's volume controls.

#### Charging via the USB charging Port

1. Renny HOME™ is equipped with a USB charging port that can be used to charge a smartphone. Do not use to charge a smartphone or tablet with a screen larger than 6 inches. Do not use while streaming music through the Renny HOME™.

#### Turning Blue LED's On and Off

1. Press and Hold Forward ►► and Back ◀◀ buttons together at the same time for 3 seconds to toggle LED's On and Off.

### Procedures, Phone Operation (M1+M2)

#### Connecting your Phone the First Time

1. Verify the Renny HOME™ is turned on and charged for at least 3 hours.
2. Press and Hold the Phone  icon on the Renny HOME™ for 3 seconds. A tone will sound and the LED will blink.
3. Connect your mobile phone to the device via the *Bluetooth* settings for your phone. See your phone manual or service provider for details. Enter "0000" if asked for a password. Additional *Bluetooth* connection information is also available at [www.olenstechnology.com](http://www.olenstechnology.com) in "Support/Troubleshooting".
4. Repeat Steps 2 and 3 to connect a second phone.

5. **Note:** The Renny HOME™ can only be connected to 2 phones at a time. However, the Renny HOME™ can be paired to more than 2 phones at a time by repeating Steps 1 and 2 above as long as a previously connected phone is out of range or turned Off. Renny HOME™ will then connect to the first paired phone that comes within range.

#### Changing Ringtones

1. Press the Music Note  button until a desired ringtone is found. (Note: 2 connected phones play same ringtone.)

#### Answering a Call

There are two ways to answer an incoming call:

1. Press Phone  button when Renny HOME™ rings
2. If Handsfree Answer™ is enabled, say "Answer" out loud after Renny HOME™ announces the caller's name or number.

#### Ending a Call

1. Press Phone  button

#### Rejecting a Call

There are two ways to reject an incoming call:

1. Press and Hold the Phone  button for 3 seconds, the call will go to Voice Mail.
2. If Handsfree Answer™ is enabled, say "Ignore" out loud after Renny HOME™ announces the caller's name or number.

#### Turning Caller ID Announce with Handsfree Answer™ On/Off

1. Press and Hold the Music Note  button for 3 seconds until a tone is heard.

#### Power Down

1. Switch the power slider on the side of the Renny HOME™ to OFF (The LED should turn off).

### Procedures, Music Operation (M1 Only)

Renny HOME™ will stream music from your smartphone or tablet when connected in Music Mode (M1). Please refer to your phone's manual as music player applications vary depending on the make and model of your smartphone or tablet. **Note: You can not stream music when in Mode 2.**

#### Skip to Next Song

1. Press Forward ►► button

#### Skip to Previous Song

1. Press Back ◀◀ button

### Troubleshooting

### The Renny HOME™ won't turn on.

1. Confirm Renny HOME™ USB Charger is connected to the device. DO NOT USE ANY OTHER CHARGER!
2. Charge the battery.

### My phone isn't detecting the Renny HOME™.

1. Make sure your device is *Bluetooth* enabled.
2. Verify the device is turned on.
3. Consult phone manual for *Bluetooth* settings.
4. Make sure the phone is within range.\*\*

### The person I'm talking to can't hear me clearly through the Renny HOME™ speakerphone.

1. Make sure to face and talk directly into the microphone located just right of the LED indicator.

### Reset Button.

1. Renny HOME is equipped with a Reset Button that erases the memory of all previously paired phones. To activate, Press and Hold with a paperclip for 3 seconds. **Note:** The Reset Button does not erase your phone's Bluetooth memory of paired devices, so you must also unpair the Renny HOME on your phone by referring to your phone's manual.

### Specifications

Charging Voltage: 5V / Output Power: 5W


Lithium-ion Battery: 3.7V/800mA

Size: W96\*L118\*H98mm / Weight: 432.3 Grams

Speaker Spec.: 52mm 2Ω 5W

Frequency Response: 60HZ-20KHZ

Distortion: ≤0.5% SNR: ≥95dB

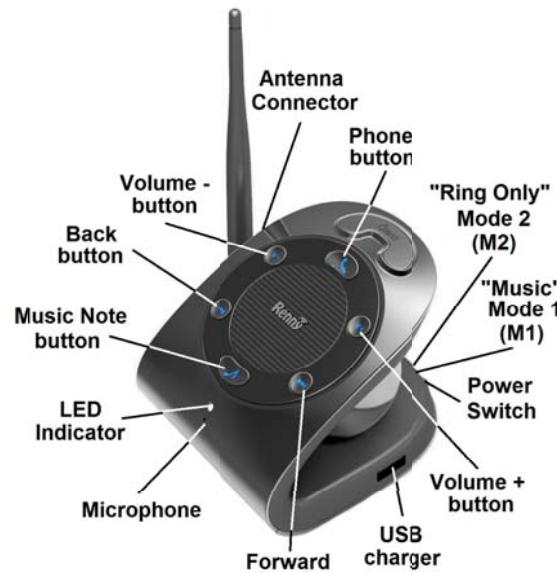

### Contact Information

If you need help setting up Renny HOME.™ or need to troubleshoot, please go to the "support/troubleshooting" tab at [www.olenstechnology.com](http://www.olenstechnology.com) or contact us directly by email or phone (below). Our goal is for you to be 100% satisfied with your purchase, and if you are not for any reason, please let us know. If you purchased from a retailer, please do not contact them. We're here to help! Please contact us directly:

**Address:** Ölens Technology  
P.O. Box 386  
Pismo Beach, CA 93448

**Phone (USA):** +1(805) 489-3636

**Website:** [www.olenstechnology.com](http://www.olenstechnology.com)

**Email:** [info@olenstechnology.com](mailto:info@olenstechnology.com)

### Warranty

12 months, covers factory defects only. Damage from misuse, impact or incorrect USB Charger is not covered. No other warranties are covered or implied. See [www.olenstechnology.com](http://www.olenstechnology.com) for additional warranty information.

**\*Some cellular phones lose connection after usage, please check the specification of your cellular phone for more details.**

**\*\* The introduction of objects and/or walls between the Renny HOME™ and the connected phone(s) can**

significantly reduce the range.

### Certifications



This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions:  
[1] This device may not cause harmful interference, and  
[2] this device must accept any interference received, including interference that may cause undesired operation.

Ölens Technology



### SAFETY INFORMATION

**WARNING!** Please read these safety warnings and cautions to ensure your personal safety and prevent property damage.

#### Fire and Electric Shock Hazard

Do not expose Renny HOME™ to liquid, moisture, humidity, or rain. Do not use Renny HOME™ near a bathtub, sink, sauna, pool, or steam room. Exposure of Renny HOME™ to moisture could result in electric shock. Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint, or insert foreign objects in to Renny HOME™. Such actions could result in electric shock.

Clean Renny HOME™ only with a dry cloth.

Do not expose Renny HOME™ to extremely high or low temperatures.

Do not leave Renny HOME™ in direct sunlight for extended periods of time.

Do not leave Renny HOME™ near open flames such as cooking burners, candles, or fireplaces.

Do not block any ventilation openings.

#### Battery/Charger Hazard

Do not dispose of Renny HOME™ in a fire. The battery could explode causing injury or death.

Only charge the battery in accordance with the user instructions supplied with Renny HOME™.

Do not attempt to disassemble the Renny HOME™ charger or force open the built in battery because this may result in electric shock.

Do not charge Renny HOME™ in damp areas or in extremely high or low temperatures because this could result in electric shock.

Do not clean Renny HOME™ when it is being charged. Always unplug the charger first before cleaning Renny

HOME™.

#### **Automobile Accident Hazard**

Do not leave or store Renny HOME™ or any of its accessories near or over your automobile's air bag because serious injury may result when air bag deploys.

#### **Fall Hazard**

Do not place Renny HOME™ on high surfaces such as shelves. During music playback Renny HOME™ may move which could cause Renny HOME™ to shift and fall off the edge.

#### **CAUTION!**

Do not use abrasive cleaners to clean Renny HOME™ because this could cause scratches and damage.

Do not bring Renny HOME™ in to contact with any sharp objects because this could cause scratches and damage.

Do not insert anything into Renny HOME™ unless otherwise specified in the user instructions. This may damage the internal components.

Do not attempt to repair, modify, or disassemble Renny HOME™ yourself, it does not contain any user-serviceable components.

Do not attempt to replace the Renny HOME™ battery, it is built in and is not changeable.

Use only the manufacturer supplied charger to charge Renny HOME™. Other chargers may look similar, but using them could result in electric shock and could damage Renny HOME™.

Observe all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.

Turn off Renny HOME™ prior to boarding an aircraft. Do not use Renny HOME™ inside an aircraft unless allowed by the airline.

Dispose of Renny HOME™ and the Renny HOME™ battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

#### **FCC Disclaimer**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not

occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

#### **This device complies with Part 15 of the FCC rules.**

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

#### **Caution!**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

#### **RF warning statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

U.S. Patent No.7,945,292. Renny HOME is a trademark of Olens Technology. Android is a trademark of Google Inc. iPhone is a trademark of Apple Inc., registered in the U.S. and other countries. Bluetooth is a registered trademark of Bluetooth SIG. All other trademarks identified herein are the property of their respective owners.

© 2014 Ölens Technology. All Rights Reserved.