## Wireless computer speaker user manual L-098



- Power switch
- Power indicator
  DC 5V power input jack
  MIC (Audio monitoring)

## Product features:

to let people have better using experience, we develop this nearly all computer speakers on the market are wired. In order can give you much better listening feeling. speaker whose bass is more aggressive and high pitch is lusher, whose maximum output are less than 3W, this wireless computer output 9W. Compare with those ordinary wired computer speakers software on computer. This computer speaker is with maximum can connect to the computer wirelessly without need to install any wireless computer speaker, which is very convenient to use and Welcome to use this product of our company! As known to all,

## Function description

Short press to answer or hang up the calls; C:Hold press 3 seconds to turn on or turn off this speaker

indicator lights are all on without flash; charging status when charging .when fully charged,the four (2) To show left power status when playing; To show

(3)DC 5V IN: DC 5V power input jack;

(4)MIC: Call audio monitoring, best effect within distance 10-20CM

## Wirelessly connect to computer:

computer, at this time the blue light of the USB adapter will flash. (2)Hold press for 3 seconds to turn on this speaker, at this time 1)Insert the accessory USB adapter to the USB port of

environment over 45 degrees Celsius; (7)Do not charge under unstable voltage or near the

(8)Do not charge under humid environment or when nobody

No. Pro

(1)The charging current of the battery is about 500MA. So Please

6. Battery charging and risk:

objects around; (9)When charging, please make sure there are no flammable

immediately cut off the power, and move the product to a safe (10)When charging, if the product smoke or overheat, please

## Technical Parameters:

battery is fully charged;

When four indicator lights are all on without flash, means the charge may damage the product or lead to failure to charge; computer USB port. Using bad quality or unsuitable chargers to certifications to charge this product or charge through the with current more than 500MA and has passed some safety kindly use the standard DC5V mobile phone charger which is

(2)When charging, the charging indicator lights will flash;

(3)Battery charging time is about 5-6 hours. When fully charged

(1)Maximum output: 9W

(3)Effective Bluetooth connection distance: about 10 meters (2)Effective computer connection distance: about 5 meters

(4)Frequency response: 100HZ-18KHZ

## Packing Accessories:

(1)wireless speaker(built in a 2000MAH battery): 1PC

(2)Emission USB adapter: 1PC

(3)Battery door circle open tool: 1PC

(4)1.5M USB charging cable: 1PC

(5)User manual: 1PC

explosion;

fire or explosion;

conductor like metal to connect the anode (+) and the cathode new battery. We suggest you to use our original standard battery shorter and shorter, and you need to get ready to replace with shorter after fully charged, means the lifetime of the battery is third volume. When the playtime of the battery is shorter and can play about 4 hours in biggest volume, about 12 hours in one

(6)Do not throw this product into fire, may have risk to cause

(5)Do not take out the battery and charge it with other charging (-)of the battery directly, may lead to short circuit and then cause (4)Battery is belong to dangerous product. Do not use electrical

the blue light of the power switch will flash and make a hint tone of power

. Remove and install battery illustration:

turned off the speaker will not automatically shutdown.) computer's USB port still have voltage output after the computer is to computer, which can help to save power ofthe speaker. (If some make a hint tone of successful connection, at this time both the blue the speaker will automatically shutdown 10 minutes after disconnect (4)If you forget to turn off the speaker when you turn off computer. means the speaker has connected to the computer successfully. lights of the USB adapter and the speaker will stop flashing, which (3)After several seconds to decades of seconds, the speaker will

# . Bluetooth connection and call (take iPhone as a sample)

computer, or move the speaker over 10 meters away from the and the computer. computer, just in order to cut off the connection between the speaker (1)Take away the USB adapter from the computer, or turn off the wireless Bluetooth speaker. The Bluetooth operation is as follows This product is not only a wireless computer speaker, but also a

audio of your mobile phone can be played through the speaker of the power switch & will be on without flash. At this time, the will be a hint tone of successful connection and also the blue light If the speaker has connected to the Bluetooth successfully, there and click to connect the Bluetooth name "computer speaker one" phone, then the mobile phone will search the Bluetooth devices (2)Turn on the speaker, and open the Bluetooth of the mobile

## Picture 3: Make the battery vertically down, pat the speaker body to shake out the battery tool to the hole of the battery door

Frequent problems solutions

not turn turn is product	speaker not ect to the outer	sound is	sound	blems
A. Check if the battery has no power. If yes, please charge the battery:  B. Remove the battery and install again.	A. Check if the blue light of the USB adapter is on or not, if not on, the USB port of computer maybe without voltage output, please change to insert another USB port.  B. Turn off the speaker and turn on again or take down the USB adapter from computer and insert again.	A There maybe electrical interference to the wireless signal; B. The power amplifier IC maybe, overheating, please turn off the speaker for a while and then can restore to be normal.	A. Check whether the volume of computer has been turned on: B. Check whether the volume of music software has been turned on: C. Some computers need to choose playing device as follows: Right-click the mouse on Sal. Include playing device. Thoose "USB Audio Device", then can play; D. Some computer USB port has roolem for example, the left USB port of laptop computer has no audio signal output, the please change to try the right USB port). Take away the audio cable from the 3.5mm audio jack of computer; F. Chack If the speaker has connected to the computer successfully. If accessfully is a consecsually between the ball is lights of the USB adapter and the speaker will be on without flash.	Solutions

### FCC Statement:

pment has been tested and found to comply with the he equipment. ble for compliance could void the user's authority to or modifications not expressly approved by the party

nt does cause harmful interference to radio or television nce will not occur in a particular installation. If this he user is encouraged to try to correct the interference n, which can be determined by turning the equipment off ons, may cause harmful interference to radio nd, if not installed and used in accordance with the nt generates uses and can radiate radio frequency narmful interference in a residential installation. This nese limits are designed to provide reasonable protection cations. However, there is no guarantee that a Class B digital device, pursuant to Part 15 of the FCC more of the following measures:

- nt or relocate the receiving antenna.
- ct the equipment into an outlet on a circuit different from se the separation between the equipment and receiver. nich the receiver is connected.
- undes ed operation. nce received, including interference that may cause rmful interference, and (2) this device must accept any to the following two conditions (1)this device may not device complies with part 15 of the FCC rules. Operation t the dealer or an experienced radio/TV technician for