

## **LOST AND FOUND UNIVERSAL LOCATOR/PAGER USER MANUAL**

### **Included:**

- 1 Transmitter
- 1 Backing board + Clip
- 1 Dry-Erase Marker
- 2 Tags
- 2 Double Sided Adhesive Strips

### **Operating Instructions:**

1. Mount the Lost & Found board to a fixed location in the home or workplace. (i.e. wall, fridge, inside of a cupboard, etc).
2. List frequently lost items on the board. (i.e. keys, remotes, glasses cases, purses, etc).
3. Attach Lost and Found Tags to the frequently lost items listed on the board using the key ring hole or double sided adhesive strips.
4. To find an item, turn the dial on the Lost and Found Transmitter to match the missing item number and press the button for 3 seconds. This will cause the corresponding Tag to beep.
5. Once the Tag is found, press the button on the tag to stop the beeping.

### **Battery Replacement for Tags:**

Suggested battery change every 5/6 months.

1. Locate battery cover.
2. Slide battery cover off of tag.
3. Remove battery.
4. Replace 1 CR2032 3V button cell battery with positive side up.
5. Slide battery cap back onto tag.

### **Transmitter Battery Replacement:**

Suggested battery change every 2 years.

1. Slide Transmitter out of clip.
2. Locate top of Transmitter.
3. Pull top of Transmitter to separate from bottom.
4. Remove batteries.
5. Replace 2 CR2032 3V button cell batteries with positive side up.
6. Place top of Transmitter back on bottom.
7. Slide back into clip.

**Warning:** DO NOT mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. DO NOT dispose of batteries in fire. Batteries may explode or leak. Please dispose of batteries properly.

**Warning:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Separate approval is required for all other operating configurations, including portable configurations with respect to CFR Title 47 Part 2.1093 and different antenna configuration. Any changes or modifications of this product, not approved by manufacturer will void the user's authority to operate the equipment. The FCC regulates marketing, sale and importation of radio frequency devices. When importing a radio frequency (RF) device the importer or ultimate consignee, or their designated broker, may be required to declare that the radio frequency device meets the FCC importation conditions under Title 47 of the Code of Federal Regulation (CFR) Section 2.1204. See KDB 997198 Importation Guidelines for more details. The antenna must be installed such that it is a distance of at least 20 cm between the antenna and users. The antenna must not transmit simultaneously with any other antenna or transmitter, except in accordance with FCC multi transmitter product codes.

Any changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.