

---

## TABLE OF CONTENTS

<b>TABLE OF CONTENTS.....</b>	<b>1</b>
<b>1 OUTLOOK DESCRIPTION .....</b>	<b>3</b>
<b>2 POWER BUTTON USAGE .....</b>	<b>4</b>
<b>3 TOUCH-SCREEN NAVIGATION .....</b>	<b>5</b>
<b>4 U-Disk.....</b>	<b>5</b>
<b>5 USING MICRO-SD CARD.....</b>	<b>5</b>
<b>6 GETTING STARTED .....</b>	<b>6</b>
Charge the device .....	6
Turn the device on.....	6
Wi-Fi Network Setup .....	6
HDMI video play.....	6
USB device mode options .....	6
<b>7 DESKTOP .....</b>	<b>7</b>
<b>8 SCREEN LOCK.....</b>	<b>9</b>
<b>9 PRE-LOADED APPLICATIONS .....</b>	<b>9</b>
<b>10 STATUS AND NOTIFICATION AREA .....</b>	<b>10</b>
<b>11 APPLICATION MANAGEMENT.....</b>	<b>11</b>
Install Applications .....	11
Uninstalling Applications .....	12
<b>12 People .....</b>	<b>12</b>
Create Contacts.....	12
Add contacts to Favorites .....	13
Edit Contacts .....	13
Delete Contacts.....	13
<b>13 CLOCK.....</b>	<b>13</b>
Alarm .....	13
Countdown.....	14
Stopwatch.....	14
<b>14 BROWSER .....</b>	<b>15</b>
<b>15 CALENDAR.....</b>	<b>15</b>
Add Event .....	15
<b>16 CAMERA.....</b>	<b>16</b>
Take Pictures .....	16
Take Videos.....	16
Single-motion Panorama .....	16
<b>17 CALCULATOR .....</b>	<b>17</b>
<b>18 MYRECODER .....</b>	<b>17</b>
<b>19 EMAIL .....</b>	<b>17</b>

<b>Add Email accounts .....</b>	17
<b>Email Inbox .....</b>	18
<b>Edit Email Accounts.....</b>	18
<b>Delete Email Accounts .....</b>	19
<b>20 FILE BROWSER.....</b>	19
<b>Copy Media between Computer and Tablet .....</b>	20
<b>Delete files .....</b>	20
<b>21 MY MUSIC.....</b>	20
<b>Play Music.....</b>	20
<b>Create Music Widget .....</b>	21
<b>The Operation with Music and Playlist.....</b>	21
<b>Sort by title or date added .....</b>	22
<b>22 AIR SHOW.....</b>	22
<b>Air Show Settings .....</b>	22
<b>Usage .....</b>	22
<b>Use Case .....</b>	23
<b>23 AIR SHARE .....</b>	24
<b>Air Share installation and connection .....</b>	24
<b>Air Share local Photo, Music, Video .....</b>	25
<b>Air Share Applications .....</b>	26
<b>Air Share Documents.....</b>	26
<b>Air Share Remote APP .....</b>	26
<b>Air Share Remote Wi-Fi Setting .....</b>	26
<b>Air Share Air Control .....</b>	26
<b>Check update .....</b>	27
<b>24 Gallery.....</b>	28
<b>Switch the view storage area .....</b>	28
<b>Classification of photos and videos list.....</b>	28
<b>View, play the photos and videos .....</b>	28
<b>The operation with picture or video playback.....</b>	28
<b>Delete the photos and videos in the list.....</b>	29
<b>23 SCREEN CAPTURE .....</b>	29
<b>26 WI-FI.....</b>	29
<b>27 Wireless display.....</b>	30
<b>Source and Sink.....</b>	30
<b>How to connect .....</b>	30
<b>29 GPS.....</b>	31
<b>30 PPPoE SETTINGS.....</b>	32
<b>31 ETHERNET .....</b>	32
<b>32 SETTINGS.....</b>	32
<b>FREQUENTLY ASKED QUESTIONS .....</b>	35
<b>BATTERY MANAGEMENT .....</b>	36
<b>Charge battery.....</b>	37
<b>IMPORTANT SAFETY PRECAUTIONS .....</b>	37

## 1 OUTLOOK DESCRIPTION


Front:



**Left side:**



**Top:**

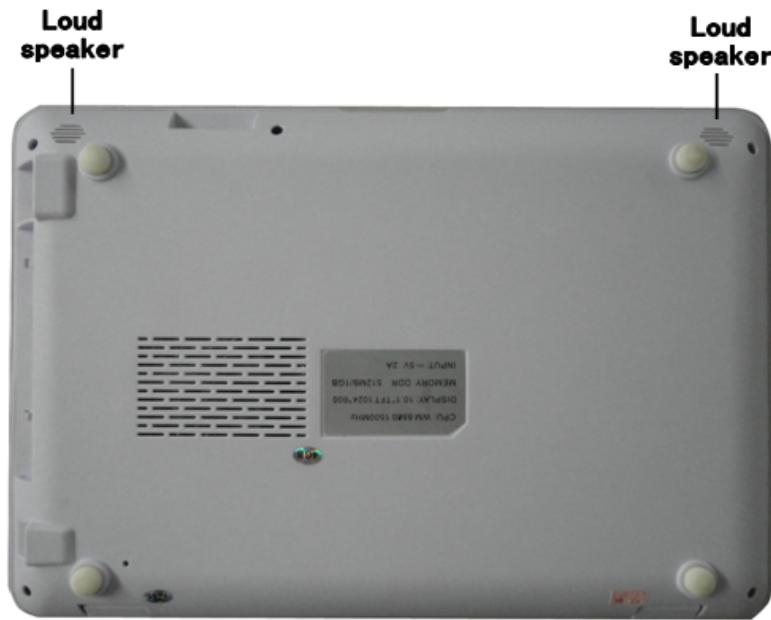

## 2 POWER BUTTON USAGE

**Turn On:** Press the power button and hold for 2 seconds.

**Turn Off:** Press the power button and hold for 2 seconds → tap **Power off** → tap **OK**.

**Reboot:** Press the power button and hold for 2 seconds → Tap **reboot** → tap **OK**.

**Airplane mode:** Press the power button and hold for 2 seconds → Tap **Airplane mode**.

**Silent mode:** Press the power button and hold for 2 seconds → Tap **Silent mode**.

**Force Off:** If device does not respond, press and hold the power button for 5 seconds.

**Warning: Force off could lead to unpredictable system errors!**

**Reset:** Press the reset button could be reset the device. It's will clear the all data, Please careful with the function.

★ After the current reset function can't restart, can only be turned off, so you need to press the power button restart the device after reset.

---

### 3 TOUCH-SCREEN NAVIGATION

The touch-screen allows for quick, easy and convenient navigation for all applications.

Refer to the following method to operate the touch screen by the finger pulp:

**Tap:** Quick tap & release on an item on the screen.

**Touch & hold:** Touch and hold in place approx 2 seconds, and then release to display an options window.

**Finger slide:** Touch & slide your finger across the screen and then release.

**Two points to zoom in or out:** Press and hold any two points relative or opposite direction to drag in desktop, video play interface, picture view interface and so on .it will zoom in or out the interface.

★ To avoid scratching or crushing, do not place objects on the touch screen surface.

---

### 4 U-Disk

#### Insert U-Disk

Insert your U-disk into the device via USB host transfer cable. When ready for use, enter into the file browser, switch to the USB folder to view it.

#### Remove U-Disk

Close all applications or documents which have been opened on the U-disk. Tap  →

**Settings → Storage → USB storage → Unmount this storage device.** When it displayed **Mount this device** and then you can unplug the U-disk.

★ Don't insert and remove the U-disk unexpectedly and repeatedly in a short time, as this may cause damage to the U-disk.

---

### 5 USING MICRO-SD CARD

★ The device supports a maximum 32GB micro SD card.

Insert your card into the micro SD slot until it clicks into place. It's OK.

#### Remove micro SD Card

Close all applications or documents which have been opened on the card. Tap  →

**Settings → Storage → SD card → Unmount this storage device.** When it displayed **Mount this device** and then press the card lightly; it is partially ejected

allowing you to pull the card out.

- ★ *Don't insert and remove the SD card unexpectedly and repeatedly in a short time, as this may cause damage to the card.*
- ★ *We recommend using major brands of memory cards to avoid incompatibility.*

---

## 6 GETTING STARTED

### Charge the device

- ★ *It is not recommended to use the device while charging.*

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

### Turn the device on

Press & hold the power button 2 seconds.

### Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

1. Tap  → **Settings**.
2. Slide **Wi-Fi** button on the right switch to **on**.  
The device automatically scans and lists all local **Wi-Fi** Network found. If the **Wi-Fi** icon in the right corner has a lock, you need to enter the password to connect.
3. Tap the desired network to which you want to connect → enter the **Network Password** if applicable → tap **Connect**.  

4. Tap  to return to the Desktop screen.

★ *If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap **Add Wi-Fi network** and follow the prompts to add your network.*

### HDMI video play

This device support through the Mini HDMI connected with TV, it makes TV and device displayed synchronic. For using this feature, insert the Mini HDMI cable into the right side of the device interface to connect with TV.

### USB device mode options

Before using this feature please connect to PC via the Mini USB cable.

#### USB debugging

Debug mode used to debug program for developers. ADB driver needs to be installed before using this mode, Installation method as follows:

(1) First switch on the device to **Install Driver** mode, And then find the "CD driver" (such as F:) on your PC, Use the resource manager to open the CD drive , then copy all files in the folder (\adb\_driver) to your PC;

(2) And then switch to **USB debugging** mode on the device, If the PC-side prompts to install the driver, select manual installation, and specify the drive path to the location where you saved the ADB driver.

#### **Media Transfer Protocol(MTP)**

Media transfer protocol (MTP) mode used to synchronize transmits data and the users can copy, paste or delete the files in the device. If this is the first time using this mode on your PC, you need to install the driver. Installation method as follows:

Firstly, switch to **Install Driver** mode on the device, and then your PC will automatically pop-up driver installation interface, users need only follow the prompts, and reboot the system after the installation completed. (If not, please go to the Microsoft official website to download Media Player 11 upgrade package and install.)

#### **Install Driver**

Install driver mode used to install the driver for USB debugging , media transfer protocol (MTP) mode and USB tethering . The media transfer protocol (MTP) mode driver only for Windows XP, Windows 7 support by default, not need to install.

The method of the driver for USB tethering:

Method 1:

- (1) Tap to run \mtp\_driver\autorun.bat, then waiting for the remind of run completion;

Method 2:

- (1) First , copy rndis\_driver\_x86pc folder to PC , then open the USB tethering switch in device;
- (2) If it prompt install driver ,select manual installation ,and assign the driver pathway to the location of rndis\_driver\_x86pc folder.

☆ You can also refer to the *readme.txt* in the "CD drive".

---

## **7 DESKTOP**



1. Back
2. Home
3. Recent Apps
4. Hide status bar
5. Current time
6. Screen capture
7. Volume
8. Wireless network
9. Battery Status
10. Google search
11. Voice search
12. Add Widgets/Apps shortcuts or setting wallpapers and more
13. Tap to view the applications screen

Through add icon or in the desktop make **two points to zoom in** the interface can make many personalized operation, such as, add application, widgets shortcuts.

- ☆ Tap on any application icon to launch it.
- ☆ Touch, hold and then slide icons to reposition them on the screen.
- ☆ Touch, hold and slide icons onto to remove them from the **Desktop** screen.

---

## 8 SCREEN LOCK

Can be set to automatically lock screen or quickly press the power button to manually lock screen. The system provides four lock screen style for users. You can enter **Settings** → **Security** → **Lock Screen** to switch.

The default screen lock mode is none.

---

## 9 PRE-LOADED APPLICATIONS

	<b>People</b>	Create a list with e-mail contacts.
	<b>Clock</b>	It can display the time and set the alarm.
	<b>Browser</b>	Access internet.
	<b>Calendar</b>	Calendar.
	<b>Camera</b>	Take normal photos, panoramic photos and take video.
	<b>Calculator</b>	Do calculation.
	<b>My Recorder</b>	Recording and playback of recorded audio.
	<b>Email</b>	Send/Receive email using your existing email addresses.
	<b>File Browser</b>	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	<b>My Music</b>	Play and manage audio files.


	<b>Air Show</b>	Airshow can make media interconnection of phone, tablet, PC and device simply and quickly.
	<b>Gallery</b>	Play, view, and manage video and photo files.
	<b>Picture Capture</b>	Capture image of the screen.
	<b>Voice search</b>	Voice search.
	<b>Google</b>	Local search and online search.
	<b>Downloads</b>	View the downloads and the download progress.
	<b>Settings</b>	Multiple settings for personalizing and enhancing your Device.

- ★ To move an icon to the Desktop screen, touch & hold the icon, and then release it when it appears on the Desktop screen, or click  icon ,Then click on the icon which you want to add to desktop in the App shortcuts below this interface , the icon will automatically move to the desktop.
- ★ Touch, hold and then slide icons to reposition them on the screen.
- ★ Touch, hold and slide icons onto  to remove them from the Desktop screen.

---

## 10 STATUS AND NOTIFICATION AREA

On the **Desktop** screen, click the icons which in the state bar to view more state information and events.

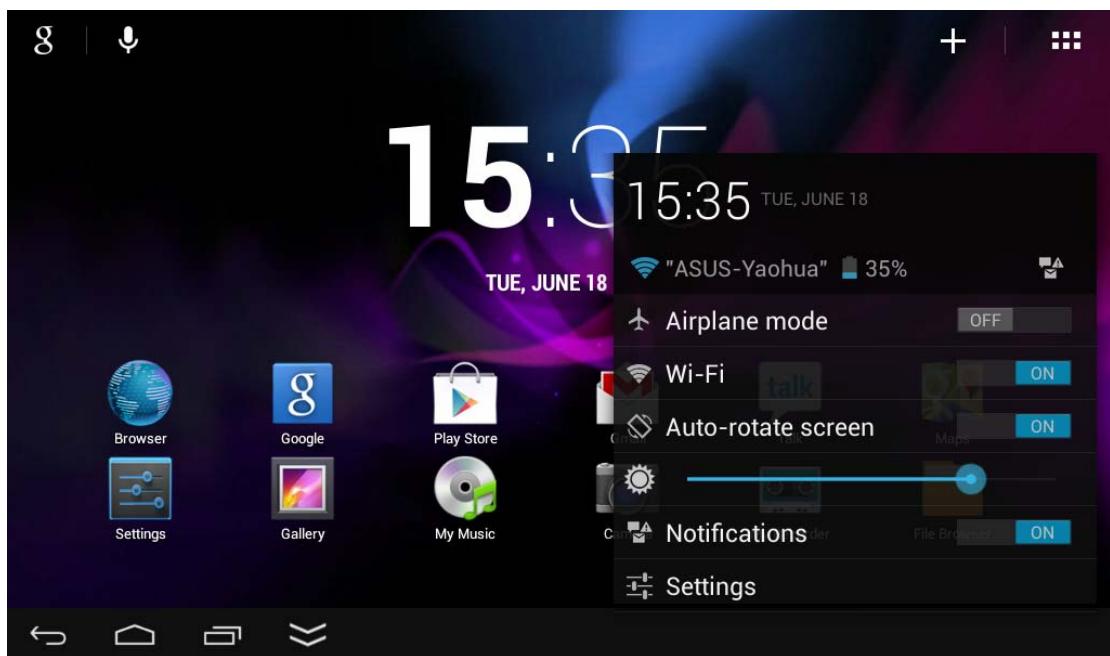

<b>Airplane mode</b>	Switch airplane mode.
<b>Wi-Fi</b>	Access to Wi-Fi settings interface.
<b>Auto-rotate screen</b>	Auto-rotate switch. After opening, and the screen will automatically rotating screen with gravity induction.
<b>Brightness</b>	Setting screen brightness.
<b>Notifications</b>	Open or close the notification.
<b>Settings</b>	Access to settings.

## 11 APPLICATION MANAGEMENT

### Install Applications

Download Android applications on your computer:

1. Copy the **.apk** files that you want to install onto a SD card or USB device → insert or connect to your Device.

2. Tap the  **File Browser** application icon.

3. Tap **SD** or **USB** and locate the folder in which the .apk application files were saved.
4. Tap on a **.apk** file → **Install**.  
The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch the application now, or tap **Done** to return to the **File Browser** screen.

Download Applications direct from a Website:

1. Tap the  **browser** application icon to launch the internet.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is completed, tap  → **Downloads**. Open the applications from app list.

★ *There are many interesting and free Android applications that can be found on the web. Such as launch your web browser and do a search for “Android applications”.*

 
Download Applications direct from Play Store:

1. Tap **Play Store** application icon.
2. Sign your Google account with prompt.
3. After successful sign in, enter into the program or game download page to download and install.

## Uninstalling Applications

You can also quickly and easily uninstall the Android applications that you have installed.

1. Tap  → **Settings** → **Apps** → **All**.
2. Tap the application you want to uninstall → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.



## 12 People

You can create your personal address, including some other you want personal information.

### Create Contacts

1. Click the **PEOPLE** program icon .
2. Click  to create a new contact or click **Create a new contact** button.
3. In the **Name** field, enter the name of the contact.

4. Click **Add another field** on the bottom of the screen ,it can increase the contact information.
5. Click the options to select fill.
6. Input characters in the options point as the contact information.
7. Click **Done** which on the top left of the interface.

### Add contacts to Favorites

1. In **All contacts** page, click a contact which you want to add to favorites.
2. Click the icon  on the right.
3. Click **Favorites** page ,you can view the list of your favorite contacts.

**★ Click the options which on the left corner **All contacts**, **Favorites** and **Groups** to switch the display contents.**

### Edit Contacts

1. In **All contacts** page, click a contact which you want to edit.
2. Select the contact what you want to edit, click the key  which on the top right of the interface.
3. If you finished editing, click **Done** which on the top left of the interface.

### Delete Contacts

1. In **All contacts** page, click a contact which you want to delete.
2. Click the menu key which on the top right of the interface ,choose **Delete**.



## 13 CLOCK



Tap the  **Clock** application icon. You can see the time and date. Alarm clock、count down、stopwatch feature can also set multiple.

### Alarm

#### Add Alarm

1. Tap  **Set alarm** →  Add alarm.
2. Set up your alarm as desired.
3. Tap **OK**.
4. Turn on the right switch of the alarm clock which need to be enabled.

#### Shut Off Alarm Alert

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

 


Drop  to  if you want to be reminded again in 10 minutes.

 to  to cancel the alert.

### Turn Alarm on

1. In the Alarm list, find the desire alarm.
2. Tap the switch button to open the alarm clock on the right side, the switch button

from  to 

### Edit Alarm

1. Enter the alarm list, click the alarm time to edit.
2. After editing, tap **OK**.

### Delete Alarm

1. Enter the alarm list, drag left or right to delete the alarm you want to delete.

## Countdown

### Add countdown

1. Tap  **Count down** icon to enter the countdown interface.
2. After set a time, Tap **Start**.

 If user has set a countdown, please tap  below the interface to continue to add a new countdown.

### Edit countdown

1. Tap  to add one minute countdown time.
2. Tap **Stop** to pause countdown.
3. After pause countdown, tap  to reset countdown.
4. Tap  to add tags to countdown.

### Delete countdown

In countdown interface, tap  to delete the corresponding countdown.

## Stopwatch

### Start stopwatch

1. Tap  **Stopwatch** icon to enter the stopwatch interface.
2. Tap **Start** to start the stopwatch.

### Pause、Restart stopwatch

1. In the course of the stopwatch, tap **Stop** to pause stopwatch.
2. After pause stopwatch, tap  to reset stopwatch.

### Lap times

In the course of the stopwatch, tap  to record the lap times.


### Share timing results

After pause stopwatch, tap  to search the timing results on Google or sent through Gmail.




## 14 BROWSER

Users can connect to the Internet through browser.

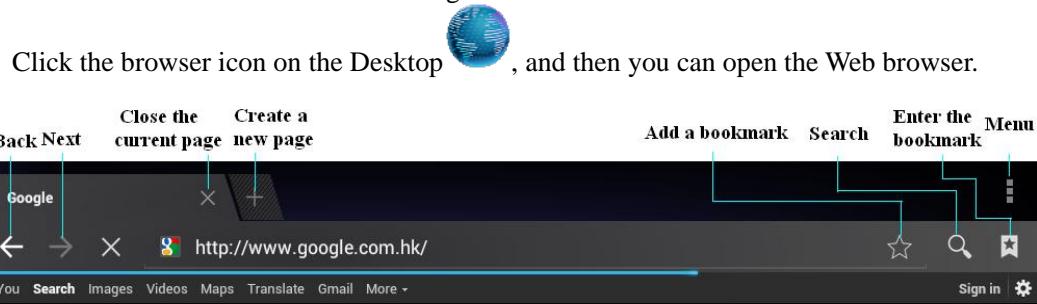

 Google.com.hk offered in: 中文 (繁體) 中文(簡體)



## 15 CALENDAR



Tap the **Calendar** application icon.

For the first time using the **Calendar**, you need to add an Exchange account. Enter account email address and password. Enter the system **Settings** → **Add account**. According to the prompts complete the setting. After then you can use the calendar. Only to view the calendar need not to add Exchange account.

### Add Event

1. On the **Calendar** screen, tap on the date to which you want to add an event.

2. Tap on the event time → tap .
3. In each field, enter the details of the related activities.
4. Tap **Done**.

Click the date time in the upper left to choose the calendar you want, such as DAY, WEEK, MONTH and AGENDA display mode.

★ *Dates with gray bars indicate scheduled events.*



## 16 CAMERA

Tap the  Camera application icon.

### Take Pictures

1. Tap  switch to video, and you can take picture.
2. Tap  take picture.
3. The picture will be saved.
4. Sliding the screen from right to left ,and you can enter the gallery to browser the complete picture.
5. Press **Back** to the **Camera**.
6. Tap  to exit the **Camera** and back to the **Desktop**.

### Take Videos

1. Tap  switch to video, and you can take videos.
2. Tap  to begin and tap  to stop.
3. The video will be saved.
4. Sliding the screen from right to left ,and you can enter the preview list.
5. Press **Back** to the **Camera**.
6. Tap  to exit the **Camera** and back to the **Desktop**.

 
★ *During video recording, you can click the frame quickly to take pictures .Quick shot function does not terminate the video recording.*

### Single-motion Panorama

For capturing larger scenes, tap  icon and switch to single-motion panorama

mode. In this mode, the user starts an exposure and then slowly turns the Camera to encompass as wide a perspective as needed. The Camera assembles the full range of continuous imagery into a single panoramic photo.

☆ You can press Viewfinder long, or on the top right screen tap  , then tap  , enter camera settings menu, In the dialog box, click select storage device , to choose the files are stored in the Local, SD card or USB storage.



## 17 CALCULATOR

1. Tap the  Calculator application icon.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.



## 18 MYRECORDER

1. Tap the  recorder icon.
2. Tap the  record icon to start recording.
3. Tap the  record icon to stop record.
4. Tap the  play button to play the voice of recording.



## 19 EMAIL

☆ POP3, SMTP and Exchange accounts are supported.

### Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.

1. Tap the  Email application icon.

2. On the **Account setup** screen, Tap in the **Email address** entry field → enter your email address.
3. Tap in the **Password** entry field → enter your email password.
4. Tap **Next**.
5. **Manual Setup (optional):** The server settings are automatically populated based on your email account provider (*i.e., gmail.com, etc*). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
6. According to the selected mailbox server, enter or select the parameter and server type ,and then Tap **Next**.
7. (Optional): Enter a name for the account.
8. Enter name for outgoing message → tap **Next**.

★ *After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).*

## Email Inbox



1. Tap the **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account → tap **Inbox**.

## Open Email Message

 
1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap **Reply** or **Reply all**.
  - a. Tap in the Compose Mail entry field to enter your reply message.
  - b. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

## Compose New Email Message



1. On the **Inbox** screen, tap .
2. Enter the e-mail address in the recipient field. if you want to add Cc or Bcc recipients, tap **Add Cc/Bcc**, and then enter the recipient's email address.
3. Tap in the **Subject** entry field to enter your desired subject title.
4. Tap in the **Compose Mail** area to enter your personal message.
5. If desired, tap to attach a file.
6. When ready to send the email, tap **SEND**.


## Edit Email Accounts



1. Tap the **Email** application icon.
2. On the **Inbox** screen, tap → **settings**.
3. Set your desired preferences to customize your email account.
4. Tap to return to the **Inbox** screen.

## Delete Email Accounts

 ★ *If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.*



1. Tap the **Email** application icon.
2. On the **Inbox** screen, tap → **Settings**.
3. Click the account you want to delete.
4. In the pop-up **Account options** window, tap **Delete**
5. Tap **OK** to confirm the deletion.

## Set Default Email Account

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.



1. Tap the **Email** application icon.
2. On the **Inbox** screen, tap → **Settings**.
3. Tap the desire account.
4. In the right settings list, tap **Default Account** to select it.



## 20 FILE BROWSER



Tap the **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:



Internal Flash (ROM)



SD Card



USB Storage



Paste



Back to the previous folder



Switch folder display mode.



Menu

### Copy Media between Computer and Tablet

You can use the File Browser to copy files between an external storage devices and your computer. You can first copy the desired files onto a SD card or USB device.

- ★ *The internal device storage is titled "Local", a memory card "SD", and a USB storage device is titled "USB".*
- ★ *The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.*

1. Tap **GoTo**, select **SD** or **USB** to display the contents of your storage device.
2. Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Copy**.
3. Tap **GoTo**, select **Local** Internal Memory → tap on the folder into which you want to copy the file → tap

### Delete files

Tap and hold a folder/file and enter into the multi-select mode, select the folder/file as desire → tap **Delete** → **OK** to confirm the deletion. → tap **Delete** → Tap **OK** to confirm the deletion.



## 21 MY MUSIC

- ★ *Audio file formats supported: MP2, MP3, WAV, AAC, WMA.*

### Play Music




1. Tap the **My Music** application icon.
2. Select an audio file from All/Albums/Artists/Directories/My Favorites/User Defined Playlists to play it.

3. Tap the **Pause**  icon to pause your music.

4. When you playing the music you can tap  or  return to the previous screen.

Click  switch to the currently playing interface, It is shown as follows:

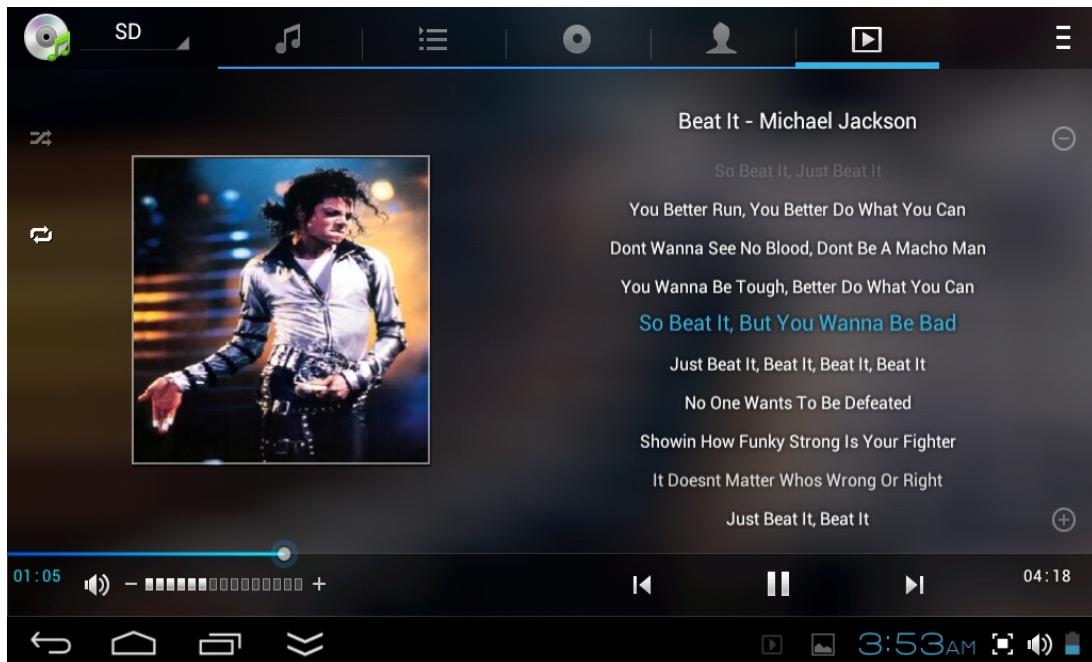

At this interface, you can do: view /download the lyrics, display album photo or spectrum, play / pause, switch to the previous / next, loop and random operation etc.

### Create Music Widget

Through the Music Widget can be quickly play the music.

On the desktop tap  icon, In the pop-up list select **Widgets** → Select **Music**

**Widget.**

### The Operation with Music and Playlist

#### Add playlist

1. Enter  Play list interface → click .
2. Input the playlist name.
3. Tap **Save**.

#### Rename or Delete playlist

Switch to **display mode**, Tap the playlist → tap  → Enter a new name in the dialog box, and click **Save**. If you want delete the playlist, click  → click **save**.

#### Add music

1. In the **all song, album, and artist** list, Tap the music and hold for switch to multi-select mode.
2. Select the music which you want to add to the list (if you don't want to add, tap it again to cancel).
3. Tap **Add to playlist**, and then select a playlist.

#### Delete music

Tap and hold on the music you want to delete → tap **Delete**.

#### Sort by title or date added



In the **all song** interface, on the upper right click the  in the pop-up list select **sort by title**, and then click the alphabetical of the right hand, the interface will quickly jump to the songs match the first letter (including the first letter of the pinyin) in the alphabetical list. If you select **Sort by date added**, all songs will sorted by add date.



## 22 AIR SHOW

**Air Show** can make media interconnection of phone, tablet, PC and your device simply and quickly. It supports running in the background, Users needn't wait for interconnection in the program interface.

- ☆ *Device and your device must be connected to the same network.*
- ☆ *TV media interconnection can be achieved by connecting your device to TV via HDMI.*

#### Air Show Settings



1. Tap  **Air Show** application icon.
2. Tap  to enter **Air Show** setting interface .
3. Click **Display Name** to modify the name of Air Show (The default name is Air show).
4. Check **Auto Enable Portable Hotspot** to start Air Show application when not connect to WI-FI , whether to automatically open the portable WI-FI hotspot .
5. Click **Completely exit** to exit completely and shut down all server.
6. **About** displays the software version.

#### Usage

##### DLNA

1. Device access to network, and run the application: **Air Show**.
2. Remote device (such as computers, mobile phones, and tablet) which supports DLNA access to the same network.
3. Select from the remote device to play media files to play on device.

4. If you don't find device from the remote device, try to click on the "Air Show"

 in the upper right corner of the interface or completely exit **Air Show**.

★ The remote device which supports DLNA includes: Win7 computer, Android / iOS device, which support DLNA.

★ The application function which supports DLNA includes: PPTV, Tencent video, iMedia share Lite etc. Specific you can download and install from internet by yourself.

### Airplay

1. Device access to network and then run **Air Show**.

2. IOS devices access to the same network (such as the iPhone, iPad).

 3. Click  when sliding and playing. After selecting **Air Show**, media file will be played on device.

4. If you don't find your device from the remote device, try to click on the "Air Show"

 in the upper right corner of the interface or completely exit **Air Show**.

## Use Case

★ Following examples about android tablet PPTV introduce the way about how to remote play online media files and local media files.

### Play online video with PPTV

1. Device access to network A, and run application program: Air Show.
2. Also the android tablet access to network A, install and open PPTV, first time use PPTV need to log in to use the DLAN function.
3. After logging into the video list interface, click to play the video you want to watch, there will pop-up "playback devices" list on PPTV, find the device name (Air Show) in the drop-down list and click on the name to enter remote play (if you can

 not search "Air Show" on android tablet, try to click refresh button  in the upper right corner of the main interface of "Air Show" on device).

4. When playing a media file, you can click the "" or "" button on the status bar below android tablet interface to switch to the other interface and make other operations.

★ If you want to quit Remote Play: A, Click the button  below the video player interface on the Android tablet switch to the Tablet PC player, then exit; B, Right-click with your mouse or click the back button on the device interface to exit.



## 23 AIR SHARE

**Air share** can simply and quickly realize media interconnection for the local resource of the android device and your devices.

★ *Android device and your device must be connected to the same network.*


### Air Share installation and connection

1. Device access to network, open **Air show** program to view **Air Share** application download address.



- 1 Make sure this device and other remote device are connected to the same network, then run this program.
- 2 On remote device open application supported home media share, select the media to play with this device.
- 3 If the remote device cannot find this device, press the right/top refresh button and try again.
- 4 You can download AirShare apk through browser with the URL : <http://192.168.1.110:8383>

2. The android tablet or phone access to network , use dimensional code scanning software to scan the dimensional code image or visit the download address ,opened as shown below, click download and install the program.

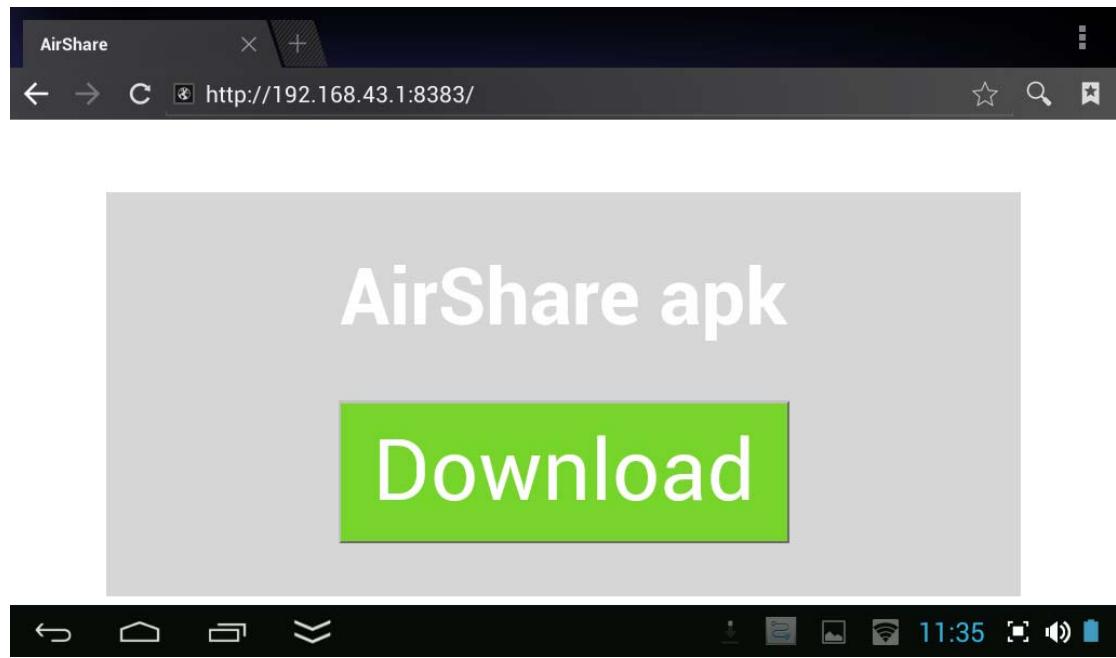

☆ The download address varies according to the change of your device in the network IP address, so the tablet or phone must at the same network with your device.

#### Connect to Air show



1. After installation is complete, click  to run **Air share**.



2. In the **Air Share** interface, on the right corner click  icon, in the pop-up list, click **Air show**.



3. After connect successful, the connection station will change to .

☆ The display name of Air show can be modified ,before connecting make sure the name which displayed in the list is consistent with the display name.

#### Air Share local Photo, Music, Video



1. Tap  **Air Share** application icon.

2. Click  **Photo** (  **Music**,  **Video**) to enter local Photo (  **Music**,  **Video**).

3. Click into the photo (music, video) folder. Open the photo (music, video) you want to share.



4. In photo (music, video) viewing interface, on the right corner click  icon to select **Air show**.

#### Operation of playing Music and Video

1. Tap into play interface.

2. Click   to switch previous or next; Click  to pause; Click  to



adjust the volume; Click to adjust the playback progress; Click to adjust the ratio of video playback.

## Air Share Applications

**Applications** can quickly install a local application to your device.

1. Copy the application to the Local, SD card or U disk.
2. Open the **Air Share** application, and connect to **Air show**.
3. Click **Applications**.
4. In the applications interface, click the folder where the application on, click the application.
5. In the installation interface, click **Install on server**.

## Air Share Documents

**Documents** can quickly send the local document to your device.

1. Copy the document to the Local, SD card or U disk.
2. Open the **Air Share** application, and connect to **Air show**.
3. Click **Documents**.
4. In the **Documents** interface, Find and click the document which you want to send to your device.
5. In the send interface, click **Send to server**.

## Air Share Remote APP

**Remote APP** can quickly start application in the device.

1. Connect to **Air show**.
2. Click **Remote APP** on Air Share interface.
3. Find and click the application which you want to run on the device, then the application will run on the device immediately.

## Air Share Remote Wi-Fi Setting

**Remote Wi-Fi Setting** can quickly switch the Wi-Fi connection of the table and your device.

1. Connect to **Air show**.
2. Click **Remote Wi-Fi Setting** on Air Share interface.
3. Click **Scan** on the pop-up interface.
4. Find and click the Wi-Fi AP which you want to connect, then the table and your device will switch immediately.

## Air Share Air Control


**Air Control** needs to be installed on the Android tablet or android phone, and it can make such as the touching slide, mouse clicks, text input, remote gravity sensor or other remote control to operate the TV dongle. In the **Air Share** interface, Click **Air Control** (or on the

right corner click → **Air Control**).

### Mouse Mode

1. Connect to **Air show**.
2. The default mode is **Mouse Mode**, on the mouse mode interface, above is touchpad,

and below is function key. As shown below.

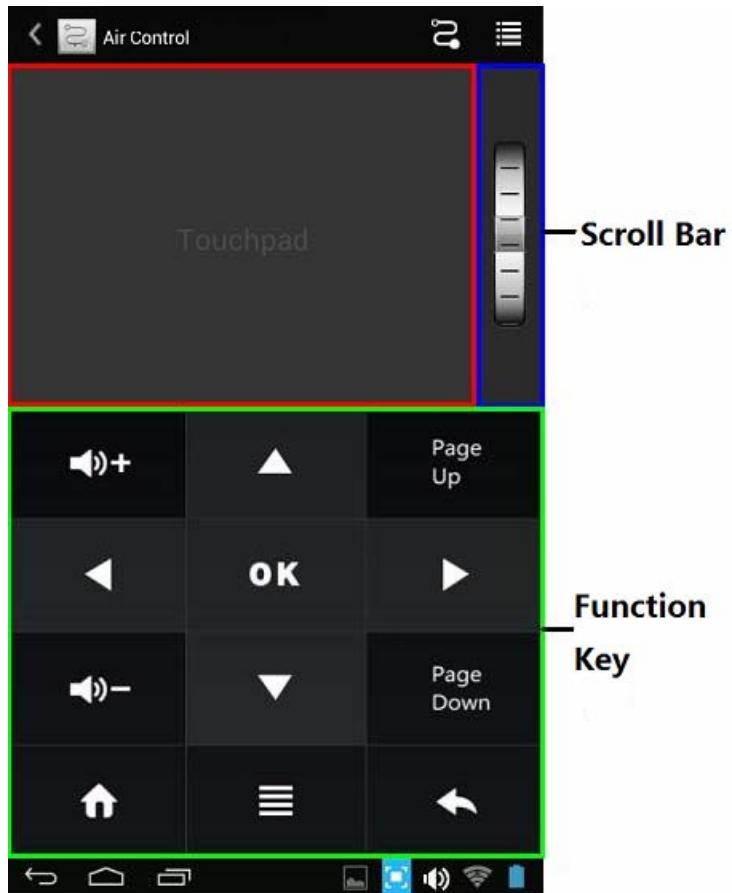

### Air Mouse Mode

1. Connect to **Air show**.



2. Then click → **Air Mouse Mode** switch to **air mouse mode**.

★ *The Air Mouse function just applies to android devices which supports gyroscope.*

### Touch Mode

1. Connect to **Air show**.



2. Then click → **Touch Mode** switch to **touch mode**.



3. We can click the screen capture button to capture any current screen of your device, and then we can click on the screenshot to directly operate the screen of your device.

### Gravity sensor off

1. Connect to **Air show**.



2. Then click → **Gravity sensor on/off** to turn on/off the gravity sensor.

3. After turn on the gravity sensor, then we can play gravity sensor game on the TV Dongle.

### Check update

1. Connect to **Air show**.

2. On the upper right corner click  → Check update.



## 24 Gallery

### Switch the view storage area

In the root directory, on the top left click the **Local**、**SD** or **U Disk** to switch the view storage area.

### Classification of photos and videos list

In the root directory, on the top left click the **Albums**、**Locations**、**Times**、**People**、**or Tags** classify the photos and videos .In the classification file folder ,on the top left click **Filmstrip view** or **Grid view** to switch the view display mode.

### View, play the photos and videos

#### Photo

In the classification folder ,click on the photo thumbnails to open the photo ,and on the top right of the folder interface tap  → **Slideshow** to playing slide.

#### Video

In the classification folder, click on the view preview .enter to the video preview interface, and click the play button in the video preview to play the video.

★*In preview picture interface, on the top right screen click*

 *to operate the corresponding photos (including zoom in/zoom out, share, rotate, trim, photos set to, adjust the current display scale, show details)*

★*In preview video interface, on the top right screen click*  *to operate the corresponding videos(including trim and details)*

### The operation with picture or video playback

#### DLNA



In preview photo interface (or video playback interface) on the top right click select device to connect, you can easily share the tablet picture(or video)to support DLNA TV broadcast.

#### Playback of the video floating window

In video playback ,on the top right click  to switch to playback of the video floating window.

- ★ Ordinary video playback and floating window playback all are supported by two points zoom to adjust the size of the video screen.
- ★ Floating window video will continue to play after you switch to other interface(ex: browser the website, desktop, run the software etc.) .
- ★ You can easily drag the floating window to adjust the position in the screen.

### Delete the photos and videos in the list

On the top right of the screen, Tap  icon →Tap **select album** or **Select item**. Select the album、image thumbnails or video preview which you want to delete,tap  →**OK**. If you want to delete a single picture (or video),please enter the folder ,select the picture(or video) ,tap  , or delete it in the image thumbnails( or video preview) , tap  → **Delete**.



## 23 SCREEN CAPTURE

You can capture a screen image by tapping  at any time.

Tap the  **Screen Capture** application icon to set options for a screen capture.

- Select a delay timer to capture the screen (seconds) .
- Select the default storage device.
- Show screen capture icon in status bar.
- View software version information.

After the images are saved, they can be viewed through  **Gallery** application.

## 26 WI-FI

Tap **Settings** → **Wi-Fi**, enter into Wi-Fi settings.

1. Slide the Wi-Fi switch to turn on Wi-Fi.
2. All the wireless network in the vicinity will be listed, click to select the name you want to connect to wireless network;
3. If the wireless network is connected successful before, the wireless network information

will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove wireless network information;

4. If the wireless network is not encrypted, in the pop-up window, select "Connect" Start Connection;
5. If the wireless network is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
6. When internet connections are successful, the wireless connection icon in the bottom status bar appears.

---

## 27 Wireless display

**Miracast** by the Wi-Fi Alliance in 2012 years to develop, with Wi-Fi Direct (Wi-Fi Direct) based wireless display standard. Support this standard 3C electronic products are available through wireless way to share video images, such as mobile phones via Miracast the movies or photos directly on your TV or other device will play without any cable, nor do they need through a wireless access point (AP , Access Point).

### Source and Sink

Source: Device

Sink: Third-party sink device which support for miracast


★ You can buy Third-party sink device to use this function. Such as: ScreenBeam.

### How to connect


1. Install third-party sink device. (Please refer to the product manual. Such as ScreenBeam interface).



2. Turn on the Wi-Fi of the device(source) .
3. Enter **Settings** → **Display** → **Wireless display**. Click the name of wireless display device to connect.

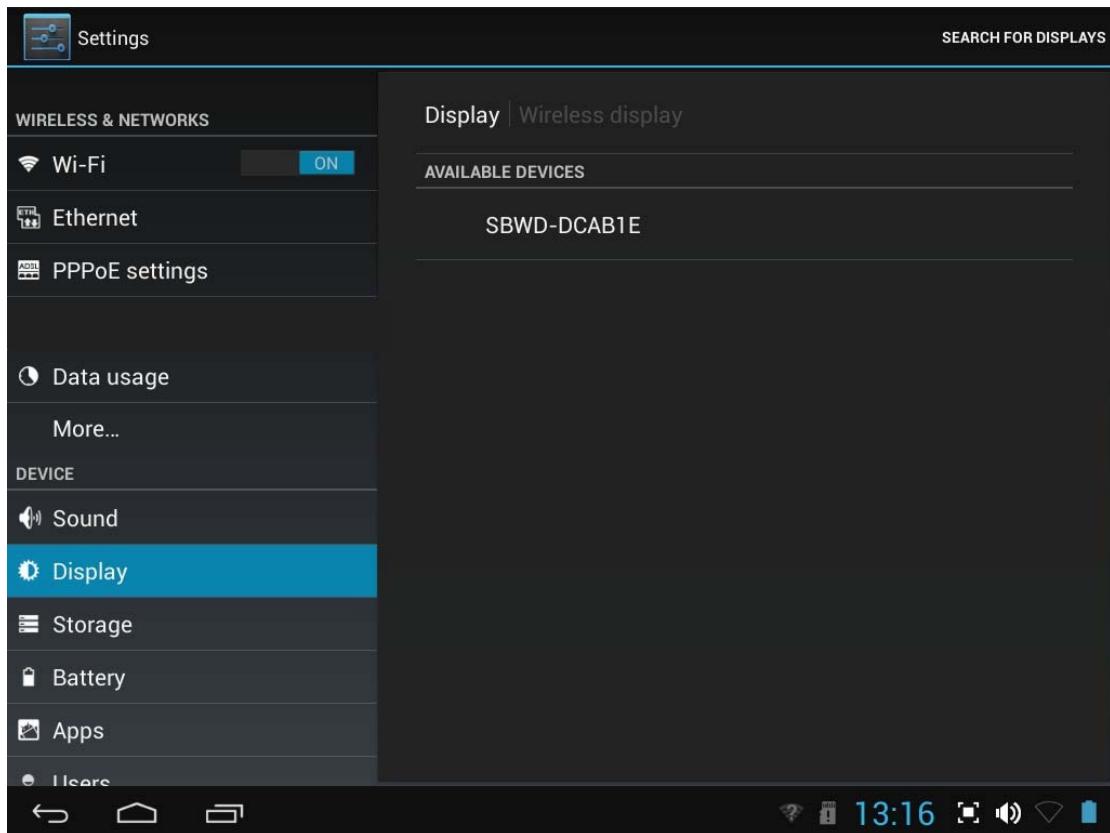

4. It will show “Connected” under the device’s name after connected. And the icon and tip of successful connection will be show on the bottom of the status bar.

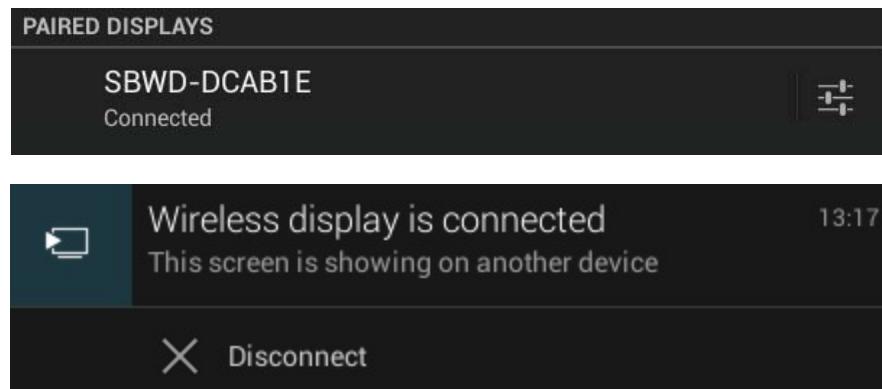

5. Device can show the screen on third-party sink devices now. You can play dynamic games and watch HD videos on TV. Enjoy the fun without any video line.

## 29 GPS

GPS functionality requires the use of a USB interface external GPS receiver. (It access to device via the USB host transfer cable). Users need to download the navigation software and map from the internet, through the SD card installation (please refer to the Application Management section of this User Guide). The currently supported on the GPS receiver type please refer to Appendix.

## 30 PPPoE SETTINGS

Before using this feature, connect the USB network card via the USB host transfer cable access to device.

1. Tap **Settings** → **PPPoE settings** .
2. Input name and password then click connect to access the broadband network.

## 31 ETHERNET

Before using this feature, connect the USB network card via the USB host transfer cable access to device. When the USB network cable plugged into the USB network card, you will see

the bottom of status bar ETH symbol  appears

1. Tap **Settings** → **Ethernet**.
2. The device can automatically obtain IP address to connect to the network. You can also choose to manually set the IP address to get connected.



## 32 SETTINGS

<b>Wireless &amp; networks</b>	<b>Wi-Fi</b>	Turn on /off Wi-Fi, Set up & manage wireless access points.	
	<b>Ethernet</b>	<b>DHCP</b>	Automatic assign IP address
		<b>Use Static IP</b>	Manual assign IP address
	<b>PPPoE settings</b>	Set up ADSL network	
	<b>Data usage</b>	View of data usage	
		<b>Airplane mode</b>	Disable all wireless connections.
		<b>VPN</b>	Add Virtual Private Networks (VPNs).
		<b>Tethering &amp; Portable hotspot</b>	USB tethering.
			Portable Wi-Fi hotspot.
	<b>More...</b>	Set up Wi-Fi hotspot.	
<b>Sound</b>	<b>Volumes</b>	To adjust the Media volume.	
	<b>Default notification</b>	Select desired ringtone sound.	
	<b>Touch sounds</b>	Turn on/off touch sounds.	
	<b>Screen lock sound</b>	Turn on/off lock sounds.	
		Show volume icon in Select show/hide volume	

Device		<b>the status bar</b>	icon in the status bar
	Display	<b>Brightness</b>	Adjust the screen brightness as desired.
		<b>TV screen resolution</b>	Set up TV screen resolution
		<b>Wallpaper</b>	Set up wallpaper
		<b>Auto-rotate screen</b>	Auto-rotate switch.
		<b>Allow hiding the status bar</b>	Allow hiding the status bar.
		<b>Show full-screen gesture tip</b>	Full-screen gesture prompts.
		<b>Sleep</b>	Adjust the delay before the screen automatically turns off.
		<b>Daydream</b>	Set the daydream.
	Storage	<b>Font size</b>	Set the system font size.
		<b>Wireless display</b>	Search and connect available wireless displays.
		<b>Storage</b>	View internal storage space, install ,view ,uninstall SD card and USB storage.
	Battery	<b>Battery</b>	View the usage of the battery.
		<b>Apps</b>	View and uninstall applications
		<b>Users</b>	Modify owner info, add , modify , delete new users and their associated information.
	Location access	<b>Access to my location</b>	Let apps that have asked your permission use your location information.
		<b>GPS satellites</b>	Let apps use GPS to pinpoint your location.
		<b>WIFI &amp; mobile network location</b>	Let apps use Google's location service to estimate your location faster. Anonymous location data will be collected and sent to Google.
	Security	<b>Screen lock</b>	
		<b>Owner info</b>	
		<b>Encrypt device</b>	Require a numeric PIN or password to decrypt your device each time you power it on.

		<b>visible</b>	
		<b>Device administrators</b>	View or deactivate device administrators
		<b>Unknown sources</b>	Allow installation of non-Market apps.
		<b>Verify apps</b>	Disallow or warn before installation of apps that may cause harm
		<b>Trusted credentials</b>	Display trusted CA certificates.
		<b>Install from SD card</b>	Install certificates from SD card.
		<b>Clear credentials</b>	Remove all certificates.
	<b>Language &amp; input</b>	<b>Language</b>	Setting system language.
			Spelling correction, personal dictionary, keyboard and input methods, Voice search, text to speech (TTS) output, and pointer speed.
	<b>Backup &amp; Reset</b>	<b>Back up my data</b>	Back up app data, Wi-Fi passwords, and other settings to Google servers.
		<b>Backup account</b>	Backing up to debug-only private cache.
		<b>Automatic restore</b>	When reinstalling an app, restore backed up settings and data.
		<b>Factory data reset</b>	Erases all data on tablet.
<b>Accounts</b>	<b>Add account</b>		
<b>System</b>	<b>Date &amp; Time</b>	<b>Automatic date &amp; time</b>	Use network-provided time
		<b>Set date</b>	Set date
		<b>Set time</b>	Set time
		<b>Select time zone</b>	Select time zone
		<b>Use 24-hour format</b>	Choose 24-hour format or 12-hour format.
		<b>Choose date format</b>	Select date format.
	<b>Accessibility</b>		Talkback, Magnification gestures, Large text, Auto-rotate screen, Speak passwords, Accessibility shortcut, Text-to-speech output, Touch & hold delay, Enhance web accessibility

			Take bug report, Desktop backup password, Stay awake, Protect SD card, Super user setting, USB debugging, Power menu bug reports, Allow mock locations, Select debug app, Wait for debugger, Verify apps over USB, Show touches, Pointer location, Show layout bounds, Show GPU view updates, Show hardware layers updates, Show GPU overdraw, Show surface updates, Window animation scale, Transition animation scale, Animator duration scale, Disable HW overlays, Force GPU rendering, Force 4x MSAA, Simulate secondary displays, Strict mode enabled, Show CPU usage, Profile GPU rendering, Enable OpenGL traces, Enable traces, Don't keep activities, Background process limit, Show all ANRs
	<b>Performance</b>	CPU governor	Choose Ondemand or Powersave
	<b>About device</b>		Status, Legal information, Model number, android version, Kernel version, Build number.

---

## FREQUENTLY ASKED QUESTIONS

### Android

**Q: What Android OS version is on my Device?**

A: 4.2

### Basic Device Functionary

**Q: Do I have to charge the battery before use?**

A: You should charge the battery for at least 6 hours in the off status, You can use the device while it's charging, but this method to charge is not recommended.

## Email

**Q: Can I use any of my personal email addresses to send/receive email?**

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if your account is supported.

## Media Cards

**Q: Which media cards are compatible with my Device?**

A: micro SD cards.

## Music

**Q: What type of music files can I play on my device?**

A: MP2, MP3, WAV, AAC, WMA

**Q: How do I add music files to my device?**

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## Photos

**Q: What type of photo files can I view on my device?**

A: JPG, JPEG, BMP and PNG.

**Q: How do I add photo files to my device?**

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## Video

**Q: What type of video files can I play on my device?**

A: Video file formats supported: MPEG1/2/4, H263, H264, VC1, Real Video, Motion JPEG. The largest video format is supported 1080P(1920×1080) resolution.

**Q: How do I add video files to my device?**

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

## Wi-Fi

**Q: Do I need a Wi-Fi adapter to connect to the Internet?**

A: No. The Wi-Fi adapter is built-in to the device.

Inconsistent with the physical specifications, please prevail in kind.

## BATTERY MANAGEMENT

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 6 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

### **Charge battery**

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (A full charge takes about 6 hours in the off status).

When fully charged, the battery icon displays as .

A fully discharged battery takes approximately 6 hours to fully charge in the off status, but you can use the device while plugged in when desired.

---

## **IMPORTANT SAFETY PRECAUTIONS**

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

### **Cleaning your device**

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

---

## FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF warning** statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.