


QUICK GUIDE




Packing list

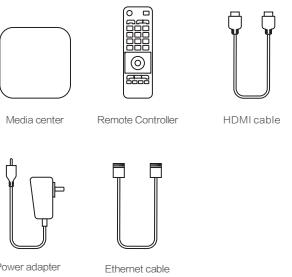

Remote Controller




Product appearance

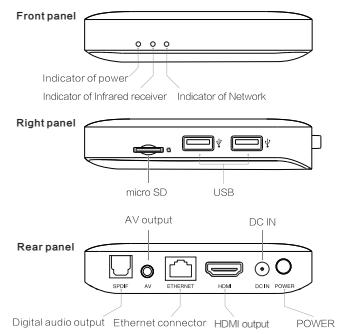

Quick connections

- 01 Connect TV set
Connect the media center and your TV set with AV cable or HDMI cable. HDMI cable is recommended for better picture quality.
- 02 Connect power socket
Connect the media center and power socket with the appendant power adapter.
- 03 Connect network
Connect the media center and your home router with Ethernet cable. If Ethernet connection is unavailable, you can set up and use Wi-Fi connection alternatively per the setup wizard.

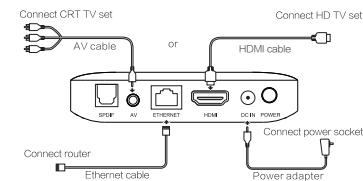

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and (2)This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.