



USER MANUAL

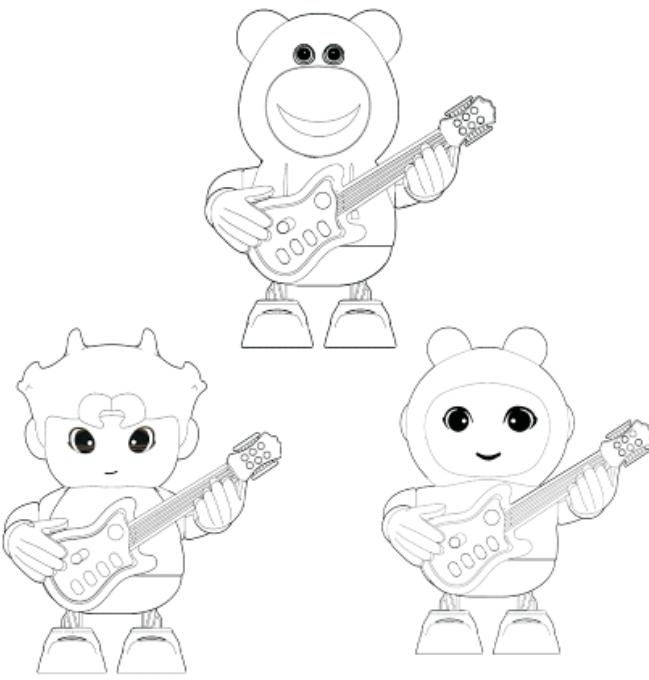

Children should use this product under adult supervision.

Button Functions

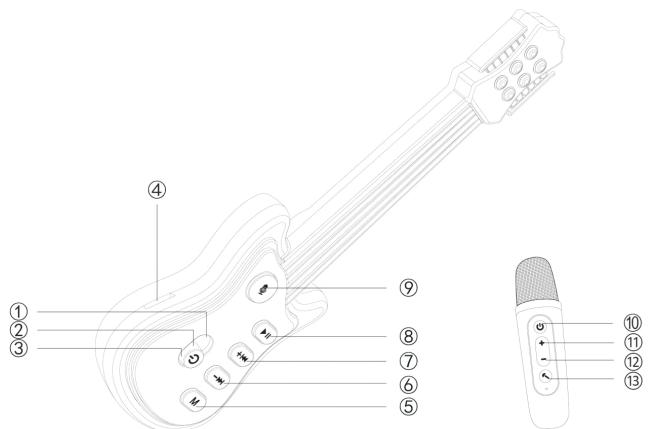

①Power off	②Audio mode	③Dancing mode
④TF card slot	⑤Toggle key	⑥Next /Vol-
⑦PREV/Vol+	⑧Pause/ Play/TWS	⑨Voice changer button
⑩Power button	⑪Vol+	⑫Vol-
⑬Voice changer button		

Product Function

- (1) Support wireless
- (2) Support TWS
- (3) Support TF card
- (4) Support dancing
- (5) Support karaoke
- (6) Karaoke mode supports voice-changing

Operating Instructions

When using the speaker/microphone for the first time, it is recommended to fully charge the device via the TYPE-C cable.

1. Set the toggle switch to position ② to activate audio mode. In this mode: insert a TF card to play audio files or enable BT function on your phone, search for "XQ1", and connect for wireless audio playback.
2. Switch the toggle to position ③ to enable dance mode.
3. Short press button ⑤ to toggle between wireless audio streaming and local file playback.
4. Short press buttons ⑥/⑦ to select previous/next track; long press buttons ⑥/⑦ to adjust volume level.
5. Short press button ⑧ to pause/resume the current audio source.
6. Long press button ⑩ to turn the microphone on/off. When the speaker is powered on, long press the microphone power button to start karaoke mode directly.
7. Short press buttons ⑪/⑫ to adjust microphone volume.
8. Short press buttons ⑨/⑬ to activate voice-changing mode, and long press the same buttons to deactivate it.
9. TWS: First, turn off the bt function on your phone. Then, switch the power buttons of both speakers to position ② /③. Next, quickly double-press the pause button on one of the speakers. The two speakers will begin pairing. Once successfully paired, both speakers will display a solid green light. Finally, enable bt function on your phone and search XQ1 then connect it.

Specifications

Item No.: XQ1	Wireless transmission range:about 10 meters
Charging power input: 5V 1A Type-C	BT version: 6. 0
Batter capacity: Li-ion 18650 3. 7V 1800mAH	Output power: 4Ω 5W
Playing time: 3hs around at medium volume	Weight: 410g
Audio format: MP3 WMA	Speaker size: 177*129*206MM

Note :

1. During dance movement, ensure the machine is placed and operated on flat ground to prevent displacement or damage from falls caused by uneven surface
2. Wireless connection stability may be compromised by physical obstructions and RF interference. Operate the device in open areas free of signal interference
3. Do Not Use High-Wattage Chargers for Product Devices
4. After charging, disconnect and unplug the power cord promptly when charging is complete
5. Persistent low battery states accelerate cell degradation. Maintain charge levels above 20% to optimize battery service life.
6. Prevent moisture ingress and high-temperature exposure. This device contains batteries, PCB, speakers, motors, and other electronics susceptible to environmental degradation.
7. Prohibit disassembly, impact, compression, collision, immersion in liquids, or exposure to open flames. Violation may cause catastrophic failures.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 -Reorient or relocate the receiving antenna.
 -Increase the separation between the equipment and receiver.
 -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.