



SOUNDPAD

User Manual

To our dearest valuable customer

Thank you for choosing our product, and we are truly honored that we can enrich your life by providing series of amazing product. Before you using any of our items, please read the simple user manual coming with the package to avoid any wrong operation or damage.

Disclaimer

The company makes no representations or warranties, either expressed or implied, with respect to the contents here of and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further more, the company reserve the right to revise the publication and make changes from time to time in the contents hereof without obligation to notify any person off such revision or changes.

We reserve the rights for the design and technical modification.

Product Advantage

- 7 inch high resolution of 1024*600 multi-touch screen;
- 3W×2 audio stereo speakers on sides of the device
- Support Multi-format video ,with HDMI slot for 1080P video;
- WIFI for internet connection.
- With Latest technology of android4.1, runs multiple applications from Google android market.
- Bluetooth function


Accessories List

- Product body
- User Manual
- Warranty card
- USB OTG cable;
- USB cable;
- Adapter DC 5V 2A;

Product specification

Dimension& Weight	
	330×170×120 mm 1Kg
Screen	
	7 inch 1024*600 multi-touch 1600W pixel
Memory card	
	TF card or other memory card by card reader
Picture format	
	JPEG、BMP、GIF
Audio format	
	MP3、WMA、WAV、FLAC、APE、AAC、OGG
Video Format	
	1080P MKV、RMVB、AVI、DAT、VOB、TS、WMV etc.
Power	
	Input: 100~220V Output: DC 5V 2A
Environment Conditions	
	Temperature 0°C~40°C
	Humidity 10%~80% RH


Product description

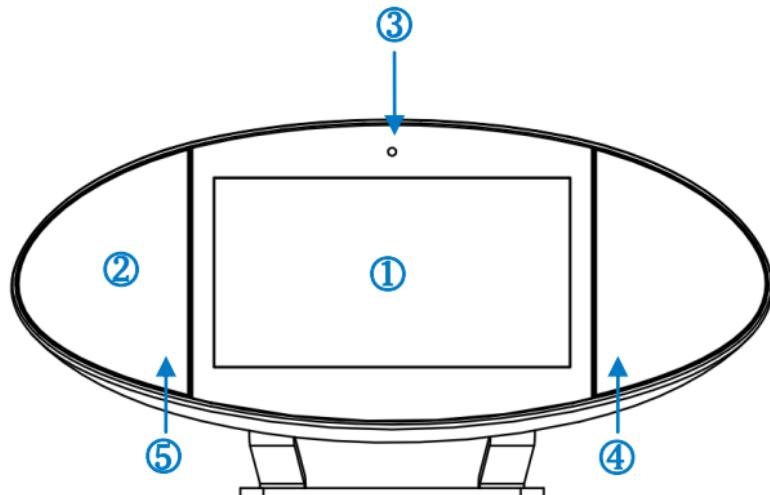

Notice: Kindly to be told,

This device is only compatible with landscape android apps. Bluetooth and WiFi can't be used at the same time. If Bluetooth on, WiFi will turn off automatically, and it will be the same on the other way around.

SOUNDPAD 7" High Definition Touch Screen Android 4.1

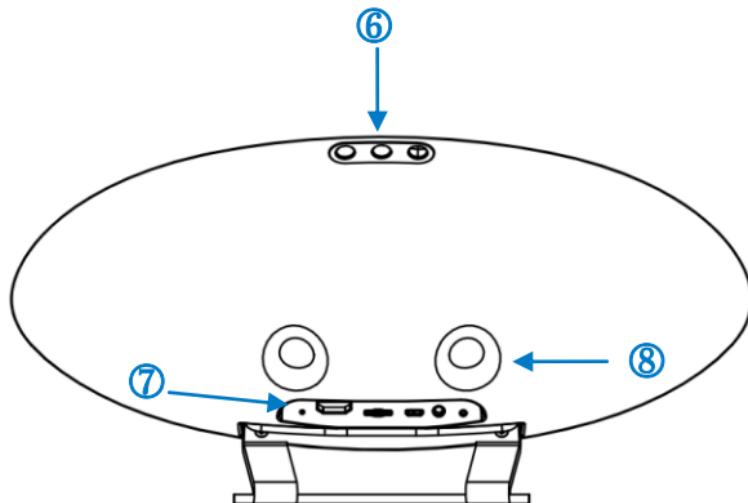


- ① 7 inch multi-touch screen
- ② 3W audio stereo speakers
- ③ Camera
- ④ Internal MIC-phone slot
- ⑤ IR receiver port (Optional)
- ⑥ From left to right, the power volume down, volume up
- ⑦ From left to right, reset, HDMI, TF card, USB, Audio-in, DC in
- ⑧ Reversal hole

SOUNDPAD 7" High Definition Touch Screen Android 4.1

Power on/off	<ul style="list-style-type: none">● Long press for about 3 seconds● When the device on, long press for 3 seconds, it comes with “are you sure the power off”, choose “OK”
Volume +	<ul style="list-style-type: none">● Press the button to increase the volume
Volume -	<ul style="list-style-type: none">● Press the button to deduce the volume

How to connect the device to power

Unpack the package, and connect the device on power with the adapter as below picture shows

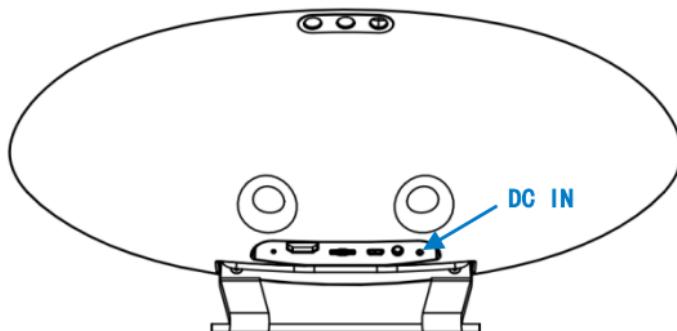

Built-in battery management and charging

For the 1st use, please full charge the built-in battery.

You have to full charge the device before you use it for the first time, and you can charge it with the DC adapter in the package. For the first 2 times, it will take about 6 hours for full charge, and it will only take you 3 to 4 hours for full charge after that.

【Remark】:

This device comes with built-in li-battery, and you have to choose our standard DC adapter (output: DC5V, 2A). If you charge the device when shut down, the battery icon will roll in green.

SOUNDPAD 7" High Definition Touch Screen Android 4.1

If you charge the device when it works, the small battery icon in bottom right will be in lightning shaped. When it is full charged, the icon will turn all green, and stop rolling.

【Remark】:

1. If long time no use, you need to at least use it to release all of the power of the battery, and full charged it before you put it away. In this way, to make the device much longer working life.
2. If the device shutdown because of battery's low power automatically, you need to wait for a little while to restart up the device until the device charged enough.
3. If you keep the device working and charging at the same time, you need much longer for full charge.

Power on/off

Power on: Long press Power on button for 3 to 6 seconds, the device will show start up menu. After start up the device, the screen is default locked, you have to move the lock button with your finger to unlock it.

SOUNDPAD 7" High Definition Touch Screen Android 4.1

Power off:

1. Long press Power on/off button, it will pop-up shut down button on the screen.
2. Press "Confirm", and the device will shut down.

Lock the screen: press power on/off button

Unlock the screen: press power on/off, and the screen will be the way when you start the devide. Then what you need to do is the move the unlock button with your finger, and the screen will be unclocked.

Remark: If the device is without enough power, the system will shutdown automatically.

How to use the multi-touch panel

Touch

If you want to input letters by the keyboard in the screen, just touch the right letters with your finger, just as easy as that.

Slide

Put your finger on the files you want to slide, just slide

it tightly.

Remove

Before you remove the icon, please point the related icon with your finger, until you move the icon to the place you want do not release your finger.


The UI of the device

Main menu: start the device and unlocked the screen, then you will come to the main menu.

Expanding main menu

The main menu can expand to the outside of the screen to provide enough space for consumer for more Apps and tools etc. Press the black part of the main menu, slide fast from right to left, then you will get 5 expanding main interface.

SOUNDPAD 7" High Definition Touch Screen Android 4.1

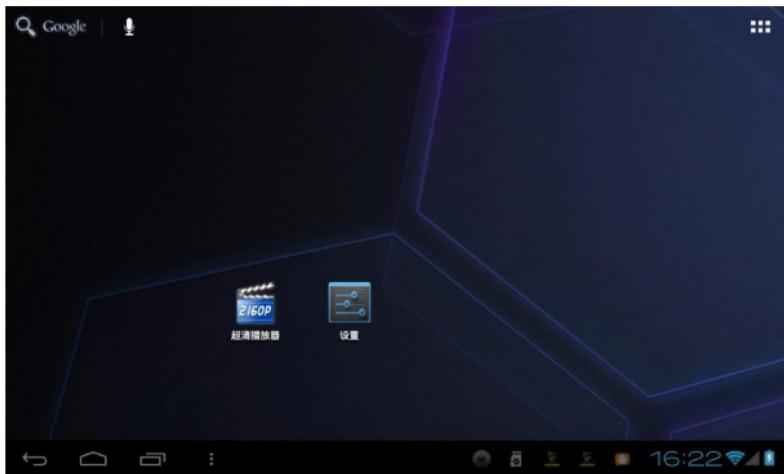

In main menu, you can move the icons as you want; Long press the icon for about 3 seconds, the icon will be locked and you can move it wherever you want with your finger.

How to add your favorite icons on the main menu

Go to the main menu, and long press the icon for 3 seconds after which the icon will be created in the main interface.

How to delete the icons you do not want in the main interfaces.

Long press the icon for 3 minutes, and remove the icon to recycle being marked by “X”

How to define the main menu by yourself


How to collect the wallpaper

Long press the black part of the main menu, it will comes with “choose the wallpaper”, and then you can choose the wallpaper you like



Press the icon of , then you will be in the main menu as below

SOUNDPAD 7" High Definition Touch Screen Android 4.1

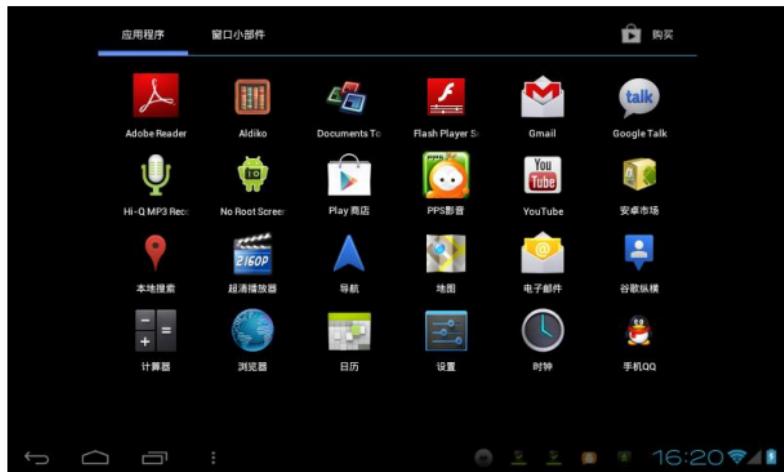

Status bar



- Status bar on the bottom of the screen

Bottom left, ESC, Home screen, Apps, Volume up, Volume down, Menu

Bottom right: USB, SD card, Time, WIFI, local connection, battery etc.

Touch screen and the icons description

Press  you can go back to the last interface.


Press  you can go back to the main menu

Press  you can check the apps where are working.

Press  you can go back the previous menu

When the device is on the main interface, press  you can go to the settings for the icons on this interface.

Press  or press the black part of the screen, you can go to the main interface.

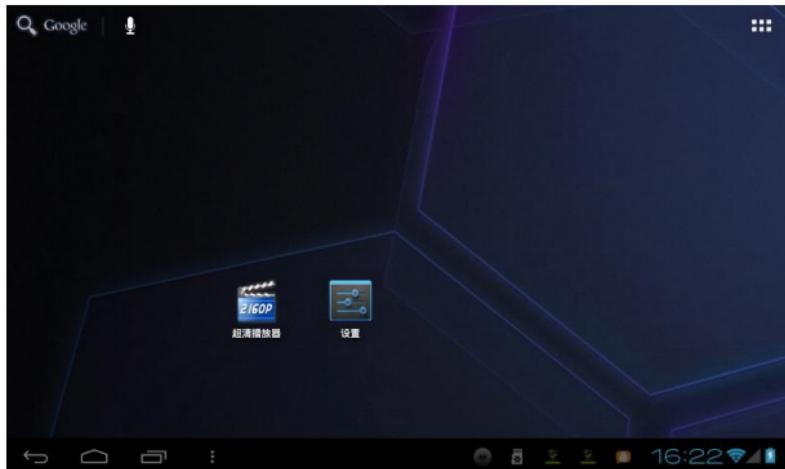

In main menu or main interface, you can just press the icons of APPs to open the related APPs.

If you want to quit from the APPs, just press  or  and then you can go back to the main interface.

How to use your android player as a USB disc

Setting: Before you transfer and document, you have to do some setting for your device

1. Connect your device with your computer by the USB cable; there will be a notice “Turn on the USB storage”
2. Press the notice icon and activate it
3. In the notice board, it will show “USB storage in use”
4. Then the device has been connected with your computer as a USB disk

SOUNDPAD 7" High Definition Touch Screen Android 4.1



1. Connect your device with your computer by USB cable.
2. Same as the last part, connect your device with your computer
3. Open “my computer” and check all of the disc
4. Find the files, the duplicate it to the USB disc
5. After the duplication, click “safety delete hardware”

Notice: If your device connected to a computer, and you set it up as a USB disc, then you can only duplicate files to the built-in memory of the device, but not the external memory cards.

HDMI output to connect the device with your TV

This item can be connect to the TV through HDMI cable to turn your TV to a smart TV, to share the multi-media information of the device in your much bigger size TV.

Notice: as the item only support oneway output, so when you connect the device with the TV, the screen will turn black. We highly suggest you to user the wireless mouse through the OTG cable for easy operation.

Memory Card

How to copy files into memory card

You can transfer files of music, photos and so on between your android player and your computer. If you want to check the files in your android player, just click the “file brower”, and then you may find out what is in your SD card.

How to delete files from the memory card

1. Find out the files your want to delete
2. Long press the file, it will come up with “file menu”
3. Press delete you will delete the file, press “go

back" , you will go back the last menu.

How to remove the memory card when the device is on

If you want to remove the memory card while the device is working, you have to uninstall it to avoid any files loss or memory card damage

1. In the main interface, pressing setting-stogerage
2. Find "uninstall the memory card" .

How to input letters

How to use the touch keybooard

When you want to start up any program or you want to input words or numbers, the keyboard will come up in the screen.

Choose your type of writing

According to the original setting, when you want to input, the android keyboard will come up in the screen

1. In the main interface, press setting
2. Press language and input
3. It will come with all of the input method which have

been original installed.

4. Choose one for default.

How to use Android keyboard

In the interface of input, press input edit area, and it will come up with android keyboard.

1	Press  for the change of capital letter and small letter
2	Press  for the change of Letter/punctuation/number
3	Press  English(US) to insert space
4	Press  for enter
5	Press  for backspace.
5	Press  for keyboard setting

Bluetooth connection

1. To start with this, please make sure that there are Bluetooth

in both electronic products you are trying to connect. In our case, we'll consider connecting our items to a smart device that has Bluetooth such as an iPhone, an Android or a tablet. Once assure of Bluetooth existence and both devices powered up and turned on we can proceed to the next step.

2. Bluetooth discovery, as the name implies, the next step is to help discover each other device. This is done by making one device broadcast its presence and using the other to look for the broadcasting one. Usually is the "smarter" one like the iPhone.

3. Paring, once discovered (step 2 above) you need to pair the two to allow them to work together. Pairing usually involves clicking on the discovered device and sometimes, if necessary, entering a pass code.

4. Sharing and enjoying

WIFI connection

This device can be connected to internet by WIFI

1. In the main interface, press menu menu-setting
2. Press setting

SOUNDPAD 7" High Definition Touch Screen Android 4.1

3. Press WI-FI on, your android player will search for all of the available WI-FI internet
4. Choose the one you want to connected with, and please input the related password if it is needed.
5. Press "connect"

FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,

uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference

to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.