

User Manual



Table of Contents

Safety instruction	3	
Device overview		
Description of the buttons		
Language settings		
Power monitorir	ng	
and charging the batteries		
Screen lock		
Connecting with computer and data transfer		
Functions of the buttons on the user interface		
Applications menu		
System settings		13
1. Wire	eless & Networks	13
2. Sour	nd settings	15
2. Soun	nd settings	16
3. Disp	lay settings	16
4. Loca	ition & safety	16
5. Appl	ication	16
6. Acco	ounts & sync	16
7. Data	protection	16
8. Mem	nory	17
9. Lang	guage & keyboard	1
10. Dat	te & time	17
	ephone info	
nternet		18
Onen Source Code & GNU General Public License		19

Technical Data	20
Trouble shooting	21

This user manual contains important safety instructions and information for proper use of the device. Please follow the instructions in this manual carefully.

A Please keep the device away from places with high temperatures, high humidity or dust.

B In particular please avoid leaving the device in the car during summer if the doors are closed.

C Avoid shocks and do not let the device fall, as otherwise it may cause damage to the device.

D The Standby Time of the batteries may vary due to different environmental influences.

E We are not responsible for data losses that are caused by damage to the product, repairs or any other reasons.

F Do not open the housing of the device. Doing this will void your warranty claims.

G Do not use alcohol, thinners or petrol to clean the display – use only a dry cloth.

Device overview



Description of the buttons

Volume +/-:

Increase or reduce the volume.

Power:

Press the button for $2\sim3$ seconds to switch on or switch off the device. Short Press the button to enter or end the Standby-Mode. Reset: Press the button for $7\sim10$ seconds to restart the device.

ESC Button:

To go back to the previous screen

USB/OTG

For PC connection or USB mouse connection

Language setting

English is set as a default language.

To change the language setting, please do the following:



- Press on the programme menu symbol on the right side of the screen.



- Select 'Settings'
- Scroll to the end of the list.
- Select 'Language & keyboard'.
- Select 'Select language'.
- Type your preferred language.
- Press the 'Home' button to return to the home screen.

Power monitoring and charging the batteries

The battery charge symbol on the status bar indicates the charging status of the batteries.

If the power goes down to empty, the device shuts off automatically for power is empty, use the power adapter to charge the device. The charging time for the battery is approximately 6~8 hours.

Screen lock

If the device is not used for specified time or press the 'Power' button briefly, the screen will switch off and display lock is activated. By short pressing the 'Power' button the screen will be reactivated. For unlocking the screen press the 'Lock' button toward the unlock direction.

Connecting to the computer and data transfer

V10 is equipped with a High-Speed USB2.0 Interface.

After you connect the device to a computer, it appears in the status display. Touch on the icon, a window will come up; select 'USB Connection' and click "turn on the USB connection" on the screen to activate the USB Memory. When using the device for data transfer, you cannot access the Micro SD/TF Card from V10.

Functions of the buttons on the user interface:



To go back to the home screen.



To open the context menu.



To go back to the previous menu / previous screen.



To display the programs and applications.

Change Window Button:

The device has five desktops. You can press this button or push your finger on the touch screen to the side to navigate between different desktops.



System instructions:

Touch on the status bar at the right down corner to view messages about new e-mails, downloaded documents, USB Connection Status or other information.

Applications menu



Program for installing and uninstalling Apps that were not downloaded from the Android Market.

Market (Google Play Store):

Load Apps (programs) from the Android Market. You can download and install apps, games and other applications. Many are free.

Explorer:

Open the Explorer to access Micro SD TF Cards, USB sticks and other storage media. The Explorer is a practical manager for documents and all types of data.







App for exchange email account set up, and compose/send/receive email



App from Google, receiving, processing and sending e-mails through Google account.

Google Maps:

Program for the display of maps or satellite images – Route planner.



Program to chat with other Skype users or to make video/audio calls via Internet.



Application for Micro blogging – Facilitates the display of public diaries or create a public diary of your own.



Program for using the social network site Facebook.



Managing schedules – can be synchronised automatically with a Google account.





Time display and setting alarm functions.



Settings:

Changing the basic settings of V10.







Manage and display images and videos – also enables Sync with Picasa web albums.



A program for reading and managing e-books.

System settings

Touch the icon for the settings to open the system settings menu:

1. Wireless & Networks

Touch 'Wireless & Networks'.




WLAN: Touch => to switch on the WLAN function.

The device automatically searches for available WLAN networks.

WLAN Settings: Select your network here.

If needed you will be requested to enter your WLAN password:

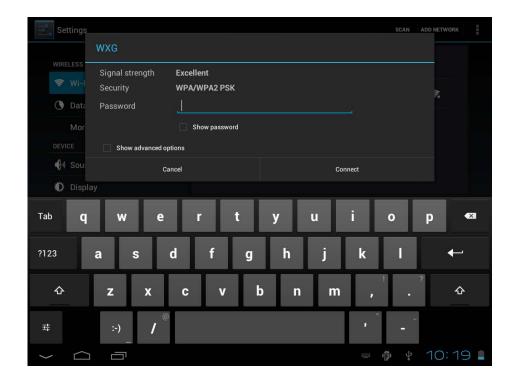

Advanced WLAN / Wi-Fi settings:

Touch in the menu for WLAN / Wi-Fi Settings, the menu for advanced settings will open up automatically. In the menu for the advanced settings you can view the current status, the IP address and other device information.

2. Sound settings

The 'Sound' settings contain the volume control, and selection of notification sounds, system sounds, and signal tones for Micro SD/TF Cards and USB signal tone.

3. Display settings

Includes brightness, automatic screen rotation (G-sensor), animations and display timeout time, Switch off display after: 15 seconds, 30 seconds, 1 minute, 2 minutes, 10 minutes or 30 minutes are available. For example, if you select 30 seconds, the display will be switched after 30 seconds of inactivity and screen lock is activated. Press the 'Power' button to reactivate the Display. Push the 'Lock' button up to lift the screen lock.

4. Location & safety

Here you can activate the automatic recognition of the location. You can also set security passwords which will prevent unauthorised access to your V10.

5. Applications

Apps management. Uninstall apps, change apps location. App installation setting etc.

6. Accounts & sync.

General synchronisation settings:

- 1. Background data
- 2. Automatic synchronisation

Account management: Management of user accounts

7. Data protection

Secure my data: Here you can define if different settings should be stored on Google servers.

Touch 'Reset to default' to reset the device to factory settings. All settings, self-installed apps and data stored on internal memory can be deleted.

8. Memory

Display the memory capacity info. Touch 'Remove SD Card' to remove the Micro SD/TF Card during use.

9. Language and keyboard

Set the system language and input method.

10. Date and time

If your network does not support automatic setting of time, you can set the time, time zone and date manually after deactivating automatic settings.

11. About the tablet

Here you can view device internal values such as operating system version, battery status, signal strength of the mobile network etc.

Main functions

Internet

_ .



Icon to surf the net.

Google is the default start page.

Touch the input field to display the keyboard:




Touch after entering a website address to open the website.

Note: The Android keyboard has few options for settings such as: keyboard language, numbers and icons etc.

The Internet browser can open four websites simultaneously;



and the menu will be displayed as follows:

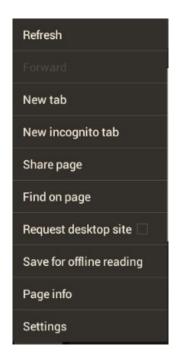

Touch 'Refresh' to refresh the current web page

Touch 'New tab' and a new website will be displayed.

Touch 'New incognito tab' and a new blank website will be displayed

Touch 'Share page' to Share this page to others

Touch 'Find on page' to enter new web address

Touch 'Request desktop site' to make it default web

Touch 'Save for offline reading' to read it when offline

Touch 'Page info' to check the web information

Touch 'Settings' to enter in browser settings

Technical Data

Screen size 10.1 inch Tablet-PC

CPU Rockchip rk3066 dual-core 1.5 GHz
Operating System Android 4.0 – Ice Cream Sandwich

RAM 1GB DDR3

Internal Memory 8GB NAND Flash

Memory Expansion Micro SD/SDHC up to 32GB

Display 16:9 capacitive 10-point Multi-Touch-Display

Resolution 1280 x 800 Pixel

Camera Front 2.0MP, Back 2.0MP

Battery 8000MAH, 9V, 2A rechargeable Li-ion Battery

Speakers Dual Speakers Stereo Hi-Fi

MIC Yes

Internet & Skype Phone-Function

WIFI 802.11b/g/n (high sensitivity)

Bluetooth No

I/O ports 1x DC In, 1x headphone, 1x TF Card-Slot,

1x USB 2.0, host/ OTG,1 HDMI

Video-Formats H.264, VP8, RV, WMV, AVS, H.263, MPEG4 etc 1080P,

YouTube, 720P, HTML5, Flash 11

Office Word / Excel / PDF / PPT, Microsoft Word pad,

Microsoft Spread Excel

The software is not included on the device and User can download from the market or internet

Images JPG, BMP, PNG etc.

FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV

INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE

TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID AND

CHANGE ANNTENA WHICH THE MANUFACTURER PROVIDES.

IT IS THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a resi dential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the in structions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular instal llation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experien ced radio/TV technician for help.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.