



777033201 User Manual

1. Basic Features Overview

1. LCD screen: 9.7" TFT-LCD, 1024*768Pixel

2. Camera: Front camera: 0.3Megapixel , Back camera: 2.0Megapixel

3. Operation system: Android 4.2

4. Networking:

Built-in WiFi 802.11 b/g Wireless internet External 3G

Support outlay3G Dongle

5. Supported Media Formats:

MP3.WMA.AAC.WAV.OGG.FLAC.APE;

MPEG1/SPARK/4/2.H.264.VC-1.WMV9.SVC.VP8;

6. Energy saving settings: LCD backlight brightness and off-screen time can be adjusted, you can set the standby time;

7. Touch Panel: Multi-touch Capacitive screen

8. Gravity: Built-in G-sensor, supporting screen rotation & gravity games

9. Language: support multiple languages;

10. AV Input/output: Build in sensitive Microphone and loudspeaker, headphone output.

11. I/O Port: Micro USB*1 , TF Card Reader1, Earphone*1, DC*1;

12. Button: Power button; Volume key +/-

13. Working conditions: Working temperature: 0°C - 35°C (32°- 95°F)

2.Interface Introduction

The device is with touch operation. When you touch the screen with your finger, the screen will follow to make the relevant response. Main desktop is divided into two regions, as shown below:



1.Main screen area

You can add an application shortcut icons or widgets to the main screen area, or click on the desktop icon to enter the top of the corresponding function, the main screen of the basic operation is as follows:

(1) Open the main menu: Click the icon in upper right corner of the screen to enter the top of the screen after clicking the application button or widget button to switch the display to browse the contents;

(2) Adding the main screen items (shortcuts, widgets): Open the main menu press the desired items to add to the main screen, jump to the main screen until the interface can be added when you release your finger successful;

(3) Move the main screen items: Press and hold the item you want to move and move your finger drag an item to the specified position, then release your finger to move the project successfully;

(4) Remove the main screen items: Press and hold the item until the top of the screen

appears the "Delete" icon Move your finger to move the item to be deleted Drag the "Delete" icon, project background color is orange, release your finger project is available on the main screen successfully deleted;

(5) replace the wallpaper: Long press home screen blank, then will pop up the "Select wallpaper source" window, you can choose from the list the need to replace the wallpaper sources, you can select the source into the interface after selecting the desired wallpaper.

2. Base area



The area commonly used applications icons can be placed, a total of six icons can be placed, you can place multiple folders in the form of application icons



Click the icon in the centre, , you enter the application list.

3. Status bar area



The status bar consists of two parts, the first part of the operation area for the user, the latter part of the status notification area.

- user operation area

(1) one-step back button: Each time you click, the system current page will go back one step to former page;

(2) Back to-Desktop button: No matter what current interface is, the interface will fall back to the desktop after clicking the button;

(3) recently-used-program buttons: Click the left area of the screen, it will display the relevant applications user recently used;

(4) Volume + / - buttons: Click the appropriate button to adjust the volume addition and subtraction.

- Status Notification Area


In this area you can view the status of the equipment, such as: network connection, battery level, time, etc..

(1) Time Display: Display the current system setting time, synchronize the system time;

(2) Battery status icon : Displays the current battery level and the current state of the battery (charge or discharge);

(3) Network signal status icons : If connected to appropriate network, the relevant icon will be displayed to prompt user about the network connection situation. Click this area gently with your fingers, it will pop up a menu, click the menu to open the notification and related settings interface, such as: G_sensor soft switch settings, backlight settings.

You can also click directly from here to enter into the setting interface settings option to change the setting parameters.

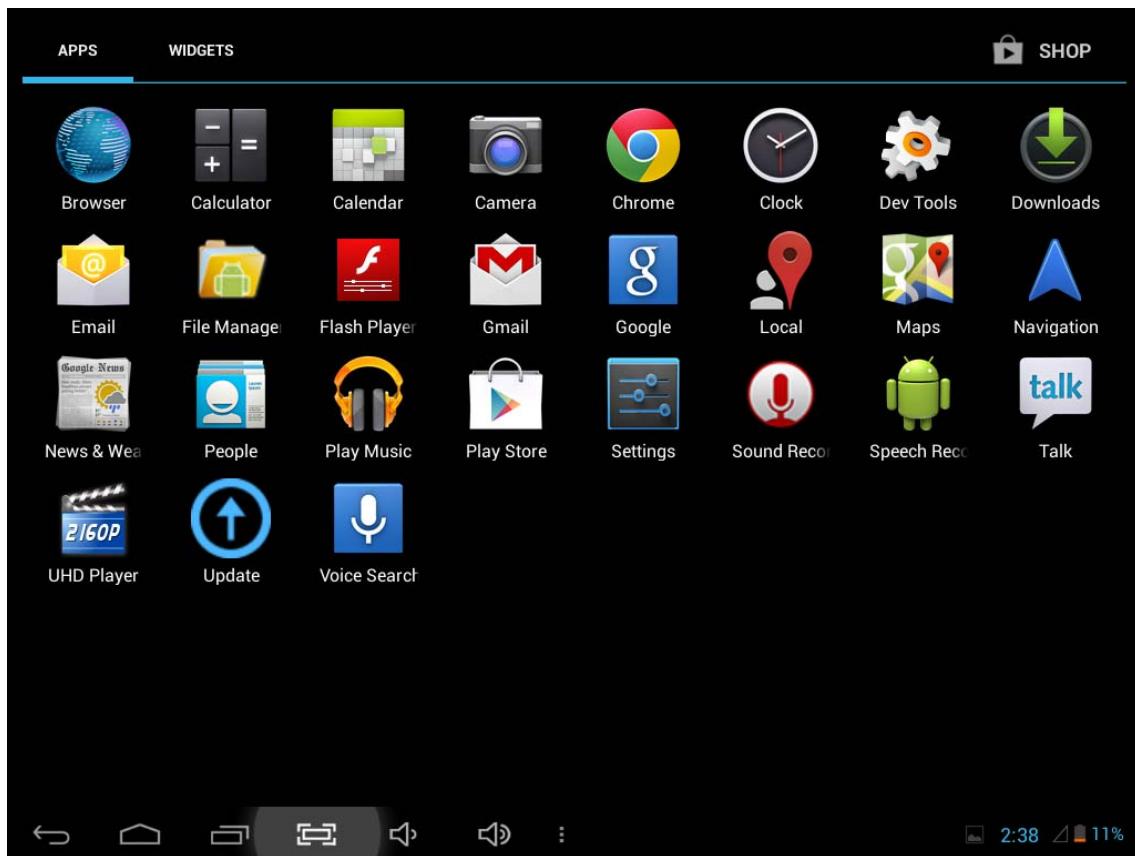

3.Peripheral Port



Description:

1. Front 0.3 megapixels camera
2. Headphone jack
3. Micro USB port: Connect PC / USB device
4. TF card slot
5. HOST

- 6.HDMI port
- 7.DC Jack
- 8.The power button
- 9.Speaker
- 10.Back camera: 2.0 Megapixel
- 11.Upgrade key

4. Basic operation

1. Commonly used operation

A.power key

Startup: after long press the POWER button for 2 seconds, it will switch on automatically.

Shutdown: in the boot state, long press the POWER button for 2 seconds, it will pop up a window, select "POWER off", then press "enter".

Mandatory shutdown: long press the POWER button for 6 seconds, the device will automatically turn off.

Sleep/wake: short press POWER key to switch sleep or wake

B.Micro USB Port

Communication between the devices and computers

(1) After start the computer, connect the devices with computer through USB cable .

(2) After the bar icon  of the device status pop up , click the status notification area, select the "USB connected" - > "to open the USB storage devices" at the open window, it shows "USB storage devices are in use".

(3) Manage the file system of this device through computer, you can copy, delete, modify, etc., this device supports multimedia format , please refer to the previous section.

Charge the battery

Please charge in the following circumstances:

(1) the battery icon display is empty

(2) the system automatically shutdown (turned on again soon after power off)

Charging method: Use the random accessories USB line, power adapter is connected

with one end of the random matching, the other end is connected to the USB interface , and then the power adapter is inserted into the power socket, can be charged, when the battery icon display 100%, indicates that the battery is full.

Check the battery charge state method:

Enter the "Settings" →, "about tablet " → "status message", you can see the battery status and the battery.

Connect USB

Using the OTG line, and one end connected to the machine's Micro USB port, the other end is connected to the USB device, such as USB mouse, keyboard, Hub, etc. the USB keyboard .USB mouse and Hub connect at any time use at any time,no need other Settings.

C.HDMI port

Method of use are as follows:

(1) connect HDMI line, one end of the HDMI port is connected with the equipment, and the other end connected with the display of the HDMI port (display must support HDMI output);

(2) signal set display options for the HDMI. Note: you must use the HDMI line, make the equipment connected to the monitor first,, can see the "HDMI" option;

(3) can be synchronized on the display screen equipment system interface after a few seconds .

* Note: A. After the display resolution , can enter the Settings - > HDMI Settings, select the match play video resolution,when determined, displayed on the screen of television equipment system interface;


B. Different types of monitors and equipment, the use of HDMI and setting are different, specific set method according to HDMI equipment design, have any questions can be consulting relevant technical staff.

1.Pull out of the HDMI line, can exit the HDMI output mode.

* Note: the HDMI function is optional, take practicality as standard.

2.System Setting

Wireless and Network

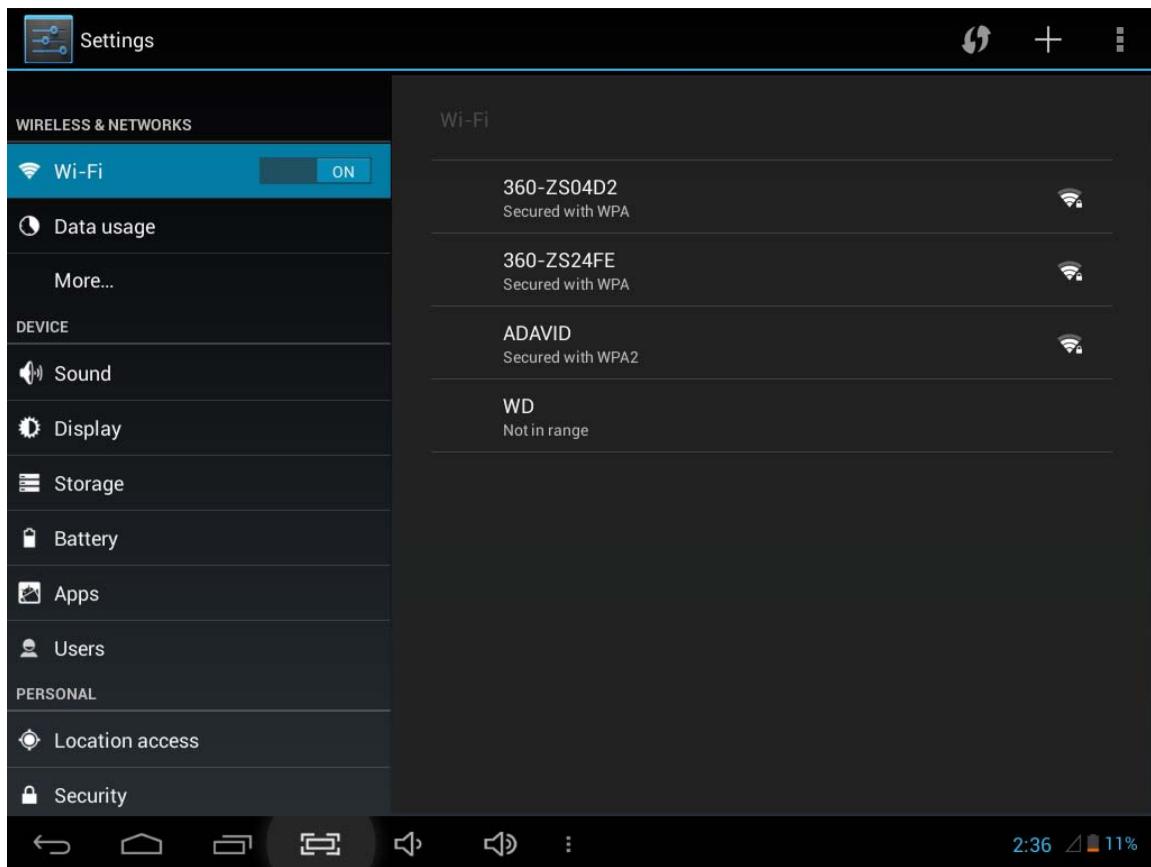

Wi-Fi

(1) Click the open button on the right side of the WIFI, after a few seconds the screen on the right side will search all the WIFI hotspot list.

Note: If wifi in the open state, that will connect to network automatically once you have used to connect this hotspot, unless RSD or restore factory setting.

(2) Click to network that want to connect, input network information and click the "connect" will search the WIFI network and establish a connection.

(3) If connected to the wireless network, the status bar on the right side area will appear a state of the wireless network icon.

Note: If you want connect to wifi that have been set up, please contact to the management of WIFI network to got the WIFI password.

3G Network

- (1) Turn off all the network except the mobile network.
- (2) Insert 3G module with SIM card into the USB port after connecting to the OTG line,
- (3) The device will automatically connect to 3G wireless networks shortly.
- (4) After connecting to 3G wireless networks, right corner of the status bar status bar area at the bottom there will be a 3G network status icon.


* Note: (1). Currently it supports 3G module, you can visit the official website to find the information.

- (2). For changing mobile network parameters, you can go to "Settings"> "More"> "Mobile Networks" to make changes.

Ethernet


- (1) Turn off all the network except the mobile network.
- (2) Insert USB internet card into into the USB port after connecting the OTG line,
- (3) Enter "Settings"> "More"> "Ethernet" and tick "Use Ethernet" option until the icon appears at the right corner of the status bar at the bottom.

Device Information

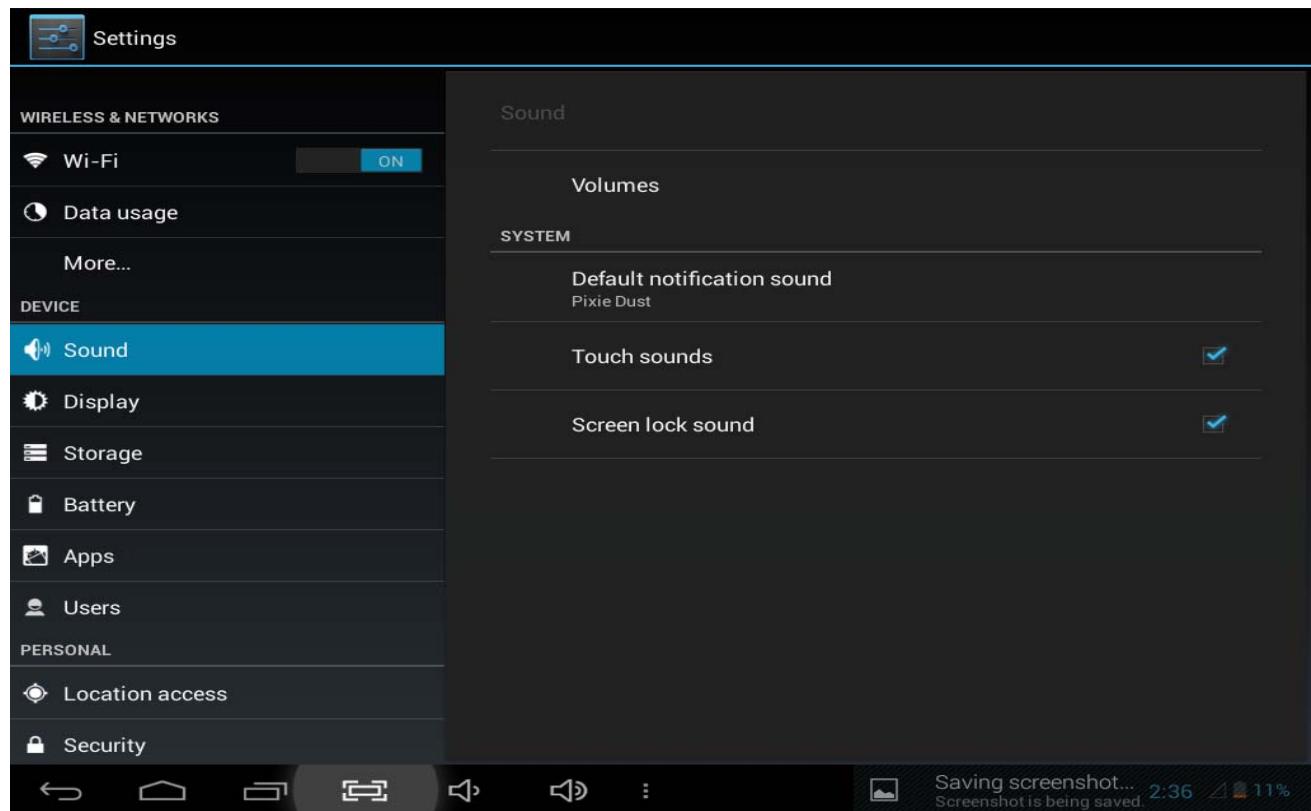

- (1) Sound: adjust the media volume, ringtones and notifications, alarm volume, and system beep, etc.;
- (2) Display: Set the screen brightness, wallpaper, screen rotation, screen sleep time, font size and screen adaptation;
- (3) Storage: Display Equipment Division to install the application and occupancy of space,
- (4) Battery: You can check the battery status and power usage.
- (5) Application: It can be categorized view (downloaded / SD card / running / all) applications, but also uninstall the application, clear data and other operations.

Personal Information

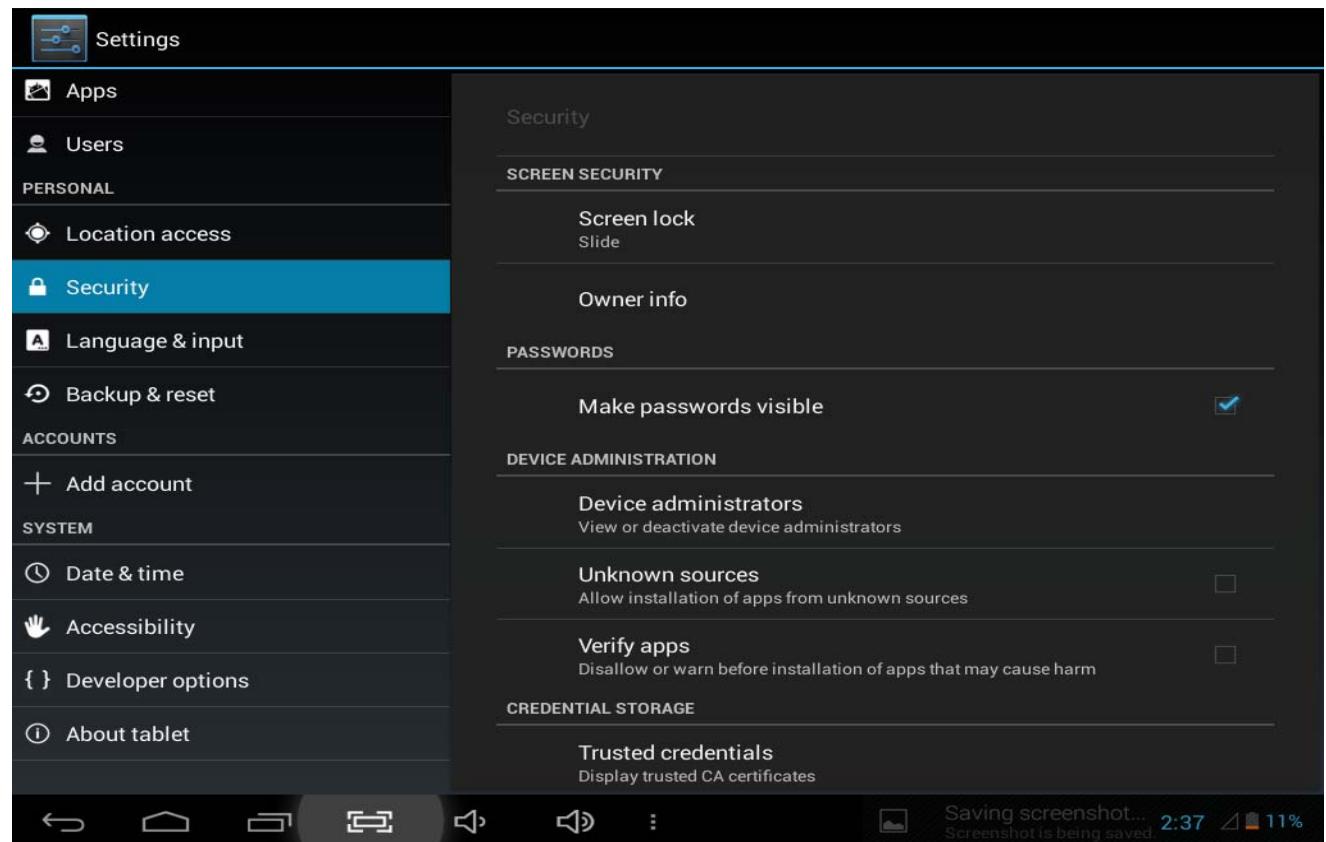

(1) Location-based services: the use of Wi-Fi or mobile network positioning the current location information and set whether to allow the application to use GPS for positioning.

(Note: GPS functions shall prevail according to the function of manufactured products).

(2) Security: The user can set the following items, such as screen security protection, device encryption, device management, storage and other credentials

(3) Language and input method: can set the system display language output, input method, phonetic and pointer speed;

(4) Backup and Reset

Restore factory Settings: remove all the setting information and data on the device, but do not remove device comes with the system application.

System Information



Date and Time

(1) Automatically determine the date and time: Use network-provided values;

(2) Cancel Automatic Update: You can manually set the date, time zone and time;

(3) Set time / date format .

About the equipment

(1) Status Message: You can view the battery status, battery level and other information;

(2) Software Information: You can view the firmware version, kernel version and software version numbers.

B. Application Install / unload

Installation Program

(1) Copies of the installation program to the device (or external USB storage devices such as TF card, USB disk).

(2) "Setting" → "Safety" → Checked "unknown sources" (This equipment is off by default, the user needs to manually open the option to install the application).

(3) Open the "Explorer" and find the installer APK storage location / route.

(4) Click the APK file, according to the prompt, click "Install" and finally click "Finish".

Unload program

Under normal circumstances can only unload the user-installed applications, factory-built applications can not be unloaded.

One Methods:

(1) "Settings" -> "applications", in the right side of the screen click the application which need to uninstall.

Note: only the "download" and "SD card" in the application can be uninstalled.


(2) In the application list of "download" and "SD card", find the application that you need to delete/uninstall, click this application.

(3) In the "application information" screen, click the "uninstall", according to the instruction to complete uninstall step.

Note: some applications have memory function, can remember the account number and related content that user last using, such as E-mail, Skype, etc. If you don't want to keep personal information in the tablet, such as mail content, Skype account, you can click the "clear data" button in the "application information" interface to clear the personal information in the tablet.

C.Switch Input Method

(1). In edit input status will pop up a keyboard, for users to input. For example, click on the Google search bar will automatically pop-up keyboard.

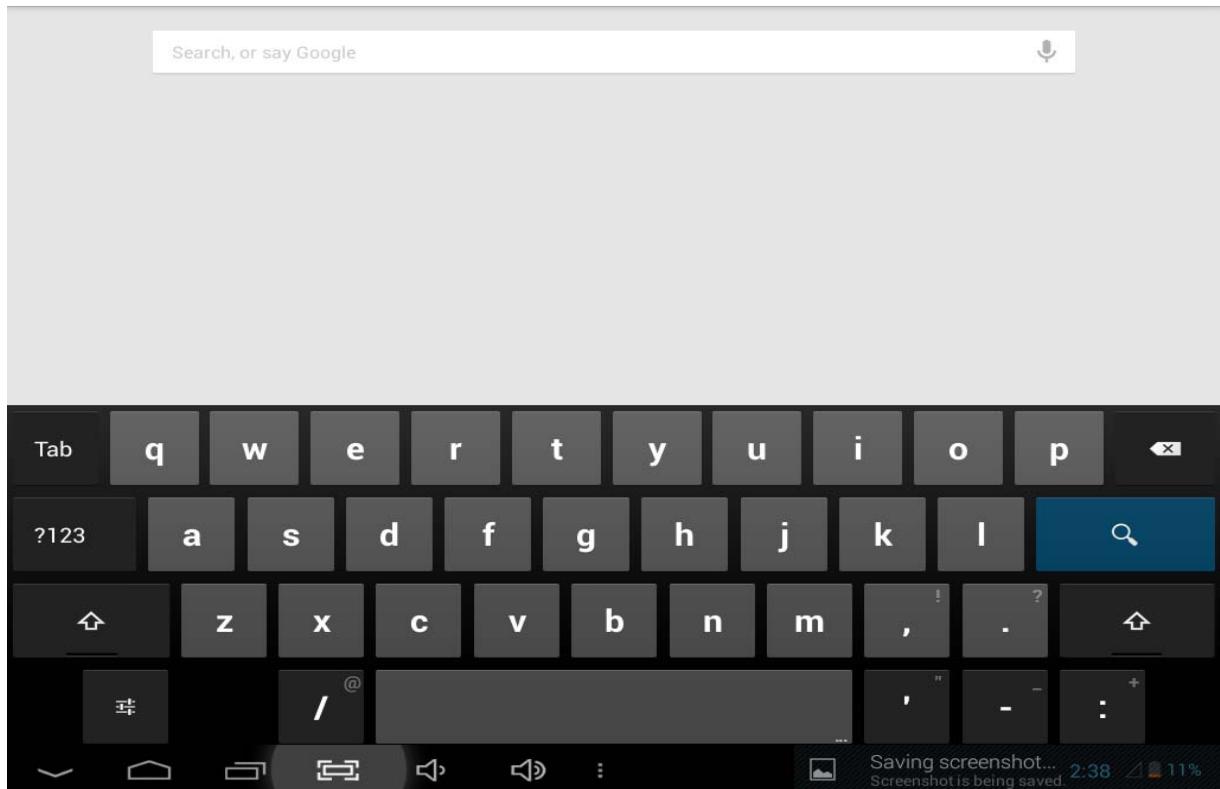

(2). In "Settings" > "language and input method", find keyboard and input method item, click the default, pops up a window "select input method", the user can choose input method as needed.

5. FAQ & Answers

(1) Unable to boot?

Please confirm the MID have power or not. And connect the charger to check again, if can't boot after charged, please contact with us.

Notice: The battery is very low status, need charge a little long time.

(2) Please confirm: A: The MID whether connect with computer successfully

B: The storage space of MID is full or not

C: USB cable is good or not.

(3) The screen suddenly turn off ?

A. Press power Key carelessly

B. Check your sleeping time, press the power key again.

(4) Why can't switch the screen?

Confirm the G-sensor is on or off.

(5) Dead halt?

Press Power for 4 seconds to force shutdown, then reboot the device.

(6) Can't charge?

Confirm the charger is good or not, if the charger is damaged, please buy a available charger.

6. Maintain Guide

In order to improve product performance, to extend its lifetime, do achieve below items

1. users cann't disassembly product privately ,if need repair service, kindly contact authorized distributors, distributor will provide service for the product that you brought.
2. To operate according to user manual's instruction, to avoid cause problems by unregulated operation.
3. System will occupy internal memory, thus internal memory will be less than the memory capacity that marked.
4. Please kindly set up appropriate volume, not suitable to set up loud volume when using earphone, when fell not good,please adjust down volume or stop use.
5. Don't use it when on drive or work on street.
6. please keep it into good environment, far away from strong light, dried or humidity environment. Please don't use it under high-temperature, high-humidity, mass dust environment. To avoid its life time
7. Don't fall down or collision or shock of it, otherwise will cause screen broken or can not display.
8. Far away from water or other liquid.
9. Use clean soft cloth to wipe it.
10. Keep it with power.

As to keep update and improve of product, the SW of equipment on operate interface and functions maybe exist a little difference with user manual. We deeply apologize to you for the inconvenience caused.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.