



AMARYLLO

the Netherlands

User Manual of iSensor HD Series

www.amaryllo.eu | sales.ai@amaryllo.eu | support.ai@amaryllo.eu |
© 2014 Amaryllo International B.V. All Rights Reserved.

6007030000100

- Installing the camera
- Control the iSensor HD camera rotation
- Accepting the camera as your Skype contact
- Troubleshooting
- Operating iSensor HD app
- Adding a new Wi-Fi router
- Operating Skype app
- LED indicator lights


1



2

Connect the USB cable to a power outlet. The blue LED light will be on when the camera is powered.

3 Wait for the blue LED light to start flashing before starting installation.

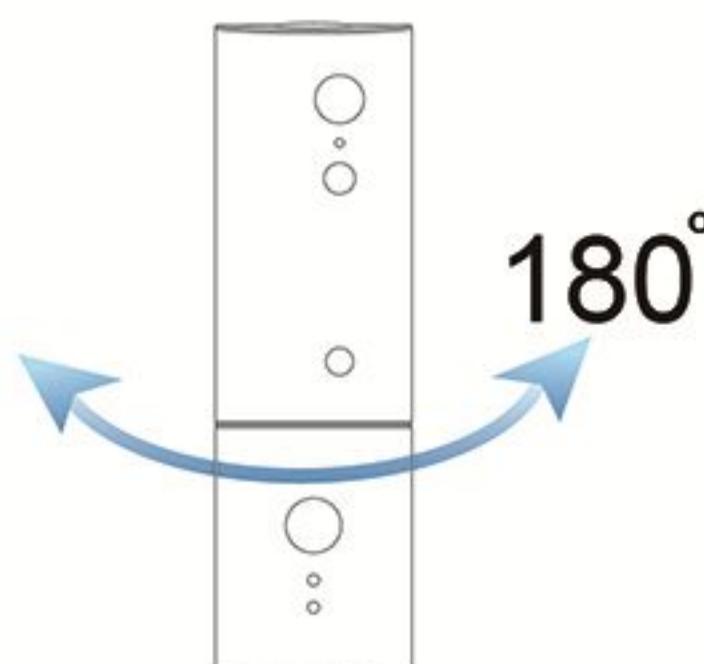

After powering on, it will take about 15 seconds before starting the calibration cycle. (For remote models)

4

Enter the password of your Wi-Fi AP router

JOIN

5

Each camera has a pre-registered Skype account.



Skype account

Enter your existing Skype account or a new Skype account.



You must use your existing Skype account or create a new one in order to use the sensor.

6

If QR scan failed, it will ask:

Do you want to try again?

You can press "Retry" to try again.

It is recommended that you check your information and try again.

RETRY QR SCAN

CHECK INFORMATION

12

Do you have a Skype account?
You need a Skype account to call the camera and act as the camera's administrator.

YES

If yes, please press the "Yes" button and enter in your Skype name.

If the name you enter is different from your Skype name, the setup will not be successful.

NO

If no, please press the "No" button to apply for a new Skype account.

7

Please check the information below

Wi-Fi (SSID)

Wi-Fi password

Skype account

8

Follow the steps below to complete the QR code scan.

1. Your phone will generate a QR code.
2. Place the camera 4" ~11.8" (10~30 cm) in front of the smartphone or 7.8" ~11.8" (20~30 cm) in front of the tablet (the iSensor HD will scan the QR code on the mobile device screen).

Please wait for a beep to confirm scan.


After you hear a beep, you can put the phone down.



9

You may need to wait at least 10~60 seconds for your mobile device (iOS and Android smartphones/tablets) to receive a confirmation message from Skype after a successful QR code installation. You must also accept the "Contact Request" from the camera that was just installed in order to make a video call.

14

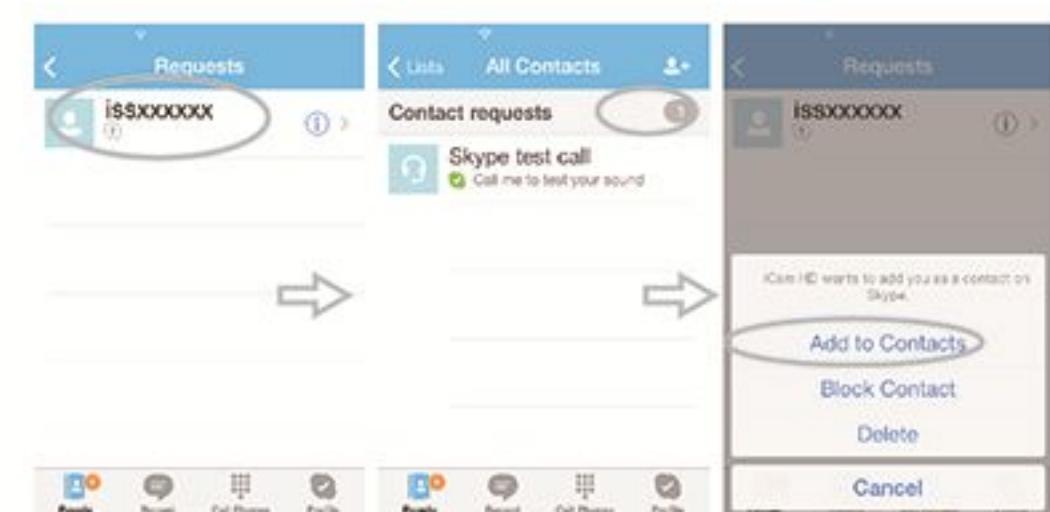

After successful installation, please go to "Contacts" in the Skype app to accept the iSensor HD friend request in order to access the camera.

About this camera

App version

Firmware version

Skype ID

Skype display name

IP address

Mac address

About us


Feedback



www.amaryllo.eu
support.ai@amaryllo.eu

16


- You will hear one beep when the QR code is scanned.
- You will hear two beeps when the camera setup is completed.
- The green LED light remains on when the camera is connected to the Wi-Fi.

11

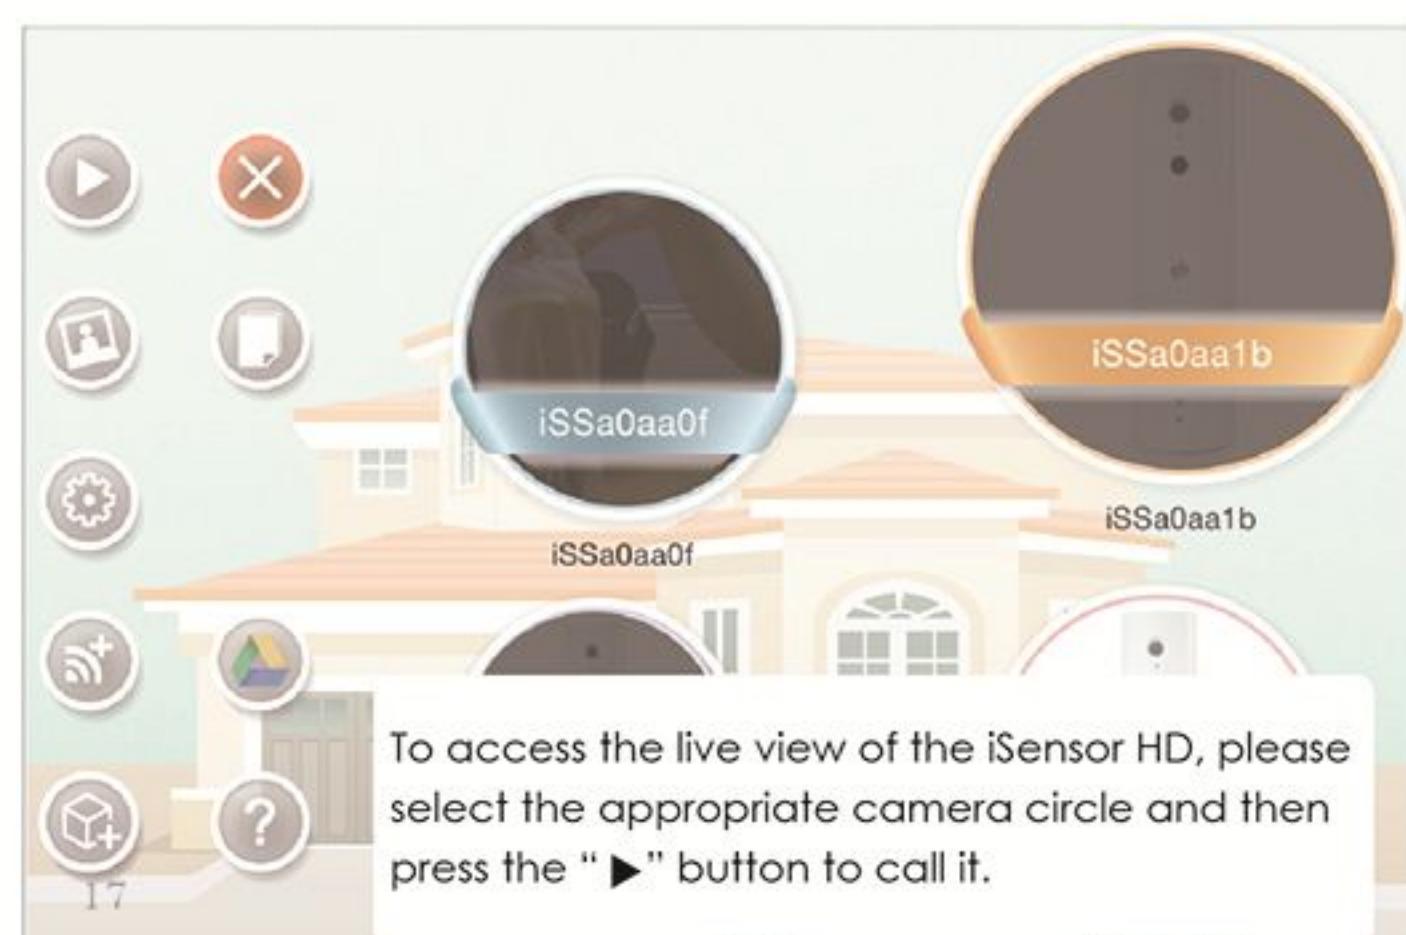


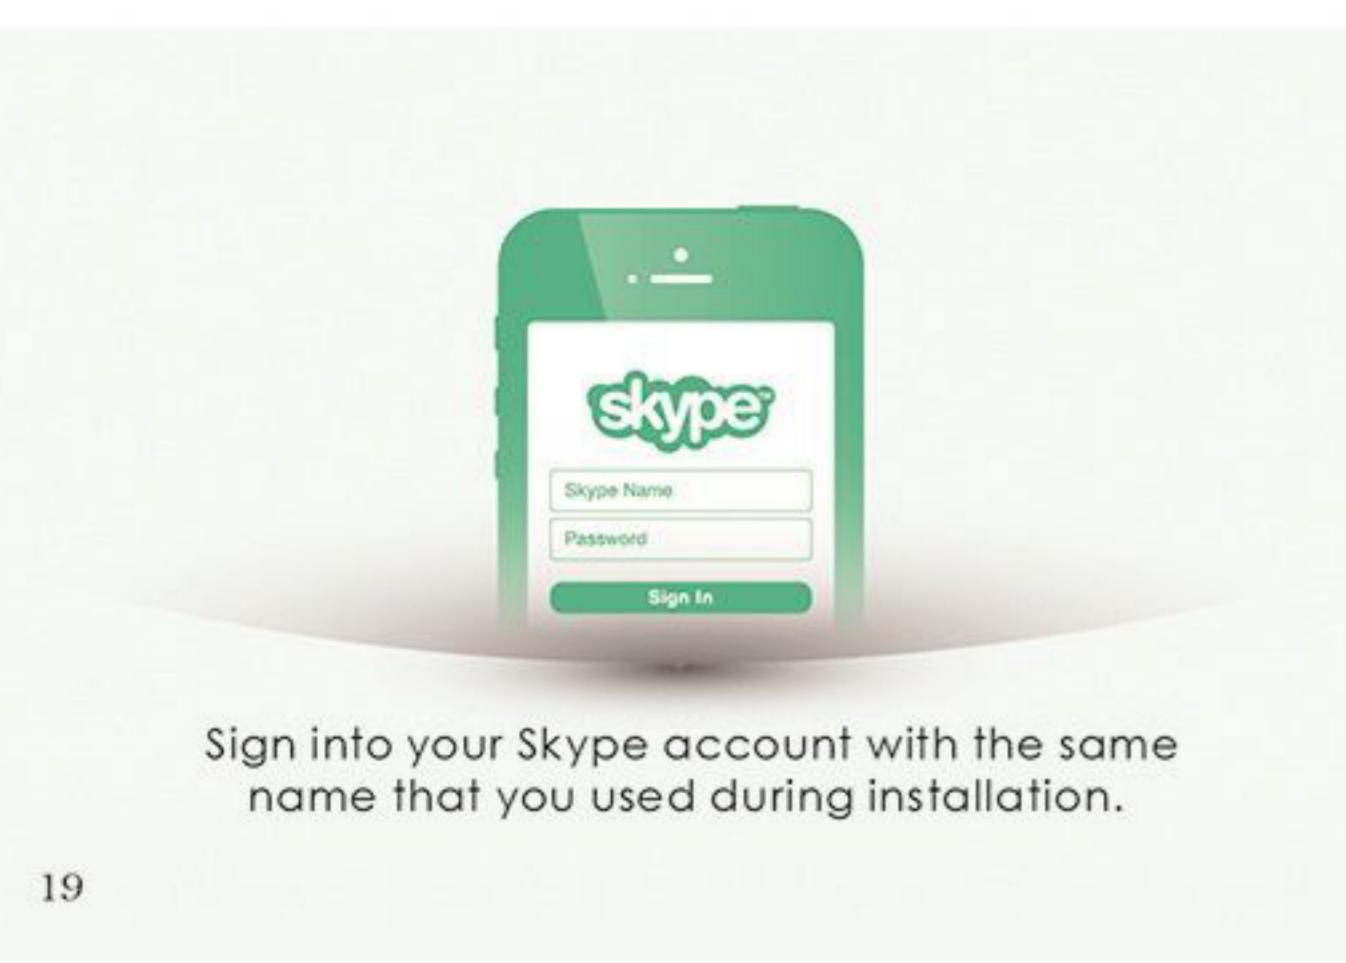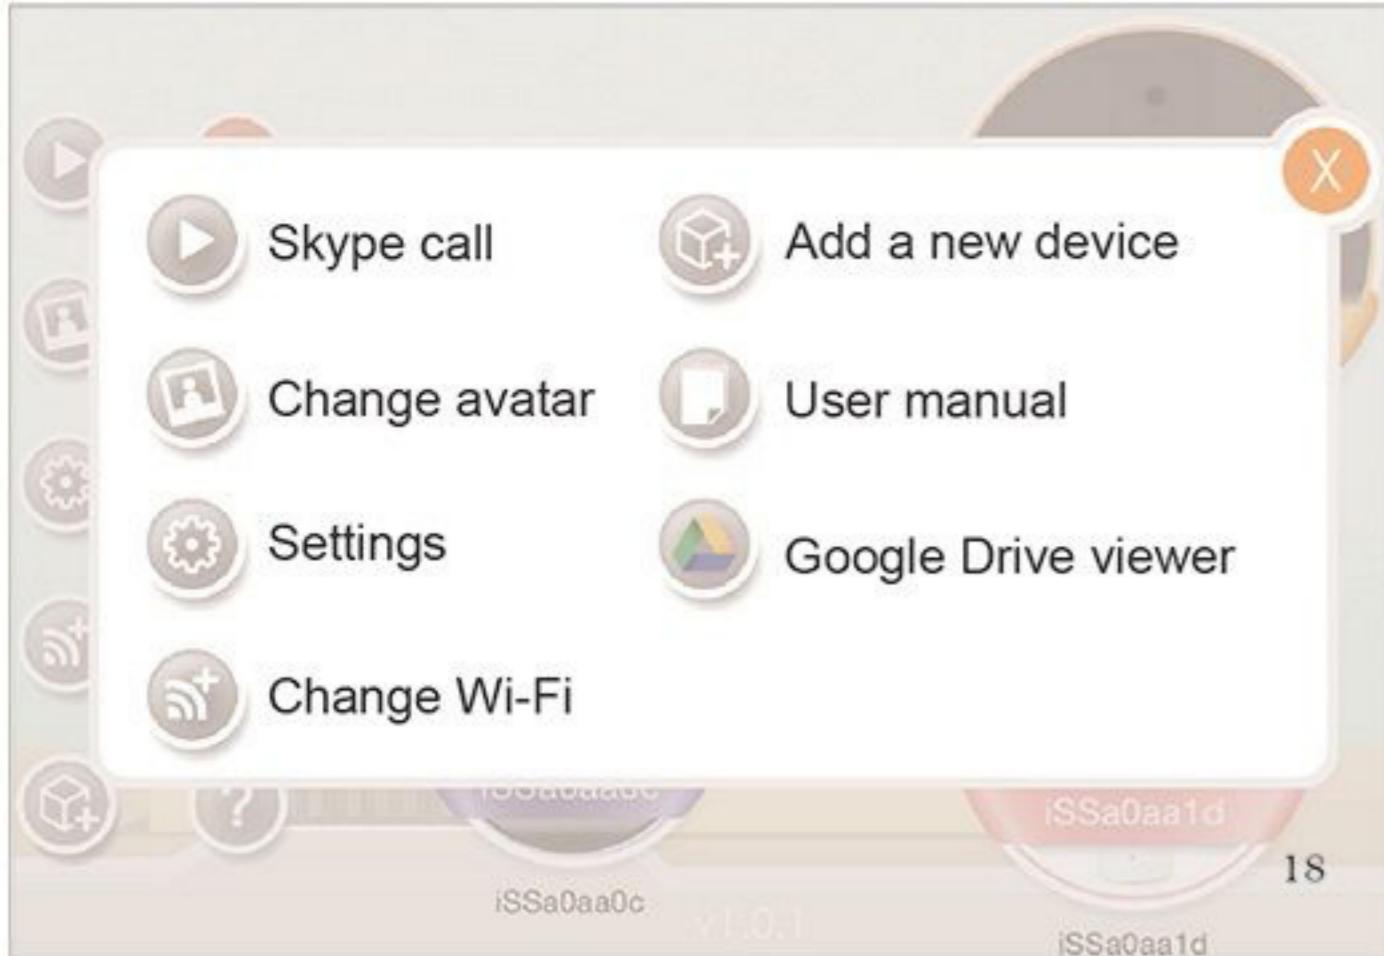

19

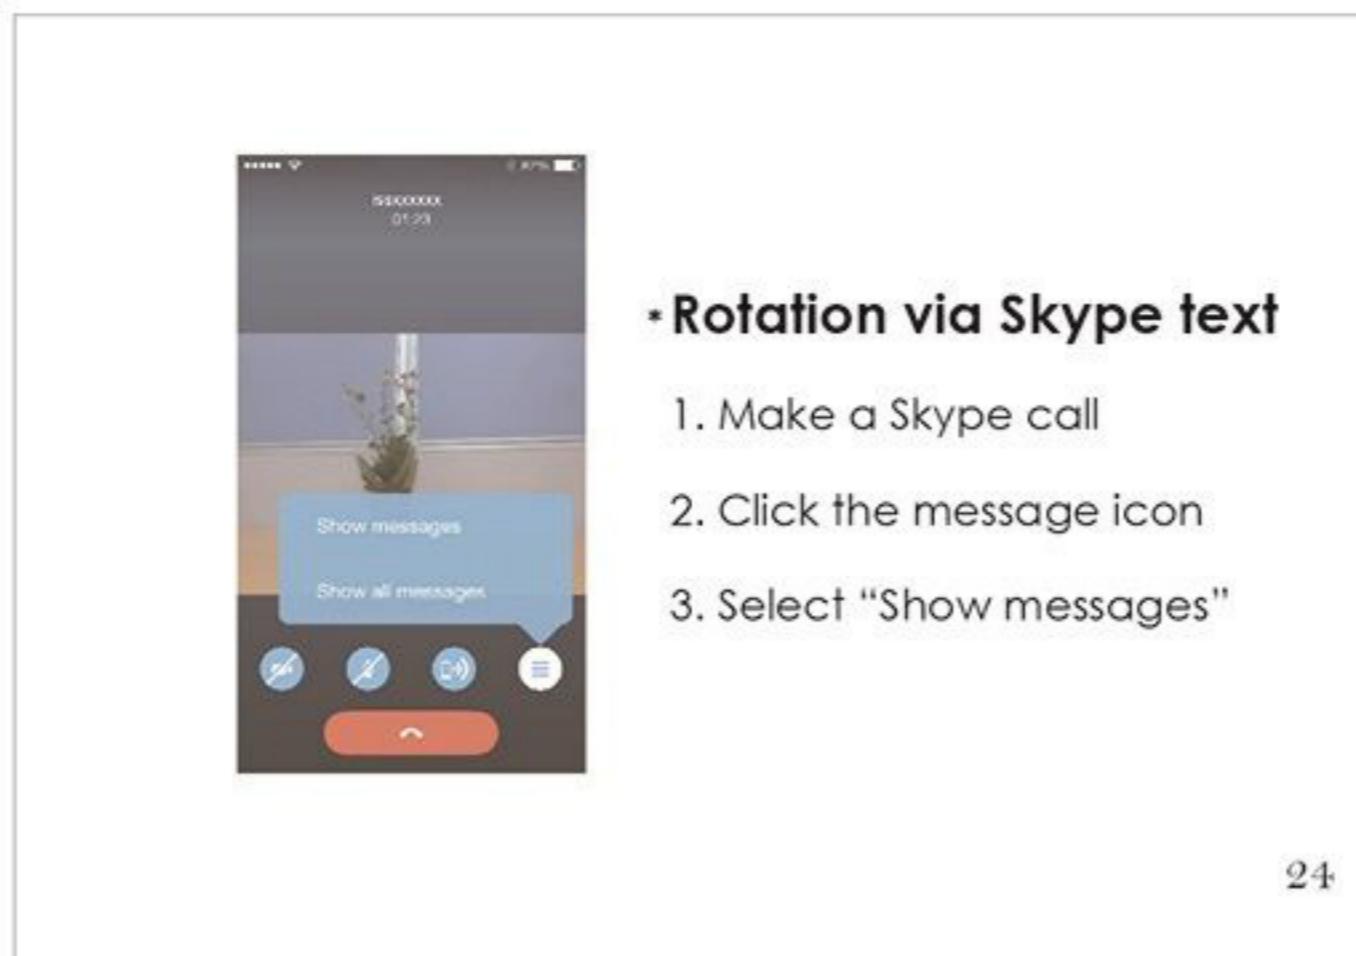

24

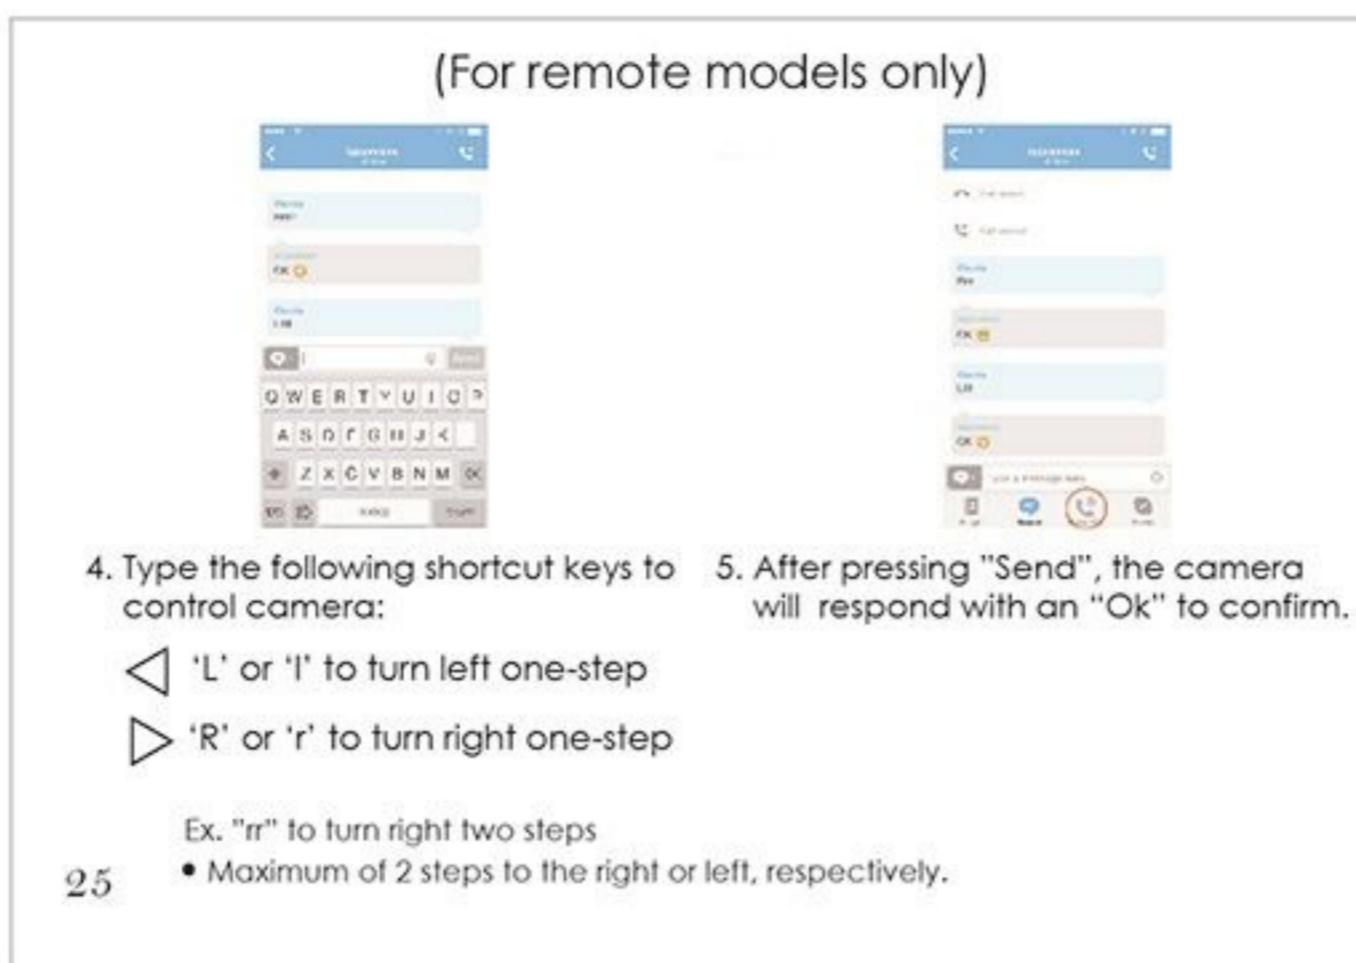

25

LED indication


Blue LED:

- The front LED is stable when you power on the camera.
- The front LED flashes once per second when the QR scan is in progress.
- When LED is flashing twice per second, the camera is in use and someone is actively viewing it.
- When LED is flashing 3 times per second, the setup process was successful.

Green LED:

- When LED is flashing once per second, the camera is trying to connect to a Wi-Fi AP router.
- When LED is constant, the camera is connected to Wi-Fi and working properly.

30

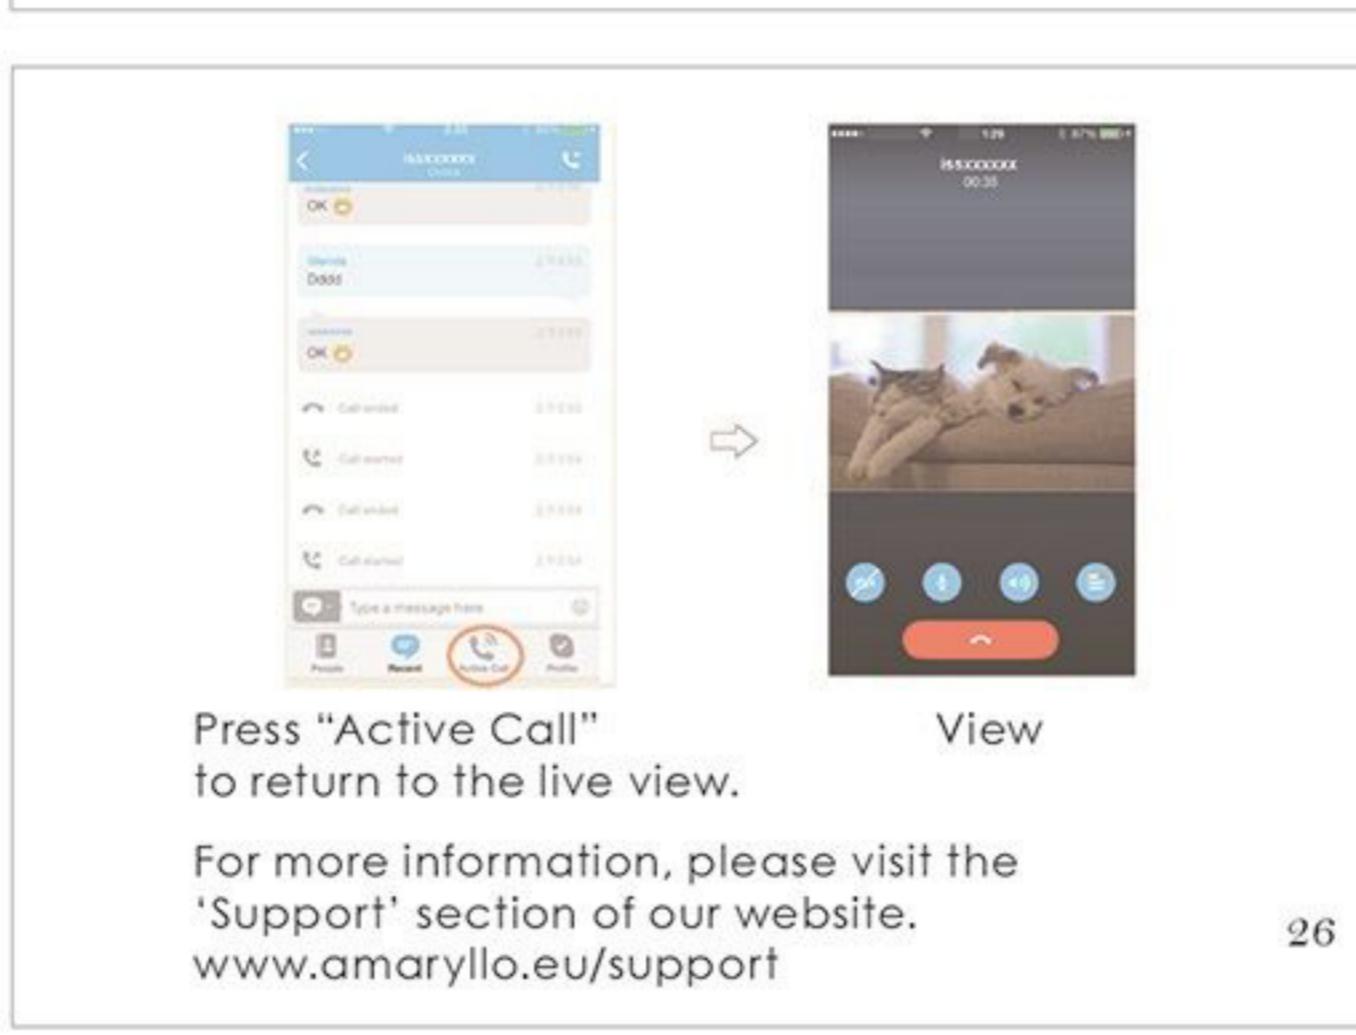


26


One-year product warranty

- Amaryllo warrants to the original purchaser of this product that product shall be free from defects in materials or workmanship under normal use during the warranty period applicable to the product.
- Warranty does not cover damage caused by physical abuse, accident, natural disaster, or use which is different from Amaryllo's advice and instructions. If the device is open, the warranty will be voided.
- Customers may be asked to furnish proof of ownership and date of purchase by showing the sales receipt/purchase invoice/warranty card. This warranty extends only to the original purchaser, and is non-transferable to anyone who subsequently purchases, leases or otherwise obtains the product from the original purchaser.


31

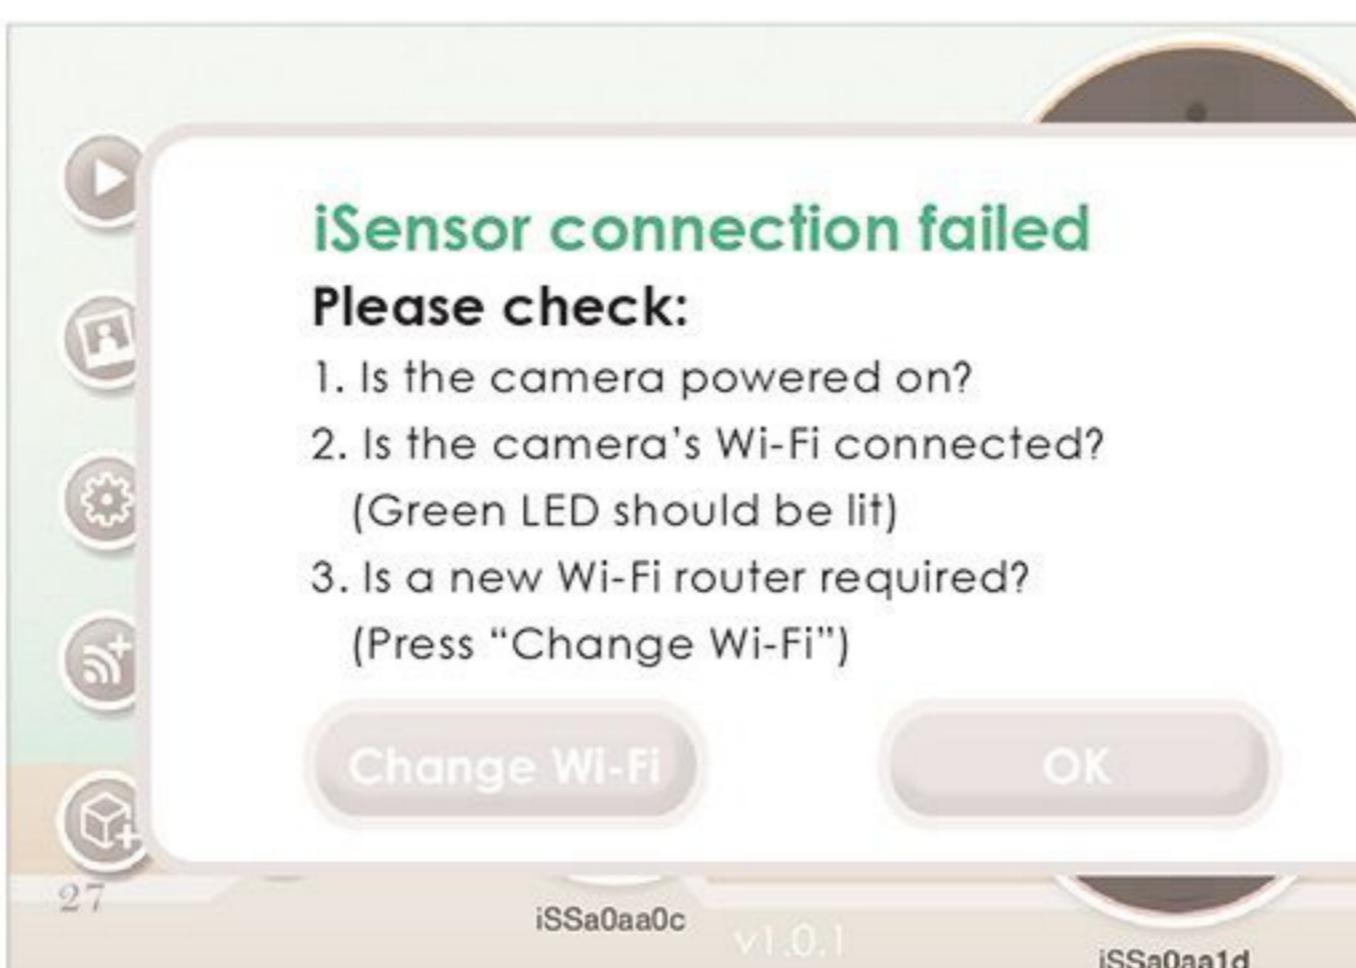


27

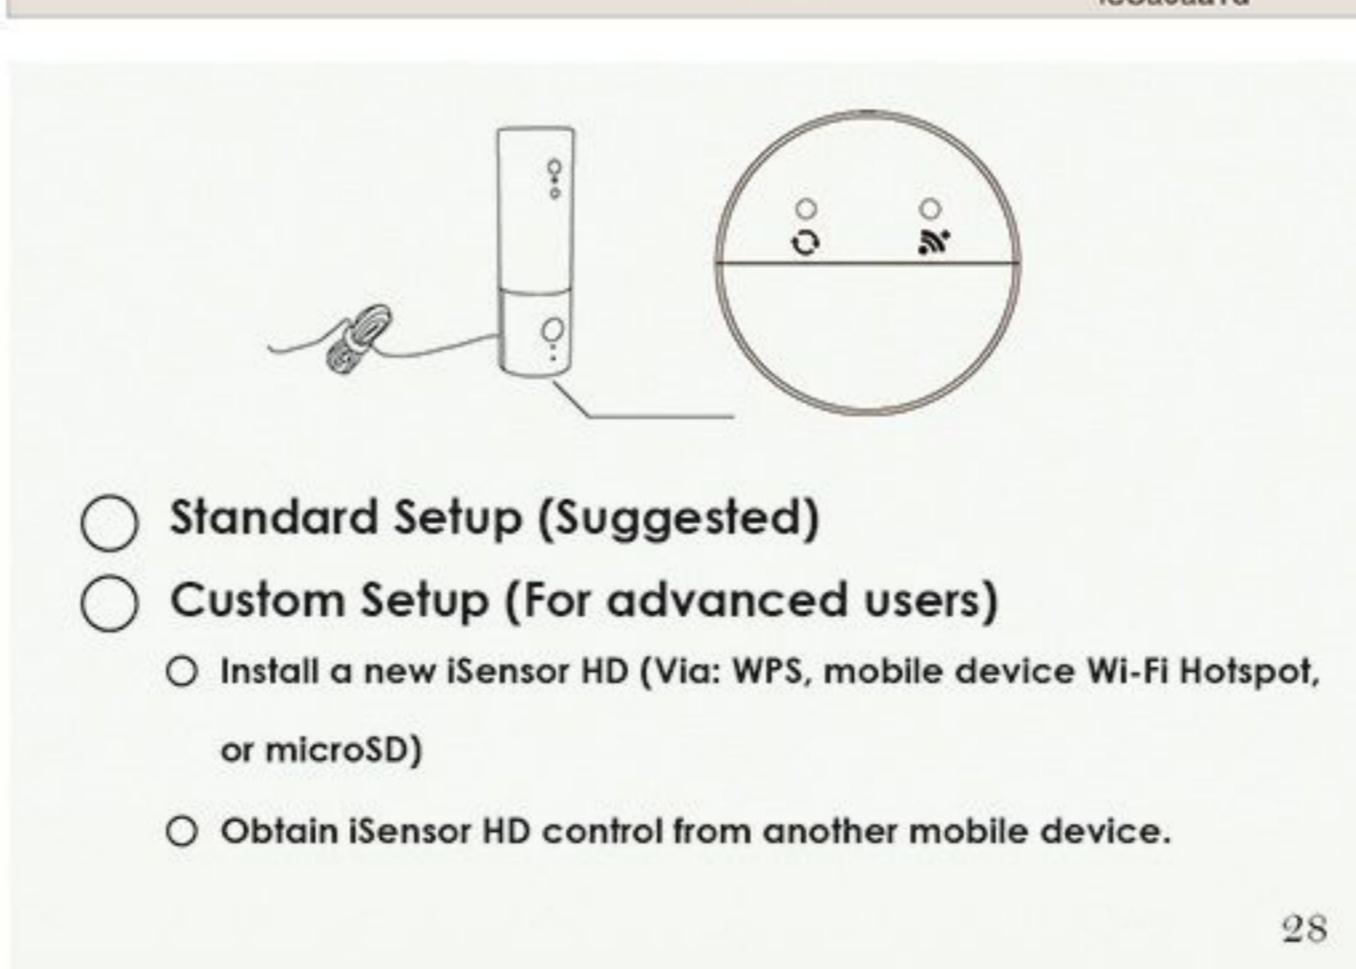


Accessories:

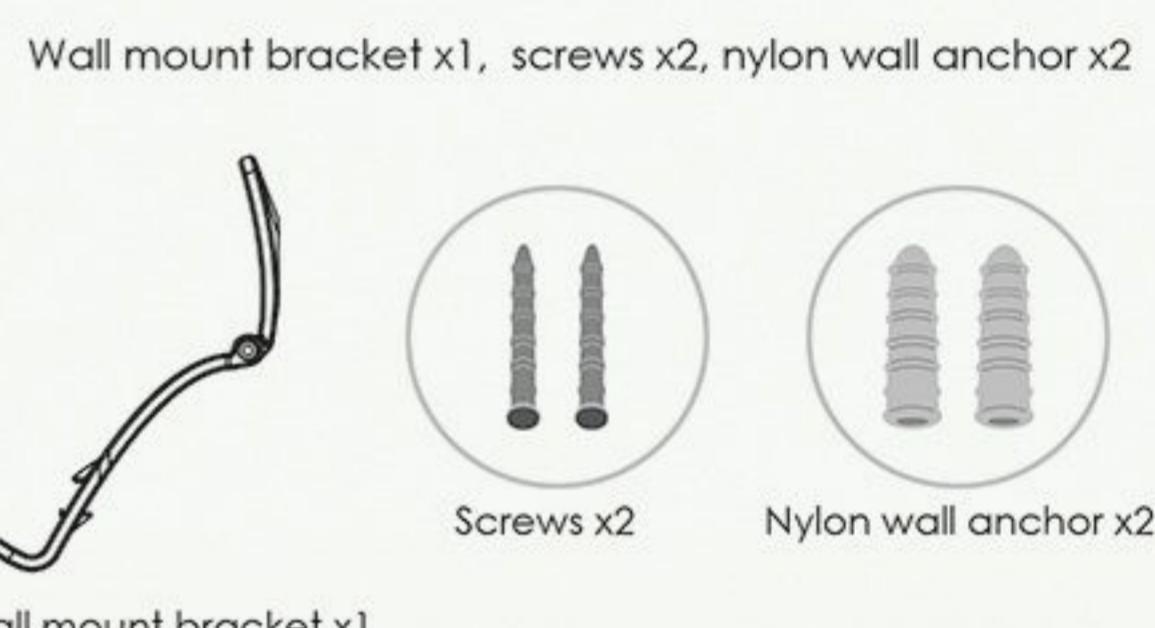

32

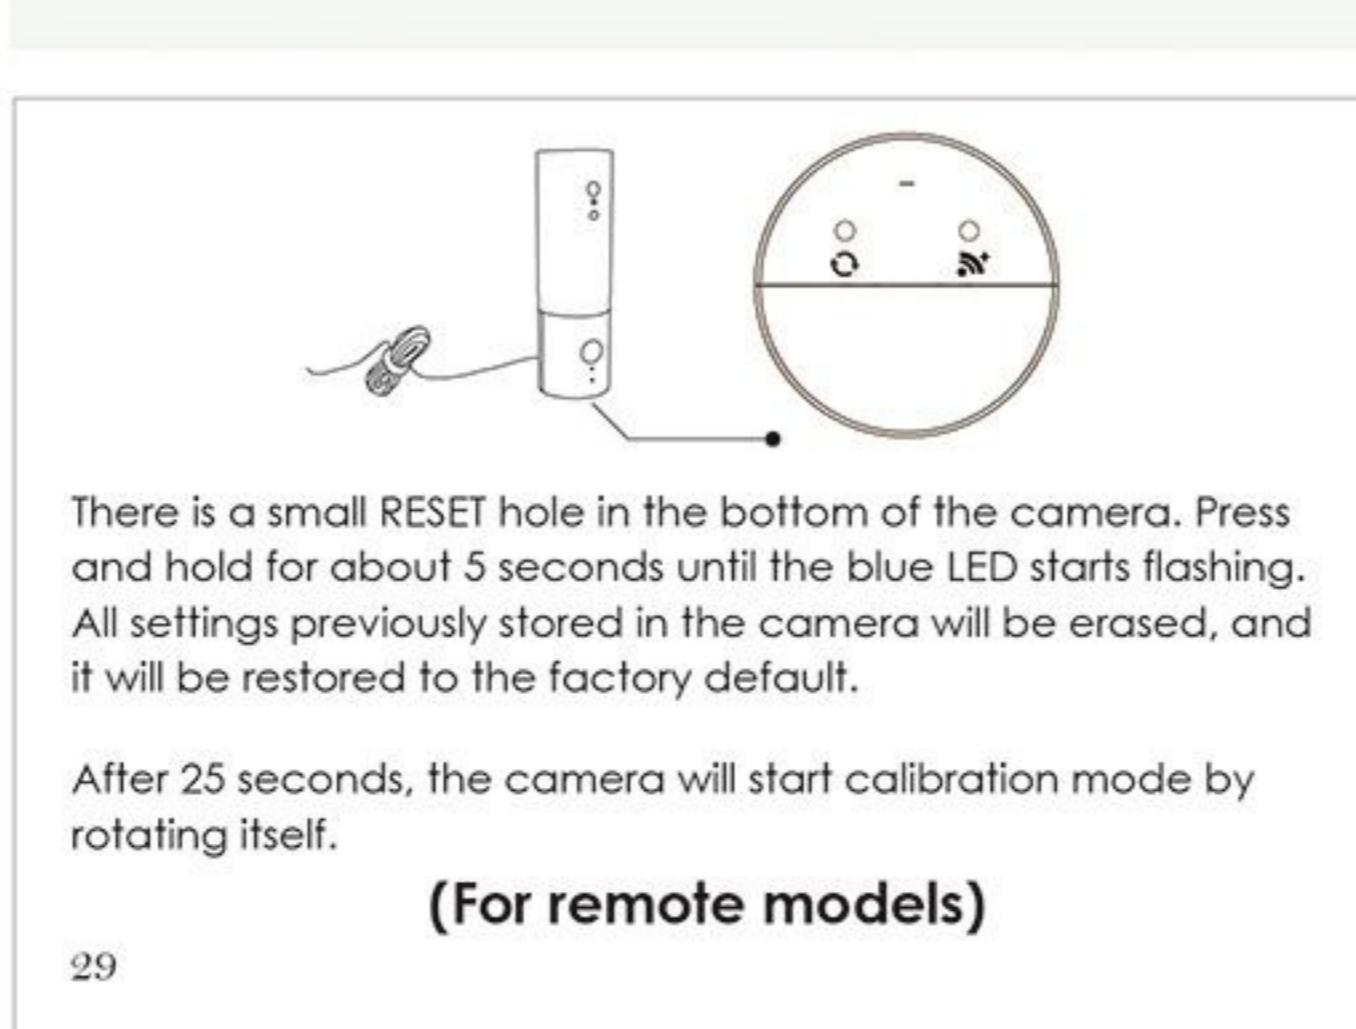

28

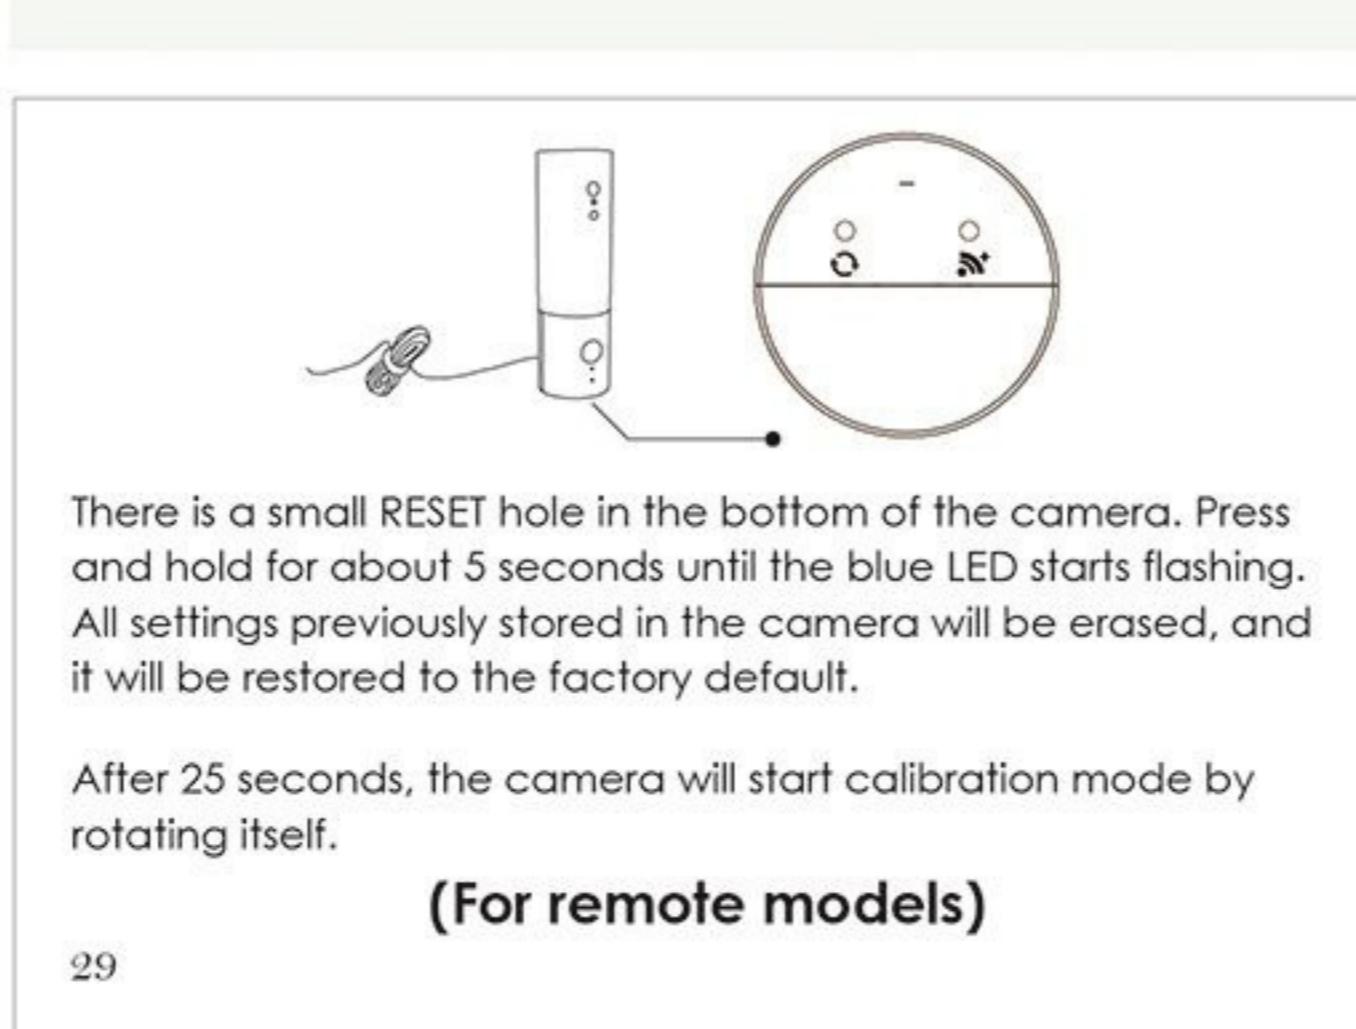

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. No change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

FCC INFORMATION


The Federal Communication Commission Radio Frequency Interference Statement includes the following paragraph:

The equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the

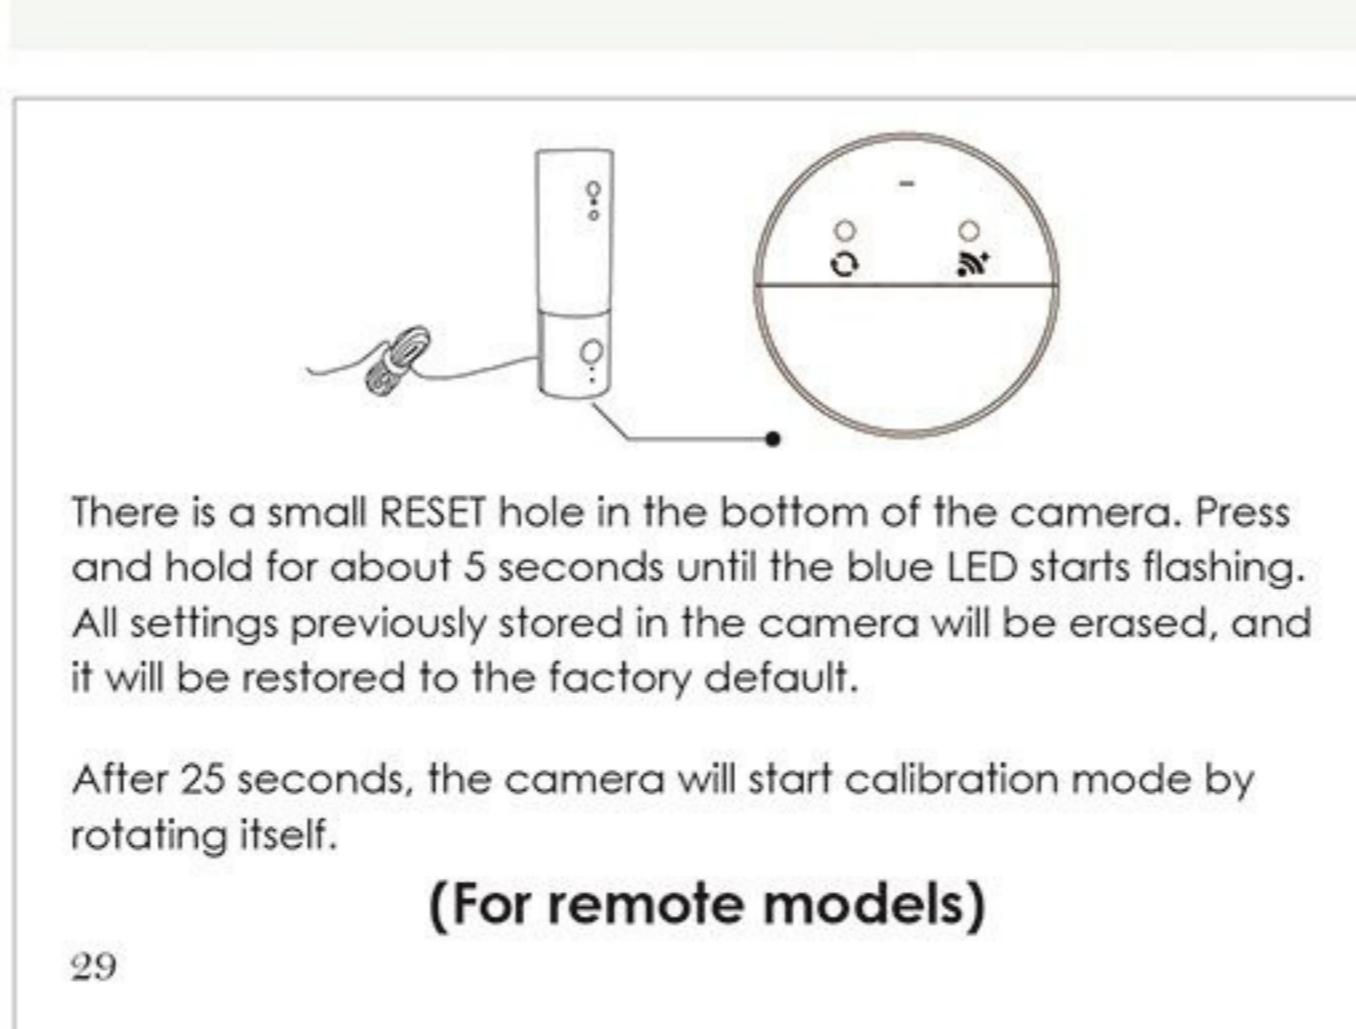

29

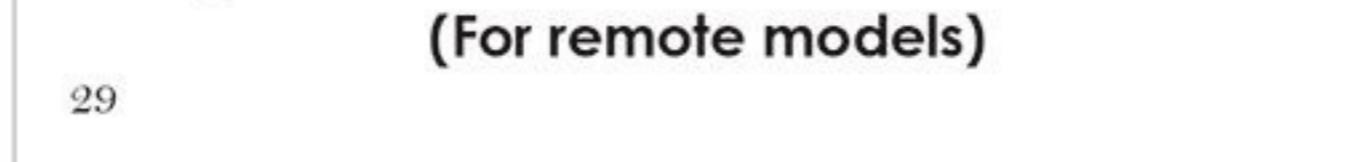

(For remote models)

29