


LED touch display

Operating Manual

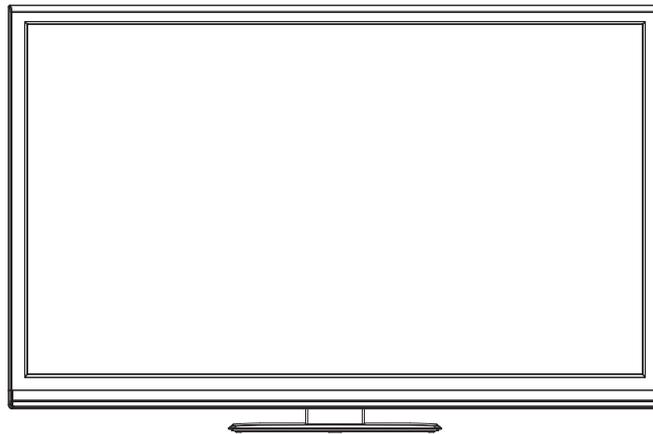

**Before connecting, operating or adjusting this product, please read the manual completely.
Please keep this manual for future reference.**

Contents

Important Safety Precautions	1
Important Notice	2
Identification of Controls	3
Basic Operations	4
Picture Adjustment	5
Audio Adjustment	7
Adjusting Basic Settings & Adjusting Computer Settings	8
Using USB Multi Media Player	9
Troubleshooting	15
Specifications	16

Important Safety Precautions

Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety. But **IMPROPER USE CAN RESULT IN POTENTIAL ELECTRICAL SHOCK OR FIRE HAZARD**. In order to prevent potential danger, please read the following instructions when installing, operating and cleaning the product. To ensure your safety and prolong the service life of your new product, please read the following precautions carefully before using the product.

1. Read these instructions---All operating instructions must be read and understood before the product is operated.

2. Keep these instructions---These safety and operating instructions must be kept in a safe place for future reference.

3. Heed all warnings---All warnings on the product and in the instructions must be observed closely.

4. Follow all instructions---All operating instructions must be followed.

5. Power source---This product is intended to be supplied by a listed power supply indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the cable system.

6. Power cord protection---Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

Note: where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

7. Overloading---Do not overload wall outlets, extension cords, or convenience receptacles on other equipment as this can result in a risk of fire or electric shock.

8. Replacement parts---In case the product needs replacement parts, make sure that the service person replaces parts specified by the manufacturer, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other danger.

9. Safety checks---Upon completion of service or repair work, request the service technician to perform safety checks to ensure that the product is in proper operating condition.

10. Clean only with dry cloth---Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

11. Panel protection---The display panel used in this product is made of glass. Therefore, it can break when the product is dropped or impacted upon by other objects. Be careful not to be injured by broken glass pieces in case the display panel breaks.

12. Pixel defect---The display panel is a very high technology product, giving you finely detailed pictures. Occasionally, a few non-active pixels may appear on the screen as a fixed point of blue, green or red. Please note that this does not affect the performance of your product.

Warning:

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Important Notice

About Temperature

Do not use in hot and cold rooms (locations)

- When the unit is used in rooms (locations) with low temperature, the picture may leave trails or appear slightly delayed. This is not a malfunction, and the unit will recover when the temperature returns to normal.
- Do not leave the unit in a hot or cold location. Also, do not leave the unit in a location exposed to direct sunlight or near a heater, as this may cause the cabinet to deform and the screen to malfunction.
- Storage temperature: 0°C to +50°C
- Working temperature: 5°C to +40°C

About After-Image

The extended use of fixed image program material can cause a permanent after-image on the screen.

This background image is viewable on normal programs in the form of a stationary fixed image. This type of irreversible screen deterioration can be limited by observing the following steps:

- A. Reduce the brightness/contrast setting to a minimum viewing level.
- B. Do not display the fixed image for extended periods of time.
- C. Turn the power off when not in actual use.

Important Information Regarding Use of Video Games, Captions or Other Fixed Image Displays.

- Do not allow a still picture to be displayed for an extended period, as this can cause a permanent after-image to remain on the screen.

CAUTIONS:

- The permanent after-image on the screen resulting from fixed image use is not an operating defect and as such is not covered by the warranty.



Cleaning and Maintenance

●To clean this unit, wipe with a soft, dry cloth.

- If the surfaces are extremely dirty, use a soft cloth dipped in a soap and water solution or a weak detergent solution.
- Use eyeglass cleaner to remove stubborn dirt from the screen.
- Never use alcohol, paint thinner or benzine to clean this unit.
- Before using a chemically treated cloth, read the instructions that came with the cloth carefully.

Identification of Controls

Main Unit (front/side view)

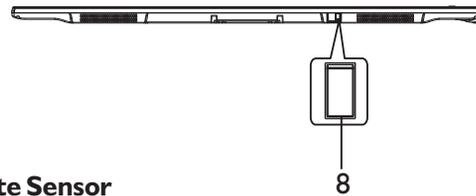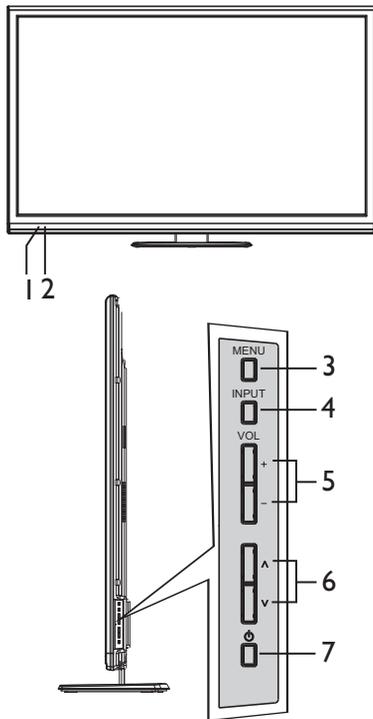

1. Remote Sensor
2. Power Indicator
3. MENU

Press this button to access the main menu screen.

4. INPUT

To access **Input Source** menu

5. VOL+/-

Press the **VOL+** or **VOL-** button to increase or decrease the sound volume level;

In the menu operations, these buttons serve as right/left buttons.

6. ^/v

In the menu operations, these buttons serve as up/down buttons.



7. POWER 

Press this button to turn the unit ON from STANDBY mode.

Press it again to turn the set back to STANDBY mode.

8. Power Switch

Main Unit (back view)

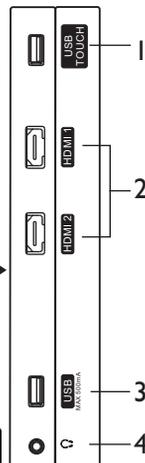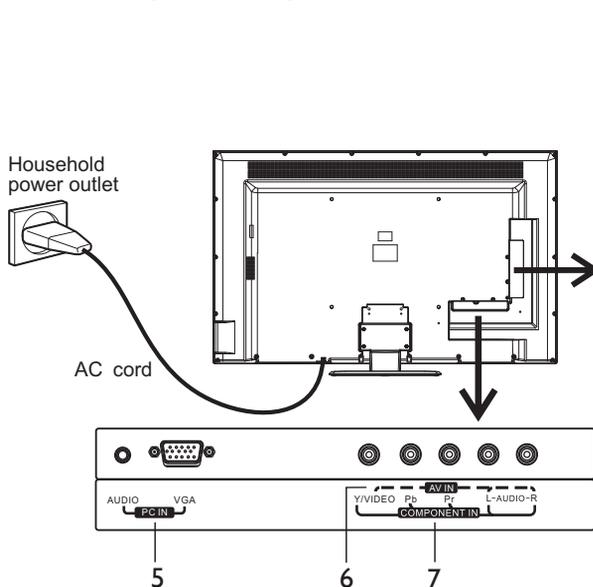

1. USB TOUCH.

2. HDMI 1/2: Connect an HDMI device to this jack.

3. USB port: Connect a USB device to this port.

4. Headphone: Connect headphones to this jack.

5. PC IN VGA/AUDIO: Connect a computer to these jacks.

6. AV INPUT: Connect an AV device to these jacks.

Note: The **AV IN VIDEO** jack shares the same jack with the **COMPONENT IN Y** jack. The **AV IN** jacks share the audio jacks with the **COMPONENT IN** jacks.

7. COMPONENT IN: Connect a component video device to these jacks.

Note:

- This product should be operated only from the type of power source indicated on the marking label.
- Always unplug the AC cord from power outlet when not using for a long period of time.
- This illustration is for reference only. The AC plug may be different on different models.

Cautions Before Connecting

- When connecting an external device to the MONITOR, make sure that the MONITOR and the device is turned off.
- Check the plugs on the ends of the cables to make sure that they are the correct type before you try to plug them into the jacks on the MONITOR.
- Make sure that all plugs are securely inserted into the jacks. Loose connections can result in image or color problems.
- The illustration of the external device may be different depending on your model.
- Refer to the operating manual of the external device as well.

Basic Operations


Turning the MONITOR on or off

- 1 Plug the power cord into an AC power outlet. Press the **Power Switch** on the MONITOR.
- 2 Now the unit is in standby mode. Wait a few seconds until the power indicator lights up and press **POWER**  to turn the MONITOR on.
- 3 Press  button again to turn off the MONITOR and put the MONITOR in standby mode. To cut off the power completely, press the **Power Switch** on the MONITOR.

Warning: When the MONITOR is in standby mode, power is still entering into the MONITOR. For the sake of saving energy and safety purposes, please press the **Power Switch** to completely cut off the power.

Note: If the MONITOR does not receive a broadcast signal for several minutes, the MONITOR will automatically turn off and go into standby mode.

Selecting the input source

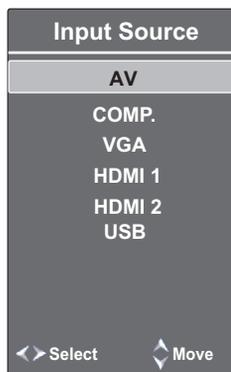

To select the input source:

- 1 Press the **INPUT** button.
- 2 Press  or  to select the input source. Options include:
 - **AV2** — Watch the AV signal.
 - **COMP.** — Watch the signal from the COMPONENT input terminals.
 - **VGA** — Watch the signal from the VGA input terminal.
 - **HDMI 1** — Watch the signal from the HDMI 1 input terminal.
 - **HDMI 2** — Watch the signal from the HDMI 2 input terminal.
 - **USB** — Watch the media source from the USB.
- 3 Press **OK** to confirm the selection.

Adjusting the volume

To adjust the volume:

- Press **VOL+** or **VOL-** to increase or decrease the volume.
- Press the **MUTE** button to temporarily turn off the sound. To restore the sound, press the **VOL+** or **MUTE** button.

Note: The speaker volume and the headphone volume will be memorized separately.

Freezing the Picture

To freeze the picture:


Press the **FREEZE** button to freeze the image on the screen (the video sources still run). Press this button again to reactive the image.

Note:

- If a fixed image is displayed on the screen for a long time, that fixed image may become imprinted on the screen and remain visible. Therefore do not freeze the picture for a long time.
- In some modes, the **FREEZE** function can not work.

Picture Adjustment

Adjusting the Picture

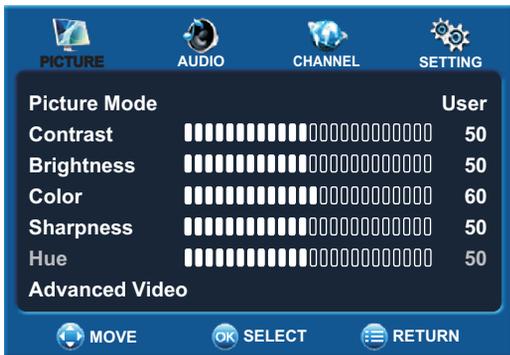



- 1 Press **MENU** and the main menu screen displays.
- 2 Press **◀** or **▶** to select the **PICTURE** menu and press **▼** or **OK** to access the menu.
- 3 Within the menu, press **▲** or **▼** to select items, press **◀**, **▶** or **OK** to access and press **▲**, **▼**, **◀**, **▶** or **OK** to adjust the selected item. If a sub-menu exists, press **▶** or **OK** to open it, then use **▲**, **▼**, **◀**, **▶** or **OK** to operate.
- 4 Continue pressing the **MENU** button to exit the menu screen.

Option	Description
Picture Mode	Selects a desired picture mode. You can select from Vivid , Standard , Energy Saving , Cinema and User . <hr/> Vivid: Select for a bright and vivid picture. <hr/> Standard: Select for a standard picture. <hr/> Energy Saving: The backlight brightness is decreased. <hr/> Cinema: Select for a finely detailed picture. <hr/> User: The picture quality you set.
Contrast	Adjusts image contrast.
Brightness	Adjusts screen brightness for easier viewing of dark picture such as night scenes and black hair.
Color	Adjusts color saturation.
Sharpness	Adjusts image sharpness and displays a sharp image.
Hue	Adjusts color hue for image. (Only for NTSC system)
Advanced Video	Allows you to adjust Backlight, Color Temperature, Overscan, Aspect Ratio, Noise Reduction, Advanced Contrast, Reset Picture Settings. See [Advanced Video Adjustment] section for more information.

Note: To quickly change the picture mode, continue pressing the **PICTURE** button on the remote control.

Picture Adjustment (Continued)

Advanced Video Adjustment

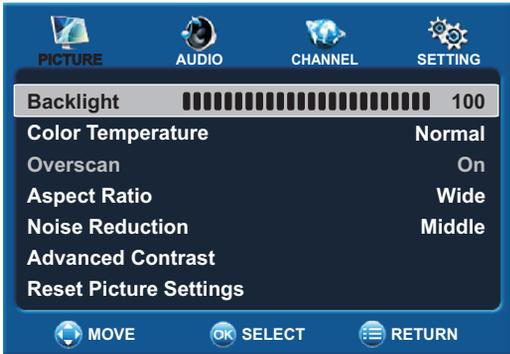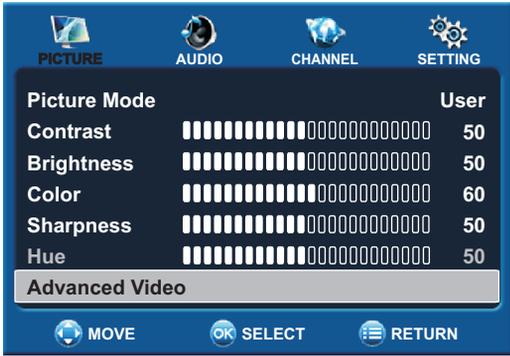


- 1 Navigate to the **PICTURE** menu, press **▼** or **OK** to access the menu.
- 2 Press **▲** or **▼** to select the **Advanced Video** and press **▶** or **OK** to access.
- 3 Within the menu, press **▲** or **▼** to select items and press **◀**, **▶** or **OK** to access and press **▲**, **▼**, **◀**, **▶** to adjust the selected item.
- 4 Continue pressing the **MENU** button to exit the menu screen.

Option	Description
Backlight	Sets the overall brilliance of the screen.
Color Temperature	Selects one of three automatic color adjustments. Sets to Warm to enhance hotter colors such as red, or set to Cool to see less intense colors with more blue. You can select from Cool , Normal and Warm .
Overscan	Selects On to adjust the picture's reproduction rate when receiving HDMI signal. (Depending on versions, in some models this function is not available.)
Aspect Ratio	You can select the aspect ratio (display proportions) according to your video signal type or personal preference. You can select from Normal , Zoom , Cinema and Wide . Normal: Displays the image of the original proportions. Zoom: Enlarges the picture. The top and bottom portion of the picture may be cropped. Cinema: Stretches the picture at the edges while maintaining a good aspect ratio at the center of the screen. Wide: Displays a full-screen picture.
Note: You can also press the ZOOM button on the remote control to select it.	
Noise Reduction	Selects from Low/Middle/High to reduce noise in the picture, commonly called snow. Selects Off to turn off this function.
Advanced Contrast	<ol style="list-style-type: none"> 1. Navigate to the Advanced Video submenu and press ▲ or ▼ to select Advanced Contrast, press ◀, ▶ or OK to access. 2. Press ▲ or ▼ to select Dynamic Contrast or Dynamic Backlight and use ◀ or ▶ to turn on or turn off the function. <ul style="list-style-type: none"> • Dynamic Contrast: Turns On to automatically adjust picture detail and brightness. • Dynamic Backlight: Turns On to enhance contrast ratio between light and dark areas of picture. (Once Dynamic Backlight is set to On, the Backlight item can not be adjusted.) <p>Note: You can also press DCR button to turn on or turn off the Dynamic Backlight directly.</p>
Reset Picture Settings	Reset all PICTURE settings to factory defaults.

Audio Adjustment

Adjusting the Sound

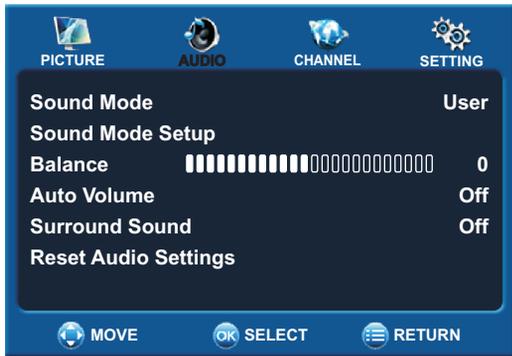


- 1 Press **MENU** and the main menu screen displays.
- 2 Press **◀** or **▶** to select the **AUDIO** menu and press **▼** or **OK** to access the menu.
- 3 Within the menu, press **▲** or **▼** to select items, press **◀**, **▶** or **OK** to access and press **▲**, **▼**, **◀**, **▶** or **OK** to adjust the selected item. If a sub-menu exists, press **▶** or **OK** to open it, then use **▲**, **▼**, **◀**, **▶** or **OK** to operate.
- 4 Continue pressing the **MENU** button to exit the menu screen.

Option	Description
Sound Mode	Selects a desired sound mode. You can select from Standard , Music , Movie , Sports and User . <hr/> Standard: Select for normal programs. <hr/> Music: Select for a music program. <hr/> Movie: Select for a movie program. <hr/> Sports: Select for a sports program. <hr/> User: The sound quality you set. <hr/>
Sound Mode Setup	Adjusts the equalizer settings.
Balance	Adjusts volume balance (left and right volumes).
Auto Volume	Select On to equalize overall volume levels across all channels. Select Off to turn off the auto volume control.
Surround Sound	Select On to turn on the surround sound effect. The benefits of surround sound are enormous. You can be completely enveloped in sound, just as if you were at a concert hall or cinema. Select Off to turn the surround sound off.
Reset Audio Settings	Reset all AUDIO settings to factory defaults.

Note: You can also press the **AUDIO** button on the remote control to select it.

Adjusting Basic Settings & Adjusting Computer Settings


Adjusting basic options

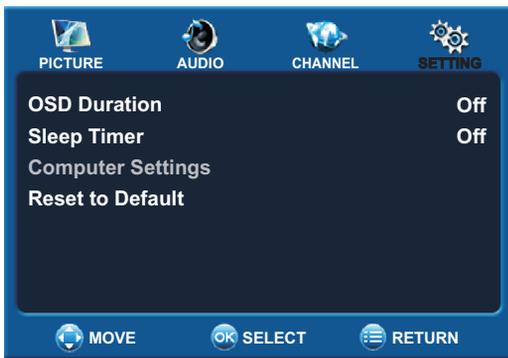

- 1 Press **MENU** and the main menu screen displays.
- 2 Press **◀** or **▶** to select the **SETTING** menu and press **▼** or **OK** to access the menu.
- 3 Within the menu, press **▲** or **▼** to select items, press **◀**, **▶** or **OK** to access and press **▲**, **▼**, **◀**, **▶** or **OK** to adjust the selected item. If a sub-menu exists, press **▶** or **OK** to open it and use **▲**, **▼**, **◀**, **▶** or **OK** to operate it.
- 4 Continue pressing the **MENU** button to exit the menu screen.

Option	Description
OSD Duration	Selects menu displaying time on the screen.
Sleep Timer	Selects the amount of time before your MONITOR will turn off automatically. To cancel sleep mode, select Off .
Computer Settings (Only for VGA mode)	Allows you to adjust the computer settings, such as Horizontal Pos., Vertical Pos., Frequency, Phase, etc. through the menu. See [Adjusting Computer Settings] section for more information.
Reset to Default	Reset all settings to factory defaults.

Adjusting Computer Settings

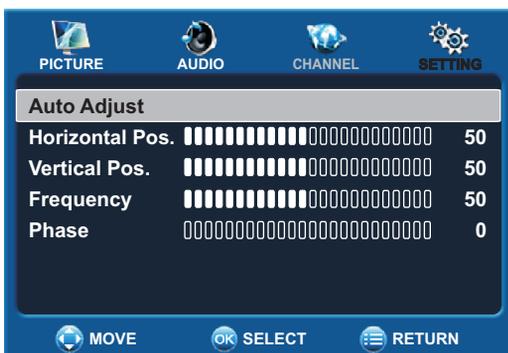

Before adjusting the image, make sure that you select the correct source (**VGA**).

- 1 Navigate to the **SETTING** menu and press **▼** or **OK** to access the menu.
- 2 Press **▲** or **▼** to select **Computer Settings** and press **▶** or **OK** to access.
- 3 Within the menu, press **▲** or **▼** to select items and press **◀**, **▶** or **OK** to access and press **▲**, **▼**, **◀**, **▶** to adjust the selected item.
- 4 Continue pressing the **MENU** button to exit the menu screen.


Option	Description
Auto Adjust	Selects and activates to start auto adjustment. The image settings, such as position and phase will be automatically adjusted.
Horizontal Pos.	Moves the image on the screen left or right.
Vertical Pos.	Moves the image on the screen up or down.
Frequency	Adjusts the sample frequency.
Phase	Improves the focusing of a stable image.

Using USB Multi Media Player

Notes about using USB

- **Before using this function, make sure that you select the correct source (USB)** and insert a USB storage device on the MONITOR to view compatible photo, movie and text on the MONITOR screen or play compatible music through the MONITOR.
- If the connected USB HDD does not have an external power source, it may not be detected. Be sure to connect the external power source.
- To avoid losing the data on your USB device or damaging your USB device, it is recommended that you back up your USB device data.
- The USB multi media playing menu may vary in different situations.
- If you want to pull out the USB device, please exit USB mode first.
- For instructions on using your USB device, refer to the owner's manual for your USB device.
- Never remove the USB device or turn off the MONITOR while using the USB device. Doing so may result in loss of data and/or damage to the USB device and/or MONITOR.
- Certain types of USB devices may not be compatible with this MONITOR.

Playing Photo

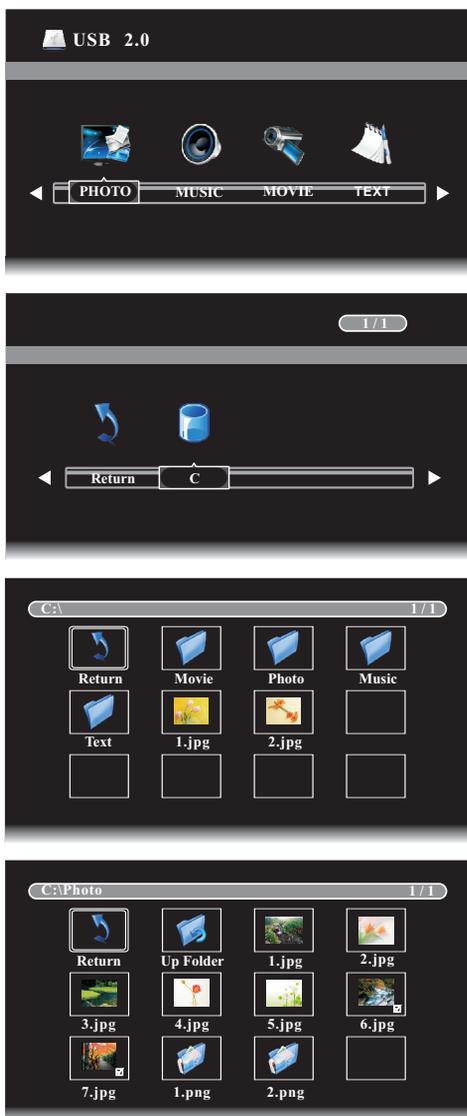

You can connect the USB device to the MONITOR to display most photos in JPG, BMP and PNG format, but for the sake of technical updating, some formats mentioned above may not be supported.

- 1 Press the **USB** button to access the USB multi media playing menu.
- 2 Press ◀ or ▶ to select **PHOTO** and press **OK** to access.
- 3 Press ◀ or ▶ to select the **C** disk and press **OK** to open it. (If you want to go back, highlight **Return** and press **OK**.)
- 4 Use ▲ ▼ ◀ ▶ to navigate and select folders or photo files, then press **OK** to open the highlighted folder or press ▶|| to start slide show from the current photo file. Below we will take it as an example that your desired photo files are contained in a folder. Highlight the folder you want to open and press **OK** to open it. All your photo files will be shown in a thumbnail index.
- 5 The following describes how to use the Photo Viewer Index:
 - **To return to the root**, highlight **Return** and press **OK**.
 - **To go back to the upper level folder**, highlight **Up Folder** and press **OK**.
 - **To start slide show from your desired photo**, highlight this photo and press ▶||.
 - **To mark photos so you can view only these photos in a slide show**, use ▲ ▼ ◀ ▶ to highlight the specific photo and press **OK**. A check mark appears on it (press **OK** again to cancel the mark). Repeat the process to create your favorite photo list.

Using USB Multi Media Player (Continued)



- 6 During the slide show, you can make use of the **Photo Menu Bar** to perform many functions.

To open and operate the Photo Menu Bar, press the ≡ button during the slide show. The Photo Menu Bar will be displayed at the bottom of the screen. Use ◀ ▶ to select your desired function, press **OK** to fulfill the function. If the function icon has several options, continue pressing **OK** to select it.





- 7 Press ↶ button to return to the previous menu.

The following describes every function icon on the **Photo Menu Bar**.

	Play/pause. You can also press ▶ on the remote control to play or pause.
	Go to the previous/next photo . You can also press ◀▶ on the remote control to go to the previous or next photo.
	Stop playing. You can also press ■ on the remote control to stop playing.
	Repeat mode selection. Highlight this icon and continue pressing OK to select Repeat I , RepeatALL or NoRepeat .
	Play/pause background music. Note: You can play your selected compatible music files as background music during a photo slide shows.
	List of photo files. It will display a list of all marked compatible photo files in the current folder. If no photo files are marked, all compatible photo files will show in this list. Press ▲ ▼ to move upward or downward and press OK to start the slide show. Highlight Exit and press OK to exit the list.
	Displays the current photo file information.
	Rotate the photo clockwise/counterclockwise by 90 degrees every time the button is pressed.
	Zoom in/zoom out of the photo image.
	Pan (left, right, up, down). You can use Pan only when the photo is magnified.

Using USB Multi Media Player (Continued)

Playing Music

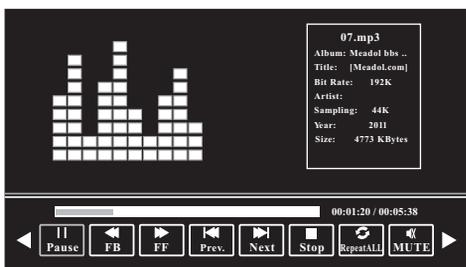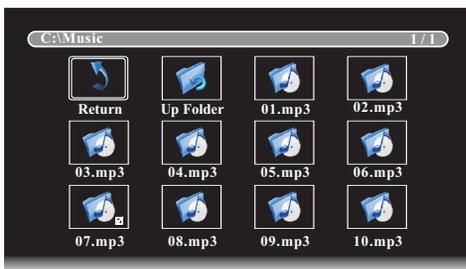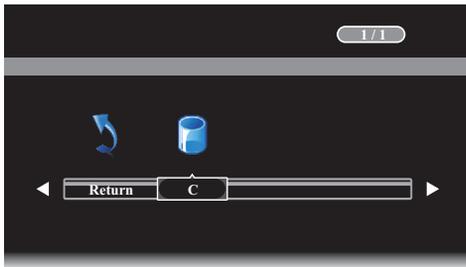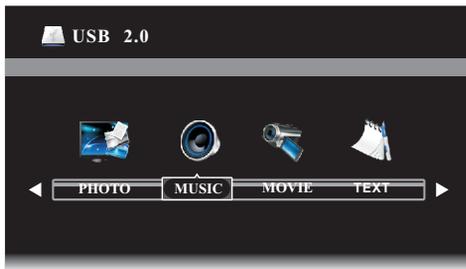

Generally, audio play supports MP3, WMA and AAC formats, but for the sake of technical updating, some formats mentioned above may not be supported.





- 1 Press the **USB** button to access the USB multi media playing menu.
- 2 Press ◀ or ▶ to select **MUSIC** and press **OK** to access.
- 3 Press ◀ or ▶ to select the **C** disk and press **OK** to open it. (If you want to go back, highlight **Return** and press **OK**.)
- 4 Use ▲ ▼ ◀ ▶ to navigate and select folders or music files, then press **OK** to open the highlighted folder or press ▶|| to start playing music from the current music file. Below we will take it as an example that your desired music files are contained in a folder. Highlight the folder you want to open and press **OK** to open it. All your music files will be shown in a thumbnail index.
- 5 The following describes how to use the music thumbnail Index:
 - **To return to the root**, highlight **Return** and press **OK**.
 - **To go back to the upper level folder**, highlight **Up Folder** and press **OK**.
 - **To start playing from your desired music file**, highlight this file and press ▶||.
 - **To mark music files so you can play only these music files**, use ▲ ▼ ◀ ▶ to highlight these music files and press **OK**. A check mark appears on it (press **OK** again to cancel the mark). Repeat the process to create your favorite music list.
- 6 While the music is playing, you can make use of the **Music Menu Bar** to perform many functions. To open and operate the Music Menu Bar, press the ≡ button while the music is playing. The Music Menu Bar will be displayed at the bottom of the screen. Use ◀ ▶ to select your desired function, press **OK** to fulfill the function. If the function icon has several options, continue pressing **OK** to select it.
- 7 Press ↶ button to return to the previous menu.

The following describes every function icon on the Music Menu Bar.

	Play/pause. You can also press ▶ on the remote control to play or pause.
	Fast reverse/fast forward. You can also press ◀◀/▶▶ on the remote control to go to fast reverse or forward.
	Go to the previous/next file . You can also press ◀◀/▶▶ on the remote control to go to the previous or next file.
	Stop playing. You can also press ■ on the remote control to stop playing.
	Repeat mode selection. Highlight this icon and continue pressing OK to select Repeat I , RepeatALL or NoRepeat .
	Mute the sound. Press it again to restore the sound.
	List of music files. It will display a list of all marked compatible music files in the current folder. If no music files are marked, all compatible music files will show in this list. Press ▲ ▼ to move upward or downward and press OK to start playing music. Highlight Exit and press OK to exit the list.
	Skip to a specific point by input time. Highlight this icon and press the OK button to open the Input search time screen. Press ◀ or ▶ to move the cursor and use the number buttons to insert the time. Highlight Select and press the OK button to do a time search and it will start playing from the set time. Note: If you want to show the associated lyrics on the screen with the music, you must store these associated lyrics in the same folder using the same file name with “.lrc” file extensions.

Using USB Multi Media Player (Continued)

Playing Movie


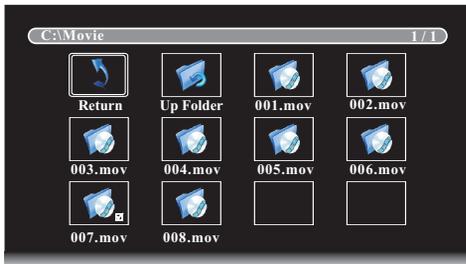
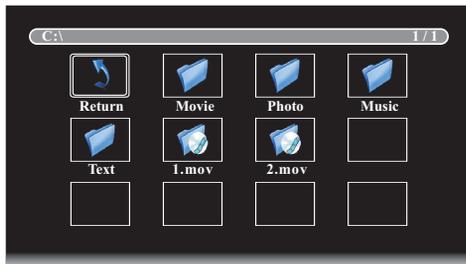
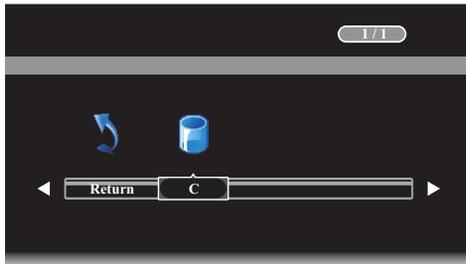
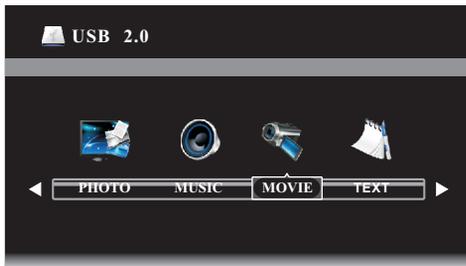


Generally, video play supports AVI, MPG, MPEG, DAT, MP4, TS, RM/RMVB and MKV/MOV formats, but for the sake of technical updating, some formats mentioned above may not be supported.

- 1 Press the **USB** button to access the USB multi media playing menu.
- 2 Press **◀** or **▶** to select **MOVIE** and press **OK** to access.
- 3 Press **◀** or **▶** to select the **C** disk and press **OK** to open it. (If you want to go back, highlight **Return** and press **OK**.)
- 4 Use **▲ ▼ ◀ ▶** to navigate and select folders or movie files, then press **OK** to open the highlighted folder or press **▶||** to start playing the movie from the current movie file. Below we will take it as an example that your desired movie files are contained in a folder. Highlight the folder you want to open and press **OK** to open it. All your movie files will be shown in a thumbnail index.
- 5 The following describes how to use the movie thumbnail Index:
 - **To return to the root**, highlight **Return** and press **OK**.
 - **To go back to the upper level folder**, highlight **Up Folder** and press **OK**.
 - **To start playing from your desired movie file**, highlight this file and press **▶||**.
 - **To mark movie files so you can play only these movie files**, use **▲ ▼ ◀ ▶** to highlight these movie files and press **OK**. A check mark appears on it (press **OK** again to cancel the mark). Repeat the process to create your favorite movie list.
- 6 While the movie is playing, you can make use of the **Movie Menu Bar** to perform many functions.
To open and operate the Movie Menu Bar, press the **≡** button. The Movie Menu Bar will be displayed at the bottom of the screen. Use **◀ ▶** to select your desired function, press **OK** to fulfill the function. If the function icon has several options, continue pressing **OK** to select it.
- 7 Press **↶** button to return to the previous menu.


Using USB Multi Media Player (Continued)

     The following describes every function icon on the Movie Menu Bar.

	<p>Play/pause. You can also press ► on the remote control to play or pause.</p>
	<p>Fast reverse/fast forward. You can also press ◀◀/▶▶ on the remote control to go to fast reverse or forward.</p>
	<p>Go to the previous/next file. You can also press ◀◀/▶▶ on the remote control to go to the previous or next file.</p>
	<p>Stop playing. You can also press ■ on the remote control to stop playing.</p>
	<p>Repeat mode selection. Highlight this icon and continue pressing OK to select Repeat I, RepeatALL or NoRepeat.</p>
	<p>Rewind the selected part of the movie to repeat it. Highlight this icon, press OK once to select the starting point. A-set will display on the screen. Press the OK button again to selected the end point. AB-set will display on the screen. The unit will rewind the selected part of the movie to where it will be repeated. Press OK again to cancel.</p>
	<p>List of movie files. It will display a list of all marked compatible movie files in the current folder. If no movie files are marked, all compatible movie files will show in this list. Press ▲ ▼ to move upward or downward and press OK to start playing the movie. Highlight Exit and press OK to exit the list.</p>
	<p>Displays the current movie file information.</p>
	<p>Speed down. Highlight this icon and continue pressing OK to select SF2X, SF4X, SF8X, SF16X.</p>
	<p>View the movie in frame step mode.</p>
	<p>Skip to a specific point by input time. Highlight this icon and press the OK button to open the Input search time screen. Press ◀ or ▶ to move the cursor and use the number buttons to insert the time. Highlight Select and press the OK button to do a time search and it will start playing from the set time . Note: The skip function may not work on some movies due to their information limitation. Also the input time value for skip is only served as a reference. The actual point located may differ depending on the movie signal.</p>
	<p>Zoom in/zoom out of the image.</p>
	<p>Select the aspect ratio. Highlight this icon and continue pressing OK to select Auto, Normal or Wide.</p>
	<p>Pan (left, right, up, down). You can use Pan only when the image is magnified.</p>

Using USB Multi Media Player (Continued)

Playing Text

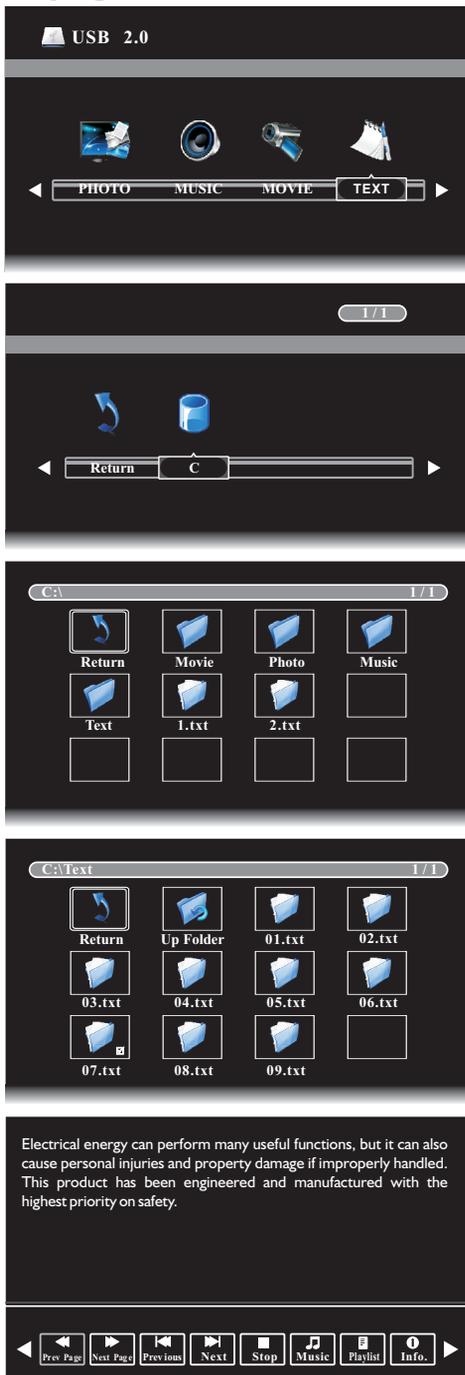

Text play supports TXT format, but for the sake of technical updating, not all TXT format can be supported.

- 1 Press the **USB** button to access the USB multi media playing menu.
- 2 Press ◀ or ▶ to select **TEXT** and press **OK** to access.
- 3 Press ◀ or ▶ to select the **C** disk and press **OK** to open it. (If you want to go back, highlight **Return** and press **OK**.)
- 4 Use ▲ ▼ ◀ ▶ to navigate and select folders or text files, then press **OK** to open the highlighted folder or press ▶|| to start to play the current text file. Below we will take it as an example that your desired text files are contained in a folder. Highlight the folder you want to open and press **OK** to open it. All your text files will be shown in a thumbnail index.
- 5 The following describes how to use the text thumbnail Index:
 - **To return to the root**, highlight **Return** and press **OK**.
 - **To go back to the upper level folder**, highlight **Up Folder** and press **OK**.
 - **To start to play your desired text file**, highlight this file and press ▶||.
 - **To mark text files to be able to play the text files**, use ▲ ▼ ◀ ▶ to highlight this text file and press **OK**. A check mark appears on it (press **OK** again to cancel the mark). Repeat the process to create your favorite text file list.
- 6 While the text is playing, you can make use of the **Text Menu Bar** to perform many functions. To open and operate the Text Menu Bar, press the ≡ button while the text is playing. The Text Menu Bar will be displayed at the bottom of the screen. Use ◀ ▶ to select your desired function, press **OK** to fulfill the function. If the function icon has several options, continue pressing **OK** to select it.
- 7 Press ↶ button to return to the previous menu.

Electrical energy can perform many useful functions, but it can also cause personal injuries and property damage if improperly handled. This product has been engineered and manufactured with the highest priority on safety.

The following describes every function icon on the Text Menu Bar.

	Page up/Page down. You can also press ◀▶ on the remote control to go to the previous or next page.
	Go to the previous/next file . You can also press ◀▶ on the remote control to go to the previous or next file.
	Stop playing. You can also press ■ on the remote control to stop playing.
	Play/pause background music. Note: You can play your marked compatible music files as background music during text display.
	List of text files. It will display a list of all marked compatible text files in the current folder. If no text files are marked, all compatible text files will show in this list. Press ▲ ▼ to move upward or downward and press OK to start playing. Highlight Exit and press OK to exit the list.
	Displays the current text file information.

Troubleshooting

If, after reading these operating instructions, you have additional questions related to the use of your television, please call the local services center in your area.

Before calling the service center, please check the symptoms and follow suggested solutions.

Remote Control

Problem	Possible Solutions
Remote control does not operate	<ul style="list-style-type: none">● The batteries could be weak. Replace the batteries.● Check the orientation of the batteries.● Make sure the power cord is plugged in.

Video and Audio

Problem	Possible Solutions
No picture (screen not lit), No sound	<ul style="list-style-type: none">● Make sure the power cord is plugged in.● Press POWER on the MONITOR or on the remote control.● Try another channel; it could be station trouble.
Dark, poor or no picture (Screen lit), good sound	<ul style="list-style-type: none">● Select a proper picture mode.● Adjust the brightness in the video setting.● Check the antenna/cable connections.
No color/dark picture/color is not correct	<ul style="list-style-type: none">● Adjust the color saturation in the video setting.
Dotted lines or stripes	<ul style="list-style-type: none">● Adjust the antenna.● Move the MONITOR away from noise sources such as cars, neon signs, or hair dryers.
Double images	<ul style="list-style-type: none">● Using a highly directional outdoor antenna may solve the problem.
Good picture, no sound	<ul style="list-style-type: none">● The sound may be muted. Press the MUTE button to restore the sound.
Audio noise	<ul style="list-style-type: none">● Communication problems may occur if infrared communication equipment (e.g., infrared cordless headphones) is used near the MONITOR. Move the infrared communication equipment away from the MONITOR until the noise is eliminated.

General

Problem	Possible Solutions
One or some channels can't be displayed	<ul style="list-style-type: none">● These channels may be set skipped. You may set it to not skipped or select them with 0-9 number buttons.
Some items can't be accessed	<ul style="list-style-type: none">● If a setting option appears in gray, this indicates that the settings option is unavailable in current input mode.
MONITOR cabinet creaks	<ul style="list-style-type: none">● When the MONITOR is in use, there is a natural rise in temperature, causing the cabinet to expand or contract and may be accompanied by a slight creaking noise. This is not a malfunction.
Control buttons do not operate	<ul style="list-style-type: none">● Disconnect the power cord and wait for a few seconds. Then re-plug the power cord and turn on the unit again.

Note: If your problem is not solved, turn your unit off and then on again.

Cautions: Never attempt to repair a defective MONITOR yourself.

Specifications

Type:	LED touch display
Panel:	55" TFT LCD (with LED backlight)
Power Requirement:	AC 120V, 60 Hz
Power Consumption:	1.7A
Dimensions (WxHxD):	1288×788×60 mm
Weight:	32 kg
Terminals:	AV in (1 AV shared with COMPONENT IN) COMPONENT in (1) PC in (1) HDMI in (2) Headphone (1) USB port (1) USB TOUCH (1)

Note:

- 1. Design and specifications are subject to change without notice.**
- 2. Weight and dimensions shown are approximate.**
- 3. Specifications and external appearance may be changed for the sake of improvement.**

Warn Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions,

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur

in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be

determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received.

Including interference that may cause undesired operation.



PRINTED ON
RECYCLED PAPER