

S
Skype安卓專用機
Skype Android Phone

使用手冊



PChome talk


型號：PT1
(非GSM手機)

目 錄

- 1 話機導覽**
- 2 充電底座導覽**
- 3 充電方式**
- 4 開始使用**
- 5 取得Skype聯絡人名單**
- 6 Talk UI主畫面說明**
- 7 使用Skype通訊**
- 8 撥號盤撥打一般電話**
- 9 將話機置於底座上使用**
- 10 如何購買或儲值Skype點數**
- 11 新增電話號碼**
- 12 系統升級**
- 13 系統還原**
- 14 連接HDMI**
- 15 保固暨維修服務**



Talk UI介面會更新版本，請上PChomeTalk官網
<http://www.pchometalk.com>下載最新使用手冊

1 話機導覽

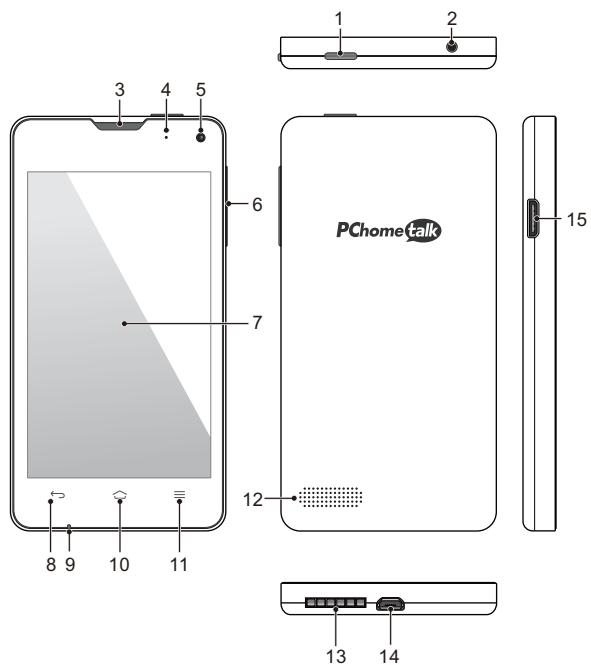

1. 電源鍵	9. 麥克風收音孔
2. 耳機孔	10. 主畫面鍵
3. 聽筒	11. 目錄鍵
4. 訊號顯示燈號	12. 擴音喇叭
5. 前置鏡頭	13. 充電金屬接點
6. 音量鍵	14. Micro USB接孔
7. 觸控螢幕	15. HDMI接孔
8. 返回鍵	


2
2 充電底座導覽

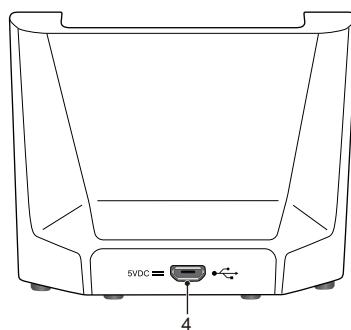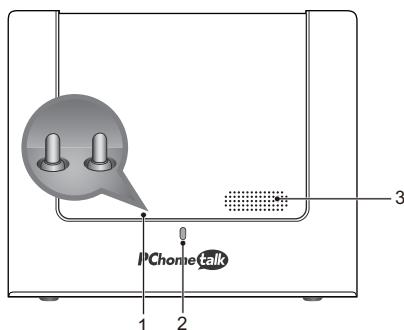

1. 底座充電端子
2. 底座電源燈號
3. 擴音孔
4. 供電Micro USB接孔

3 充電方式

- ① 連接USB電源線，將變壓器插入插座
- ② 連接Micro USB插頭到底座
- ③ 顯示燈亮表示底座可正常供電至話機
- ④ 將話機置於充電底座
- ⑤ 螢幕右上角出現  表示充電中

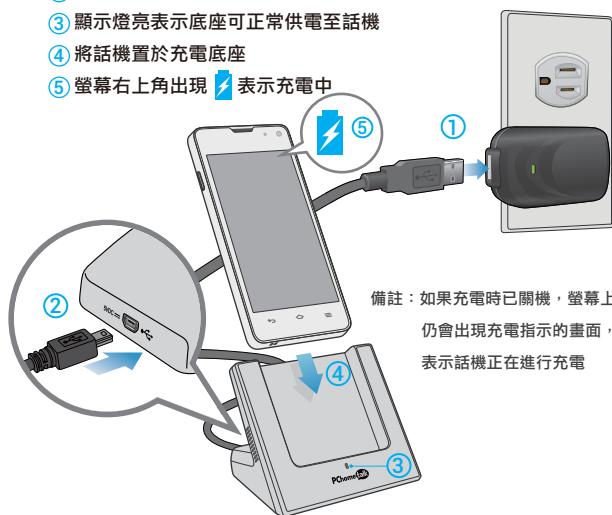

備註：如果充電時已關機，螢幕上
仍會出現充電指示的畫面，
表示話機正在進行充電

⚠ 請注意：

- 請將話機放在乾燥、溫度低的室內空間，溫度保持在10°C ~30°C，屋內太陽直射不到的涼爽的地方。
- 首次使用由於電池暫時性的容量偏低，經過幾次完全的充放電，電池會恢復初始容量。
- 話機應保持至少每6個月要對電池充一次電，以防止電池漏液及性能的衰退。
如有漏液，請勿觸摸漏液。
- 切勿掉落、拋擲、彎折、拆開或改裝話機。請勿把話機置於高溫(60°C以上)
、潮濕環境，如發現話機電池有異常情況，比如異味，漏液請勿再使用。
- 充電時需使用PChomeTalk的充電器，電壓和電流要匹配，使用非
PChomeTalk的充電裝置，其安全性設計及充電規範有可能並非適用本話機
風險性較高，請審慎評估自行承擔風險。

4

4 開始使用

1. 話機開機

確保話機初次開機前，電池至少充電30分鐘。

持續按住話機右上的電源鍵，直到話機出現開機動畫。

2. 選擇語言



3. 設定無線網路

首次使用，按下WiFi『設定Wi-Fi』，點入欲連線的網路名稱，輸入

密碼連線後，即可再按  鍵回PChomeTalk的Talk UI主畫面


登入Skype。



重設無線網路

若要重設Wi-Fi，可在進主畫面後，選擇『設定』/『話機設定』/『Wi-Fi』選擇其他網路。

話機狀態圖示說明

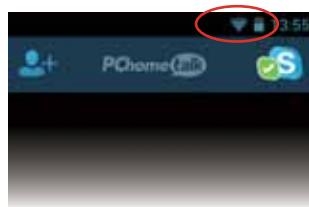

1. 話機充電狀態：電池的充電狀態會在話機螢幕右上方以符號顯示

-  電池已充滿
-  電池充電中
-  電池電力已經耗盡

2. WiFi 連線狀態：會在話機螢幕右上方以符號顯示，若右上角無網路圖示，即代表WiFi未開啟。

-  無網路訊號
-  網路連線且狀態良好
-  網路訊號不佳

3. 音量狀態

-  話機靜音

5 取得Skype聯絡人名單

1. 登入Skype

首次使用本話機，或話機未登入Skype時，會跳出提醒畫面，請您進入Skype登入。

輸入Skype的帳號密碼後，按話機上的  主畫面，即會看到 Skype聯絡人和上線狀態出現在話機主畫面中。若無Skype帳號，請在Skype登入畫面中選擇『建立帳戶』。




2. 同步Skype聯絡人

想取得最新的Skype聯絡人，或更新聯絡人上線狀態，請下拉Talk UI 聯絡人列表畫面來同步Skype聯絡人。



3. 登入Skype狀態：

會在話機螢幕左上方以符號顯示

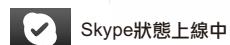

Skype狀態上線中



Skype狀態隱藏



若左上角無Skype圖示，即代表Skype未登入



有Skype新訊息



有Skype未接來電



有Skype視訊留言



Skype接收檔案



新聯絡人授權請求

6 Talk UI主畫面說明



7 使用Skype通訊

1. 免費通話/免費即時訊息/免費視訊

按下Skype聯絡人後，選擇『Skype免費通話』，即可使用Skype和對方帳號免費通話；選擇『Skype即時訊息』可在Skype中和對方打字，進行聊天；選擇『Skype免費視訊』，即可進行免費的視訊。




2. Skype Out付費通訊

當Skype帳戶中有點數，即可選擇『SkypeOut撥打電話』撥打聯絡人的電話號碼，亦可以使用『用Skype傳送手機簡訊』來發送簡訊。

8 撥號盤撥打一般電話

只要您有Skype點數，即可以撥打一般電話。在撥號功能選擇要撥打的國家國碼，或是在十號之後，輸入包含國碼在內的電話號碼，便會連接到Skype撥打該組電話號碼。若是沒有輸入國碼，系統會以Skype裡預設國家的國碼撥出(視您安裝Skype時選擇的國家而定)

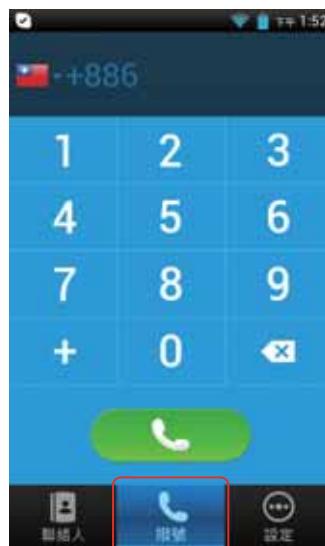

撥打範例如下：

 打台北市話：
+886(國碼)
2(區碼省略第一個0)
27094833

 打台灣手機：
+886(國碼)
936019076
(行動電話省略第一個0)

9 將話機置於底座上使用



將話機放在底座上，使用Skype通話時按下畫面上的 ，就可以
邊充電(底座需接上插座)，邊以免持聽筒的方式與對方通話。



視訊通話時將話機放在底座上，免手持，使用方便。

10 如何購買或儲值Skype點數

點選設定，即顯示您話機的Skype帳號和點數



※ 購買點數方式，請點選設定裡的『購買點數』功能，亦可以透過瀏覽器在 <http://skype.pchome.com.tw/> 網站購買點數

※ 儲值點數方式，請點選設定裡的『我要儲值』功能，選『我要儲值』，登入Skype或Microsoft帳號並輸入您的「儲值密碼」，將您在PChome線上購物、「全家便利商店」、「萊爾富便利商店」、「OK超商」等通路購買的Skype點數「虛擬儲值點數」儲值到該帳戶中；「7-11 ibon」購買者則請勾選已匯入的儲值資訊，即可開始使用Skype點數。[便利商店點數購買與儲值方式請見
http://skype.pchome.com.tw/purchase/CVS_intro.html](http://skype.pchome.com.tw/purchase/CVS_intro.html)

購買或儲值點數，經過Talk UI登入，會自動加密儲存您的密碼，以方便您在話機上快速結帳。若您不想話機記住您的Skype帳號密碼，請選擇到設定裡，選擇『點數購買與儲值設定』，[取消勾選『點數購買與儲值時，記住密碼方便快速結帳』](#)。

11 新增電話號碼

按主畫面左上角的  進入新增電話號碼介面，在此新增的電話號碼會儲存在話機中，方便撥打Skype Out電話。



12 系統升級

當有新的軟體版本更新時，您的Talk UI會收到通知。或是在Talk UI主畫面的『設定』/『話機設定』/『系統升級』即可更新Talk UI到最新版本。

13 系統還原

在主畫面的『設定』/『話機設定』，選擇話機『系統還原』，即會回到原廠話機狀態。

16

14 連接HDMI

用HDMI線連接投影機或電視，和Skype安卓專用機，影像與聲音會由投影機或電視輸出。



15 保固暨維修服務

台灣地區依購買發票或購買憑證日期一年保固(僅限話機本體)，不包含電池、底座、變壓器、USB電源線等消耗性配件。

您可以在網站上了解更多Skype安卓專用機的相關資訊與保固說明。

官方網站網址：<http://www.pchometalk.com>

客戶服務電話：(02)2326-1499

| Skype Android Phone ^s
User Guide



PChome talk


Model:PT1
(Non GSM Mobile)

Table of Contents

- 1** Handset Overview
- 2** Charging Dock Overview
- 3** Charging Your Phone
- 4** Getting Started
- 5** Retrieving Skype Contact List
- 6** Talk UI Main Screen
- 7** Making Skype Calls
- 8** Making Landline/Mobile Calls
- 9** Making Hands-Free calls using the Charging Dock
- 10** Purchasing/Redeeming Skype Credits
- 11** Adding phone numbers into the handset
- 12** System Upgrade
- 13** Device Reset
- 14** Connecting to HDMI
- 15** Warranty Information

For the latest version of the Talk UI user guide, please go to
PChomeTalk's official website at <http://www.pchometalk.com>



1 Handset Overview

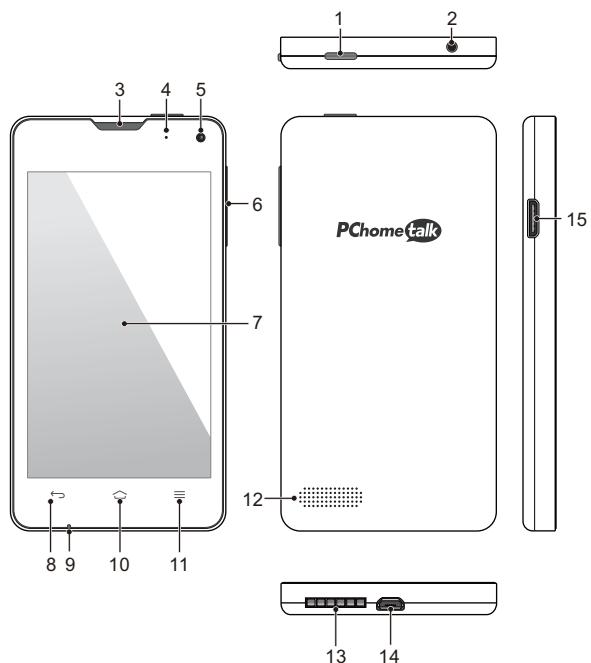

1. Power	9. Microphone
2. Headphone jack	10. Home
3. Earpiece	11. Menu
4. Signal Light	12. Loudspeakers
5. Front Camera	13. Charging port
6. Volume	14. Micro USB port
7. Touchscreen	15. HDMI port
8. Back	

2


2 Charging Dock Overview

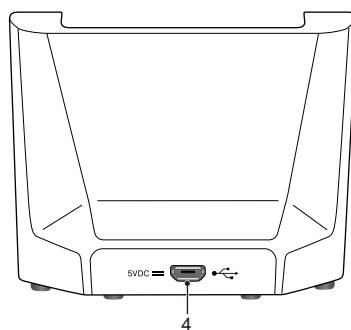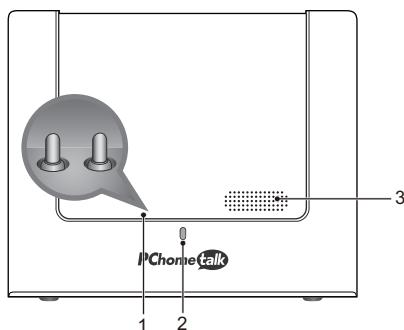

1. Pin connectors
2. Light signal
3. Ventilation holes
4. Micro USB port

3 Charging Your Phone

- ① Plug the power adapter into an electrical outlet and one end of an USB cable into the adapter
- ② Connect the other end of the USB cable into the Charging Dock's Micro USB port
- ③ Light turns on to indicate it is connected to a functioning power source
- ④ Place the handset onto the dock
- ⑤ The icon  appears on the upper right corner of the screen to indicate that charging is in progress

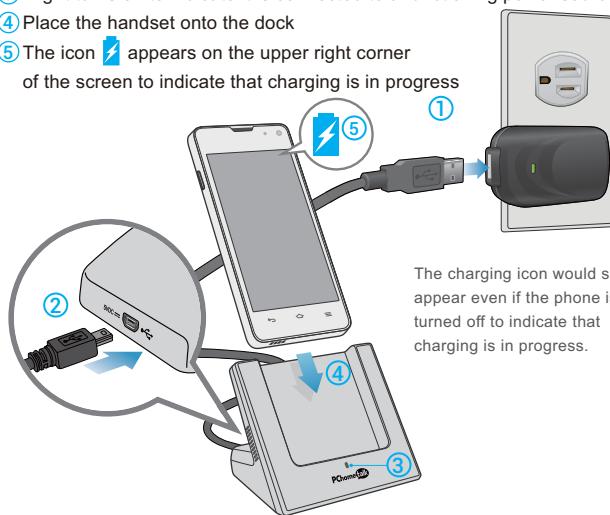

The charging icon would still appear even if the phone is turned off to indicate that charging is in progress.



Battery information

Place the handset in a dry, low humidity area with temperature between 10°C ~30°C where it is not exposed to direct sunlight.
 Battery capacity may appear slightly lower upon initial use, optimal capacity will be regained after several charge/discharge cycles.
 The handset should be charged at least once every 6 months to prevent power leakage and performance decline. If leakage occurs, avoid contact with skin.
 Do not drop, toss, bend, or disassemble the handset and keep out of areas of high humidity or above 60°C.
 Discontinue use if the handset gives off an odor or appears abnormal in any ways.
 Only the PChomeTalk charger should be used for charging as it provides a more stabilized flow of voltage/current.
 Use of non-PChomeTalk chargers may not meet the safety design and standards of this handset, please reassess and use at your own risk.

4 Getting Started

1. Boot-up

Make sure the device is charged for at least 30 minutes before it is turned on for the first time. Press and hold the power button on the upper right corner of the handset until the boot-up animation appears on screen.

2. Language Selection



3. Wi-Fi Network Setting

Use the "Wi-Fi Setting" button to set up internet connectivity before getting started.

Choose your desired network and enter its password to establish connection.


Press the  button to return to Talk UI's main screen to login to Skype.




Connecting to a different Wi-Fi network

Press the  button → "Settings" → "Phone Settings" → "Wi-Fi" to connect to a different Wi-Fi network.

Icon Statuses

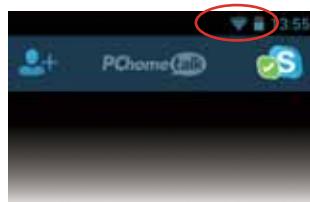

1. Charging Status: the icon appears at the upper-right corner of the screen

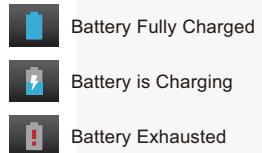

2. Wi-Fi Status: the icon appears at the upper-right corner of the screen



If no network icon appears at the upper-right corner of the screen, which represents Wi-Fi is not turned on.

3. Volume



5 Retrieving Skype Contact List

1. Login to Skype

You will be prompted to login to Skype when you first use this device.

* If you don't have a Skype account, you may register one through the "Create account" button. Otherwise you may login using either a Skype account or a Microsoft account.

Press the  button once you have logged in, your Skype contacts and their online statuses will appear on the center of your screen.




2. Sync Skype Contact List

To refresh your contact list and see their latest statuses, simply swipe down on the Talk UI contact list screen.



3. Skype Status:

Your login status appears on the upper-left corner of the screen.

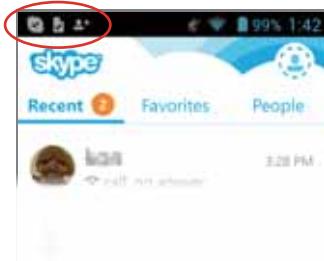

Online



Invisible



If no Skype icon appears on the upper-left corner of the screen, you are not logged in to Skype.



New Messages



Missed Calls



Skype Video Calls




Received files from Skype



New contact requests

10

6 Talk UI Main Screen

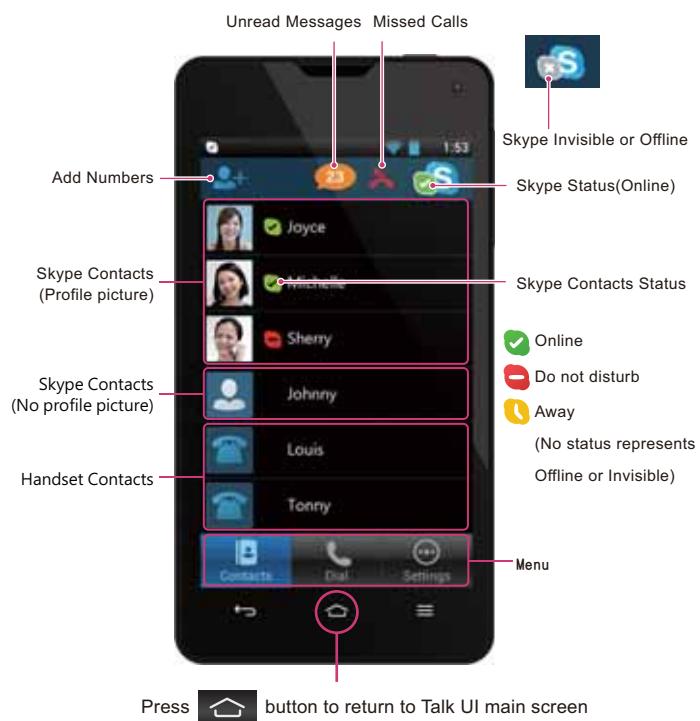

7 Skype Calls

1. Free Skype to Skype Calls/ Free Instant Message/ Free Video Calls

Select the contact and click "Free Skype Call" for free Skype calling.

Select the contact and click "Skype Instant Message" for free chat.

Select the contact and click "Free Skype Video Call" for free Skype video calling.



2. SkypeOut Calls


You can use your Skype credits to place landline/mobile calls via "SkypeOut call to mobile", or send SMS messages via "Skype SMS".

8 Placing landline/mobile calls with the dial pad

You may place landline/mobile calls if you have sufficient Skype credits.

Choose the country of where you're dialing to by using the flag icon, or by entering the corresponding country code after the "+" symbol.

If no country code is specified when a call is placed, Skype will by default use the country code from your Skype account settings.

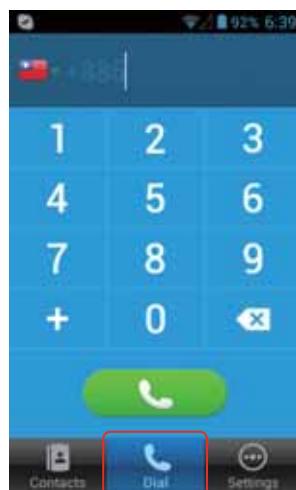

Example:

 To call a landline in Taipei,(02)2709-4833
Dial **+886**(country code) **2** (omit the "0" prefix) **27094833**

 To call a mobile phone in Taipei, 0936-019-076
Dial **+886**(country code) **936019076** (omit the "0" prefix)

9 Making Hands-Free calls using the Charging Dock



You can make hands-free calls by using the  button while the handset is placed on the charging dock.



The charging dock makes it very convenient to be hands-free during video calls.

14

10 Purchasing/Redeeming Skype Credits

Click "Settings", you will see Skype name and Skype credit



Go to "Settings" → "Buy Credits" or visit our website for purchasing Skype payable services.

<https://skype.pchome.com.tw/oversea/service.html>

※ **Redeem Credits(Taiwan Only)**

You can buy Skype credit vouchers from:

Family Mart, Hilife, OK Mart, and 7-11.

To redeem the voucher credits into your Skype account, go to "Settings" → "Redeem" → "Redeem" where you will be prompted for login and voucher information.


(If your voucher was purchased from 7-11, please select "Import Redeem info".) For more information on purchasing and redeeming Skype credit vouchers, please go to

http://skype.pchome.com.tw/purchase/CVS_intro.html

If you make a purchase through Talk UI, your Skype name and password will be encrypted and saved into the handset to make your next purchasing more convenient. To disable this feature, **uncheck** the "**Save password to express checkout**" option in the purchase/redeem settings.

11 Adding phone numbers into the handset

Press the  button on the upper-left corner of the screen to save telephone numbers into the handset for SkypeOut calls.

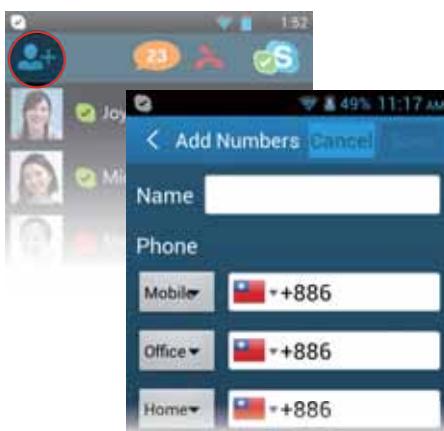

12 System Upgrade

You will be notified via Talk UI when an update is available.

Press the  button → "Settings" → "Phone Settings" → "System Upgrade" to update your phone to the latest version.

13 Device Reset

To restore your phone to its original factory settings, press the

 button and go to "Settings" → "Phone Settings" and select "Device Reset".

16

14 Connecting to HDMI

You can output video and sound on a projector or TV by connecting a HDMI cable from your Skype Android Phone to your device's HDMI input port.



15 Warranty Information

The Skype Android Phone comes with a one year warranty since date of purchase(Invoice or proof of purchase required).

This warranty covers only the handset and does not cover the battery, charging dock, adapter, USB power cable, and other expendable parts. Please visit our official website for more details.

Official Website : <http://www.pchometalk.com>

Customer Service : +886-2-2326-1499

減少電磁波影響，請妥適使用

電信管制射頻器材

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. *Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The highest SAR value for the model device as reported to the FCC when tested for use at the ear is 0.13 W/kg and when worn on the body, as described in this user guide, is 0.12 W/kg (Body-worn measurements differ among device models, depending upon available accessories and FCC requirements.)

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: 2ABGCPT1.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and be positioned a minimum of 1cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. If you do not use a body-worn accessory and are not holding the device at the ear, position the handset a minimum of 1cm from your body when the device is switched on.

Note: The country code selection is for non-US model only and is not available to all US model.
Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.