


MID
AL2206N

User Manual

www.artexcomputer.com

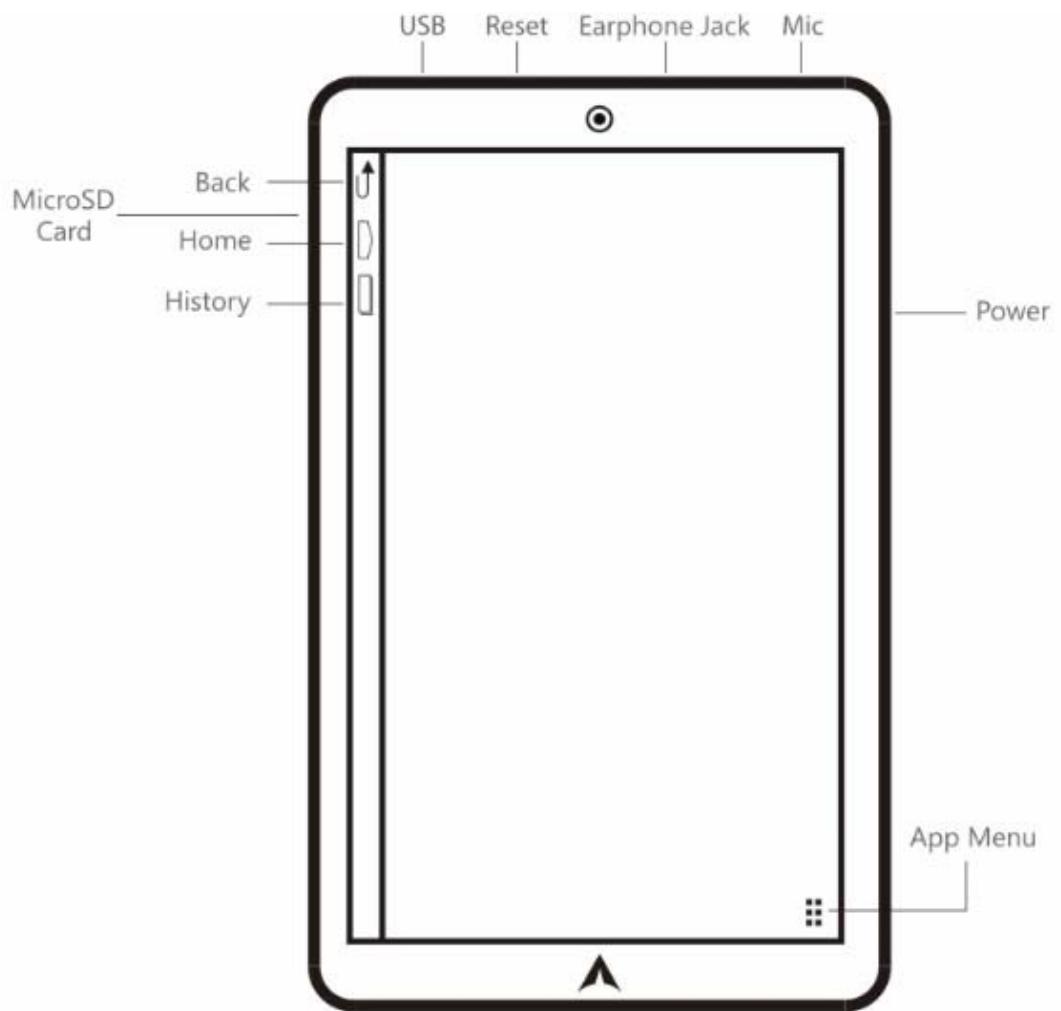

The product displayed on the packaging is for illustrative purposes only and may differ from the actual product.

Prior to using the ARTAB LT for the first time, fully charge the battery. ARTAB LT has a built-in Lithium battery that uses only the designated charger to charge.

In order to prolong the service life of the product, use the device until the battery is depleted for the first two times before charging the battery again.

To charge the battery, connect the charger/adapter to the device and the DC jack.



Note:

- For first time charging the battery, the charge time may be up to 10 hours; succeeding times may take up to 5 hours.
- When charger is plugged in after the product shuts down due to low power, it may take a few moments before the product enters the home screen.
- The Lithium battery cells in the battery pack are not user-serviceable.

When the device is not in use, be sure to turn it off.

If the device will not be used for a long period of time, be sure to discharge and then recharge the battery once a month.


The built-in Lithium battery must be recharged regularly. Battery damage caused by depletion or the use of unauthorized charger is not covered by the warranty.

artab
artab.com

- 1 Press the power button to power on.

To power on your ARTAB LT, press and hold the power button for a few seconds until the Android logo appears.

- 2 Slide the Unlock icon to awake screen.

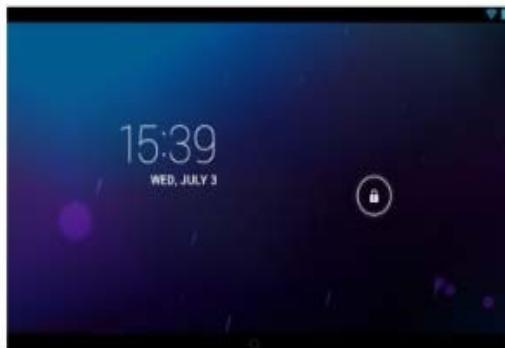

- 3 Press and hold the power button for 5 seconds, then a "Power off" dialog box will pop up.

- 4 Select "OK" to power off your tablet.



Troubleshooting:


If your ARTAB LT has an error or freezes, you may need to "RESET" your ARTAB LT to regain functionality.

If your device is frozen and unresponsive, press and hold the POWER key for 10-15 seconds to Power Off.

Basic functions - Wi-Fi




1 Select "Settings"

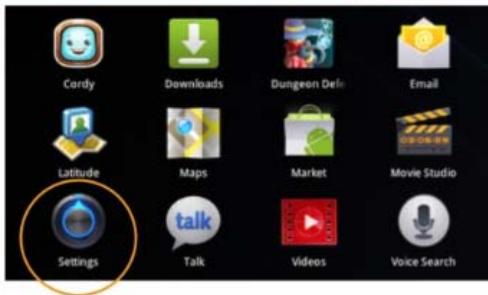


2 Switch Wi-Fi "OFF" to "ON".


3 Select your designated Wi-Fi connection on list.

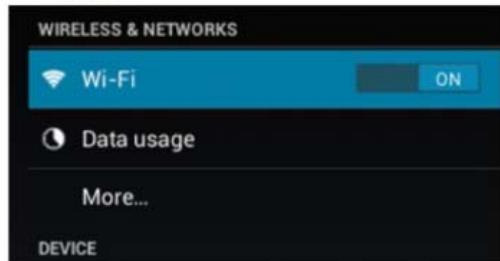


4 Enter the required Wi-Fi password.

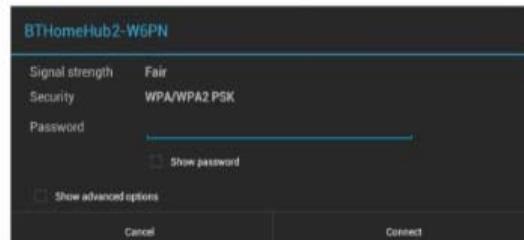

5 Once connected, Wi-Fi connectivity icon will be shown at the right bottom corner.

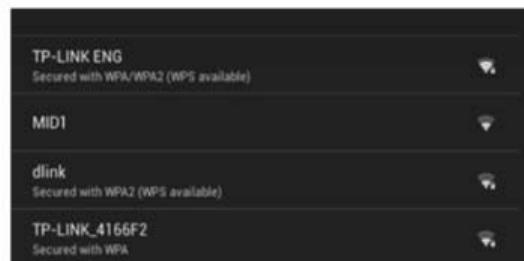


- 1 Connect the enclosed Micro USB to USB cable to your tablet and computer.

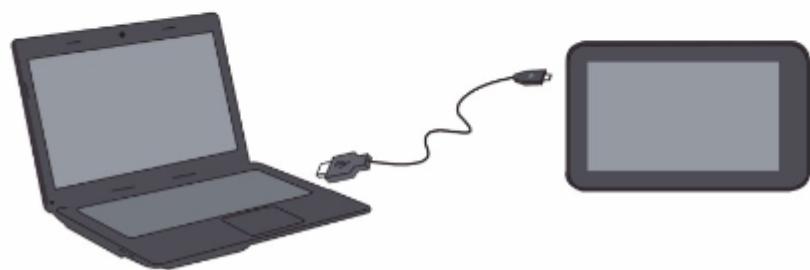

- 1 **USB Connection**

When connected to a computer via USB, the below window will open. Select "Turn on USB storage" and the tablet will act as a removable disk drive, allowing you to add or delete files to both an inserted SD card and the internal memory.

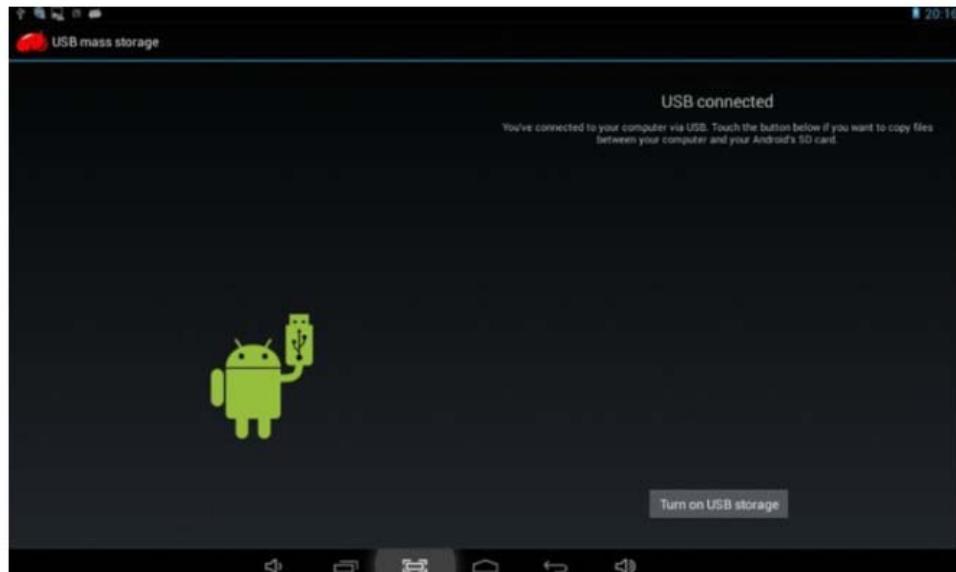

Basic Functions - App Menu

1 Touch Apps Menu


From the Home screen, select Apps Menu icon at the top right corner to access the application list.



2 Select the application you'd like to open.



3 Select the Back Key to return to the previous screen; Select the Home Key to return to the Home screen.

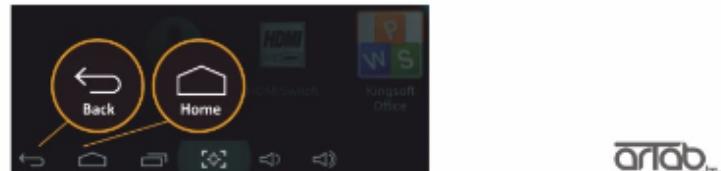

Set up your MID



- 1 From the Home screen select "Email".

- 2 Enter your email address, password and tap "Next"



- 3 Select which type of email account you are setting up and complete settings.
(POP3 / IMAP / Microsoft Exchange Account)

You will need to enter your user name, password and server information depending on the type of email account, or you can change the settings by tapping "Manual Setup" at the top right corner of the screen. Tap "Next" and select "Ok" to accept the activation notification.

Set Up Email

Change Wallpaper

- 1 Long press wallpaper of the screen and the wallpaper option will appear. Select from pictures in your Gallery or Wallpaper, once selected, Tap "Set Wallpaper".



FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF warning statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.