

# Model: F-710A

## USER'S MANUAL

### Products Features



### Button Functions

#### ● Button Functions

1. Power button: long press for 3 seconds is to turn on/off, short press to wake up screen;
2. Earphones: 3.5mm earphone port
3. USB card/OTG port for U disk/mouse/keyboard
4. DC in: 2.5MM DC5V charging port
5. Vol +/-: short/long press is volume up, short/long press is volume down
6. TF card: TF expand card port
7. Camera: front and rear
8. Reset: short press for reset ;

### Use preparation

#### ● Connecting to your PC

Start up your PC, and connect the product to your PC with the provided USB Cable for USB charging or file transfers. The product will show connected and you can copy/delete files within the player through PC.

**Notice: Do not play music or video while connected to your PC. Please be aware that we claim no responsibility for damage caused by this improper operation.**

#### ● Turn on

Long press "Power button" for 3 seconds. The system will enter android power-on status bar, and about

100 seconds later, enter the system menu. The screen is locked by default. To unlock, hold  lock icon and drag up to the green point position. The device will unlock automatically just as the following picture shows:



Connect the device with PC and the system will turn on the device automatically (it will only supply power and won't charge).

**Power saving & screen-lock:** Turn on the device and short press the "POWER" button to enter SLEEP power saving mode. Once done, the screen will become black and enter screen lock mode. Press the "POWER" button again and the system will turn the screen on for about 1 second.

**Note:**

1. Under power saving mode, operations such as music, video etc will not pause and will continuously work. It will only lock the screen.
2. If the system hangs up, press the "power switch" button for 10 seconds to turn the device off. Pressing the "power switch" again will turn it on.

**●Power off**

While the device is on, long press the "power button" for 3 seconds to access the power-off. Select "OK" to turn it off.

**【Note】** When power is not enough, the device will continuously give an alarm and will automatically power down if not charged. Please check the power status and charge it when this happens. Try to turn it on within 5 minutes to 10 minutes after it is charging if the battery was drained.

**●Using TF expansion card**

1、Connect the device your PC and 2 Removable Discs will be recognized. The first one is build-in flash memory while the other one is the TF card if you've placed one in the tablet. The second Removable Disk will not be opened if you did not plug a TF expansion card to the player.

**Note: The player only supports TF kind of expansion card (maximum memory:32GB).**

2、Plug expansion card

To Plug, insert the expansion card as indicated on the card slot. Once the player identifies the expansion card, files stored in the card memory can be played.

To Unplug: Press the expansion card slightly and remove it.

**●Charging the battery**


1、For best results let it charge for about 5 to 6 hours during the first use to fully charge the battery to 100%.

2、Insert the MINI 5IN USB adapter into the device USB port. The other end of the adapter is inserted into the DC port. The device turn on automatically once this is done. The battery will show the lightning icon  just as when charging. Please refrain from unplugging it until power is fully charged. The indicator light on the batter should blue  but will turn green once charging stops. Wait for a minute and turn the device on when charging is completed.

#### Notice:

- 1.If you want the special charger with 5V--2A, contact your local distributor.
- 2.The device supports only off screen (screen saver power-saving mode). Charging while the screen is on will not charge the battery fully.
- 3.Do NOT use a 9V charger. We are not responsible if the device is damaged by using a 9V charger.

### ● Main User Interface (Menu Icons Definition)

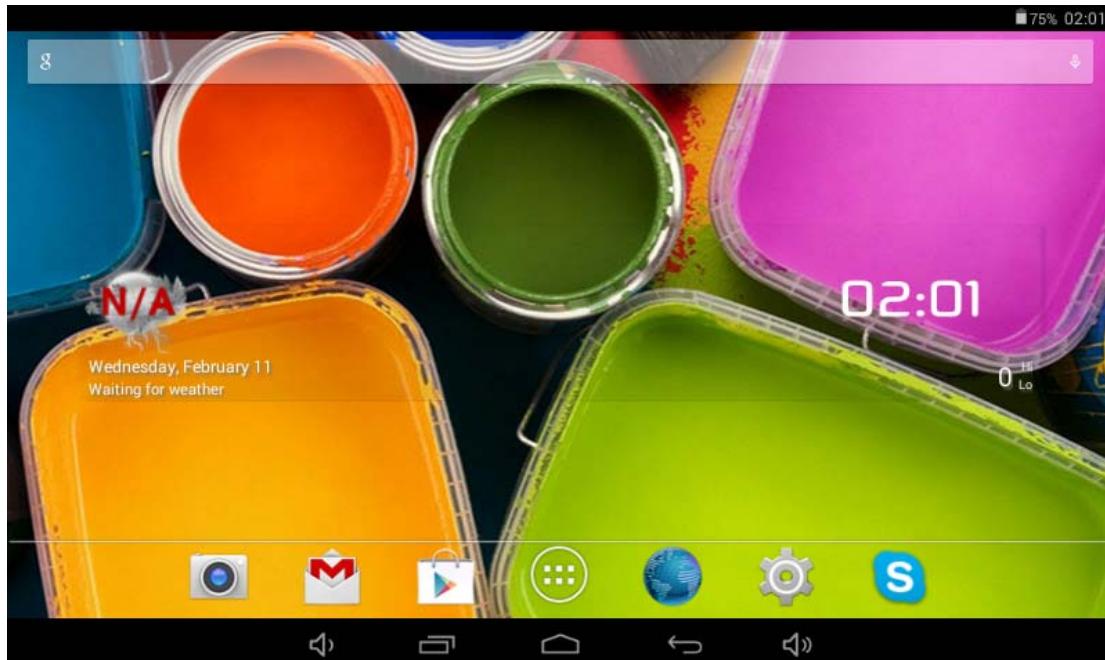

icon	Function introduction	icon	Function introduction
	Return/Back button		Press to return to main menu
	Menu of Recent opened apps		The system has identified a new device
	To show the time on your system		Battery icon showing the remaining power
	Function module menu		

## Operation Introduction

### 1.Wifi Settings

a. **WIFI on settings:** click module menu icon  and enter the module menu list. Click "settings" to enter the setting menu and click "wireless & networks". To enter, select "Wi-Fi".




b. **WIFI settings and network connecting:** Click "Wi-Fi settings" to enter and the system will automatically find any WIFI networks that are available.

## 2.USB-HOST function

### a. Reading U Disk function :

Insert U disk into HOST/OTG port and click "explorer". After this, click "USB" to enter the file list of U disk as follows:

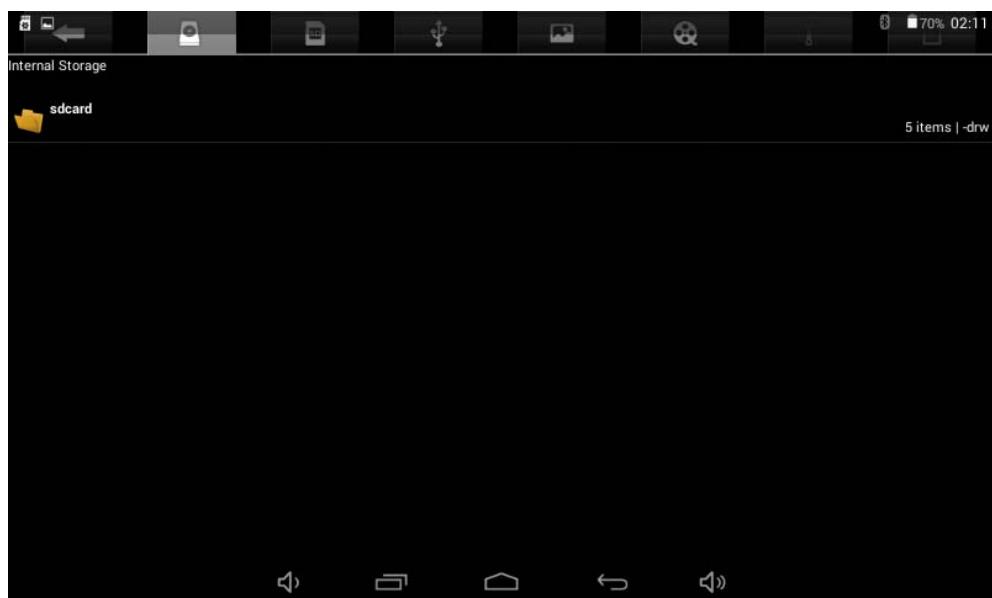


### b.External 3G USB Dongle:

Insert 3G USB-DONGLE card through the OTG cable into the Dongle while the other end into USB/OTG HOST port. Wait for a few minutes and the 3G icon should appear and automatically connect to the Internet.

## 3.APK Installer

The tablet supports applications from the android platform. Most apps can be downloaded from the internet and saved into the Internal Memory or T-Flash.

- Click APK Installer “ ”, Pop-up APK installer menu, Installer, Manager, then Exit.

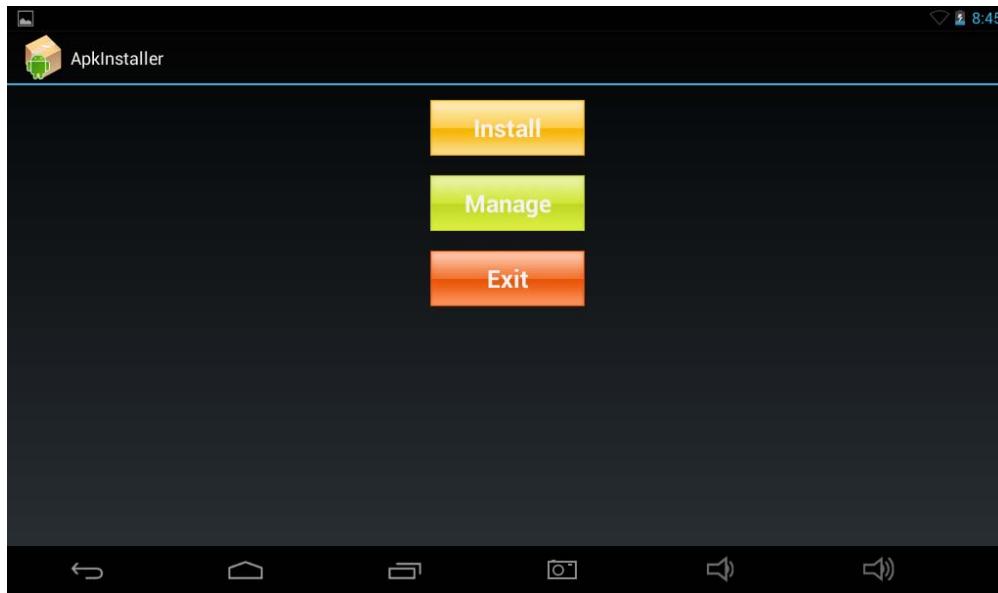


- **Installer:** click installer to enter Apk installer menu.

**Internal Memory and SD Card is a separate flash memory from T-Flash card memory;  
Enter and choose the app you want in the right column and click "install".**




- **Manage :** click "mange",enter the menu.

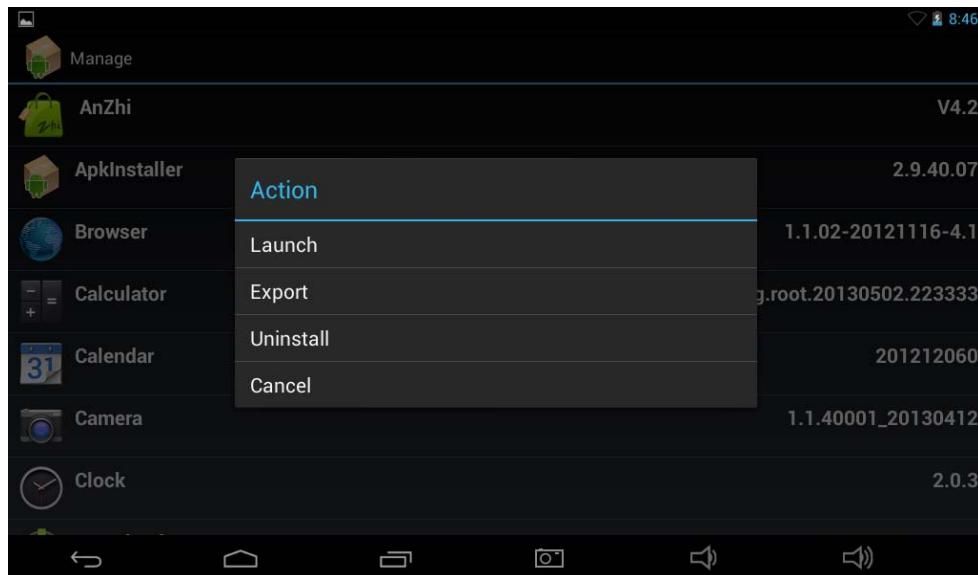

- Launch: launch the software
- Export: export the software to T-Flash card
- Uninstall: uninstall the software
- Cancel: cancel the operation

## 4. Explorer


In main menu, click the explore icon  to enter the manager interface. Click "SD Card", "Internal Memory" and "U Disk" to enter the sub file list. From there, you can add, copy, paste, and delete files. Long press the file or file folder, choose "last", "next", or "last level" to find the related position and click "edit". Choose "paste" to the related position in the coming box.

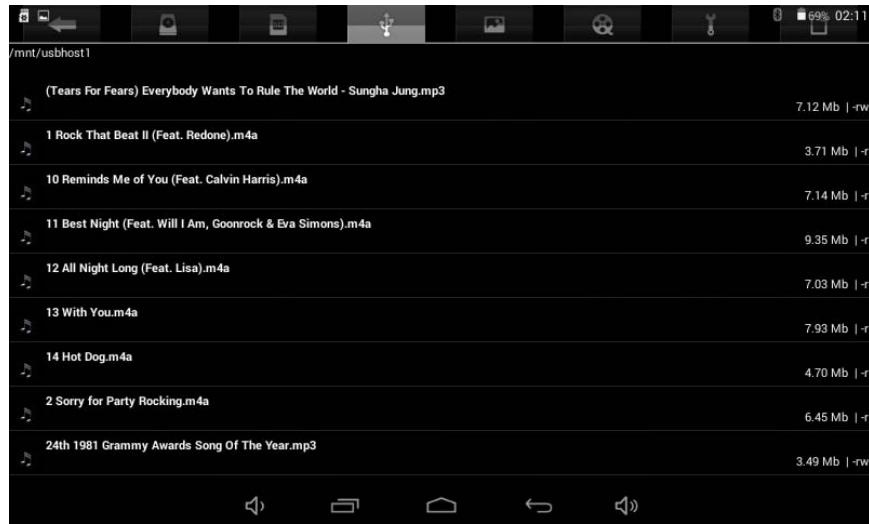

## 5. Record

In main menu, click the record icon  to enter. Once the app is opened, click record button  to start recording, click the stop button  to stop recording and finally click  to play the record.

Play the record: Select the audio play button to play the record. First, choose the record file in the explorer then click "play".

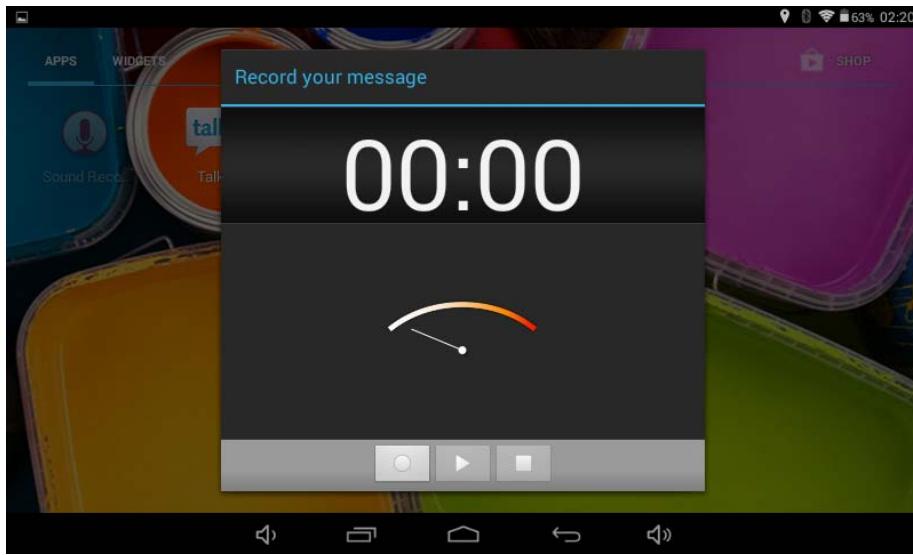

## 6. IE explore

When wifi is connected, click IE explorer  icon in the main menu. Enter IE menu, click the website address column and input the website address to view.



#### 【Note】：

Upgrading the system will remove all local data. Make sure to backup important information before upgrading. After the upgrade for the first time, the software pre-installed will be slower. Please kindly wait a moment, the second time into the system speed is normal.

#### Technology specification

Hardware configuration	
Main Frequency	1.5GHz
CPU	Cortex-A7 A23 Dual Core
Inner memory	512MB DDR
Screen	7.0 inch 800*480 Multi-touch Capacitive screen (5PIN touch)
Memory	8GB
WiFi	WiFi 802.11b/g
Volume	Built-in Speaker
Expansion card	Micro SD card, support maximum 32GB Micro SD (TF)
Battery	3.7V 2500mAh
Data port	High speed USB 2.0 , support OTG function
Operation system	
Operation system	Google Android 4.4.2
Camera	
Camera	0.3 Mega Pixels front/ 0.3 Mega pixels back
Function feature	
Mobile memory	It can be used as movable hardware Disk
Audio	MP3、WMA、OGG、APE、FLAC、AAC、WAV
Video	Support H.264,VP8,RV,WMV,AVS,MPEG4 etc 1080P video output. YouTube 720P、HTML5 、Flash10.1

<b>Picture</b>	Support JPG、BMP、PNG etc.
<b>Others</b>	2D/3D graphic process unit , support OpenGL ES 2.0/1.1 and Open VG1.1
	View internet,Chat online ,E-mail,E-Book,Explore
	Clock,Alarm clock,Calculator,Record
<b>Audio mode</b>	Normal,Popular,Rock,Classical,Bass,Jazz,User-defined
<b>Language</b>	Multi-language(optional)
<b>Repeated mode</b>	Single song once、single repeated、all once、demo
<b>Record</b>	Support microphone,support 3GPP record format
<b>Technology specification</b>	
<b>Battery usage time</b>	Play music: about 6hours; Play video:about 3 hours
	Website view time:about 3 hours
<b>SNR</b>	≥95db

**【Note】:**

The picture on the manual is only for reference. There is no notice if the specification, button operation and appearance are changed.

**Declaration**

Please backup your own data when you operate it. The company is not responsible for the loss and damage of data caused by wrongly operating hardware, software, product repair, battery replacement or other unforeseen circumstances. We are also aware that the user may misunderstand the contents of this manual. The company is not responsible for the accidental damages, and is not responsible for the third party claims caused by using the products.

## FCC Information and Copyright

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC RF warning** statement: the device has been evaluated to meet general RF exposure requirement , The device can be used in portable exposure condition without restriction.