

# DO NOT PRINT THIS PAGE

## Printing Notes:

**Material:** 80 GSM Bond Paper or 50# Bond Paper White

**Ink:** Black

**Resolution:** 150 DPI or above

**Printing method:** Offset Printing

**Binding:** Saddle Stitch

**Folded size:** 148 x 210 mm (W x H)

*This drawing contains proprietary information and trade secrets of The Furrrion Company, Inc.  
Unauthorized use or copying is prohibited.*

METRIC [INCH]						
METRIC [INCH]						
CRITICAL DIMENSION CHECKING IS COMPULSORY						
VOLUME	cm <sup>3</sup>	V1.0	26-Jun-18	NEW	Sally Peng	XX
MASS	grams	REV.	DATE	MODIFICATIONS	NAME	ECN NO.
DENSITY	g/cm <sup>3</sup>	MATERIAL:	SEE NOTES	<i>The Furrrion Company, Inc.</i>		
GENERAL TOLERANCES EXCEPT AS NOTED 0 TO 6mm = ±0.1 >6 TO 30mm = ±0.2 >30 TO 80mm = ±0.3 >80 TO 180mm = ±0.4 >180mm = ±0.5 ANGULAR = ± 3°		FINISH SPEC:	SEE NOTES	COMPOSITE-NO	SHEET 1 OF 1	
SCALE: 1:1		DATE: 26-Jun-18	DRAWN BY: Sally Peng	APPROVED BY: Ricky Deng		REVISION: 1.0
NAME: IM for DV3350 entertainment system.					PART NO: IM-FAV00040	

FURRION

# Entertainment System DV3350

## Instruction Manual



\*Product picture is for reference only.

Model: DV3350

# Welcome

Thank you for purchasing the Furrion® Entertainment System DV3350. Before operating your new product, please read these instructions carefully. This instruction manual contains information for safe use, installation and maintenance of the product.

Please keep this instruction manual in a safe place for future reference. This will ensure safe use and reduce the risk of injury. Be sure to pass on this manual to new owners of this product.

The manufacturer does not accept responsibility for any damages due to not observing these instructions.

If you have any further questions regarding our products, please contact us at  
**[support@furrion.com](mailto:support@furrion.com)**

# Contents

<b>Welcome .....</b>	<b>1</b>
<b>Contents .....</b>	<b>2</b>
<b>Safety Warnings .....</b>	<b>3</b>
Precaution .....	3
Class 1 Laser Product .....	3
<b>Function Overview .....</b>	<b>4</b>
Control Panel .....	4
Remote Control .....	5
<b>Connection.....</b>	<b>6</b>
Wiring Diagram .....	6
Wiring Connecting Socket View .....	6
<b>About Your DV3350 .....</b>	<b>8</b>
Features .....	8
Supported Format .....	8
<b>Installation .....</b>	<b>9</b>
Location .....	9
Installing the unit .....	9
<b>Before Operation .....</b>	<b>10</b>
What's in the box .....	10
Precautions .....	10
<b>Operation.....</b>	<b>11</b>
Quick Reference Guide .....	11
Common Operation .....	12
Radio Operation.....	14
Basic Disc .....	16
Advanced Disc .....	17
MP4 Operation .....	20
USB Operation .....	20
DVD Operation .....	21
Parental Control .....	23
<b>Bluetooth Operation .....</b>	<b>24</b>
<b>App Operation .....</b>	<b>25</b>
<b>Maintenance .....</b>	<b>26</b>
Maintenance and Cleaning of Discs .....	26
Remote Control Battery Information .....	26
<b>Troubleshooting .....</b>	<b>27</b>
<b>FCC Information .....</b>	<b>28</b>
<b>Specifications .....</b>	<b>29</b>
<b>Warranty.....</b>	<b>30</b>

# Safety Warnings

## Precaution



### CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER ( OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### CAUTION

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## Class 1 Laser Product

Laser product symbol:



Located on the rear panel of the unit, this symbol indicates this player is a class 1 laser product. Only use weak laser and no hazardous radiation outside of the unit.

1. Read through this instruction manual before installation and use.
2. Do not touch the power plug with wet hands.

3. Switch off the power when the unit is not in use. (Disconnect the power plug from the power outlet when you do not intend to use the unit for a prolonged period of time.) Before moving the unit, remove the disc from the unit/tray first.
4. Do not open the cover or touch any of the components inside of the unit. Only a qualified technician should service the unit.
5. To avoid damaging the unit, do not expose the unit to direct sunlight or objects that radiate heat.
6. Do not place the unit in moist or humid conditions. Moisture will affect normal operation and damage the unit.
7. Place the unit on a flat, well-ventilated location. Please ensure the ventilation holes are not covered to avoid overheating and malfunction.
8. Clean the panel and case with a soft dry cloth only. Do not apply any kind of thinner, alcohol or sprays.
9. The apparatus should not be exposed to dripping or splashing. Do not place objects filled with liquids (such as vases) on the apparatus.

### WARNING

- Do not ingest the battery contained within the remote control supplied with the unit as this battery represents a chemical burn hazard.
- This product contains a coin/button cell battery.
- If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.


### CAUTION

- Danger of explosion if battery is incorrectly replaced.
- Replace only with the same or equivalent battery type.
- The battery should not be exposed to excessive heat such as sunshine or fire.

# Function Overview

## Control Panel

English

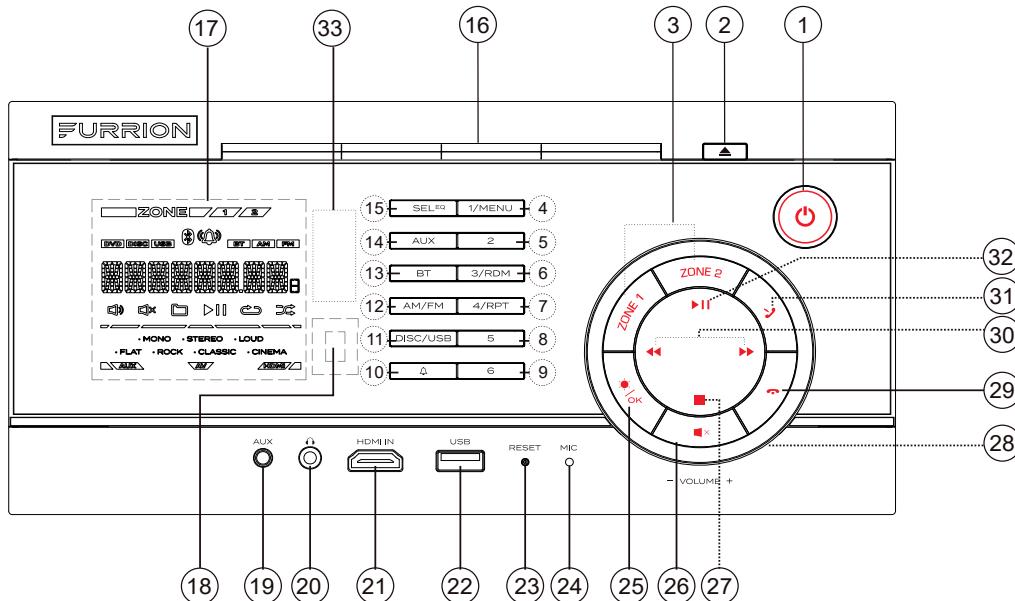

Item	Button
①	POWER BUTTON
②	EJECT BUTTON
③	ZONE 1/ZONE 2 BUTTON
④	1/MENU BUTTON
⑤	2 BUTTON
⑥	3/RDM BUTTON
⑦	4/RPT BUTTON
⑧	5 BUTTON
⑨	6 BUTTON
⑩	ALARM ON OFF / ALARM SET BUTTON
⑪	DISC/USB BUTTON


Item	Button
⑫	AM/FM BUTTON
⑬	BT BUTTON
⑭	AUX BUTTON
⑮	SEL/EQ BUTTON
⑯	DISC SLOT
⑰	LCD DISPLAY
⑱	IR REMOTE CONTROL SENSOR
⑲	AUX SOCKET
⑳	HEADPHONE SOCKET
㉑	HDMI IN SOCKET
㉒	USB SOCKET

Item	Button
㉓	RESET BUTTON
㉔	MICROPHONE
㉕	DIMMER ⚡ BUTTON
㉖	MUTE BUTTON
㉗	STOP/ BUTTON
㉘	VOLUME KNOB
㉙	HANG UP BUTTON
㉚	PREVIOUS/NEXT BUTTON
㉛	TEL BUTTON
㉜	PLAY/PAUSE BUTTON
㉝	NFC DETECTION AREA

# Function Overview

## Remote Control

English

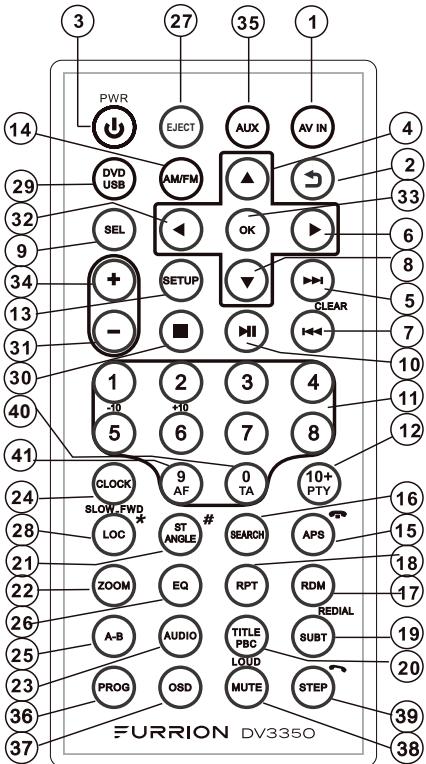


Item	Button
①	AV IN BUTTON
②	OPTICAL BUTTON
③	POWER BUTTON
④	▲ BUTTON
⑤	▶▶I BUTTON
⑥	▶ BUTTON
⑦	I◀CLEAR BUTTON
⑧	▼ BUTTON
⑨	SEL BUTTON
⑩	PLAY/PAUSE BUTTON
⑪	NUMBER(0~10,+10 -10) BUTTONS
⑫	10+/PTY BUTTON
⑬	SETUP BUTTON
⑭	AM/FM BUTTON
⑮	APS/Hang Up BUTTON
⑯	SEARCH BUTTON
⑰	RDM BUTTON
⑱	RPT BUTTON
⑲	SUBTITLE/REDIAL BUTTON
⑳	TITLE/PBC BUTTON
㉑	ST/ANGLE/# BUTTON


Item	Button
㉒	ZOOM BUTTON
㉓	AUDIO BUTTON
㉔	CLOCK BUTTON
㉕	A-B BUTTON
㉖	EQ BUTTON
㉗	EJECT BUTTON
㉘	LOC/SLOW-FWD/* BUTTON
㉙	DVD/USB MODE BUTTON
㉚	STOP BUTTON
㉛	VOLUME- BUTTON
㉜	◀ BUTTON
㉝	OK BUTTON
㉞	VOLUME+ BUTTON
㉟	AUX MODE BUTTON
㉟	PROG BUTTON
㉞	OSD BUTTON
㉞	MUTE/LOUD BUTTON
㉞	STEP /TEL BUTTON
㉞	TA BUTTON
㉞	AF BUTTON

# Connection

## Wiring Diagram

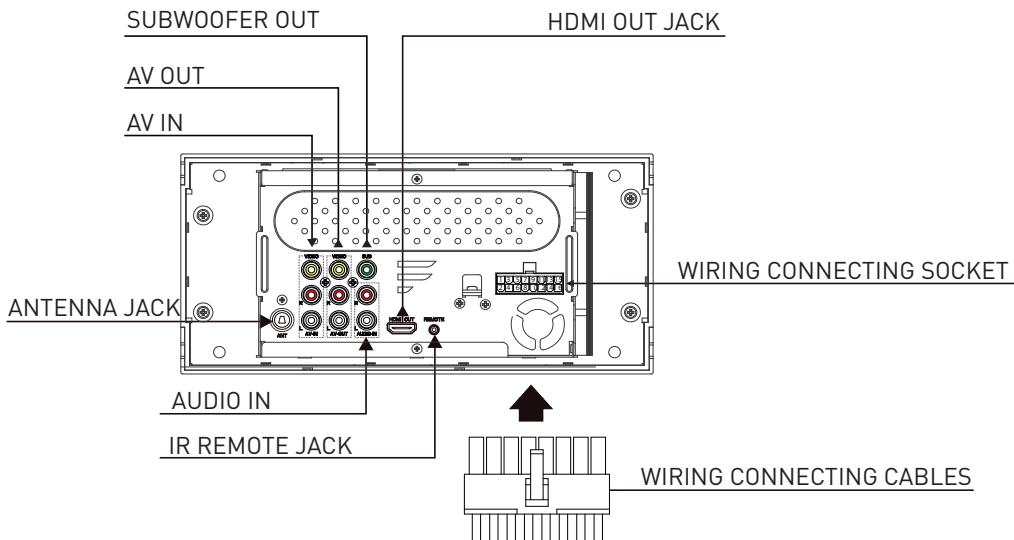

## Wiring Connecting Socket View


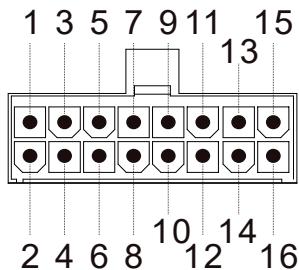


PIN NO	Color	Function
①	NONE	/
②	NONE	/
③	NONE	/
④	NONE	/
⑤	GREY	ZONE1 RIGHT SPEAKER (+)

PIN NO	Color	Function
⑥	GREY/BLACK	ZONE1 RIGHT SPEAKER (-)
⑦	WHITE	ZONE1 LEFT SPEAKER (+)
⑧	WHITE/BLACK	ZONE1 LEFT SPEAKER (-)
⑨	GREEN/BLACK	ZONE2 LEFT SPEAKER (-)
⑩	GREEN	ZONE2 LEFT SPEAKER (+)
⑪	PURPLE/BLACK	ZONE2 RIGHT SPEAKER (-)
⑫	PURPLE	ZONE2 RIGHT SPEAKER (+)
⑬	BLUE	AUTO ANTENNA
⑭	NONE	/
⑮	RED	POWER +12VDC
⑯	BLACK	GROUND

# Connection

## Wiring Connecting Cables

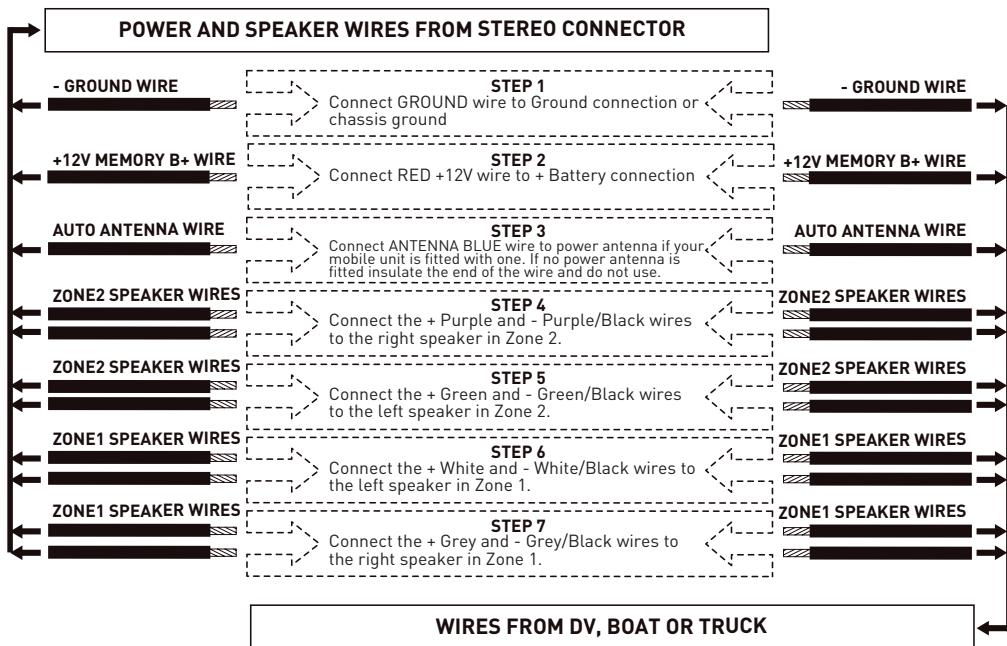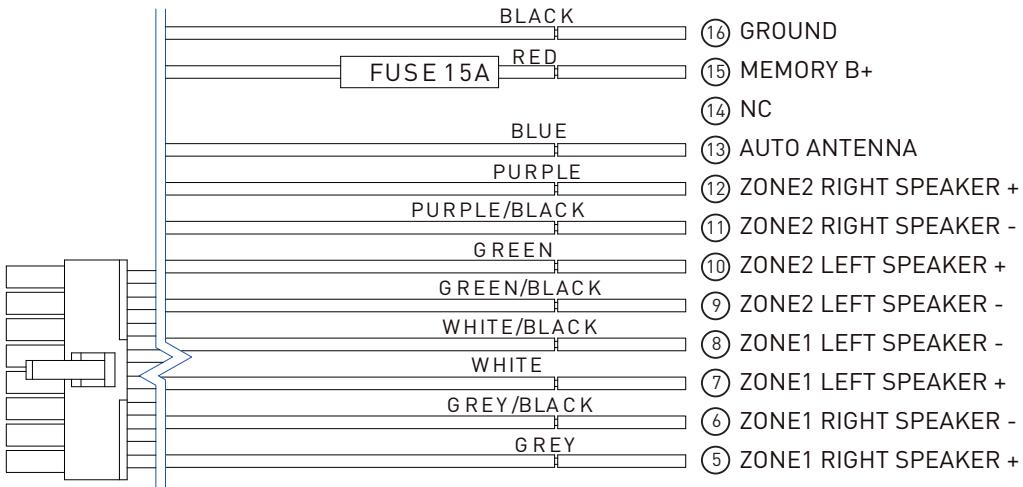

# About Your DV3350

## Features

- Digital AM / FM Tuner
- DVD/CD-R/RW/MP3/MP4/WMA Compatible
- Auxiliary inputs on front and rear
- USB input with charging function
- Bluetooth with NFC function
- 2 Zone multi room audio output
- Clock/Alarm Clock
- 1 x HDMI output
- 1 x RCA Audio/Video outputs for connecting additional TV
- 1 x Subwoofer output
- 1 x Front HDMI Input
- 1x AV Input on rear

## Supported Format

### Supported Video Format

File Extension	Container	Video Codec	Audio Codec	Resolution	Remark
.avi / .divx	AVI	MPEG-4 Visual DivX 4.xx/5.xx/6.xx/3ivX XviD MPEG-1	Dolby Digital (AC3) WMA/PCM/LPCM AAC-LC (2ch) MPEG-Audio (MP1/MP2/MP3)	720 x 480 (30fps) 720 x 576 (30fps)	
.mpg	MPG	MPEG-1/MPEG-2	Dolby Digital (AC3) LPCM MPEG-Audio (MP1/MP2/MP3)	720 x 480 (30fps) 720 x 576 (30fps)	
.dat	DAT	MPEG-1/MPEG-2	Dolby Digital (AC3) LPCM MPEG-Audio (MP1/MP2/MP3)	720 x 480 (30fps) 720 x 576 (30fps)	
.vob	VOB	MPEG-1/MPEG-2	Dolby Digital (AC3)	720 x 480 (30fps) 720 x 576 (30fps)	
.mp4	MP4	MPEG-4 Visual	Dolby Digital (AC3) WMA/LPCM AAC-LC (2ch) MPEG-Audio (MP1/MP2/MP3)	720 x 480 (30fps) 720 x 576 (30fps)	

### Supported Audio Format

File Extension	Audio Codec	Bit Rate	Sampling Rate	Remark
.mp3	MP3	16kbps - 320kbps	8k - 48 kHz	/
.WMA	WMA	16kbps - 320kbps	8k - 48 kHz	Only support WMA7/WMA8/WMA9(CBR/VBR) supported (only 353 format supported).


# Installation

## Location

- Choose a mounting location away from humid areas, water sources, appliances or any equipment that can radiate heat.
- Select an area on a wall or cabinet which is free from cable, fuel or brake lines. Ensure the area behind the wall mount stereo has a vent hole or if it is an enclosed box, it has adequate room around the rear of the unit for cooling.
- Ensure when the stereo is mounted in the cut out that the wires at the rear of the unit are not pressed against the heat sink.

## Installing the unit

- Before installing the unit, connect the wiring temporarily and make sure the unit and the system work properly.
- Fix the unit with screws according to the following diagram.

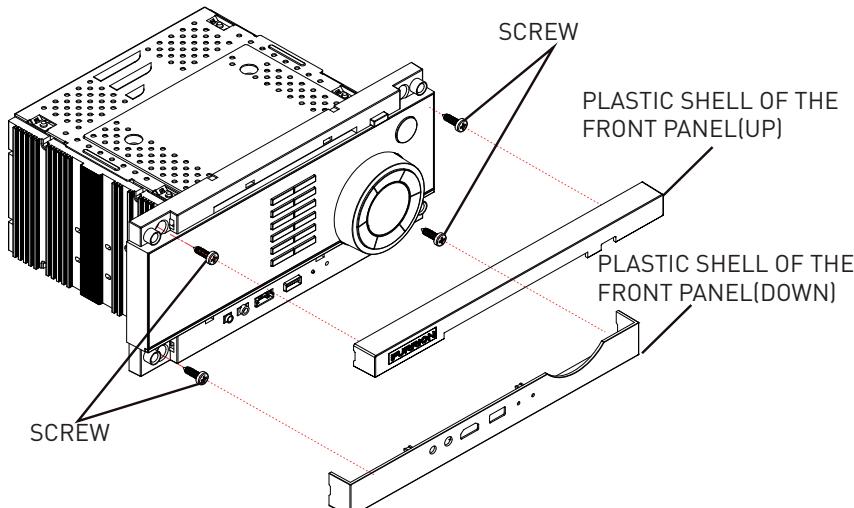

1. Remove the plastic shell from the front panel on the unit.
2. Fix the unit with 4 pieces of #8 pan head self tapping screws.
3. Put the back plastic shell on the front panel of the unit.

# Before Operation

## What's in the box

Thank you for purchasing the Furrion® Entertainment System DV3350. This manual will help you set up and begin using your product. Please read this manual thoroughly and keep this manual in a safe place for future reference.

First, check the contents of your box with the parts checklist below:

- Entertainment System DV3350
- Remote Control
- Harness (200mm)
- Audio RCA adapter cable (1.5m)
- Hang tag
- Instruction Manual
- Warranty Card

## Precautions

- Connect this product to a 12V DC negative ground battery system which is standard in North American and European vehicles.
- When installing the stereo, ensure all wire ends which are not being used are terminated with an insulated end to avoid wires shorting or earthing which can lead to the risk of fire or electrical shock.
- Avoid inserting foreign objects into the disk loading slot of the stereo as this will cause malfunction.
- Do not expose this product to moisture or wet environments. If condensation is present in the screen, wait for 1 hour or more for the moisture to evaporate.
- If the interior of the vehicle is extremely hot, do not use the player until the vehicle's internal temperature has cooled down.
- Do not use cleaning products on the front face of the product. Only use a slightly damp cloth for cleaning.
- Do not attempt to disassemble or adjust this product. Contact a service center for assistance.

# Operation

## Quick Reference Guide

### General Operation

<b>Power On/Off STANDBY</b>	Press <b>POWER</b> to turn the unit on or enter standby mode. Press and hold <b>POWER</b> to turn the unit off.
<b>MUTE</b>	Press <b>MUTE</b> to silence the audio. The icon  will flash on the display. Press <b>MUTE</b> again to cancel.
<b>SELECTING A SOURCE</b>	Press <b>DISC/USB, AM/FM, AUX, BT</b> to select between Disc (after inserting a disc), USB (after inserting a USB), Tuner, AUX and Bluetooth.
<b>Volume Adjustment</b>	Rotate <b>VOL KNOB</b> to adjust volume.
<b>Audio Adjustment</b>	Briefly press <b>SEL/EQ</b> to select between VOL, BAS (without EQ preset), TRE (without EQ preset), BAL, LOUD ON / OFF, LOC ON / OFF, ST ON / OFF, BEEP ON / OFF, SUB ON / OFF. Rotate it to select an audio feature.
<b>Curves Preset EQ</b>	Press and hold <b>SEL/EQ</b> to select between <b>CINEMA, ROCK, CLASSIC, FLAT</b> and <b>EQ OFF</b> .
<b>CLOCK SET</b>	Briefly and repeatedly press <b>SEL/EQ</b> button on the front panel to enter CLOCK Setup mode, and rotate <b>VOL KNOB</b> to adjust the hour/ minute number. Use the  or  to change the <b>HOUR</b> or <b>MINUTE</b> position. Once the time is set, the display will automatically reset after a few seconds.
<b>ALARM ON/ OFF</b>	Press  to turn on or cancel the alarm setting. When the alarm is on, the icon  will display on the LCD all the time.
<b>ALARM SET</b>	Press and hold  repeatedly to enter <b>ALARM CLOCK</b> and <b>ALARM SOURCE</b> setting. Use the same method to set the ALARM CLOCK as CLOCK SET. There are two alarm sources for selection: TUNER and USB.
<b>DIMMER</b>	Press  to dim the face illumination to <b>LOW, MIDDLE</b> or <b>HIGH</b> .

### General Operation

<b>SPEAKER SELECTION</b>	Press and hold <b>ZONE 1, ZONE 2</b> to select speaker output. The corresponding zone number will display on the LCD once it is selected.
<b>RESET</b>	Press <b>RESET</b> to reset to factory default and reload the correct functions.

### Radio Operation

<b>Radio region selection</b>	Press and hold <b>AM/FM</b> for 2 seconds to set AM/FM radio region (USA1 / USA2 / AUSTRALIA / EUROPE).
<b>Manual Tuning</b>	Press  or  button to move radio frequency down or up one step at a time.
<b>Seek Tuning</b>	Press and hold  or  button to search for the next strongest station automatically.
<b>Band</b>	Press <b>AM/FM</b> to select between FM1, FM2, FM3, AM1 and AM2.
<b>Storing and recalling Station Presets</b>	Press and hold any one of the <b>six preset buttons (1-6)</b> to store the current frequency. Press the corresponding preset button to recall the frequency stored.
<b>Automatically Store Stations</b>	Press and hold  to automatically store the six strongest stations on the current band. Up to 18 FM stations and 12 AM stations can be stored.
<b>Scan Tuning</b>	Press  to scan presets 1-6 on the current band.
<b>LOC</b>	Press <b>SEL</b> repeatedly to set the LOC ON or LOC OFF.
<b>Stereo/Mono</b>	In FM mode, press <b>SEL</b> repeatedly to set ST ON or ST OFF.
<b>Using PTY to select Program</b>	Select area EUROPE, press <b>SEL</b> repeatedly to enter PTY MODE, then rotate the <b>VOL KNOB</b> to select PTY programs.
<b>AF/TA</b>	Select area EUROPE, press <b>SEL</b> repeatedly to set AF/TA <b>ON</b> or <b>OFF</b> .

# Operation

## Disc USB Operation

Insert Disc	With the label facing up, insert a disc into the Disc slot. The Disc will automatically begin playback.
Eject CD	Press <b>EJECT</b> to eject the disc.
Track Select	Press <b>◀◀</b> or <b>▶▶</b> button to skip to next or previous track/chapter.
Fast backward / forward	Press and hold <b>◀◀</b> or <b>▶▶</b> button to fast forward or backwards.
Pause Playback	Press <b>▶▶</b> to temporarily stop the playback. Press <b>▶▶</b> again to resume playback.
Stop Playback	Press <b>■</b> once to pause the playback, press <b>▶▶</b> to resume; Press <b>■</b> twice to stop playback, then press <b>▶▶</b> to start playback from the beginning of the first chapter/track.
Repeat	Press <b>RPT</b> to switch among RPT ONE/ RPT DIR / RPT ALL / RPT OFF MODE
Random	Press <b>RDM</b> to play each track in random order. Press <b>RDM</b> again to resume.
Title	In DVD/VCD mode, press <b>TITLE</b> on the remote control to display the title list.

## Bluetooth Operation

Dial or accept call	Press <b>📞</b> to accept an incoming call, or dial / redial a telephone number.
Reject or End call	Press and hold <b>📞</b> to reject or end a call.

## Common Operation

### Turning the Unit On and Off

Pressing the **POWER** button will turn on the unit or cause the unit to enter standby mode.

### Selecting a Source:

- DISC / USB** - once a DVD or USB is inserted into the unit, the unit will automatically switch to display this source menu. Press the function button to select

DISC if a disc is already installed and the unit is playing from another source.

- AM/FM** - press this button to scroll through FM1, FM2, FM3, AM1, AM2. Press and hold this button repeatedly to select the radio region: USA1, USA2, AUSTRALIA, EUROPE.
- BT** - press this button to enable Bluetooth connection.
- AUX** - this button allows you to scroll through the AUX inputs fitted to the stereo:
  - F AUX** - connection on front of unit to connect an external audio source
  - R AUX** - connection on the rear of the unit, normally used to connect TV sound input.
  - AV** - connection on the rear of the unit to connect an external audio source
  - HDMI** - connection is on the front of the unit
- ARC** - connect TV with Audio Return Channel function to the HDMI Output Jack on the rear of the unit. Make sure the ARC function of the TV is ON.
  - For details on settings and operating your TV, refer to the instruction manual for the TV.
  - About Audio Return Channel (ARC) ARC allows audio signals to travel both ways under HDMI Control. If you connect a TV that supports HDMI Control and ARC to the unit with a single HDMI cable, you can output video/audio to the TV or input TV audio to the unit. In case noises are produced from the speakers connected to the unit because TV audio signals input to the unit via ARC are not supported by the unit, use the TV's speakers.

### Volume Adjust

Rotate the **VOL KNOB** clockwise to increase volume, or rotate anticlockwise to decrease volume.

# Operation

## Mute

1. Press **MUTE** button to mute whatever source is playing and display mute on the screen.
2. Press the **MUTE** button again to resume.

## To display and set the Clock

1. To display the clock on the LCD display, press **Clock** button on the remote control. In standby mode, the CLOCK time will display on the LCD all the time.
2. To adjust or set the clock, briefly and repeatedly press the **SEL/EQ** button on the front panel to enter CLOCK Setup mode, then rotate **VOL Knob** to adjust the hour/minute number. Use the **◀▶** or **▶▶** to change the HOUR or MINUTE position.
3. Once the time is set, the unit will automatically set after a few seconds.

## To set the Alarm

1. Press **🔔** to turn the alarm setting on or off. When the alarm is on, the icon **🔔** will display on the LCD all the time.
2. Press and hold **🔔** repeatedly to enter ALARM CLOCK and ALARM SOURCE setting. Use the same method to set the ALARM CLOCK as CLOCK SET. There are two alarm sources for selection: TUNER and USB.

## To select a preset EQ mode

Press and hold the **SEL/EQ** button on the front panel to select the preset music equalizer curves: CINEMA, ROCK, CLASSIC, FLAT or EQ OFF.

## To turn on/off LOUD mode

Briefly and repeatedly press the **SEL/EQ** button on the front panel to select LOUD ON/LOUD OFF mode.

## To adjust the sound equalizer curves

To adjust the sound equalizer curves, briefly and repeatedly press the **SEL/EQ** button to select the sound equalizer curves of VOL, BAS (without preset EQ), TRE (without preset EQ), BAL, LOUD ON/OFF, LOC ON/OFF, ST ON/OFF, BEEP ON/OFF, SUB ON/OFF. Rotate VOL Knob to select an audio feature.

## ZONE 1/ZONE 2 Button

1. Pressing and holding the **ZONE 1/ZONE 2** button will turn on or off the audio source in each of the different areas, which your speakers are connected. The corresponding zone number will display on the LCD once it is selected.  
**NOTE:** ZONE 2 has an independent audio output control function.
2. Short press **ZONE 2** button to activate independent audio selection mode. The icon "**ZONE 2**" will flash on the LCD.
3. Select the media source (DISC / USB, AM / FM, BT, F AUX / R AUX, AV, HDMI), audio effect and preset EQ independently.
4. After your setting of audio output of ZONE 2, short press **ZONE 2** button to switch back to ZONE 1 audio output control mode. The icon "**ZONE 2**" will not flash.
5. If the media source of ZONE 2 (ZONE 1) is selected as ARC, the media source of ZONE 1 (ZONE 2) can be selected as AM / FM, BT, F AUX, R AUX, AV or ARC.
6. If the media source of ZONE 2 (ZONE 1) is selected as AM/FM or BT, the media source of ZONE 1 (ZONE2) can be selected as DISC / USB, AM / FM, BT, F AUX, R AUX, AV, HDMI or ARC.
7. If the media source of ZONE 2 (ZONE 1) is selected as USB / DISC, the media source of ZONE 1 (ZONE 2) can be selected as USB / DISC AM / FM, BT, F AUX, R AUX or AV.

# Operation

## To reset the unit

When the display is incorrect, or the function buttons are not effective or sound is distorted, use a sharp point to press the **RESET** button. The unit will be reset to factory default and the correct functions will be reloaded.

## Radio Operation

### Radio region selection

In RADIO mode, press and hold the **AM/FM** button to select your desired radio region USA1, USA2, AUSTRALIA or EUROPE.

### AM/FM Button

In RADIO mode, press the **AM/FM** button on the remote control or **AM/FM** button on the front panel to select your desired radio band of FM1, FM2, FM3, AM1, AM2. The selected band will be displayed on the small monitor of the front panel.

### Tune/Search Up/Down

In RADIO mode:

1. Press and hold **◀◀** or **▶▶** button on the front panel or press and hold **◀◀/▶▶** button on the remote control to automatically search down/up for an available station from the current frequency.
2. Press **◀◀** or **▶▶** button on the front panel or press **◀◀/▶▶** button on the remote control to manually search up or down for your desired station from the current frequency.

### ■ / APS Button

1. Press and hold **■** button on the front panel or **APS** button on the remote control, the radio searches from the lowest frequency and checks the signal strength level until 1 cycle search to search for radio

frequencies with sufficient signal strength (starting from the lowest frequency and ending until the search cycle is finished). Then the 6 strongest stations are preset to the corresponding preset number memory band. The AS operation is implemented in each bank of the selected band. When the AS operation is finished, it will resume broadcasting on M1. (It can store 3x6 stations for FM and 2x6 stations for AM in all).

2. Press **■** button on the front panel or **APS** button on the remote control to search for each preset radio station starting from M1. When the field strength level is above the threshold of the stop level the radio holds at that preset number for a few seconds, and then searches again. After finishing a cycle of searching, it will stop searching on M1.

#### NOTE:

In FM band, FM1, FM2, FM3 is checked once at a time.

In AM band, AM1, AM2 is checked once at a time.

### Preset Station [ 1-6 ] Buttons

In RADIO mode:

1. To memorize the current frequency on the current band, press and hold any one of the six preset buttons [1-6].
2. To recall the preset memory on the current band, press one of the preset buttons [1-6].

### Stereo/Mono Function

Repeatedly press **SEL/EQ** button to select ST ON or ST OFF mode in FM mode.

### LOC ON/LOC OFF Function

In RADIO mode:

1. When the signals of the distant radio stations are very weak and the reception is poor during tuning, repeatedly press **SEL/EQ** button to select LOC OFF mode,

# Operation

then tune again for the distant radio stations.

2. In radio mode, too strong signals from the local radio stations may lead to interference. Repeatedly press **SEL/EQ** button to select LOC ON mode. Re-tune the local station if required.

## **PTY (Program Type) Button (For Europe only)**

Select area EUROPE. Press **SEL/EQ** button on the front panel or press the **PTY** button on the remote control to select PTY mode. When PTY group is on, press the 6 number buttons on the remote control or rotate the **VOL KNOB** on the front panel to select one of the PTY programs: NEWS <--> AFFAIRS <--> INFO <--> SPORT <--> EDUCATE <--> DRAMA <--> CULTURE <--> SCIENCE <--> VARIED <--> WEATHER <--> FINANCE <--> CHILDREN <--> SOCIAL <--> RELIGION <--> PHONE IN <--> TRAVEL <--> LEISURE <--> DOCUMENT <--> PTY NONE <--> POP M <--> ROCK M <--> EASY M <--> LIGHT M <--> CLASSICS <--> OTHER M <--> JAZZ <--> COUNTRY <--> NATION M <--> OLDIES <--> FOLK M <-->. After selecting one of the PTY programs, it will display **SEEK PTY** and automatically search for the station of the PTY program. If the station of the PTY program does not exist, it will display **PTY NONE** and then return back to the normal station.

## **AF [Alternative Frequencies] Function (For Europe only)**

1. Repeatedly press the **SEL/EQ** button on the front panel or press the **AF** button on the remote control to select AF ON / AF OFF mode. The state of the AF switching mode is displayed by AF segment.
2. Segment off: AF switching mode off.
3. Segment on: AF switching mode on, with RDS information displayed.
4. Segment flashing: AF switching mode on,

but RDS information is not received yet.

5. When the AF switching mode is selected, the radio checks the signal strength of the AF all the time. The interval of checking time of each AFs depends on the signal strength of the current station, from a few minutes for the strong station to a few seconds for the weak station. Every time that a new AF is stronger than the current station, it switches over to that frequency for a very short time, and the **NEW FREQUENCY** is displayed for 1-2 seconds. Because the mute time of the AF switching or the checking time is very short, it is almost inaudible in case of normal program. (When AF flashes on LCD, it will search for the stronger RDS station. If AF and TP flash on LCD, it can only search for the traffic announcement station).
6. In FM mode, when AF is on, SEEK, (SCAN), AUTO-MEMORY function can only be used to receive and save the RDS program.

## **TA [Traffic Announcement] Function (For Europe only)**

1. Repeatedly press **SEL/EQ** button on the front panel or press the **TA** button on the remote control to select TA ON / TA OFF mode.
2. When a traffic announcement is transmitted:
  - If the unit is in Disc Play mode, it will switch to radio mode temporarily.
  - Temporarily switch over to an EON linked station when EON detects a traffic announcement on that other program, and **TA, TP** will be displayed on LCD.
3. TA interruption function:  
The current traffic announcement is cancelled by pressing the **TA** button shortly.

- When TA is on, SEEK, [SCAN], AUTO MEMORY function can be received or saved only when traffic program identification code has been received.

## Basic Disc

### Begin playback

- Press the **POWER** button briefly to turn on the DVD player.  
After turning on the DVD player, please turn on the monitor, and ensure that the video output of the monitor is connected to the video input from the DVD player.
- If nothing displays on the TV screen when the DVD player is turned on, ensure that the TV is set to the right video input (not TV channel). For example, if the TV and DVD player are connected with each other via the VIDEO 1 INPUT, then you need to set the TV to VIDEO1.
- Insert a disc into the DISC SLOT (with labeled side facing up).

**NOTE:**

- Discs that are seriously scratched or of poor manufacturing or recording quality may not play.
- If the player can not read a disc in normal condition, please try to eject and reload the disc again.
  - In addition to normal CD and DVD, this unit supports to play CD-R, CD-R/W, DVD-R and DVD-R/W; however, depending on the conditions of the recording equipment, recording program or the disc itself, some CD-R, CD-R/W, DVD-R or DVD-R/W may not play.
  - When dealing with CD-R, CD-R/W, DVD-R or DVD-R/W recording, too high recording speed may result in poor signal quality and therefore, it is recommendable to select as low recording speed as possible.

### Pause Playback

When playing DVD/VCD/CD/MP4/MP3/WMA discs, press **PLAY/PAUSE ▶||** button on the front panel or remote control to pause the playback, press **PLAY/PAUSE ▶||** button again to resume normal playback.

### Stop Playback

When playing DVD/VCD/MP3/WMA/CD discs, press **STOP** button once to pause the playback, then press the **PLAY** button to resume the normal playback; Press **STOP** button twice to stop the playback, then press **PLAY/PAUSE ▶||** button to start playback from the beginning of the first chapter/track.

### Select Chapter/Track with the ◀◀ or ▶▶ button or ▲▲ / ▼▼ Button

Press **◀◀** or **▶▶** button on the front panel or **▲▲ / ▼▼** button on the remote control during playback to select the previous or next chapter/track for playback.

**NOTE:** Press **◀◀** or **▶▶** button or press **▲▲ / ▼▼** button multiple times to advance multiple chapters/tracks backward or forward.

### Select Chapter/Track with the Number Buttons

- When playing DVD/VCD (PBC OFF) /MP3/ WMA/CD discs, press one of the 1~9 and the 0 number buttons to directly select and play the 1st to 9th track/chapter.
- If you want to play the track/chapter with serial number bigger than 9, use the 10+, 1~9 and 0 button. To play the 13th track/ chapter, firstly press the 10+ button once, then press the 3 button. To play the 34th track/chapter, firstly press the 10+ button 3 times, then press the 4 button.

**NOTE:** Pressing the 5 or 6 button will allow you to move up or down 10 tracks at a time(only for MP3/WMA).

# Operation

## Chapter/Track

1. Select Chapter/Track with the Root/PBC menu (If the disc includes the root/PBC menu)
2. When playing a DVD:
  - Press **TITLE** button on the remote control to display the title list.
  - Press the direction buttons to select your desired title, and then press **OK** or **PLAY/PAUSE ►||** button to open the root menu of the selected title.
  - Press the direction buttons to select your desired chapter, then press the **OK** or **PLAY/PAUSE ►||** button to play the selected chapter. During playback, press **1/MENU** button on the front panel or long press **TITLE** on the remote control to directly display the root menu of the title that is playing.
3. In VCD mode
  - When turning on the PBC function, the beginning of the disc will play until the PBC menu displays on the TV screen (if the disc includes the PBC menu).
  - Press the number buttons to select your desired track to play.
4. In MP3/WMA mode
  - The root menu is displayed on the monitor screen all the time (if the **TITLE/PBC** button is not available).
  - Press the direction buttons to select your desired FOLDER, then press **OK** or **PLAY/PAUSE ►||** button to open the FOLDER, and then press the direction buttons to select your desired file, finally press **OK** button to play the selected file.
  - In CD mode, the **TITLE/PBC** button is disabled.

## Terminate the Playback

1. Press **EJECT** button to eject disc.
2. Press and hold **POWER** button on the front panel or briefly press **POWER** button on the remote control to turn off the stereo.

## Advanced Disc

### Playback with Speed Fast backward / forward

- During normal playback, press and hold **◀◀** or **▶▶** button on the front panel repeatedly or press and hold **◀◀/▶▶** button on the remote control repeatedly to move backwards or forwards at the following speeds: x2, x4, x8, x20, normal.
- During speed playback, press **PLAY/PAUSE ►||** button to resume normal playback.

### Playback with Slow Speed

- During playback, press **SLOW\_FWD** button on the remote control to execute the Slow Forward function. With each consecutive pressing of **SLOW\_FWD** button, the playback speed decreases. The speed levels in Slow Forward are as follows: x1/2, x1/3, x1/4, x1/5, x1/6, 1/7, normal.
- During slow forward, press **PLAY/PAUSE ►||** button to resume normal playback.
- The function is only available for video playback.

### Playback with still frame

If the unit is currently playing a DVD / VCD disc, press **STEP** button on the remote control consecutively to display the still frame forward step by step. Press **PLAY/PAUSE ►||** button to resume normal playback.

### Playback Repeatedly

1. **ONE/ALL Repeat**
  - During DVD disc playback: Press **RPT** button to select REP CHAPTER, REP TITLE, REP ALL or REP OFF.

# Operation

- During VCD(PBC OFF)/CD disc playback: press **RPT** button to select REP ONE, REP ALL or OFF.
- When it is in the state of PBC ON, during VCD disc playing, the **RPT** button is not available.
- During MP3/WMA disc playback: Press **RPT** button to select REP ONE, REP DIR, REP ALL or OFF.

## 2. A-B Repeat

Press **A-B** button on the remote control if you want to repeat a specific segment on a disc that you define:

- Press **A-B** button at a point (A) where you want it to be the start point of the repeat segment. Press **A-B** button again at a point (B) where you want it to be the terminal point of the repeat segment. Then it will play the segment repeatedly.
- To cancel A-B repeat mode and resume normal playback, press **A-B** button for the third time.

• **NOTE:** During DVD/VCD/MP3/WMA/CD playback, points A and B must be within the same track.

## Playback from a specified chapter/track or a specified time

1. When playing DVDs, press **SEARCH** button on the remote control to display an interface and highlight the title item, then use the number buttons to input the serial number of the title; use the direction buttons to highlight the chapter item, then use the number buttons to input the serial number of the chapter; finally press **OK** or **PLAY/PAUSE ►||** button to play the selected chapter.
2. When playing VCD/MP3/WMA/CD discs, press **SEARCH** button on the remote control to display an interface and highlight the track item, then use the number buttons to input the serial number of the track; finally press **OK** or **PLAY/PAUSE ►||** button to play the selected track .

## Playback in Random

When playing DVD/VCD(PBC OFF)/MP3/WMA/CD discs, press **RDM** button to switch between RANDOM ON /RANDOM OFF. When in RANDOM ON mode, it will play in random.

## Playback in Different Angle

1. When playing VCD/MP3/WMA/CD discs, **ANGLE** button on the remote control is not available.
2. When playing DVD discs, press **ANGLE** button on the remote control repeatedly to view in different angle. This function is only for the DVD discs with ANGLE function.

## Playback in Zoom Mode

In DVD/VCD mode, during playback, press **ZOOM** button on the remote control repeatedly to enlarge a certain area of the images on the screen with these multiples: ZOOMx2, ZOOMx3, ZOOMx4, ZOOMx $\frac{1}{2}$ , ZOOMx $\frac{1}{3}$ , ZOOMx $\frac{1}{4}$ , ZOOM OFF. Press one of the direction buttons to select the area you want to enlarge.

## Change the Caption Language

1. When playing DVDs, press **SUBT** button on the remote control repeatedly to select the language of the caption or turn off the caption (depending on the disc being used).
2. This button is unavailable for VCD/MP3/WMA/CD discs.

## Change the Audio Language

1. When playing DVDs, press **AUDIO** button on the remote control repeatedly to select the desired language type (depending on the disc being used).
2. When playing VCD discs, press **AUDIO** button on the remote control repeatedly to select the sound mode of the MONO L, MONO R, AUTO L, AUTO R and Stereo (audio language function unavailable)

# Operation

- When playing CD/WMA/MP3 discs, the **AUDIO** button on the remote control is invalid.

## Check the Playback Status


- When playing DVDs, press **OSD** button on the remote control repeatedly to turn on/off the playback status display. When it is on, it will display the information such as: the serial number of the playing title, the serial number of the playing chapter, the elapsed time of the playing chapter, the remaining time of the playing chapter, the elapsed time of the playing title, the remaining time of the playing title, etc.
- When playing VCD/CD discs, press **OSD** button on the remote control repeatedly to turn on/off the playback status display. When it is on, it will display the information such as: the serial number of the playing track, the elapsed time of the playing track, the remaining time of the playing track, the elapsed time of the disc, the remaining time of the disc.

## Program Playback


Program playback allows you to enter the order in which you want some chapters/tracks on DVD/VCD/MP3/WMA/CD disc to play.

- During playback, press **PROG** button on the remote control to enter a program interface as follows:

For DVDs

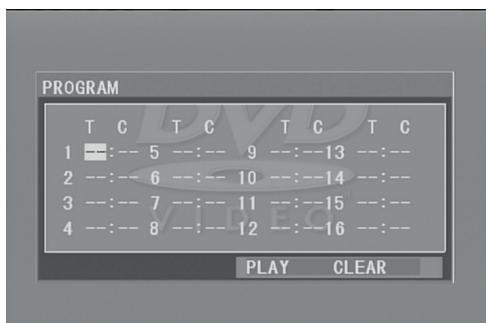

For VCD/MP3/WMA/CD discs

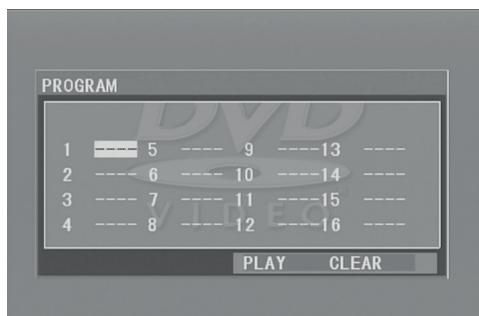

- Use the direction buttons to move the cursor onto the desired place for inputting the sequence number.
- Use the number button to input desired sequence number of title/chapter/track with desired sequence.
- Use the direction button to move the cursor onto **PLAY**, then press **OK** button on the remote control to play the programmed titles/chapters/tracks in programmed order. You can also simply press **PLAY/PAUSE ▶||** button to play the programmed titles/chapters/tracks in programmed order.
- To exit program playback, firstly press **STOP** button, then press **PLAY/PAUSE ▶||** button to enter sequence playback; or press **PROG** button twice again.
- To remove all the programmed sequence numbers, move the cursor onto **CLEAR**, then press **OK** button on the remote control.
- To change the programmed sequence, move the cursor onto the item you want to change, then input the desired sequence number.
- During VCD playback, if it is in PBC ON mode, the PBC mode is turned off as soon as program playback starts.

# Operation

## Play a Picture CD in JPEG Format

1. The root menu is displayed on the monitor when you switch to the DISC mode. At the time, MP3/WMA files are played. (**TITLE** or **PBC** button is not available).
2. In the root menu, the left file sort icon is for MP3/WMA file; the middle file sort icon is for VIDEO file; the right file sort icon is for JPEG file. If one of these 3 file sorts do not exist, you can not move the cursor onto the file sort icon.
3. When the root menu is displayed, press the direction buttons to select your desired FOLDER, file or file sort icon, then press **OK** or **PLAY/PAUSE▶||** button to open the FOLDER, or play the selected file, or play only this sort of file. When the root menu is displayed, you can also use the number buttons to select the serial number of a file and play it.

When you select a JPEG file sort icon, press one of the direction buttons to select the first JPEG file, then press the **▼** button to select the desired JPEG file, finally press **OK** or **PLAY/PAUSE▶||** button to display the JPEG picture in full screen from the selected JPEG picture.

- During JPEG playback, press one of the direction buttons to change the angle of the picture that is displaying as follows: **▶** : 90 deg cw; **◀** : 90deg ccw;  
**▲** : UP<-->DOWN; **▼** : LEFT<-->RIGHT
- During JPEG playback, press **PROG** button on the remote control to change the picture refresh mode. During JPEG playback, press **STOP** button to stop playing and return to the root menu.
- During JPEG playback, the following buttons are not available: SLOW-FWD, SUBT, TITLE/PBC, ANGLE, STEP, AUDIO, RDM and A-B.
- In JPEG mode, the other operations are the same as those in MP3/WMA mode.

## MP4 Operation

1. The root menu is displayed on TV when you switch to the DISC mode, then it will automatically play the first file. During playback, press **STOP** button to stop playing and return to the root menu.
2. When the root menu is displayed, press the direction buttons to select your desired FOLDER or file, then press **OK** or **PLAY/PAUSE▶||** button to open the FOLDER, or play the selected file. When the root menu is displayed, you can also use the number buttons to select the serial number of the file and play it.

- **ANGLE, PROG, RDM**, and **TITLE/PBC** buttons are not valid.
- The other functions are the same as those in DVD mode; but the “Repeat” function is the same as in MP3/WMA mode.

## ESP and ID3 Function

The ESP function is available for all formats of discs. During MP3/WMA playback, the information of the file name, folder name, songs title, artist and album will be scrolling on the LCD display. As long as the MP3 music currently playing contains relevant ID3 tag information in version 1.0/2.0 format, the 3 items underlined above will be scrolling on the LCD display; otherwise, they will not.

## USB Operation

Power on the DVD player, then insert the USB storage. The monitor will display the root menu of the USB storage device.

This device supports picture (JPEG format), audio (MP3 or WMA format) and Video (MP4 format). All the operations are the same as those of the corresponding format.

### NOTE:

- Playback of all file formats is not guaranteed.
- Not all USB products can be charged from the unit.


# Operation

## DVD Operation

1. Press **SETUP** button on the remote control to access the DVD System Menu on the monitor.
2. There are 6 setup pages in all for the System Menu. Press the **◀** or **▶** button to select a desired setup page.
3. Press the **▲** or **▼** button to select a setup item on the selected setup page.
4. Press the **▶** button to enter the setup item. Then press the **▲** or **▼** button to select a desired mode of the setup item, finally press **OK** button to confirm it.
- Press the **◀** button to return to the upper level.
- Press **SETUP** button on the remote control again or use the direction buttons to highlight **EXIT SETUP** and then press **OK** button to exit the System Menu.

For the DVD System Menu, there are 6 setup pages in all, as shown below:

## SYSTEM SETUP

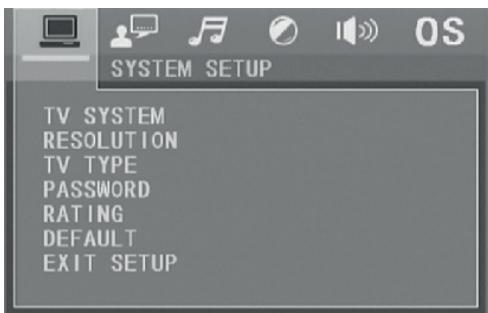


SYSTEM SETUP	
TV SYSTEM	The Stereo supports output of various TV systems. If your TV has only NTSC or PAL systems, the screen will blink and become colorless when a wrong TV system is selected. In this case go to TV SYSTEM and select NTSC, PAL or AUTO to match the system of your TV.
RESOLUTION	The setup is for resolution level selection.

## SYSTEM SETUP

TV TYPE	<p>The setup item is for matching TV screen size.</p> <p><b>4:3 PS:</b> Choose the item when connecting a TV set with 4:3 screen. When playing the pictures with 16:9 size, the left and right parts of the video will be cut out, and displayed in full screen.</p> <p><b>4:3 LB:</b> Choose the item when connecting a TV set with 4:3 screen. When playing the pictures with 16:9 size, the top and bottom parts of the TV screen will be turned into a black square respectively.</p> <p><b>16:9:</b> Choose the item when connecting a TV set with 16:9 wide screen.</p>
PASSWORD	<p>This setup item is for locking or unlocking the rating level of the Parental Control. The default state is locked. The default password is <b>0000</b>. You can set a new password that you like: Select the <b>PASSWORD</b> item and press <b>▶</b> button to enter it, then input the original password <b>0000</b>, and finally press <b>OK</b> button to unlock it. Press <b>▶</b> button to enter it again, then input a new password that you like and press <b>OK</b> button to confirm.</p> <p>Before the other persons see the Manual. To ensure others don't access the password, consider setting the password then cutting the <b>PASSWORD</b> section out of the Manual.</p>
RATING	<p>To set a new Parental Control rating level:</p> <ol style="list-style-type: none"><li>1. Select the <b>PASSWORD</b> item and then press <b>▶</b> button to enter it, then input the password mentioned above, and then press <b>OK</b> button to unlock the setting of the rating level of the Parental Control.</li><li>2. Select the <b>RATING</b> item and then press the <b>▶</b> button to enter it, then use the direction buttons to select your desired rating level, then press <b>OK</b> button to confirm.</li><li>3. Select the <b>PASSWORD</b> item again and press the <b>▶</b> button to enter it, then input the password, and finally press <b>OK</b> button to lock the new setting of the rating level of the Parental Control.</li></ol>
DEFAULT	This item is for making all setup items change back to original status.

# Operation

## LANGUAGE SETUP

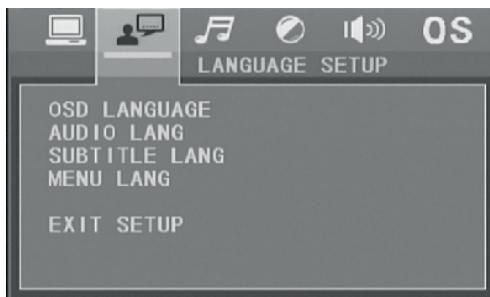

## VIDEO SETUP



## LANGUAGE SETUP

<b>OSD LANGUAGE</b>	This item is for selecting the language of the <b>SYSTEM MENU</b> and all operating prompt interface displayed during playback.
<b>AUDIO LANG</b>	This item is for selecting an audio language.
<b>SUBTITLE LANG</b>	This item is for selecting a subtitle language.
<b>MENU LANG</b>	This item is for selecting a disc menu language.

## AUDIO SETUP




## AUDIO SETUP

<b>AUDIO OUT</b>	For selecting a Digital output method. SPD IF/OFF, SPD IF /RAW, SPD IF/PCM
<b>HDMI AUDIO</b>	<b>AUTO:</b> Selected to output the audio automatically by RAW or PCM type. <b>PCM:</b> Selected to output the audio by PCM type.

## VIDEO SETUP

<b>BRIGHTNESS</b>	For adjusting the brightness of the video output.
<b>CONTRAST</b>	For adjusting the contrast of the video output
<b>HUE</b>	For adjusting the hue of the video output.
<b>SATURATION</b>	For adjusting the saturation of the video output.
<b>SHARPNESS</b>	For adjusting the sharpness of the video output.

## SPEAKER SETUP

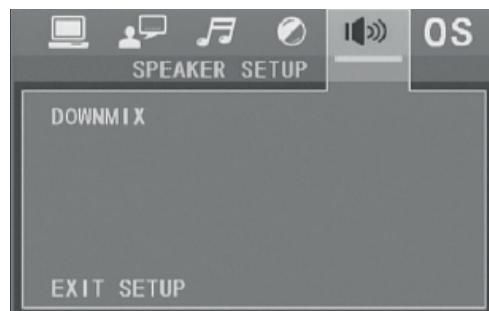

## Parental Control

**Q:** After a DVD is inserted into the disc compartment, a dialogue window will appear asking for a password of 4 digits. Why?

**A:** This is because that the movie you are playing was rated with the Parental Control, and the current rating level of the DVD player is lower than the one of the current disc. You must input the right password and enter it in the Parental Control setup menu and then set an equal or higher rating level than the one of the current disc.

**NOTE:**

- If you have not changed the password, the factory preset password for the DVD player will be empty. You will need to input a desired password and input it again to verify it in the Parental Control setup menu.
- For the rating level setup of Parental Control of the DVD player, please refer to the relative content of SYSTEM SETUP menu for details.

## Accessories: Parent Control

- The Parental Control function of a DVD player can control the playback of the movie rating level of a disc. You can set the DVD player (including software player in PC) to be a certain rating level with SETUP MENU on TV screen. If the rating level set in the disc is higher than the one set in the DVD player, the DVD player can not playback the disc. Sometimes the Parental Control sequences in some discs are different from each other. The rating level setup can be protected by the password. Therein, if you select the unlock item, the Parent Control function will be invalid, and the content of the disc will be played.
- The disc movie can be designed as that the DVD player will playback the different version of content of a same movie according to the different rating level set by Parental Control. Depending on the DVD feature of seamless switching

described above, the scenes that are unsuitable for children will be cleared or replaced by other suitable scenes automatically.

- All rating levels of Parental Control are as follows:  
Unlock  
1. Kid Safe  
2. G  
3. PG  
4. PG 13  
5. R  
6. NC 17  
7. Adult

## The Region Code

**Q:** No DVD playback. Screen displays REGION ERROR after inserting disc into disc compartment. **Why?**

**A:** Because the DVD player and disc have different region codes. If they do not match, the DVD player cannot play the disc.

Appendix: The region code of DVD:

- The Motion Picture Association of America (MPAA) divided the world into 6 regions, and allocated every region a code, named the region code. The region codes and the countries or areas represented by the region codes are as follows:
  - **Region 1:** America, Canada, East-Pacific Islands;
  - **Region 2:** Japan, West Europe, North Europe, Egypt, South Africa, Middle East;
  - **Region 3:** South-east Asian countries including Taiwan, Hong Kong, South Korea, Thailand, Indonesia, etc.;
  - **Region 4:** Australia, New Zealand, Central South America, South Pacific Islands;
  - **Region 5:** Russia, Mongolia, Indian Peninsula, Middle Asia, East Europe, North Korea, North Africa, North-west Asia etc.;
  - **Region 6:** China mainland.

# Bluetooth Operation

## How to pair DV3350 with your mobile phone?

1. Activate Bluetooth mode on your mobile phone, also press **Bluetooth** button to enter Bluetooth mode on your DV3350.
2. After the Bluetooth Device is found, it will show the name of the Bluetooth Device **FURRION DV3350-XXXX** (where **X** can be any character **A-Z** or number **0-9**). Select it and enter it, then it will show an interface that asks you to input a password. Input the password **0000** and enter it. Then it will tell you pair OK. When connected, the LCD of the car audio system will show **LINK ok**.

### **Note:**

1. Some mobile phones will automatically connect with the BT device of the car audio system after pairing. Other mobile phones will need you to select the paired BT device and press the CONNECTION button.
2. When disconnected, find the paired and disconnected Bluetooth Device on your mobile phone, then press the connection button to connect.

## How to unpair DV3350 from your mobile phone?

1. Disconnect:  
When connected, find the paired and connected Bluetooth Device, then press the disconnection button to disconnect.
2. Forget:  
Press and hold the **Bluetooth** button for about 5 seconds in DV3350 to clear its memory.

## How to operate mobile phone via bluetooth?

Mobile phone transfers to the car audio whenever dialing takes place; Mobile phone transfers to the car audio whenever receiving a call.

1. While connected: Press **Bluetooth** button on the front panel to switch between Unit and Phone during BT phone conversation.
2. Dial:  
Dial with remote control using the following procedures:
  - Input telephone number with number buttons 0-9.
    - \* Short press **CLEAR** button to cancel the wrongly input number if necessary
    - Short press **TEL** to execute the dialing.
3. Redial:  
To redial the last phone number dialed:
  - Short press **TEL** button on the remote control or **1** button on the front panel, it will show last phone number on the LCD, then it will execute the dialing.
  - Short press **REDIAL** button on the remote control, it will dial the last phone number.
4. Accept:  
Incoming call ringing, short press **TEL** button on the remote control or **1** button on the front panel to accept the call.
5. Reject:  
To reject incoming call ringing, short press **HANG UP** button on the remote control or **2** button on the front panel to REJECT the call.
6. End Call:  
During a phone call, short press **HANG UP** button on the remote control or **2** button on the front panel to end the call.

**Note:** When an incoming call is present the caller's phone number will be displayed on the screen.

# Bluetooth Operation

## How to Play an Audio File from an External Bluetooth Device (Mobile Phone) on the Wall Mount Stereo?

After the device has been paired successfully and Wall Mount Stereo screen displays LINK OK.

If your mobile device supports A2DP you will then be able to stream music from your Bluetooth device so it can be played by the stereo speaker.

You must select Bluetooth on your mobile device to play audio through Bluetooth.

If your mobile device supports AVRCP then you will be able to control the basic phone audio output functions by the Wall Mount Stereo controls. Eg. Play Pause.

**Note:** During other modes (except Bluetooth conversation), press  button on the front panel to switch the mode with others.

## How to Setup Your Stereo Using NFC (only Supports Mobile Phones with NFC Function)?

1. Turn on the NFC function of your mobile phone and make sure the screen is active and unlocked.
2. With the NFC detection area of your phone touch the NFC detection area of the Stereo. You can now connect or disconnect your mobile phone with the Stereo conveniently.

**Note:** The first time you pair and connect, it will ask you to input a password. The password is "0000".

# App Operation

## App Control (supports both iOS and Android systems)

- You can use the Furion ES control App (both Android and iOS versions) and thus your mobile as a remote control.
- The App uses BT Low Energy (BLE) technology to connect to DV3350 instead of infrared in the physical remote control, and thus not limited by line-of-sight connection.
- While the App checks for compatibility, it will be good for you to cross-check the specifications of your mobile to see if it supports BLE technology before the installation.
- Search for "Furion ES Control" in Google Play (Android) or App Store (iOS) according to your mobile device and install. Run the App according to the instructions within.
- The App works with multiple models in the Furion DV range entertainment system.

## App installation and use steps

1. Install the ES Control App in your smartphone.
2. Turn on Bluetooth on your device and start the App.
3. According your mobile phone type to select the device name "**Furion DV3350-XXXX**" (Android smart phone) or "**DV3350-4.0-XXXX**" (iPhone) to connect (where X can be any character of **A-Z** or number **0-9**).
4. Use the App to control the DV3350 freely.

# Maintenance

## Maintenance and Cleaning of Discs

### Disc Maintenance

1. To keep the disc clean, handle the disc by its edge, do not touch the disc surface of the play side.
2. Do not stick paper or tape on the disc. If there is glue on the disc surface, wipe it off before using.
3. Do not expose the disc to direct sunlight, or nearby heat sources such as caliduct, or leave it in a car parked in direct sunlight where there can be a considerable rise in temperature.
4. Put the disc inside a disc case after finishing playback.

### Disc Cleaning

1. Before playing, wipe the disc with a clean cloth. Wipe the disc outwards from the disc center.
2. Do not use petrol, thinners, commercially available cleaners or anti-static spray for plastic LPs to wipe discs.



Correct



Wrong



Correct



Wrong

### Remote Control Battery Information

#### Replace Battery in the Remote Control

1. Before using the remote control for the first time, pull the insulating sheet out of the remote control in the direction indicated by the arrow. (Fig.1)

2. Press the movable block hold in the direction indicated by the A arrow (Fig. 2), then pull the battery holder out of the remote control as the direction indicated by the B arrow (Fig. 2).
3. Replace the old battery with a new one with the (+) polarity side upward (Fig. 3).
4. Insert the battery holder to the original position in the remote control (Fig. 3)

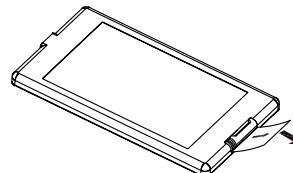


Fig.1

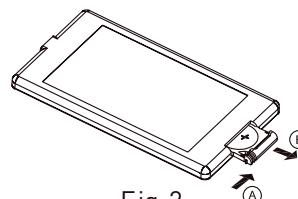


Fig.2

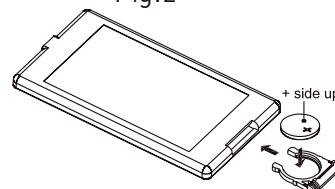


Fig.3

#### Note about the Battery of the Remote Control

1. Improper use of a battery may cause overheating or an explosion that could result in injury or fire.
2. Battery leakage may cause damage to the remote control. Battery life: 6 months with normal use in normal room temperature.
3. Do not short the battery.
4. Do not throw the battery into fire.
5. To avoid the risk of accident, keep the battery out of reach of children.

# Troubleshooting

Please read the user manual carefully before using the DVD player. If you have any problems with this product, please refer to the below troubleshooting guide to help you resolve the issue.

TROUBLE/SYMPTOM	SOLUTION
<b>No picture, sound and indication</b>	<ul style="list-style-type: none"> <li>• Ensure that the power switch is on.</li> <li>• Ensure that the wall inlet is ok.</li> <li>• Ensure that the power cord is not damaged or the fuse is not blown.</li> <li>• Ensure that the power plug is connected to the inlet tightly.</li> </ul>
<b>No sound but picture ok</b>	<ul style="list-style-type: none"> <li>• Ensure that the player's audio output has a good connection with TV's audio input.</li> <li>• Check whether the audio connector is damaged.</li> <li>• Check whether you have turned down the volume.</li> <li>• Ensure that you have set the right AUDIO setup of the player.</li> <li>• Ensure that the audio is not under mute.</li> </ul>
<b>Black and white picture or screen rolling</b>	<ul style="list-style-type: none"> <li>• Ensure that you have set the right TV SYSTEM (e.g. PAL, NTSC) setting.</li> </ul>
<b>No picture but sound ok</b>	<ul style="list-style-type: none"> <li>• Ensure that the player's video output has a good connection with TV's video input.</li> <li>• Ensure that you have turned your TV to the AV input channel connecting to your player.</li> <li>• Check whether the video connector is damaged.</li> <li>• Ensure that you have set the right VIDEO settings of the player.</li> </ul>
<b>Flaws in picture or sound</b>	<ul style="list-style-type: none"> <li>• Check whether the setting of AUDIO is right.</li> <li>• Check whether the disc is scratched or stained.</li> <li>• Check whether the AV connector and the output terminal is stained.</li> <li>• Check whether there is condensation inside the lens. If so, leave the player off for an hour or so, then try again.</li> <li>• Check whether the installation angle is less than 30°.</li> </ul>
<b>Display no disc or bad disc</b>	<ul style="list-style-type: none"> <li>• Ensure that you have put the disc on the tray.</li> <li>• Check whether the disc is put in the reverse side.</li> <li>• Check whether the disc is distorted.</li> <li>• Check whether the disc is stained or scratched badly.</li> <li>• Ensure that the disc format is compatible to the player.</li> <li>• Ensure that the temperature inside the car is not too high. If so, cool off unit until the ambient temperature returns to normal.</li> <li>• Insert another disc into the disc compartment.</li> </ul>
<b>Remote control does not work</b>	<ul style="list-style-type: none"> <li>• Direct the remote control to the IR sensor of the player.</li> <li>• Check whether there are obstacles between the remote control and IR sensor.</li> </ul>
<b>Some function buttons do not work</b>	<ul style="list-style-type: none"> <li>• Turn off the power, then turn on again.</li> <li>• Reset the unit to zero, then turn on again.</li> <li>• Remove the front panel from the unit, then install it again and then turn on again.</li> </ul>
<b>The radio does not work</b>	<ul style="list-style-type: none"> <li>• Check whether the antenna cable is connected firmly, or manually tune for a station.</li> </ul>
<b>Stereo functions lock up or Bluetooth function is not responding to device</b>	<ul style="list-style-type: none"> <li>• Use a metal pin to press the software reset button in the recess hole on the front of the stereo.</li> </ul>

# FCC Information

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
- If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

# Specifications

General Specification	
Power Supply Requirement	DC 12V
Maximum Power Output	4 x 20W
Dimensions (W x H x D)	9 <sup>13</sup> / <sub>16</sub> " x 4 <sup>5</sup> / <sub>8</sub> " x 7" 249 x 118 x 178mm

Audio Specification	
Audio Output (Analog audio)	2.0 +0/-1.0 Vrms
Frequency Response	20Hz ~ 20KHz (at 1KHz 0 dB)
S/N Ratio (Audio)	> 60dB (at 1KHz 0 dB)
Separation	50dB
Speaker Output	4 Ω Load

DVD Deck Specification	
Format	DVD/VCD/JPEG/MP4/WMA/CD
Video System	NTSC/PAL/PAL-M/PAL-N/AUT O (optional)
Audio System	24 bit/96KHz
Loading System	Audio Loading
Mounting Angle	0 to +/- 30

Radio Specification	
FM Section	
Frequency range	87.5 MHz - 107.9 MHz (US) 87.5 MHz - 108.0 MHz (EU) 87.5 MHz - 107.9 MHz (AUS)
Usable sensitivity	3uV
AM Section	
Frequency range	530 KHz - 1710 KHz (US) 522 KHz - 1620 KHz (EU) 522 KHz - 1710 KHz (AUS)

Video Specification	
Video Type	16:9 and 4:3 Load impedance: 75 ohms
Horizontal Resolution	600

Bluetooth Specification	
Bluetooth Version	V4.0
Operation Frequency	2.4GHz (ISM BAND)
Bluetooth Output	4dBm

# Warranty

FURRION WARRANTS FOR A PERIOD OF 1 YEAR FROM DATE OF RETAIL PURCHASE BY THE ORIGINAL END-USE PURCHASER, THAT THIS PRODUCT, WHEN DELIVERED TO YOU IN NEW CONDITION, IN ORIGINAL PACKAGING, FROM A FURRION AUTHORIZED RESELLER AND USED IN NORMAL CONDITIONS, IS FREE FROM ANY DEFECTS IN MANUFACTURING, MATERIALS, AND WORKMANSHIP. IN CASE OF SUCH DEFECT, FURRION SHALL REPLACE OR REPAIR THE PRODUCT AT NO CHARGE TO YOU. THIS WARRANTY DOES NOT COVER: PRODUCTS WHERE THE ORIGINAL SERIAL NUMBERS HAVE BEEN REMOVED, ALTERED OR CANNOT READILY BE DETERMINED; DAMAGE OR LOSS CAUSED BY ACCIDENT, MISUSE, ABUSE, NEGLECT, PRODUCT MODIFICATION, FAILURE TO FOLLOW INSTRUCTIONS IN INSTRUCTION MANUAL, COMMERCIAL OR INDUSTRIAL USE; DAMAGE OR LOSS CAUSED TO THE DECORATIVE SURFACE OF PRODUCT; TO ANY DATA, SOFTWARE OR INFORMATION; AND NORMAL WEAR AND TEAR. THIS WARRANTY ONLY PROTECTS THE ORIGINAL END-USER ("YOU") AND IS NOT TRANSFERABLE; ANY ATTEMPT TO TRANSFER THIS WARRANTY SHALL MAKE IT IMMEDIATELY VOID. THIS WARRANTY IS ONLY VALID IN THE COUNTRY OF PURCHASE.

THIS WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. FURRION SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF FURRION CANNOT LAWFULLY DISCLAIM IMPLIED WARRANTIES UNDER THIS LIMITED WARRANTY, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

No Furrion reseller, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

FURRION IS NOT RESPONSIBLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPLACEMENT OF ANY EQUIPMENT OR PROPERTY, ANY COSTS OF RECOVERING, REPROGRAMMING, OR REPRODUCING ANY PROGRAM OR DATA STORED IN OR USED WITH FURRION PRODUCTS. FURRION'S TOTAL LIABILITY IS LIMITED TO THE REPAIR OR REPLACEMENT OF THIS PRODUCT PURSUANT TO THE TERMS OF THIS WARRANTY.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR EXCLUSIONS OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OR CONDITIONS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY BY STATE OR (WHERE APPLICABLE IN THE COUNTRIES WHERE FURRION HAS NON-US/CANADIAN AUTHORIZED DEALERS) COUNTRY. NO ACTION OR CLAIM TO ENFORCE THIS WARRANTY SHALL BE COMMENCED AFTER THE EXPIRATION OF THE WARRANTY PERIOD.

Keep your receipt, delivery slip, or other appropriate payment record to establish the warranty period. Service under this warranty must be obtained by contacting Furrion at

[warranty@furrion.com](mailto:warranty@furrion.com)

Product features or specifications as described or illustrated are subject to change without notice.



**Furrion Innovation Center & Institute of Technology**

- 52567 Independence Ct., Elkhart, IN 46514, USA
- Toll free: 1-888-354-5792
- Email: [support@furrion.com](mailto:support@furrion.com)

©2007-2018 Furrion Ltd. Furrion® and the Furrion logo are trademarks licensed for use by Furrion Ltd. and registered in the U.S. and other countries.

**FURRION.COM**