

E3GGMM

Wireless Smart Speaker
Setup Guide



Wi-Fi setting

Wi-Fi connection mode setting

Step 1: Power on

Connect to the power adapter, the speaker power on, the blue light flashes and the system enters Wi-Fi mode.

Step 2: APP downloading

Download and install GGMM E series APP, set the internet working according to the APP prompts.

Apple/Android devices can scan below QR code to install APP, or manual search "GGMM E series" in apple store or Google play.



iOS



Android

⚠ Note:

- After speaker connect to family router, it will become a router repeater (SSID: GGMM_E3_XXX, Password: ggmm123456), recommend to change the password in APP setting.
- If the router password was changed or the speaker has been removed to another internet environment, you have to reset the Wi-Fi connection.
- Avoid using the speaker in a complicated public Wi-Fi network environment (e.g., office, airport and hotel), as this may lead to an unstable connection (play buffer, connection failure, etc.)

Product List

E3 Product List

E3 speaker x 1pc AUX cable x1pc Power adapter x1pc
User manual x1pc Warranty card x1pc

E3 speaker

AUX cable

Power adapter

User manual

Warranty card

Function Introduction

I Control panel

Short press for Play&Pause
Long press for collecting favorite
Favorite Channel 1~6
Mode indicator light
Volume - / Tune down the alarm and clock time
Volume + / Tuneup the alarm and clock time
Next
Short press to switch mode
Long press for Power On and Off

Mode indicator light:

Wi-Fi	Waiting for internet connection (No connect Wi-Fi)	Blue on: Internet connected
Bluetooth	White slow flashing: Searching for Bluetooth	White on: Bluetooth connected
AUX	White quick flashing: Bluetooth pairing mode	
Green on: AUX in mode		

⚠ Note:
(1)Press the button to choose from Channel 1 to 6.
(2)Long press the button can add current Channel to favorite channels.

Function Introduction

II Control back panel

Wi-Fi connecting button (Short press to connect internet/ Long press 5 seconds to factory reset)
Clock setting
Alarm setting
Display brightness switch
OUT-2.1A
AUX-IN
DC-IN
2.1A charging port
AUX port
Power in port

Function Introduction

III Front panel

Clock display

Clock/Alarm/display settings

1.Clock setting

The clock of E3 should be set manually. Press button once and the hour flashes, press button to adjust the hour; then press button again and the minute flashes, press button to adjust the minute, wait for 8 seconds until the settings complete.

⚠ Remark:
E3 can auto save the clock time for about 36 hours when it is out of power, so we suggest that don't let the speaker out of power for more than 36 hours.

2.Alarm setting

Press button to start alarm function and display OFF; press button again so that the hour flashes, and press button adjust the hour; press button again so that the minute flashes, and press button adjust the minute; wait for 8 seconds until the settings complete.

3.Display brightness settings

Clock display light is on when E3 is powered on, you can press the brightness button to turn off the clock display, and press the brightness button again to turn on the clock display.

Wi-Fi setting

Step 3: Wi-Fi connecting

Open GGMM E series APP, connect to the wireless internet according to the prompts on the APP interface, the mode light will turn blue and the Wi-Fi is connected.

GGMM
Searching GGMM wireless Hi-Fi System ...

Please make sure your GGMM device is powered on and on the same network as your phone or tablet. If not, please click "Add Device" button to configure your device to your Wi-Fi network.

Add Speaker

Back Configure your network Next >

Press the WiFi button to connect to your WiFi

Wi-Fi Button

DEVICE LIST

Bedroom

Multi-Room Play

DEVICE LIST

Bedroom

L R

Wi-Fi setting

More functions:

Add multiple E3 speakers by GGMM E series APP to realize the multi-room play and Left & Right channel play.

Multi-Room Play

Left & Right channel

⚠ Note:
1.The speaker can play channel 1 to 6 without cell phone control after connected to internet. It will play the last channel when re-connecting internet.
2.The music can be played not only by APP, but also by Airplay/DLNA.

Other Mode Setting

Other connection mode

1.Bluetooth connection

Press the mode switch button, the white indicator light flashes and the speaker enters Bluetooth connection mode; open the Bluetooth setting of the device, open to player to play music after successfully connected to GGMM_E3.

Bluetooth

DEVICES

GGMM_E3 Connected

2.AUX connection

Press the mode switch button, the mode light will turn green, and it is now in AUX mode, devices (such as smart phones, tablet PCs, PC, Mac, etc.) can connect to the speaker via AUX cable, open the player of the device to play music.

⚠ Note:
The speaker will enter standby mode after 30 minutes without music play in Bluetooth and AUX mode.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

www.ggmm.com
Designed by GGMM Irvine · Leipzig Hong Kong · Shenzhen