

 
MP-100 Mini PC 使用说明书



产品清单

MP-100主机*1 电源适配器*1 数据线*1
HDMI线*1 WiFi外置天线*1 说明书*1
保修卡*1 合格证*1

面板示意图



白灯亮起-计算机处于开机状态/工作状态
白灯熄灭-计算机处于关机状态

背板示意图



使用方法:

第一步 开机

连接电源适配器, 将HDMI线的两头, 分别插入主机HDMI端口与显示屏的HDMI端口, 短按开机按钮, 启动计算机。

注意:

1.如果显示屏有多个HDMI端口, 请在打开显示屏的时候, 用遥控器选择需要接入的HDMI信号。比如您将HDMI线插入到显示屏的HDMI2端口, 那么此时就需要用遥控器选择HDMI2作为信号输入源。

2.开机时请优先选择系统及屏幕推荐的分辨率。

第二步 设置

启动计算机过后, 请根据页面提示进行设置。

鼠标及键盘连接方法:

- 1.将插头插入USB接口, 可以连接有线键盘或者有线鼠标进行操作使用;
- 2.将接收头插入USB接口, 可以连接蓝牙键盘及蓝牙鼠标进行使用。

Bluetooth连接方法:

鼠标左键点击显示设备右下角 按钮, 在弹出界面里鼠标右键点击蓝牙 进行蓝牙设置, 在设置界面将开关点击到ON 进行蓝牙搜索, 选择蓝牙列表里你要连接的设备, 按照提示操作进行连接。

Wi-Fi连接方法:

鼠标右键点击显示设备右下角 , 在弹出wi-fi列表中选择你要连接的网络, 输入密码进行连接操作。

第三步 帮助与支持

假如您对操作系统有任何疑问, 请查看Windows帮助及支持文件。若要查看帮助及支持文件, 请按 键 +F1。您可以在本机上阅览Windows帮助及支持文件。此外, 您也可以点击浏览更多内容选项下的链接, 获得在线帮助及支持。


MP-100 Mini PC User Guide



Product List


MP-100 Host Computer	1pcs	Power supply adapter	1pcs
Data cable	1pcs	HDMI cable	1pcs
External WiFi antenna	1pcs	User manual	1pcs
Warranty card	1pcs	Product certificate	1pcs

 Panel Diagram



The white light being on—The computer is booting or operational.
The white light being off—The computer is powered off.

 Panel Diagram



③ USB3.0 port	④ USB2.0 port	⑤ Power supply port
⑥ HDMI port	⑦ TF card port (supporting 128GB expansion)	⑧ Headphone Jack
⑨ External WiFi antenna		

HOW TO USE:

Step One: Booting

Connect the power supply adapter and plug both ends of HDMI cable respectively into the HDMI interfaces of the host computer and the display, then short press the power button to boot the computer.

Notes:

1.If there are multiple HDMI interfaces on the computer display, use the remote control to select the HDMI signal to be input when opening the display. For instance, if you plug the cable into the HDMI2 interface, you need to use the remote control to select HDMI2 as the input signal source.

2.When booting please take a priority selection of the resolution recommended by the computer system and display screen.

Step Two: Configuration

Configure the computer as per the page prompts after booting.

Connections of mouse and keyboard:

- 1.For a wired keyboard or mouse, insert its plug into the USB interface directly.
- 2.For a Bluetooth keyboard or mouse, insert its receiver plug into the USB interface.

Bluetooth connection:

Use the mouse left button to click on the lower right corner of the displayed devices, then click in the pop-up menu using the right button to initiate the Bluetooth configuration interface, and next click ON to start Bluetooth search and connect the device you want to connect in the Bluetooth list as per the instructions.

Wi-Fi connection:

Use the mouse to click on the lower right corner of the displayed devices, select the network you want to connect in the pop-up Wi-Fi list, then input the password for connecting.

Step Three: Support and Help

You can refer to Windows help and support docs if having query about the operating system. Press and F1 together for checking out the support and help docs. You can go through them in your local host or get online support and help through clicking the links under the option of "For more content".

MP-100 Mini PC User Guide



FCC Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

MP-100 Mini PC User Guide



Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. such modifications could void the user's authority to operate this equipment

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The distance between user and products should be no less than 20cm