



MZI




Wireless Digital Speaker



Setup Guide


www.ggmm.com

Designed by GGMM California • Hong Kong • Shenzhen

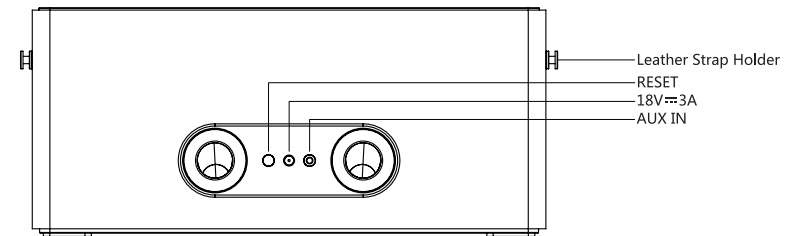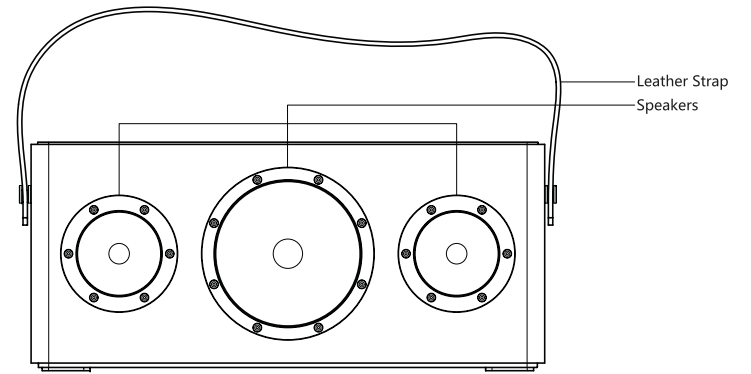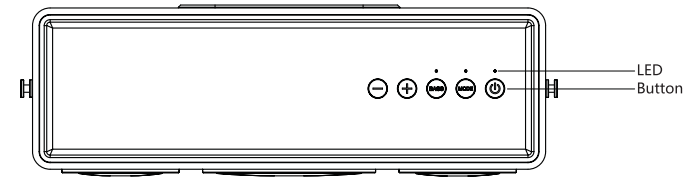

Product list

M4 + leather strap + power adaptor + AUX audio cable + setup guide + warranty card

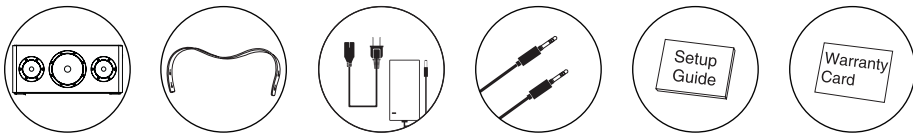




Product Diagram

Button Functions :

	POWER	Press and hold down for 3 seconds to power ON/OFF. Short press to detect the battery level
	MODE	Choose audio input: Wi-Fi/Bluetooth/Aux
	BASS	Increase bass
	+	Volume +
	-	Volume -



LED :

POWER		LED status	Blinking light	On	Flashing 4 times	Flashing 3 times	Flashing 2 times	Flashing 8 times
		Charging status	charging	Charging finished	Battery capacity 75%~100%	Battery capacity 50%~75%	Battery capacity 25%~50%	Battery capacity lower than 25%
MODE		Wi-Fi Mode (Pink LED is booting Wi-Fi mode)		Blue LED on : Wi-Fi Connection ready			Red Flashing : Wi-Fi failed connection	
		Bluetooth Mode		White On : Bluetooth connection OK		White slow flashing : Bluetooth waiting searching		White quick flashing : Bluetooth auto pair the latest device
		AUX Mode		Green On				
BASS		ON: Bass adding effect				OFF: No bass adding effect		

Please Note: Power must be ON to check the battery status.

Setup Guide

Step 1: Take out M4 and accessories, press and hold down the power button for 3 seconds to turn the speaker on. If you find the battery capacity is low, please connect the power adaptor to charge the device.

Step 2: Press the MODE button to choose the music source (Bluetooth→Wi-Fi→AUX).

Wi-Fi Mode

Press MODE button - the MODE LED will flash Pink for 3-5 seconds, then change to BLUE flashing; it is now in Wi-Fi Mode.

Please Note: Avoid using the speaker in a complicated public Wi-Fi network environment (e.g., office, airport and hotel), as this may lead to an unstable connection (play buffer, connection failure, etc.)



Two modes are available to play music wirelessly with M4: Router Mode (Standard Mode), Direct Mode (Optional Mode).

Router Mode (Standard Mode): Router Mode is recommended in a Wi-Fi environment, in which both local and online music can be played. Once Router Mode is successfully set, all devices (e.g., your smart phone, tablet PC, PC, MAC, etc.) within the same Wi-Fi network can directly share the network without having to repeatedly log in and out.



Direct Mode (Optional Mode): Use Direct Mode in a non-Wi-Fi environment. Wireless local music play can be realized after successful point-to-point connection, but streaming from online sources it will generate cellular mobile network data flow.



Router Mode (Standard Mode)


For iOS users: Search GGMM Music in App Store. Complete Router Mode setup by following the step-by-step prompts in GGMM Music App

For Android users: Search GGMM Music in Google Play. Complete Router Mode setup by following the step-by-step prompts in GGMM Music App



GGMM MUSIC

For Mac OS users: Please visit www.ggmm.com to download setup instructions, after setup is complete, use iTunes to push music. When using other music players, you may use AirPlay to wirelessly play your music.

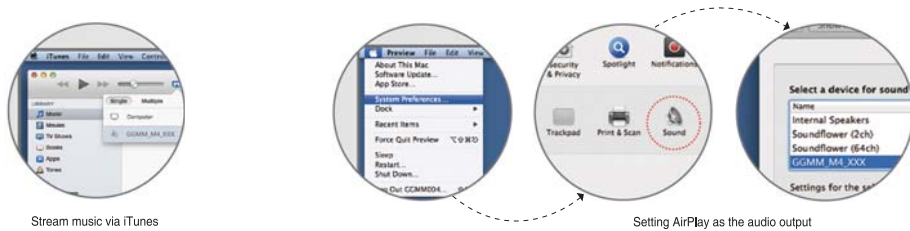

For Windows PC users: Please visit www.ggmm.com to download setup instructions.

FCC Note:

All other devices shall bear the following statement in a conspicuous location on the device:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

IC Statement:

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Déclaration IC:

Cet appareil est conforme avec Industrie Canada exempts de licence standard RSS (s). Son fonctionnement est soumis aux deux conditions suivantes:

- (1) ce dispositif ne doit pas causer d'interférences nuisibles et
- (2) cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un mauvais fonctionnement de l'appareil.

03 English


Direct Mode (Optional Mode):

Boot your device (smart phone, tablet PC, PC, MAC, etc.) and then enter Wi-Fi settings. Enable Wi-Fi and connect to the network marked as "GGMM_M4_XXX". After connection, users with different operating systems may operate according to the steps below:


▲ **Please note:** After the successful connection of iOS device, a symbol "✓" will appear in front of Wi-Fi signal icon and Wi-Fi icon will no longer appear on the status bar.

For iOS users: No need download any APP. You can operate directly with AirPlay®

For users with system version above iOS 7.0:

To play music wirelessly, slide the screen from bottom to top with your finger to enable AirPlay  and then select GGMM_M4_XXX.

For users with system version below iOS 7.0:

 
To play music wirelessly, double click Home button and find the AirPlay icon  in the leftmost multitask bar, and then select GGMM_M4_XXX.

▲ **Please note:** Turn up the mobile phone or tablet PC in priority when wirelessly playing music.




Setting AirPlay Choose GGMM_M4_XXX


For Android users: No need to download any APP. Please use the "Cast" button in the built-in music jukebox of your smart phone or tablet to wirelessly play your music.


(SAMSUNG as example) 




Setting DLNA, Choose GGMM_M4_XXX

(HTC as example) 

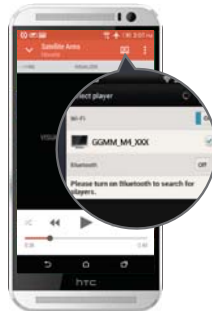

(SONY as example) 

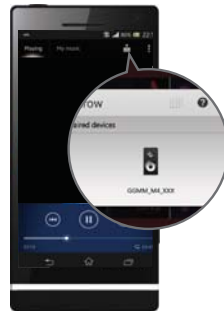


Android users: May also use a third party DLNA® music player. The following recommended players can be downloaded in the Google Play store or other Android application markets.

▲ **Please note:** If the built-in media player doesn't work due to the difference in phones or application versions, please use a third party DLNA music player.

English 04

For Mac OS users: ● Use iTunes to push music ● When using other music players, you may use AirPlay to wirelessly play your music.

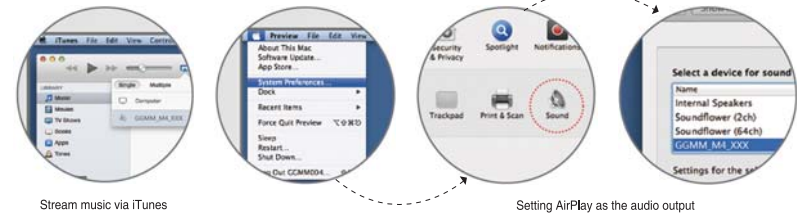

For Windows PC users: Please go to GGMM's official website www.ggmm.com to download a dedicated music player.

Bluetooth Mode:

Press MODE button - the MODE Led will flash white and Bluetooth Mode is now on.
In your device settings, turn Bluetooth ON. Connect to 'GGMM-MUSIC' open your music player and press play. (iPhone as example)



AUX Mode:

Press MODE button - the MODE Led will turn green, and it is now in AUX Mode.
Connect your device to the speaker with the aux cable, open your player and play your music.

Multi-room Play

▲ **Please Note:** "GGMM MUSIC" APP is required to set up.


Multiple M4 units can be connected in Wi-Fi mode; you can also set up multiple M4's in different rooms to play the same music.



Setting up M4 L/R channels

▲ **Please Note:** "GGMM MUSIC" APP is required to set up.

When you use two M4 units in Wi-Fi mode, you can set up the M4 as individual 'L' (left) channel and 'R' (right) channel to get wider range of the stereo effect.

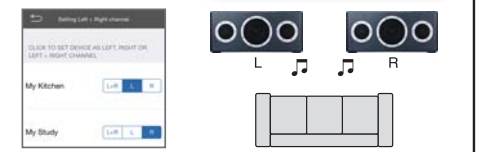

▲ **Please Note:** For more information about the M4, please visit our website at www.ggmm.com

AirPlay®: Please go to Apple's official website <http://www.apple.com/airplay> for more information.

DLNA®: Please go to <http://en.wikipedia.org/wiki/DLNA> for more information.