

Quick Start Guide
Miracast Dongle

Package List:
Miracast dongle 1pc
Quick Start Guide 1pc
5V/1A power adapter 1pc

System Requirement:

1. TV Set with HDMI port
2. USB power output on TV set or other USB power adapter
3. The mobile device supports Miracast

Quick Start:

1. Insert MiraVision to TV HDMI port and connect USB power line from TV USB port or USB power adapter.



2. Switch on TV set and choose the corresponding HDMI signal source, MiraVision device name and MiraVision status will be played on TV screen as

“WFD_DONGLE_XXX XXX”



3. To start miracast, from your mobile device set menu/display/wireless display, open wireless display and search for MiraVision device name, choose it and wait the connection until Miracast “connecting...” is displayed on the TV screen;



4. When the connection is successful, the display of mobile device will be copy to TV screen

synchronously.

Troubleshooting:

1. When no image is displayed on TV screen, please check:
 - ①. If MiraVision USB power is available.
 - ②. If the current HDMI input signal source is choosed..
2. Any error happens when Miracast connects, you can disconnect USB power line and retry to connect MiraVision.
3. when the display size have not matched on TV screen well,adjust the display length-width ratio to the proper parameter.

FCC RF Statement.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.

Note: The minimum separation distance is 5mm for the normal using.