



Retro Bluetooth Speaker with FM Radio

CCSR2



- OPERATING INSTRUCTIONS -


SAFETY PRECAUTIONS

- * Please protect the unit and accessories well. Please use them under the clean environment.
- * Do not expose the unit in the raining or moist environment.
- * Do not throw or trample the unit.
- * Do not use the unit near any heat source such as stove, radiators or any apparatus that can produce heat.
- * Please turn off the unit before cleaning it. Please clean the unit only by using the soft anti-static dry cloth.
- * When the unit is charging or under normal operation, it will become a little hotter, which is a normal phenomenon.
- * Please do not disassemble the unit and repair it by yourself.
- * Do not insert any metallic object into the unit.

We certify that the power supply is used as a device for disconnecting the power distribution network, which should stay easily accessible.

	<p>CAUTION</p> <p>RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	
---	--	---

LOCATION OF CONTROLS

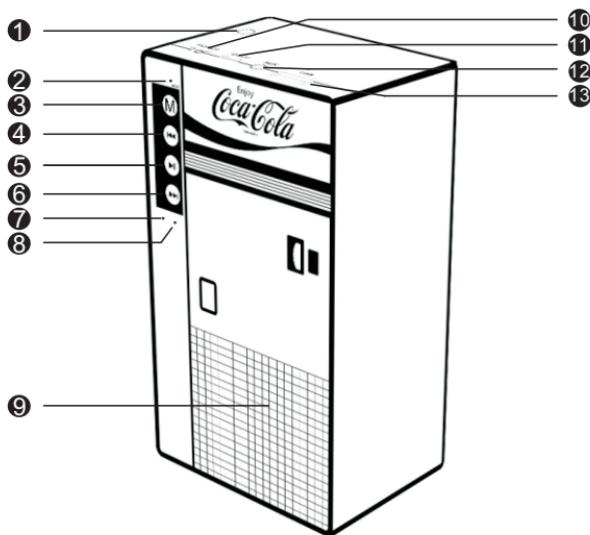

1. Antenna	8. Mode LED Instruction light
2. MIC	9. Speaker
3. Mode	10. Power ON/OFF
4. PREV/VOL-	11. Micro-USB Charging Port
5. Play&Pause	12. AUX
6. Next/VOL+	13. USB
7. Charging LED Instruction Light	

PREPARATION FOR USE

1. Carefully unpack the Main unit from its carton (do not attempt to connect anything at this stage).

You should have the following items:

Packing included

- 1). Manual Book
- 2). Main Unit
- 3). Charging Cable
- 4). AUX cable

If any of these items are missing, consult your dealer. Keep any packaging in case you want to transport the main unit at some later date.

2. Pull the Power ON/OFF Knob to the ON side to turn on the unit.
3. Check that your Bluetooth features are turned ON. If you have already paired the speaker with a Bluetooth enabled device, it will automatically connect.
4. If you are using the speaker for the first time, go to the “BLUETOOTH CONNECTIVITY” section of this User Manual, and pair the speaker to your desired Bluetooth device.

BLUETOOTH CONNECTIVITY

1. Power on the unit. The unit was set on Bluetooth mode, and along with voice prompt: Bluetooth Mode.

Shortly press MODE key also can switch into bluetooth mode.

2. The Mode LED light is quickly flashing in blue before connected.
3. Set your Bluetooth enable device to search for Bluetooth devices.
4. When the Bluetooth enable device finds the Speaker, select CCSR02 from the list of the found devices.

If required, enter the password 0000. Select OK or Yes to pair the two units.

5. After a successful pairing, the Mode LED light will be slow flashing.
6. Shortly press PLAY/PAUSE key to pause or play; Long press this key to pair a new device.
7. Shortly press NEXT & PREV keys for next or previous song playback.
8. Long press VOL+/VOL- keys for volume adjustment.

FM INSTRUCTION

1. Power on the unit.
2. Shortly press MODE key to switch into FM mode, along with voice prompt: FM Mode.
3. Pull up the antenna of the unit.
4. Long press PLAY&PAUSE key to scan stations automatically; Shortly press PLAY&PAUSE key to mute sound.
5. Shortly press NEXT&PREV keys for next or previous station playback.
6. Long press VOL+/- keys for volume adjustment.

USE USB FUNCTION

1. Power on the unit.
2. Insert USB device, the unit will switch into USB mode automatically and play it.
Shortly press MODE key also could switch into USB mode, but ensure USB device has been already inserted.
3. The Mode LED light is slow flashing during USB device playback; it will be solid blue if USB device is undetected.
4. Insert your USB flash disk. Now users can enjoy their favorite songs. Songs could be in MP3, WMA format.
5. Shortly press PLAY/PAUSE key to pause or play.
6. Shortly press NEXT & PREV keys for next or previous song playback.
7. Long press VOL+/- keys for volume adjustment.

AUX-IN OPERATION

1. Power on the unit.
2. Plug one end of the 3.5mm Auxiliary cable into an external device's headphone port, and the other end into the AUX port on the top side of the speaker, the system will switch into AUX mode automatically.
Shortly press MODE key also could switch into AUX-IN mode, but ensure an external device has already connected to the speaker by AUX cable.
3. The Mode LED light is solid blue under AUX-IN mode.
4. Shortly press PLAY/PAUSE key to mute sound.
5. Long press VOL+/- keys for volume adjustment.

Power Charging

The charging LED light will be slow flashing when unit was in low power status. It means which built-in battery was in low power and need to make power charging.

During power charging, red light is solid red and after power charging finished, red light will be off automatically.

TECHNICAL SPECIFICATIONS

Power Charging Supply:	5V / 500mA
Power Consumption:	3W
Audio Output Power:	3W x 1
FM Frequency:	87.5~108 MHz
Bluetooth Version:	JL 4.2
Bluetooth profiles:	A2DP, AVRCP, HFP
Bluetooth range:	Line of sight, 10M or 30FT
Lithium Battery Capacity:	1200mAh
Unit Size:	140x80x55 mm

DETAILS AND PRECAUTIONS ON THE USE OF BATTERIES

- Discard a used battery in nature or garbage pollutes and prevents the recovery of recyclable materials.

It is therefore important to limit consumption of batteries and follow these guidelines:

- focus on alkaline batteries (that last longer than the saline batteries) and when possible, rechargeable batteries
- deposit batteries and accumulators in specific containers arranged among traders.

For example, metals will be valued and polluted the environment because they contain heavy metals hazardous to health and the environment primarily (cadmium and nickel)

- The piles must installation by respecting the polarity indicated on the apparatus and the pile.

An incorrect positioning can is to damage the apparatus, is to cause escapes on the level of the pile, is to the extreme to cause a fire or the explosion of the pile.

- To ensure proper operation, the batteries must be in good condition. In case of abnormality in the functioning of the device, put fresh batteries
 - Never attempt to recharge non-rechargeable batteries. They could run, warm up, causing a fire or explosion.
 - Replace all batteries at the same time. Never mix zinc batteries with alkaline batteries or rechargeable batteries
 - The batteries must be removed from the device
 - Also, remove the batteries from your device if you do not use it for a long time, if the batteries may leak and cause damage.
 - Never try to short-circuit the battery terminals
 - Never dispose of batteries in fire, they might explode
 - Charging of batteries is to be performed by an adult.
 - Remove batteries from the device before reloading.
 - We recommend an adult to supervise children when they change the batteries so that these instructions are complied with or to make himself the replacement of batteries.
 - If a battery is swallowed, immediately consult a doctor or poison control center nearest you.

Do not forget to carry the product with you.

TROUBLESHOOTING TIPS

Before contact with the repair person, you should check the problem reason follow the instructions.

I can pair the Bluetooth Speaker with my Bluetooth device, but I cannot hear any music.

1. Make sure your Bluetooth device supports A2DP profile.
2. Turn up the volume on your Bluetooth device.
3. You may have to unpair the speaker, then re-pair to your device.

My Bluetooth device is not able to pair with the wireless speaker.

1. Turn the speaker ON. A tone will be heard and the LED indicator light will quickly flash BLUE.
2. Keep your Wireless Stereo Speaker and Bluetooth enable device within 3 feet of each other during the pairing process.
3. Check that YOUR device's Bluetooth feature is turned ON.

I cannot get the wireless speaker into pairing mode.

1. Turn the speaker ON. A tone will be heard and the LED indicator light will quickly flash BLUE.
2. A tone will be heard and the LED Bluetooth indicator light will quickly flash BLUE.
3. The speaker is now in pairing mode.

Warning: changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body or nearby persons.