



Bluetooth Vibration Speaker with Microphone

Output power: 10W

S/N: 78dB

Frequency Response : 20Hz-20 KHz Power supply: USB DC5V or USB power

Li-ion Battery: 3.7V 800mAh

Impedance: 20hms

Key Features: Bluetooth, Mircorphone, 3.5MM audio input, Touch keys.

Size: Ø60*64MM

Features:

- Using vibration resonance, Vibration speaker transforms any solid surface to produce sounds, it's a full spectrum omni-directional speaker, delivering 10 Watts of sound with super heavy bass.
- Work time: 1.5 hours, based on full blast.
- Charging time: 2.0 hours, based on adapter of 5.0V/1.0A.
- Connect wirelessly to any Bluetooth enabled device or via the standard 3.5mm audio socket on any audio player.
- Works with Android or Windows Mobile Phones, Tablets, Notebooks, Projectors or any electronic gadget that plays sound or music.
- Two-way communication between speaker and a Bluetooth phone.

Charging - Important:

Before using the speaker for the first time, the battery needs to be fully charged. Please turn the switch to the "OFF" position and then connect one end of the USB cable to the mini USB socket and the other end to the USB socket of a PC, laptop or USB wall charger. When charging, the bottom LED turns red .The battery will be fully charged in about 2 hours and the LED will turn blue. When the upper indicator light of the top is a flash red or volume is weak, it means the battery needs to be recharged. Follow the charging instructions above.

Operation:

- Remove the protective film from the bottom of the speaker whilst leaving the gel attached to the speaker. Re-apply the
 protective film when not in use. To clean the gel, use a wet cloth to gently remove any dirt. Do not get water into the
 speaker.
- Your speaker will work by placing it on a clean surface within a room for the application you intend to use the speaker for
- Lightly press the top of the speaker to achieve a better connection between the gel and the sound surface.
- Connect the cable according to the Instructions below or pair the speaker if using a Bluetooth connection.

Playing Music in Bluetooth Mode

- 1. Turn the Speaker ON by sliding the ON/OFF switch to the ON position. When the upper indicator light of the top flashes blue, it means the unit is ready to "pair" and is waiting for phone and speaker to connect. Activate the Bluetooth function of the phone and search for a Bluetooth device.
- 2. Select the Bluetooth device named "Valore-BTS309" and tell it to "pair". If the phone requests you to enter a password, please enter "0000" and confirm the connection. After the phone shows "Connection successful", the LED will stop fast flashing and will turn slow flashing. You can now play music from your Music player. (For some phones, it will show "Connection failed", don't worry, it may actually have connected, so try playing music. If you cannot play music, retry" paring" the phone to the speaker.)

Playing Music in Line in Mode

- 1. Connect the 3.5MM audio input plug to the unit, and then insert the other side of 3.5mm plug into the audio output socket of the music source, such as a mobile phone, projector, laptop, MP3 player, CD/DVD etc.
- 2. Turn on the unit by sliding the switch to the "ON" position. The upper indicator light of the top will turn steady blue, play music from your audio player.

Usage of function key under different mode

	< <th colspan="2"></th> <th colspan="2">>> /V+</th>				>> /V+	
	Touch momently	Touch and hold	Touch momently	Touch and hold	Touch momently	Touch and hold
Bluetooth	Previous	Volume down	Pause/Play, answer/end the phone	Disconnect with Bluetooth	Next	Volume up
LINE IN	N/A	Volume down	N/A	N/A	N/A	Volume up
LINE IN and Bluetooth	N/A	Volume down	Switch mode between Bluetooth and Line in, answer/end the phone	Disconnect with Bluetooth	N/A	Volume up

Remark:



1. When the mobile phone is ringing, touch momently to answer the call, and speak through the Microphone.

momently again to end the call, then the speaker will go on with playing the music.

2. When touching the function key, the other LED light will turn blue to indicate that your touching is efficient.

Warm Reminder:

- 1. When you increase the volume to the maximum, you will hear a warning voice.
- 2. When you touch the key successfully, the below indicator light of the top will turn blue.
- 3. It is normal for the speaker to get slightly warm after prolonged use or high volume usage.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation