



## SONTE RF Specifications

SONTE RF is the power supply specially for SONTE Film and SONTE Glass with 2 separated wireless controlled outputs. It can be paired by SONTE Remote. After getting paired successfully, the two outputs can be independently controlled.

### CAUTION

- Please use and store this product at room temperature
- Do not expose this product to rain or wet conditions
- Do not throw and drop this product to avoid product damage
- Do not self-dismantling, repair and transform the product
- Do not overload the use of this product
- This product is in working condition, please placed in children can not touch

### Technique Parameters

- Part No: STRF2008
- Input voltage: 100VAC -120 VAC/220VAC-240VAC
- Output voltage: 60VAC $\pm$ 10%
- Output Power: 40W
- Frequency: 50/60 Hz

### Product Parameter

- Product Spec: 144mm (L) \*100mm (W) \*62mm (H)
- N.W: 1.15Kg
- Color: Silvery White

### Product Features

1. The input interface adopts a separate type structure, different countries use interface line corresponding use
2. Output using can change the interface, is beneficial to the output line extension and installation
3. Power output of 40W, to meet the power demand of most STF products,
4. Using the RF control mode, avoiding the directional characteristics of the general
5. Pairing method is simple, convenient replacement and installation
6. Two spare output switch, can be output without the use of remote control
7. Using aluminum alloy shell. Increase the mechanical strength of the products. Is conducive to heat consumption



## Standard Accessories

RF Transformer	1pcs
SONTE Remote	1 pcs
1.5M Plug wire	1pcs
3M Cable	2pcs

## Pairing and cleaning

### Pairing:

Disconnect power for 5s, and then connect again, press “1” for 5s, release, after 5s later, the SONTE Remote will work normally, “1” controls Channel 1, “2” controls Channel 2, press “ON”, two channels will be turned on, press “OFF”, two channels will be turned off.

### Cleaning:

Disconnect power for 5s, and then connect again, press “OFF” for 20s, The SONTE Remote will disconnect with this RF Transformer.

## Warranty

1. The product is warranted for 12 months from date of purchase for mechanical and electrical defects. During 12 months, repair of defects will be free of charge, except insurance, handling, transportation and incidental charges
2. Wear and tear, shipping or damaged, misused, mishandle or compatibility is not cover under the warranty
3. All of the following conditions are not eligible for the warranty:
  - A. Damaged from all man-made factors, including non-normal working environments, or damage caused by the controller and such failures
  - B. Privately dismantle, self-repair, modification made on the product
  - C. Damages caused by natural disaster (such as floods, lightning, earthquakes, abnormal voltage)
  - D. Used old condition, wear and tear, rust, or disseminated
  - E. Doesn't belong to the company's products (such as counterfeit goods)
  - F. Damages caused by transportation after purchasing
  - G. Does not produce a valid proof of purchase issued by authorized dealers, no warranty card presented
  - H. The warranty or QC seal is removed, defected or altered

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, SONTE Limited

[www.sonte.com](http://www.sonte.com)



may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

## **Caution!**

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.