

The Wireless CD Player

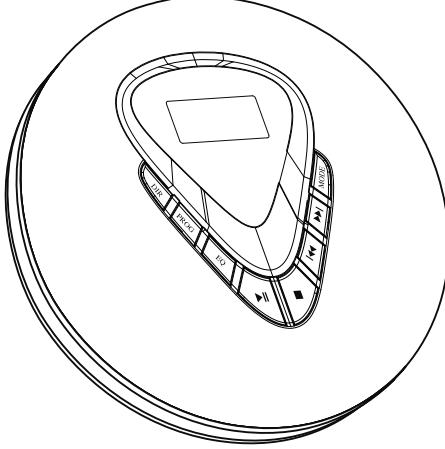

► User Manual



► CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01
PACKAGING & PRODUCT	03
What's in the box	03
The CD player	03
TROUBLESHOOTING	04
USER GUIDE	05
Insert a disc	05
Insert an earphone	05
Turn on the player	05
Turn off the player	06
Charge for the player	06
PLAY	07
How to setup the circle mode	07
How to program the play	07
How to play MP3 disc	07
How to setup sound	07
OTHER FEATURES	08
Time setting of screen sleep	08
Key lock	08
Last memory	08
Connect to AUX devices	08
SPECIFICATIONS	08

IMPORTANT SAFETY INSTRUCTIONS

Please read this manual carefully before using this player and keep it for later reference.

Warning:

The player

To reduce the risk of fire or avoid the damage to the human body, please follow the instructions below:

1. If the player fails to work, please contact our after-sales staff in time, professional technical support staff will provide you with detailed answers.
2. The player can not be used or stored in moist environment, please keep the player away from any liquid, steam or vapor, such as rain drop, mist etc.
3. Please do not place any liquid or metal gadgets onto the player, such as pin or a cup of coffee.
4. Please do not expose the player to the sunlight and keep it away from fire heater. The player can not be placed under high temperature environment.
5. All professionals with extensive electronic knowledge and maintenance experience are allowed to disassemble the player for maintenance. The replacement of spare parts must be done in strict accordance with the parameters of the circuit design.
6. Please do not stick or hit the player with sharp objects.
7. There are light emitting diodes in this player, staring directly with eyes should be avoid to prevent visual impairment from being caused.
8. Children under 12 years is not allowed to use the player individually.

Battery

If the player you purchased contains batteries, please do not disassemble the player or charge the player with other adapters that do not meet the electrical parameters of this product to avoid circuit failure. For your safety, please treat the built-in high-capacity polymer lithium battery by following the instructions below:

1. Please do not remove the battery pack.
2. Please do not beat or impact this player.
3. Please do not make the battery short circuit or pierce it.
4. Please do not place the player under high temperature which is above 140°F (60°C).
5. Please do not put the battery in a fire.
6. If the battery has been damaged, please ask a professional to replace the battery with same specification, or contact our after-sales support for help.

Hearing protection

Listen at medium volume:

Please adjust the volume to an appropriate level. If the volume is too high, it may damage your hearing or even cause a permanent damage.

Set the volume to a low level:

Increasing the volume slowly, until a comfortable, clear sound can be heard.

Listen to the audio within a reasonable time frame:

Long time listening, even at a reasonable volume may cause damage to your hearing. Please use the product properly and get a rest when necessary.

Environmental protection

To protect the environment and human health, please follow local laws and regulations on the abandon of the package, electronic product or battery. Please do not put the product together with household waste.

How to connect with Bluetooth device?

1. Open the unit door by pushing down on the door button.
2. Place the CD Disc or MP3 Disc (label side up) onto the spindle until it snaps into place. Once you have placed the Disc properly, close the unit door.
3. Turn on the Bluetooth device you want to connect. (NOTE: Please make sure there's only one Bluetooth device within 10 meters. If there are other Bluetooth devices, it would affect the connection, and the player could only connect the most strongest signal Bluetooth device.)
4. In the state of CD playback, press the Bluetooth button 3 seconds to connect to the audio and Bluetooth connection within 10 meters without hampe
5. After connecting, the Bluetooth icon on the screen will stop flashing.

Note:


1. It will take about 20 seconds to connect for the first time. After a successful connection, the second connection does not take that long.

PACKAGING & PRODUCT

What's in the box

1*CD player	1*3.5 to 3.5mm AUX cable
1*USB to Type C charging cable	1>User manual
1*Earphones	

The CD player

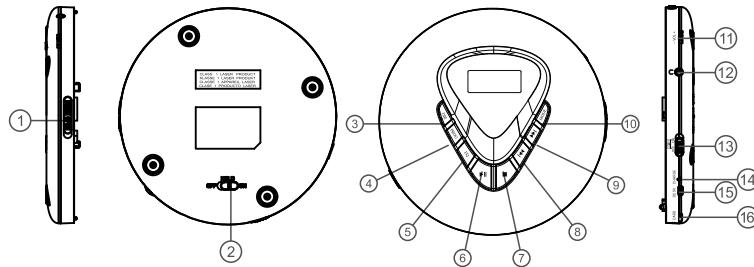

Item	Function	Item	Function
1	Open	9	Next
2	Hold On/Off	10	Mode / Bluetooth
3	DIR	11	Volume Knob
4	PROG	12	Earphone Port
5	EQ	13	Power On/Off Switch
6	Play/Pause	14	Charging LED
7	Stop	15	DC In 5V
8	Previous	16	TF Card

TROUBLESHOOTING

Problem	Reason	Solution
Cannot read discs.	The disc is installed incorrectly.	1. Make sure the label side of the disc is facing up; 2. Ensure the disc is fully into the place.
	The disc is dirty or damaged.	1. Make sure the disc is not heavily scratched or damaged; 2. Wipe the disc gently from the center radically out to the edge with a clean, soft cloth; 3. Try another new disc to check if the disc is faulty.
	The loader is dirty.	Wipe the lens gently with a degreasing cotton swab.
Cannot charge battery.	There is no current at power outlet.	Make sure that the power outlet is worked.
	The plug is not plugged in correctly.	Make sure that the two plugs of the power cord are connected properly.
	The charger is damaged.	Replace the charger with another one match the specification.
	The player is damaged.	Please contact us or ask professional to repair.
The player cannot be turned on.	Switch is not turned on.	Please turn the OFF/ON button on the side to ON.
	The built-in battery is exhausted.	Charge the battery.
	The player is damaged.	Please contact us or ask professional to repair.


USER GUIDE

How to insert a disc

Push the OPEN button to the right to open the door. Insert your index finger into the center hole of the disc and take the edge of the disc with your thumb. Keep the side with words upward while inserting the disc into CD player, press the disc gently to make it steady, and make sure if the disc has been in place. Close the disc door gently and completely, otherwise the player will not read the disc.

Keep pressing "MODE" for 2 seconds to switch to TF card.

(Note: The player is only compatible with CD, CDR, Mp3, HDCD formats.)

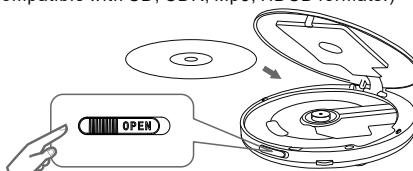


Insert an earphone

Only earphone with 3.5mm plug is compatible with this player. In order to experience better sound quality, you can use standard earphones of an iPhone on the player, but some earphones of cellphone may produce noise. If the earphone cannot be supported by the player, please use standard headphones of this player.

How to turn on the player

The power switch is located on the side. Please toggle it to ON position to play normally. When a disc is played to the end or there is no disc, the player will enter a standby mode after 20 seconds. Please press the PLAY button again to restart the player.

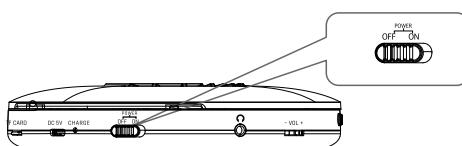


► EN-05 ◀

How to turn off the player

There are two ways to turn off the player:

1. Please toggle the power switch to OFF position if the player will no longer be used for a long time;
2. The player will enter a standby mode by pressing the STOP button twice in succession, but at this time, the power of the player is not completely disconnected.


Note: Please turn the power switch to OFF position if the player will no longer be used for a long time.

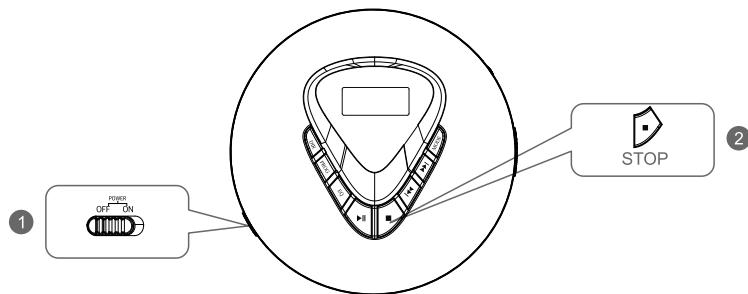

How to charge for the player

How to choose a charger: This product is only equipped with one charging cable. You can choose any charger that supports USB2.0 protocol or standard USB charger of a cellphone running in Android or iOS system to charge for the player.

Charging time: It will take around 4 hours to fully charge the player according to the standard USB2.0 protocol. When the battery is being charged, the LED indicator is red. Once the player is fully charged, the LED indicator will turn green.

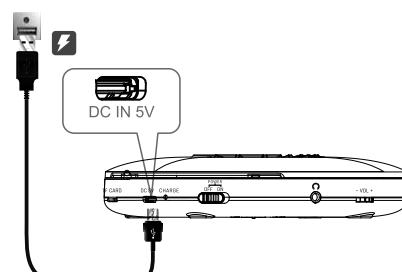

► EN-06 ◀



PLAY

How to setup the circle mode

Each time the MODE button is pressed, the order of the tracks played will be as follows:Repeat 1(REP1), Repeat all(ALL), random play (SHUF), preview play (INTRO) (only 10 second per track will be played in this mode).



How to program the play

Press the PROG button to enter the programming mode when the play stops, press the PREVIOUS or NEXT button to select the track you want to program, press PROG again to confirm the programming. Up to 30 tracks can be programmed in this mode. After that, press the PLAY button to enter the programming play mode. Press the STOP button directly to enter the stop mode to cancel or reprogram.




How to play MP3 disc

Press DIR to choose different folders if there are many folders in some MP3 discs.

How to setup sound

How to adjust volume

The volume knob is located on the side of the player. Rotate it to the left or right to decrease or increase the volume. Please listen to music at an appropriate volume to protect your ears.

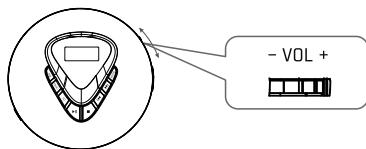

How to setup sound effect

Press the SOUND button to changes the different sound effects. There are a total of 5 sound effects:BBS, POP, JAZZ, ROCK, and CLASSIC.



 
OTHER FEATURES

Time setting of screen sleep

The screen will be turned off after 10 second of inactivity. The screen will be turned on when any button is pressed.

Key lock

After playback mode and sound effects have been setup, you can toggle the power switch to the HOLD position in order to prevent the environment, for example naughty children or crowded occasions from affecting the setting of player.



Last memory

ON: The player will return to the last stop-track on the disc.

OFF: The player will not return to the last stop-track on the disc.

Press and hold the PROG button to turn the last memory function on or off. The ON or OFF word will be displayed on the screen at this time. The last memory function is turned on by default.

ON

OFF

Connect to AUX devices

In order to use this player in different occasions, an extra AUX cable has been supplied to connect this player to any device with AUX interface conveniently, such as: home theater, music center, Bluetooth speakers, vehicles, headphone amplifiers and more.

SPECIFICATIONS

Size	140*28mm	D/C conversion	16Bit
Weight	230g	Sampling frequency	44.1KHZ
Power source	DC 5V/1A Type C Standard	Frequency response	20-20KHZ
Charging voltage	DC 5V/1A	Power output of earphone	16mW+16mW/16-32Ohm
Operating voltage	3.7V	Impedance of earphone	32ohm/16mW
Power consumption	about 1.5W	Supported disc formats	CD,CDR,HDCCD,MP3
Battery	Lithium-ion polymer 3.7V/2000mAh	Shockproof time	CD 100 seconds / MP3 180 seconds or more

FCC Warning Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement.