

# IP CAMERA



## Chapter 1 Features

### NEW

CJ-100 is the latest model developed by SIEPEM, Inc., it is suitable for family, offices and chain store monitoring. It is the latest version.


- P2P (peer to peer) technology, without annoying IP settings simply fill out the ID number can be obtained surveillance video.
- Wi-Fi compliant with wireless standards IEEE 802.11b/g;
- Support Pan/Tilt control up and down, rotation, auto-cruise from different angles (Pan:355° & Tilt:120°);
- Auto IR-LED illumination for night vision (up to 10 metres);
- Nice blue indicator light ;
- Two-dimensional code scanning functions.

## Chapter 2 Installation


### 2.1

- 1) First: connect the camera with hub, switch or router by Cat.5 straight-through cable or cross-over cable with standard RJ-45 interface.
- 2) Second: connect the camera with power supply by the adaptor supplied (DC5V, 2A).

Caution: Please ensure that the adaptor matches with the electricity (Input: AC 100V or 220V, Output: 5V DC/2A).

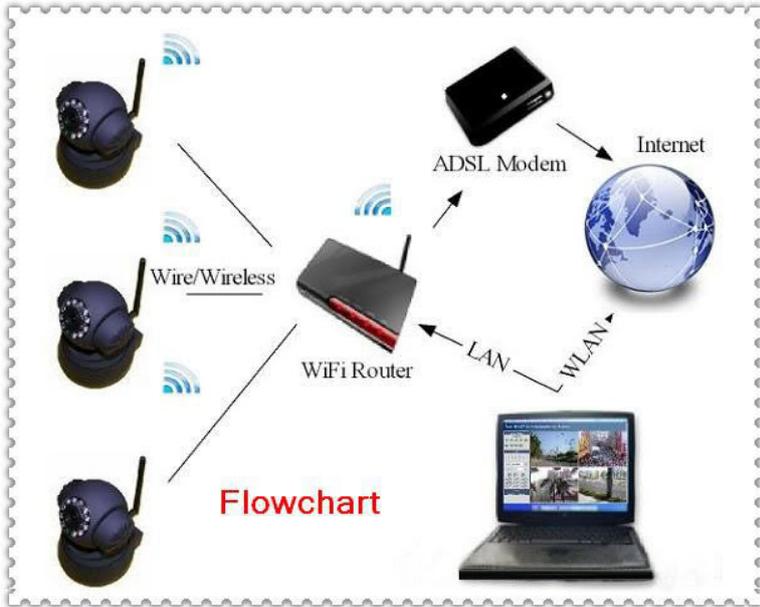

## 2.2 Interface

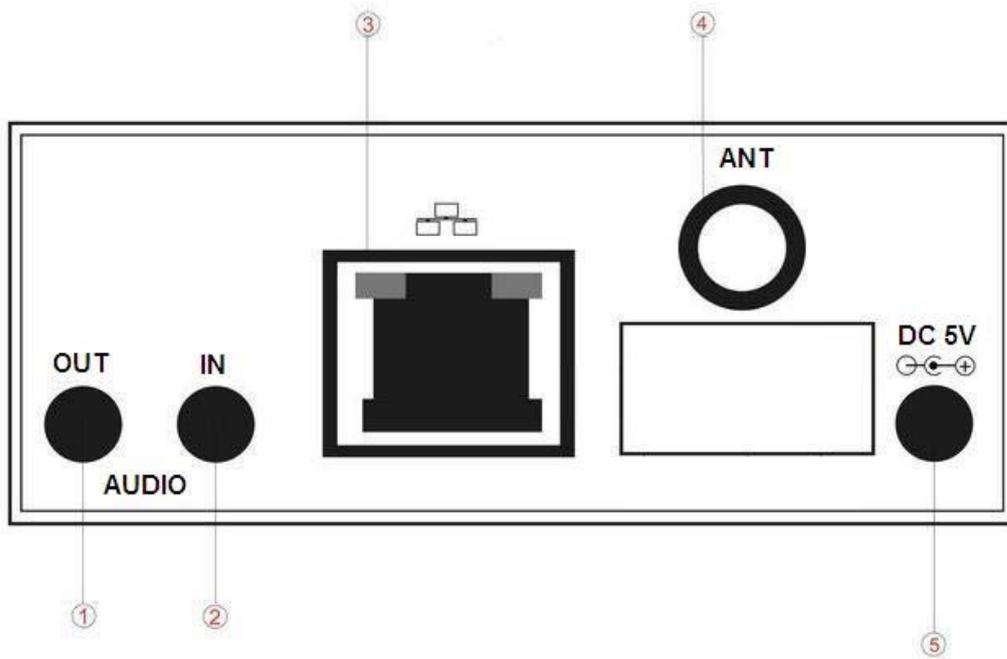

## Chapter 3 Cellphone monitor

3.1 cellphone must be connected to the internet (WIFI/GPRS/3G)

3.2 install software on your cellphone

**Android:** Acquire software from CD.

**Iphone:** Acquire “P2Pwificam” from App Store. You can search for “P2Pwificam”

(This application supports Iphone system that is higher than 4.3 released.)




3.3 Add Camera:


“Add Camera” click “+”

Enable users to edit camera ID, user's name and password setting and the change of equipment alias .


“Scan”Two-dimensional code scanning acquire camera ID.

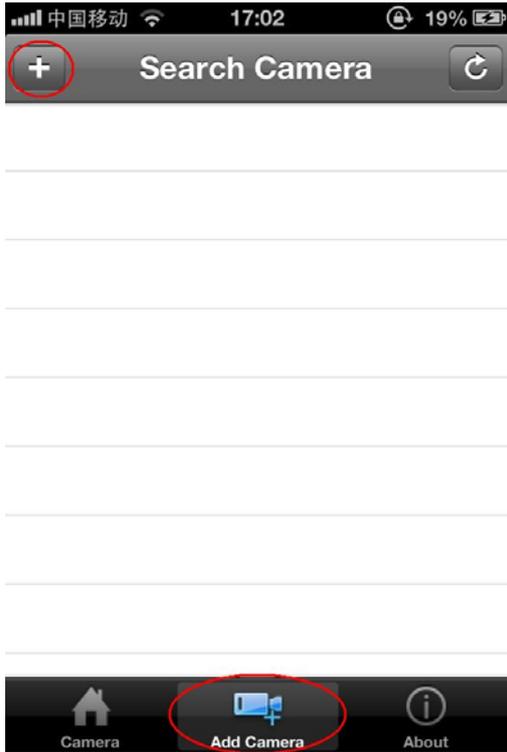

### 3.4 Device list.

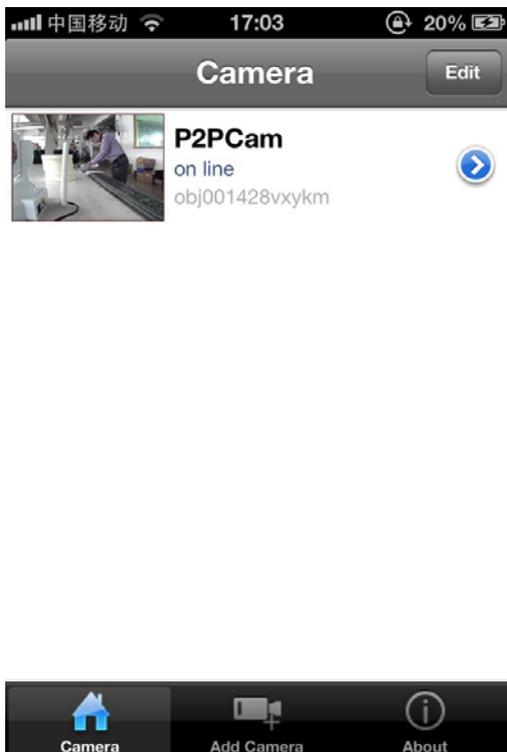

### 3.5 Function:

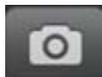

**snapshot**



**speaker/mic ( can not be open at the same time )**



**birghtness/contrast**



**restore the default**



**resolution : VGA ( 640×480 ) QVGA ( 320×240 )**



**ratio**



**cruise**



**Flip /Mirror**




**close**

**touch screen to control PTZ**


## Chapter 4 PC Software Instruction

4.1 Find “**MonitorClient.msi**” in the CD and run it like below pic.

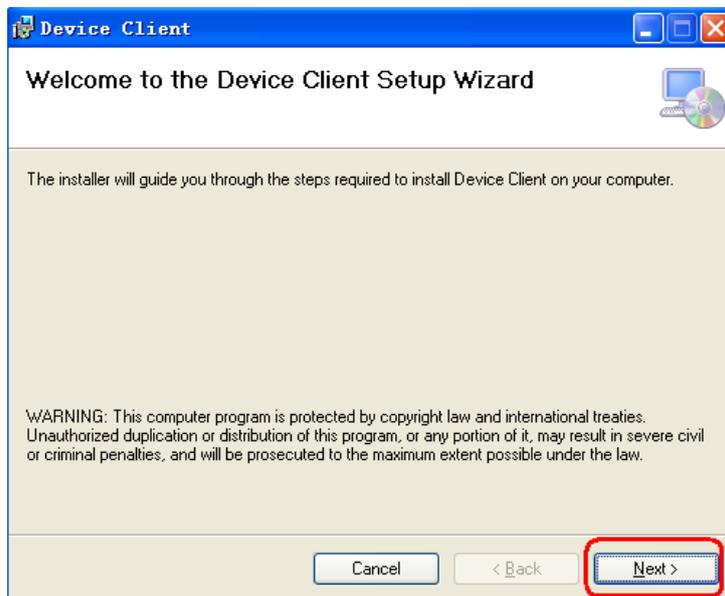


4.2


Click "Browser" to select setup path(default path "C:\Program Files\object\Device Client "),then click "Next" like below pic.

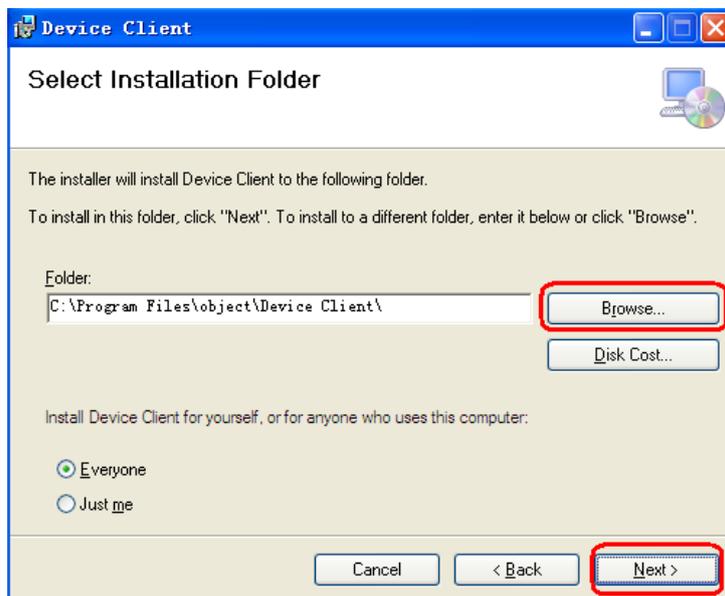


4.3 Click "Next",then go the below pic.

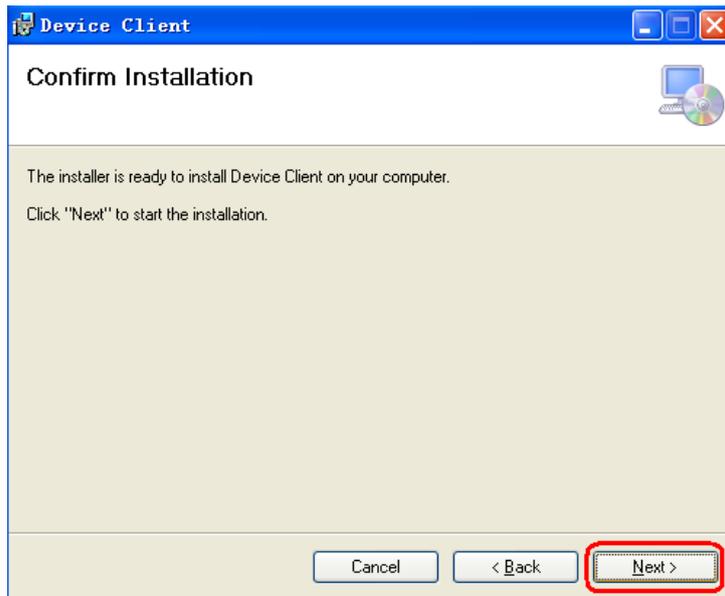


4.4 Click "Finish" to end the setup, at the time it will come up this icon in the desktop

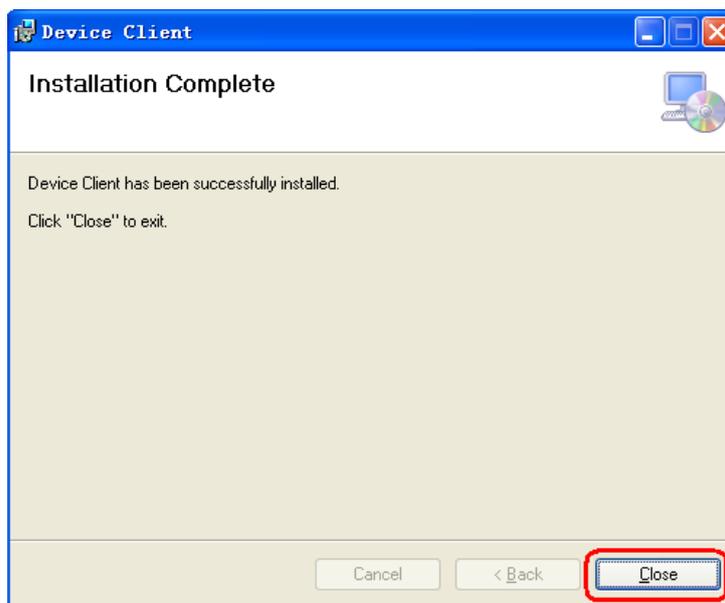


4.5 Click "System—Device list"

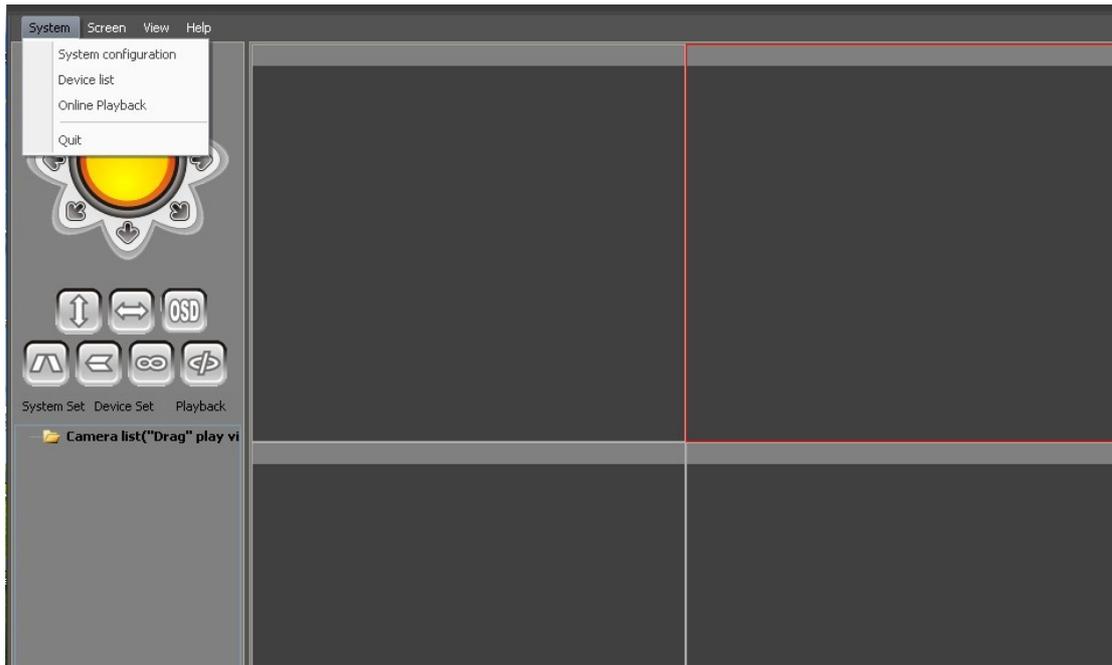

4.6 Add a lan camera :  
Open search tools,click “search”

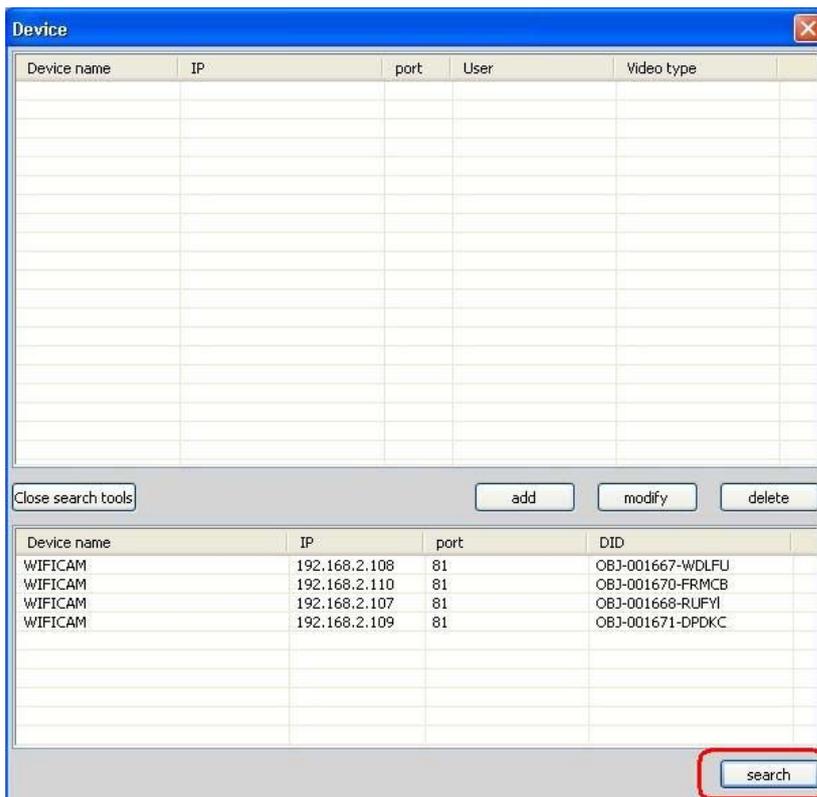



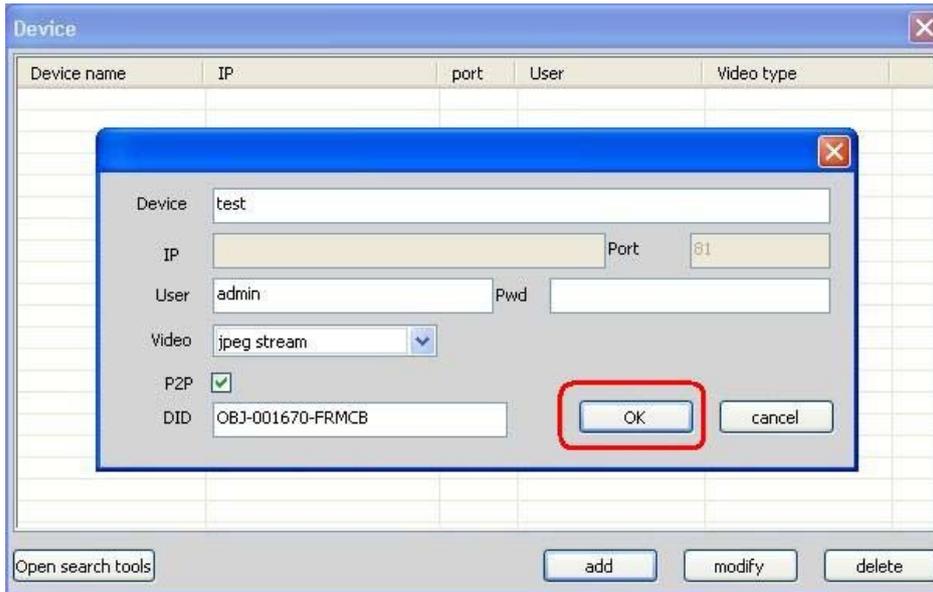

Device: The names of equipment, which can help you identify different devices, for examples, you can type the names based on the location of the equipment.

User: Usually the default is "admin";

Pwd: he default of password is usually as " ",

Video: According to the machine model selection ( model 5030:mjpeg )


P2P:


DID: camera ID ( search in lan )

Click "OK" to end the setup.


#### 4.8 paly Video

**drag ( Device name ) play video**

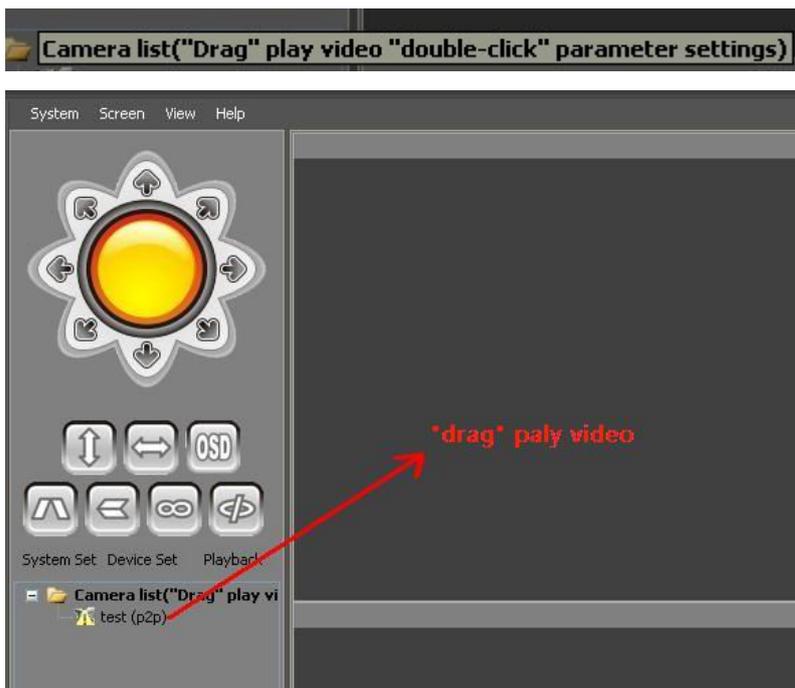

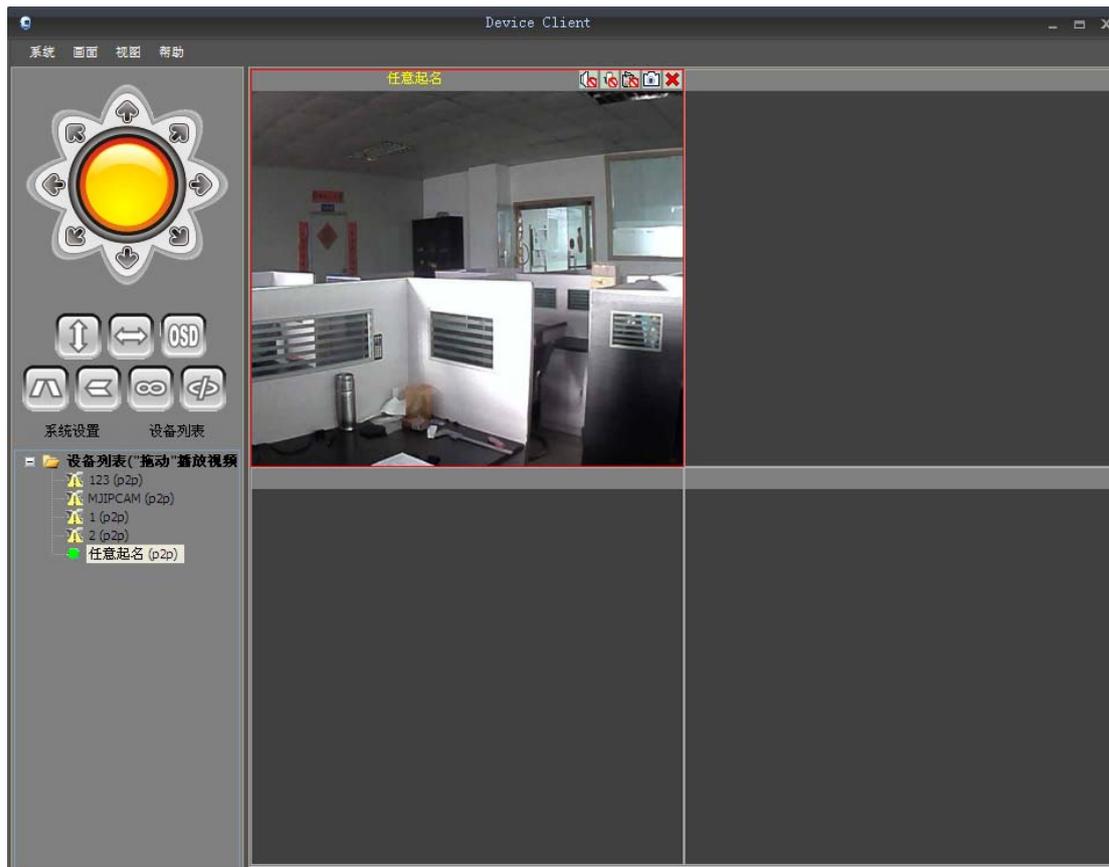

**Note: Select the correct video stream , For example :MJPEG**


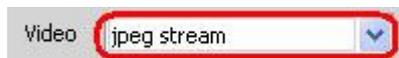


#### 4.9


-  **Speaker** ( For audio ip camera only )
-  **Mic** ( For audio ip camera only )
-  **record**
-  **snapshot**



#### 4.10 “System—System configuration”.

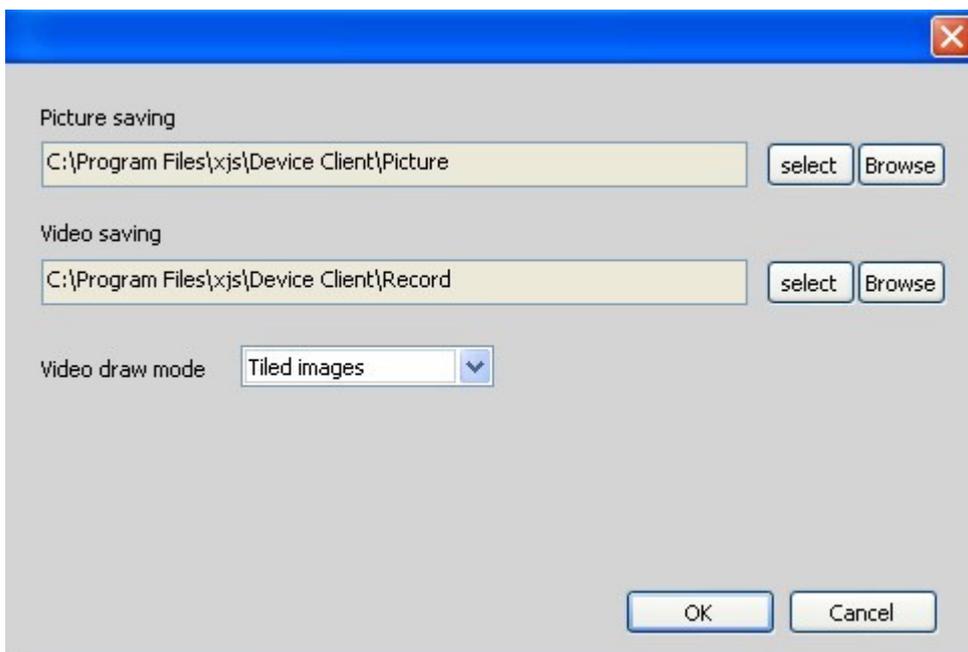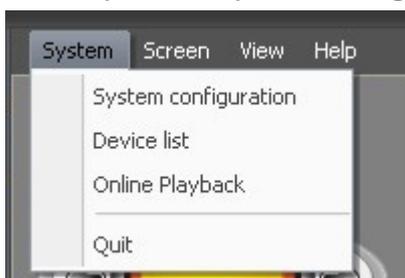

#### 4.11 Screen: 1/4/9/16/25/36/49/64/Full Screen

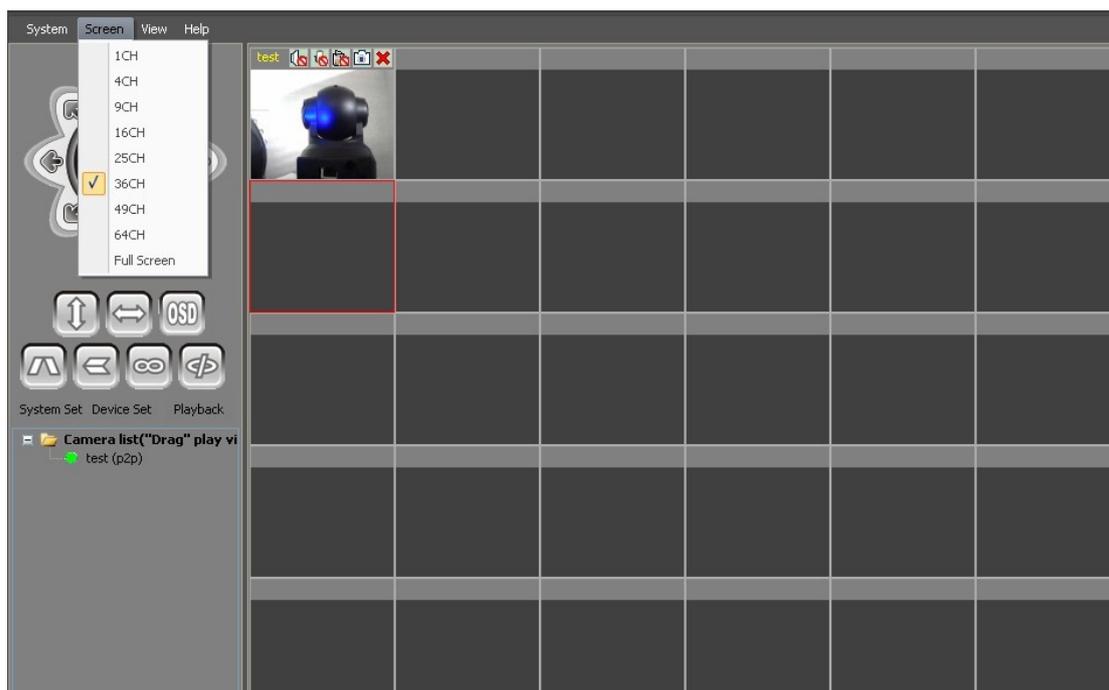

#### 4.12 Function keys



Control the PT ( For PT ip camera only )



cruise ( For PT ip camera only )



cruise ( For PT ip camera only )



OSD: Display the camera name and time



Flip /Mirror



IO closed ( For IO ip camera only )



IO Open ( For IO ip camera only )

## Chapter 5 camera parameter setting

**Double-click ( Device name ) parameter setting**



### 5.1 Base Info

Click“Get”Base Info

Alias: Device name

Device Firmware

Device ID

Device Alarm Status

UPnP Status

DDNS Status

MAC Adress


WIFI MAC Adress

Alias	WIFICAM	Submit
Device Firmware Version	114.0.2.68	
Device ID	OBJ-001670-FRMCB	
Alarm Status	None	
UPnP Status	UPnP Succeed	
DDNS Status	No Action	
MAC	00:02:2A:F0:A3:6B	
WIFI MAC	00:02:2A:F0:A3:6A	

Get

Click“Get” Display device information

## 5.2 Time and date

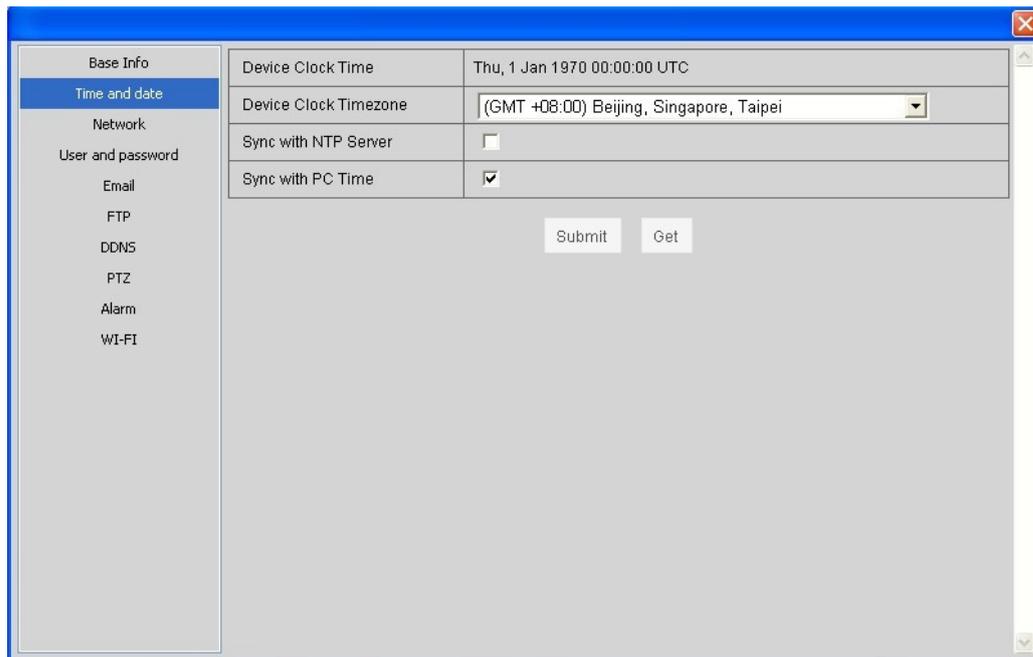


Base Info	Device Clock Time	Thu, 1 Jan 1970 00:00:00 UTC
Time and date	Device Clock Timezone	(GMT +08:00) Beijing, Singapore, Taipei
Network	Sync with NTP Server	<input type="checkbox"/>
User and password	Sync with PC Time	<input checked="" type="checkbox"/>

Submit Get

Obtain the time from a PC or from the server to get the time, if there is no access to the Internet only get from the PC.

click **“Submit”** Save the settings, click **“Get”** The new setting is displayed.

## 5.3 Network

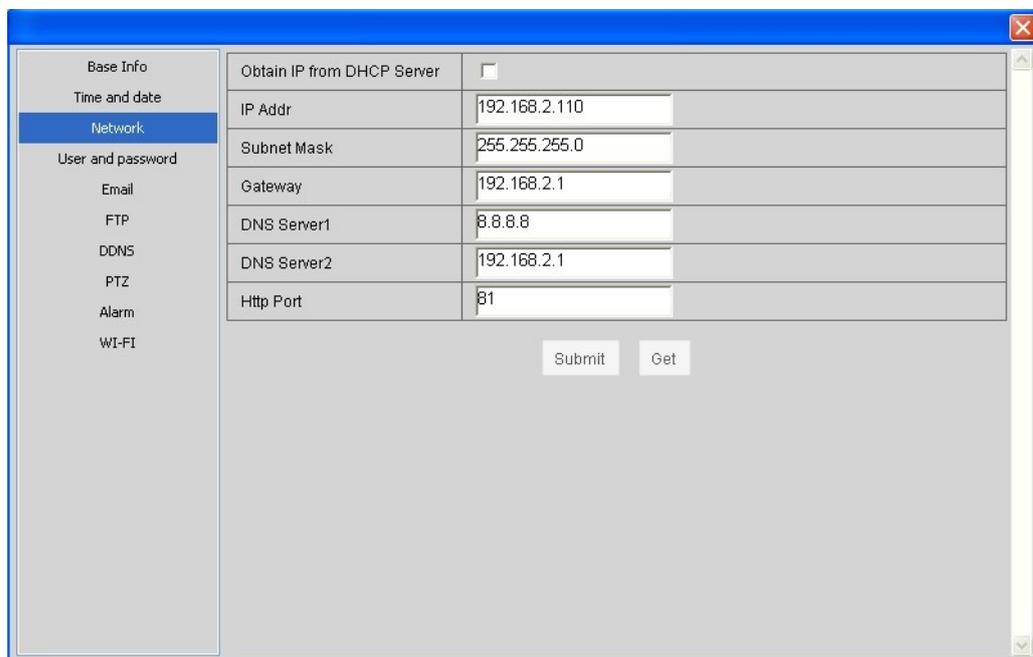

Base Info	Obtain IP from DHCP Server	<input type="checkbox"/>
Time and date	IP Addr	192.168.2.110
Network	Subnet Mask	255.255.255.0
User and password	Gateway	192.168.2.1
Email	DNS Server1	8.8.8.8
FTP	DNS Server2	192.168.2.1
DDNS	Http Port	81
PTZ		
Alarm		
WI-FI		

Submit Get

Set the subnet mask, gateway, and DNS server; following figure check DHCP, the device can automatically obtain an IP address.

Base Info	Obtain IP from DHCP Server	<input checked="" type="checkbox"/>
Time and date	Http Port	81

Submit Get

click **Submit** Save the settings, click **Get** The new setting is displayed.

#### 5.4 User and Password

	User	Password
Visitor	admin1	•
Operator	admin2	•
Administrator	admin	

Submit Get

Administrator, Visitor and Operator

Administrator: All permissions

Visitor: only view the video and switch the screen.

Operator: In addition to not enter the interface of the device parameters, have other privileges.

click **Submit** Save the settings, click **Get** The new setting is displayed.

## 5.5 Mail Service Settings

If the camera is connected to the Internet, set this function.

Base Info	Sender	121212@qq.com
Time and date	SMTP Server	smtp.qq.com
Network	SMTP Port	25
User and password	Need Authentication	<input checked="" type="checkbox"/>
<b>Email</b>	SSL	NONE
FTP	SMTP User	121212
DDNS	SMTP Password	•••••
PTZ	Receiver 1	121212@qq.com
Alarm	Receiver 2	
WI-FI	Receiver 3	
	Receiver 4	

Submit Get

DDNS	Send Alarm Notification by Mail	<input checked="" type="checkbox"/>
PTZ	Upload Image on Alarm	<input checked="" type="checkbox"/>
<b>Alarm</b>		

Sender: input a valid email address to send pictures when alarm triggered;

SMTP Server: the website your mail( sender );; For example QQmail: smtp.qq.com

SMTP Port: the website Port your mail ( sender )

SMTP User and Password: the user and password of the sender (email account and password).

Receiver: input a valid e-mail address to receive pictures when alarm triggered. Now it supports up to 4 receivers.

click **Submit** Save the settings, click **Get** The new setting is displayed.

## 5.6 FTP

Base Info	FTP Server	192.168.1.232
Time and date	FTP Port	21
Network	FTP User	abccc
User and password	FTP Password	•••
Email	Upload Interval (Seconds)	0
<b>FTP</b>		Empty or 0 means do not upload pictures
DDNS		
PTZ		
Alarm		
WI-FI		

Submit Get

Ftp service is used to send the captured pictures when alarm triggered to ftp server and save them. If the camera is not connected to the Internet, there is no need to set this function.

FTP Server: the website you want to upload the picture to;

FTP Port: 21

FTP User: user name to login ftp server;

FTP Password: password to login ftp server;

Upload Interval (Seconds): set the upload interval; unit: second.

click **“Submit”** Save the settings, click **“Get”** The new setting is displayed.

## 5.7 DDNS

Acquire a dynamic domain name;

For example: Logon [www.dyndns.com](http://www.dyndns.com).

## 5.8 PTZ

against pre-bit	<input type="checkbox"/>
Call Preset on boot	Disable
PTZ speed	Slow
Cruise Views	Always

Submit Get


Rotating speed

click **“Submit”** Save the settings, click **“Get”** The new setting is displayed.

## 5.9 Alarm

Motion Detect Armed: Moving objects trigger alarm;

Motion Detect Sensibility can be selected as 1~10 with sensitivity increasing;

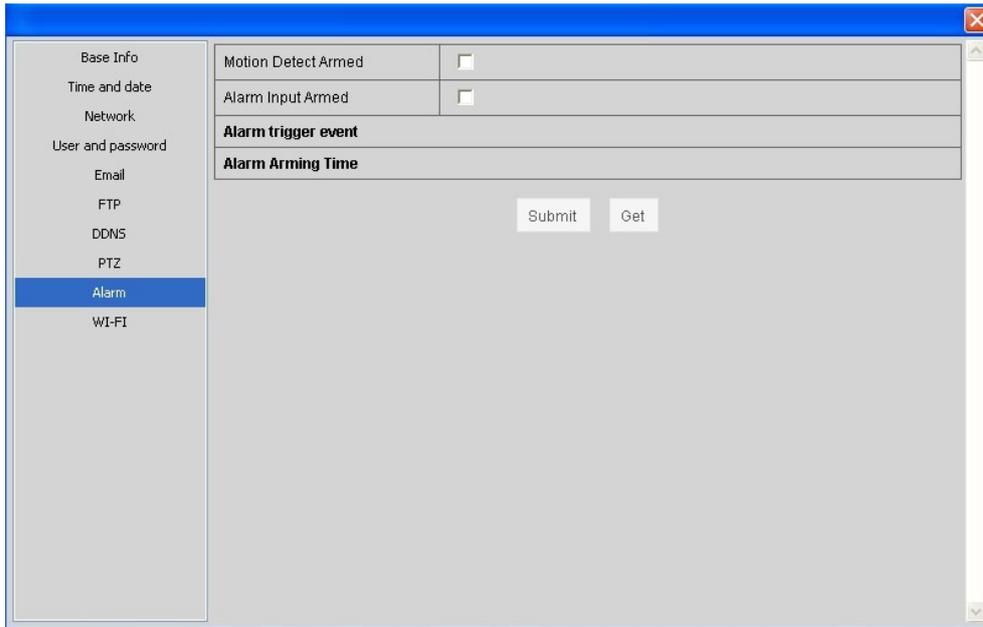


### Alarm preset linkage

IO Linkage on Alarm: when alarm triggered, it will link the external device connected with IO port; ( For IO ip camera only )

Send Alarm Notification by Mail: snapshot and send email on alarm. For details, please refer to “Mail Service Settings”;

Upload Image on Alarm: Upload images to ftp server on alarm. Upload Interval can be set. For details, please refer to “Ftp Service Settings”;

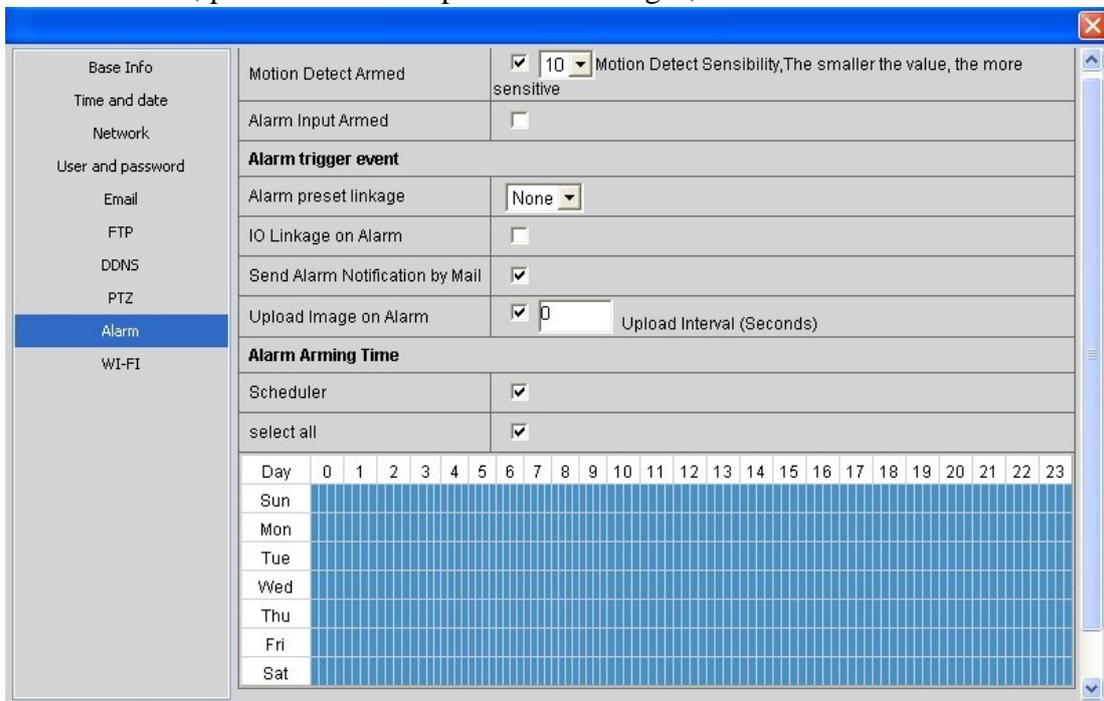

click **“Submit”** Save the settings, click **“Get”** The new setting is displayed.

## 5.10 WI-FI setting

ID	SSID	MAC	Signal
1	Sunsister	5C:63:BF:51:A1:02	Signal strength bar
2	TP-LINK_393FE6	6C:E8:73:39:3F:E6	Signal strength bar
3	BOB	5C:63:BF:FA:47:5C	Signal strength bar
4	ETONE-88	20:DC:E6:81:28:B6	Signal strength bar
5	zy1877	00:25:86:A7:2A:3E	Signal strength bar
6	TP-LINK_ccc	EC:88:8F:B9:95:36	Signal strength bar
7	ChinaNet-3Lcy	64:16:F0:F3:32:C6	Signal strength bar
8	FAST_39A674	F4:EC:38:39:A6:74	Signal strength bar
9	FAST_39A674	F4:EC:38:39:A6:74	Signal strength bar

Wireless Network List

Using Wireless Lan

SSID: FAST\_39A674

Network Type: Infra

Authetication: WPA2-PSK Personal (AES)

Share Key: 5528325229

Submit Get

Please select Wireless Lan Settings and click “Scan” . Then the camera scans the WLAN nearby and lists the results.

you can fill in the Keys according to the wireless network settings of your wireless router. Select None if no encryption is set.

As it’s correctly set, please pull out the network cable and the camera will reboot.

click“**Submit**” Save the settings, click“**Get**” The new setting is displayed.

## Chapter 6 Web


### 6.1

Use of computers and cameras within a LAN

1) Open the CD



2) copy to desktop

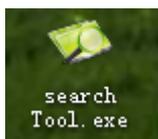


double-click the above icon and a dialogue box appears: the IP address of the camera will appear after several seconds later.

IP acquisition:

① Confirmed that the device is turned on and connected to the network normal.

② LAN or PC support **DHCP** ( Dynamic IP allocation ) , because the camera's factory settings dynamically IP, LAN or PC does not open DHCP, occurs not search the camera IP.

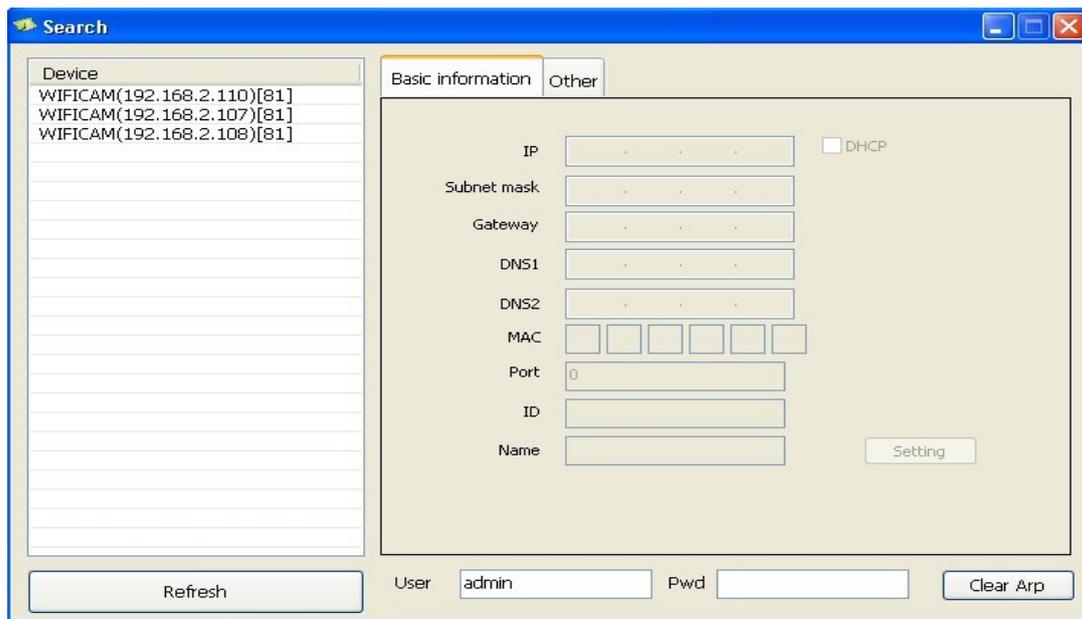

## 6.2 Login


Input the URL (for example, <http://192.168.2.108:81>) or enter the home page by ip camera tool mentioned above.

Input the user name and password (default user: admin; no password). Click "OK" and enter the monitoring page (Max. 4 users viewing simultaneously).




Language optional: Traditional and Simplified Chinese, English, Russian, Deutsch.

Note: There are three modes optional for different applications. Please select one according to your web browser.

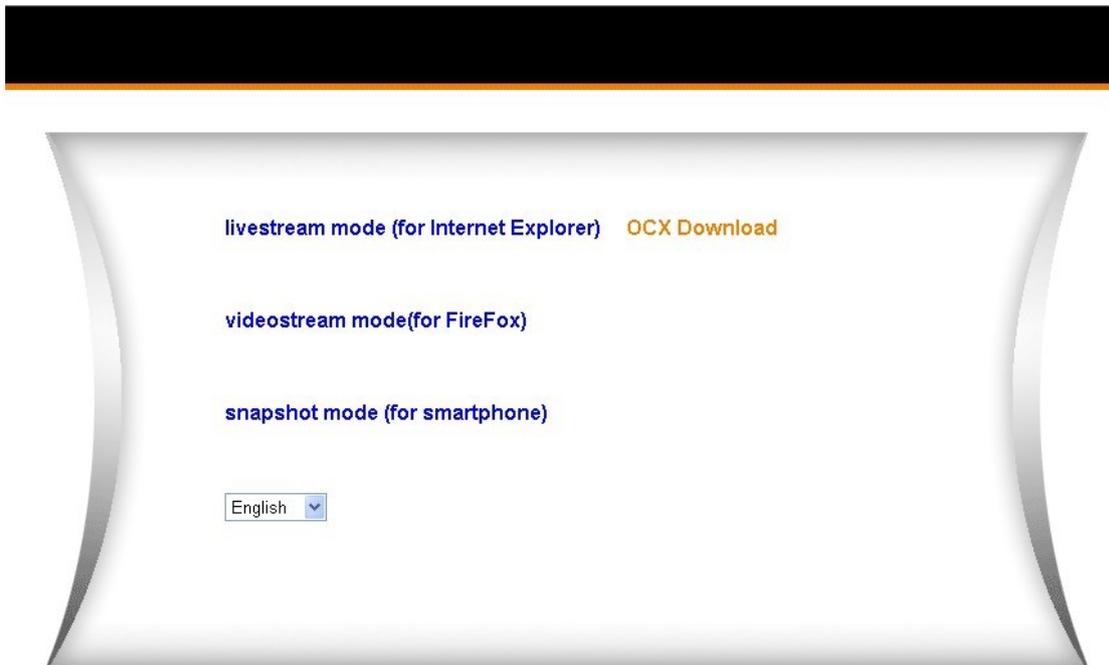

### 6.3

If it's the first time a camera being viewed in a PC, .an OCX file needs installing in the PC. Please download OCX file and install it. Next, please refresh the page and login again.

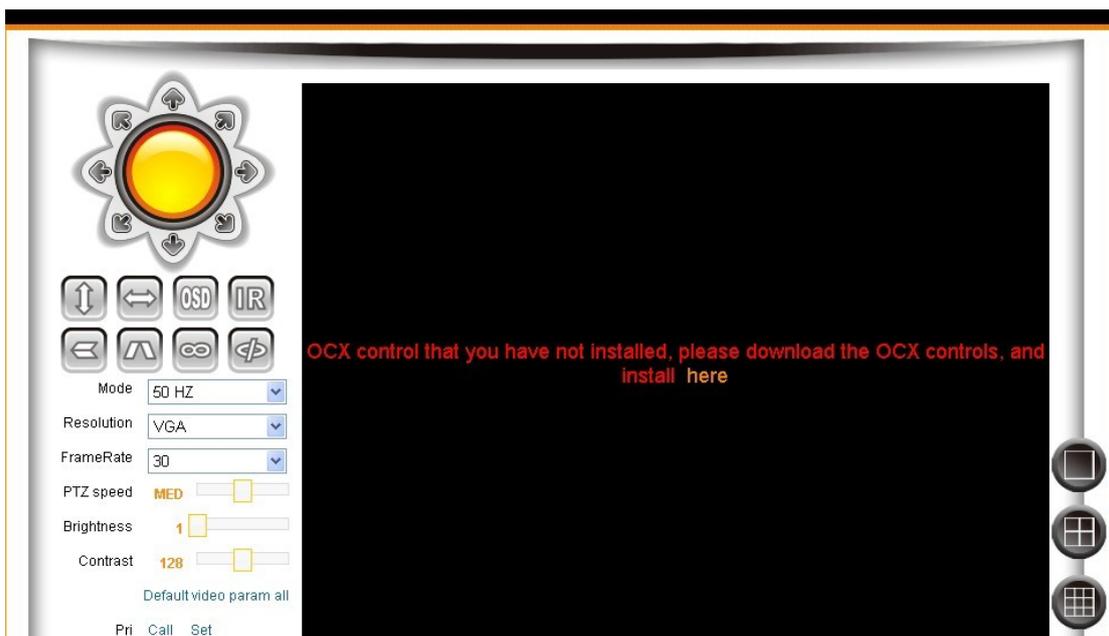

## 6.4 Function keys



Control the PT ( For PT ip camera only )



Vertical pan ( For PT ip camera only )



Horizontal pan ( For PT ip camera only )



OSD: Display the camera name and time



Flip /Mirror



IO closed ( For IO ip camera only )



IO Open ( For IO ip camera only )

Mode: 50HZ/60HZ

Resolution: VGA ( 640×480 ) and QVGA ( 320×240 )

Frame rate: 1-30

PTZ Speed

Brightness

Contrast

Default video param all

Preset



1/4/9CH



: Speaker ( For audio ip camera only )



: Speaker/ Mic two-ways audio ( For audio ip camera only )



: Record



: Snapshot



: parameter setting

## **Federal Communications Commission (FCC) Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Warning:** Changes or modifications made to this device not expressly approved by **Shenzhen SIEPEM Technology Co., Ltd** may void the FCC authorization to operate this device.

**Note:** The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

The transmitter must not be co-located or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body.