


“Reed” switch –
activated by
magnet at -3.0mm

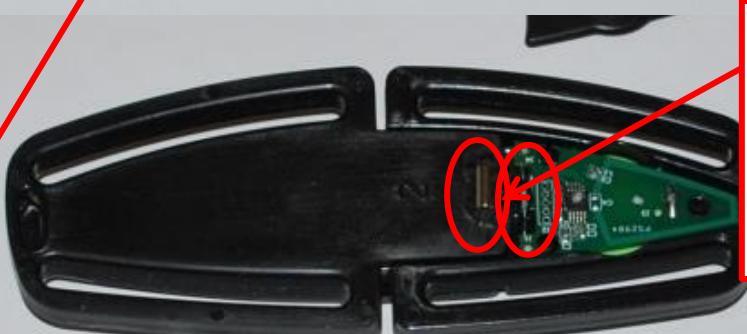

Transmitter
mounted in male
side of chest clip

Cylindrical Magnet
in female side of
chest clip used to
activate “reed”
switch.
NO ELECTRONICS
ON THIS SIDE OF
THE CHEST CLIP –
ONLY A MAGNET



Transmitter in “activate”
position

Cylindrical Magnet in
close proximity to **reed**
switch. Reed switch
closes and starts
transmission



Transmitter fully
assembled in Chest clip
BACK SIDE



Transmitter fully
assembled in Chest clip
FRONT SIDE