



VIKING II

MT7050

**Mobile Data Terminal
User's Manual**





Contents

CONTENTS	2
SAFETY PRECAUTIONS	4
REGULATORY AND CERTIFICATION	6
FCC.....	6
RF EXPOSURE WARNING	7
CE MARKING.....	7
LITHIUM BATTERY SAFETY STATEMENT	10
CHAPTER 1. PRODUCT INTRODUCTION.....	11
HARDWARE SPECIFICATIONS.....	11
ENVIRONMENT.....	12
I/O PORTS.....	13
DIMENSION AND WEIGHT.....	14
VIKING Standard	14
PACKAGE LIST	15
CHAPTER 3. HARDWARE MOUNTING	16
CHAPTER 4. START UP	17
POWERING THE SYSTEM	17
Installation Instructions	17
Connector Power	18
Backup Battery.....	20
Powering Down the System	21
Unexpected Power Outage	21
LED STATUS.....	22
ADJUST THE SPEAKER VOLUME	23
AUTO-BRIGHTNESS ADJUSTMENT	23
INTERNAL MICROPHONE	24
PROGRAMMABLE BUTTONS.....	24


POWER MANAGEMENT	24
CHAPTER 5. JUMPERS AND CONNECTORS	25
BOTTOM VIEW	25
EXTERNAL CONNECTORS PIN ASSIGNMENTS	26
Power Connector	26
RS-232 Port (COM1)	27
USB and RS-232/422/485 Port (COM2)	28
Digital I/O, CAN bus and Video Port	30
CHAPTER 6. TECHNICAL SUPPORT	31

Safety Precautions

1. Read these safety instructions carefully.
2. Keep this user's manual for later reference.
3. Disconnect this equipment from any outlet before cleaning. Use a damp cloth. Do not use liquid or spray detergents for cleaning.
4. For plug-in equipment, the power outlet socket must be located near the equipment and must be easily accessible.
5. Keep this equipment away from humidity.
6. Put this equipment on a stable surface during installation. Dropping it or letting it fall may cause damage.
7. Do not leave this equipment in either an unconditioned environment or in an above 40°C storage temperature as this may damage the equipment.
8. The openings on the enclosure are for air convection to protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
9. Make sure the voltage of the power source is correct before connecting the equipment to the power outlet.
10. Place the power cord in a way so that people will not step on it. Do not place anything on top of the power cord. Use a power cord that has been approved for use with the product and that it matches the voltage and current marked on the product's electrical range label. The voltage and current rating of the cord must be greater than the voltage and current rating marked on the product.
11. All cautions and warnings on the equipment should be noted.
12. If the equipment is not used for a long time, disconnect it from the power source to avoid damage by transient overvoltage.
13. Never pour any liquid into an opening. This may cause fire or electrical shock.
14. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
15. If one of the following situations arise, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.

- d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped and damaged.
 - f. The equipment has obvious signs of breakage.
16. Do not place heavy objects on the equipment.
17. The unit uses a three-wire ground cable which is equipped with a third pin to ground the unit and prevent electric shock. Do not defeat the purpose of this pin. If your outlet does not support this kind of plug, contact your electrician to replace your obsolete outlet.
18. **CAUTION:** DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY RE- PLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE REC- OMMENDED BY THE MANUFACTURER. DISCARD USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.

19. **CAUTION:** Hot surface Do not touch

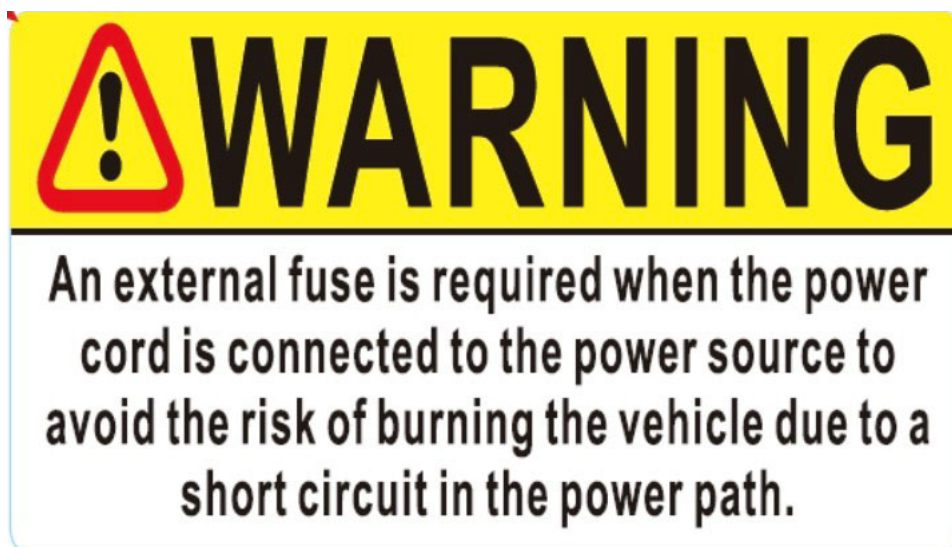

Regulatory and Certification

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded interconnect cables and shielded power cable must be employed with this equipment to insure compliance with the pertinent RF emission limits governing this device. Changes or modifications not expressly approved by the system's manufacturer could void the user's authority to operate the equipment.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

Transmitters in the 5.925-7.125 GHz band are prohibited from operating to control or communicate with unmanned aircraft systems.

This device is intended for indoor use only when operating in the frequency range 5945 to 6425 MHz which is applicable in countries that support WiFi 6E.

RF exposure warning

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

This device meets the EU requirements (2014/53/EU) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device is used at 20 cm from your body.

CE Marking

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. Please contact your local representative for ordering information.

This product has passed the CE test for environmental specifications. Test conditions for passing included the equipment being operated within an industrial enclosure. In order to protect the product from being damaged by ESD (Electrostatic Discharge) and EMI leakage, we strongly recommend the use of CE-compliant industrial enclosure products.

VIKING Conforms to the Following Specifications

LVD 2014/35/EU

EN 62368-1: 2014 +A11: 2017

EMC 2014/30/EU

EN 55032

EN 55035

RED 2014/53/EU

ETSI EN 300 328

ETSI EN 300 440

ETSI EN 301 893

ETSI EN 303 413

ETSI EN 300 330

ETSI EN 303 687

ETSI EN 301 489-1

ETSI EN 301 489-17

ETSI EN 301 489-19

EN 62311

	BE	BG	CZ	DK	DE	EE	IE
	EL	ES	FR	HR	IT	CY	LV
	LT	LU	HU	MT	NL	AT	PL
	PT	RO	SI	SK	FI	SE	

EU Declaration of Conformity

Hereby, RuggON Corporation declares that the radio equipment type MT7050 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.ruggon.com/en/index.php>

The device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

All operational modes:

Technologies	Operating Frequency (MHz)	Max. Transmit Power (dBm)
Bluetooth BR+EDR	2402-2480 MHz	2.590
Bluetooth LE	2402-2480 MHz	11.560

WLAN 2.4 GHz	2412-2472 MHz	16.850
WLAN 5 GHz	5180-5240 MHz	14.450
WLAN 5 GHz	5260-5320 MHz	13.690
WLAN 5 GHz	5500-5700 MHz	13.380
WLAN 5 GHz	5745-5825 MHz	10.990
WLAN 6 GHz	5955~6415 MHz	18.090
NFC	13.56 MHz	-13.543 dBuA/m @ 10m
GPS	1559-1610MHz (RX only)	

Lithium Battery Safety Statement

Lithium battery inside. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type of battery recommended by battery manufacturer.

Disposal of a BATTERY into fire or a hot oven, or mechanically crushing or cutting of a BATTERY, that can result in an EXPLOSION;

Leaving a BATTERY in an extremely high temperature surrounding environment that can result in an EXPLOSION or the leakage of flammable liquid or gas;

A BATTERY subjected to extremely low air pressure that may result in an EXPLOSION or the leakage of flammable liquid or gas.



THIS PRODUCT CONTAINS LITHIUM-ION BATTERY PACKS. IT MUST
BE DISPOSED OF PROPERLY. CONTACT LOCAL ENVIRONMENTAL
AGENCIES FOR INFORMATION ON RECYCLING AND DISPOSAL PLANS IN
YOUR AREA.

Chapter 1. Product Introduction

VIKING II is an in-vehicle terminal with 7" high resolution display and 500nits brightness, and is flexible to support a wide range of wireless connection capability. The device is well-suited for fleet management, asset management, EOBR and ELDs application.

It is compliant to ISO 7637-2, SAE J1455 and SAE J1113 and its optimized power system is designed for cold cranking, load dump, transient voltage and ESD.

The device is engineered with IP65 protection rating, a wide temperature design, wide input range, and rich expanding interfaces that support in-vehicle connectivity.

Hardware Specifications

Item	Description
Processor	Qualcomm® Snapdragon™ 6490 Octa-Core, up to 2.7GHz
Memory	8GB LPDDR4x RAM
Storage	128GB UFS storage, Micro SD slot x 1
Display	● 7" TFT LCD WSVGA (1024 x 600), , 500 nits brightness ● Viewing angel: 145(H)/ 160(V) (CR>10) ● Support auto-dimming
Touch Panel	● Capacitive multi touch (PCT)
Wireless Connectivity	● GNSS (GPS / GLONASS / BeiDou/ Galileo), optional dead-reckoning, RTK support ● IEEE 802.11ac 2x2 MU-MIMO ● Bluetooth V5.0 ● RFID/ NFC
Item	Description
Power Input	9-36VDC,5A
Battery	1950mAh, 3.6V
Housing (Mechanical)	PC+ABS, fanless design
Certification	CE, FCC, CB, E-Mark

Environment

- Operating temperature:
 - -20°C (-4°F) to 60°C (140°F)
 - In accordance with MIL-STD-810H Method 501.7 High Temperature Procedure II - Operation
 - In accordance with MIL-STD-810H Method 502.7 Low Temperature Procedure II - Operation
- Storage temperature:
 - -30°C (-22°F) to 70 °C (158°F)
 - In accordance with MIL-STD-810H Method 501.7 High Temperature Procedure I - Storage
 - In accordance with MIL-STD-810H Method 502.7 Low Temperature Procedure I - Storage
- Relative humidity: 5% to 95% @ 30°C (86°F) to 60°C (140°F) non-condensing in accordance with MIL-STD-810H Method 507.6 Humidity Procedure II Aggravated Cycles
- Vibration Test:
 - Operating: MIL-STD-810H Method 514.8 Category 4,
Fig 514.8C-2 Common carrier (US highway truck vibration exposure);
Fig 514.8C-4 Composite two-wheeled trailer;
Fig 514.8C-6 Composite wheeled vehicle.
 - Operating: IEC 60721-3-5 Class 5M3
 - Non-Operating: MIL-STD-810H Method 514.8 Category 24 Figure 514.8E-1
General minimum integrity
- Shock Test:
 - Operation: MIL-STD-810H Method 516.8 Procedure 1 Functional Shock
 - Non-Operation: MIL-STD-810H Method 516.8 Procedure V Crash Hazard Shock

I/O Ports

Item	Description
Serial	RS-232 x 1 with 0/5/12V support 0.6/0.3A (COM1) - Data rate Max. 250kbps RS-232 TX, RX/422/485 x 1 (COM2) - RS-232 data rate Max. 250kbps - RS-422/485 data rate Max. 250kbps
USB	USB 2.0 type A x 1 USB 2.0 x 1 (COM2) USB 3.1 type C x 1 (DisplayPort Alt Mode supported)
Ethernet	Gigabit Ethernet (RJ45) x 1
Digital I/O	DI x 2, DO x 2
CAN	Raw CAN bus, or CAN bus module (optional supports SAE J1939) - High Speed Max. 1 Mbit/s
Video	CVBS input x 2 (optional) Max output resolution: 1920×1080@30Hz
Audio	Audio headset jack x 1 Internal MIC-in x 2
Speaker	Waterproof speakers 2W


Dimension and Weight

VIKING Standard


Dimension: 219.98 x 151.98 x 40.80 (mm) / 8.66 x 5.98 x 1.61 (in.) (W x H x D)

Weight: 1.25 kg/ 2.76 lbs.

Front View Dimension

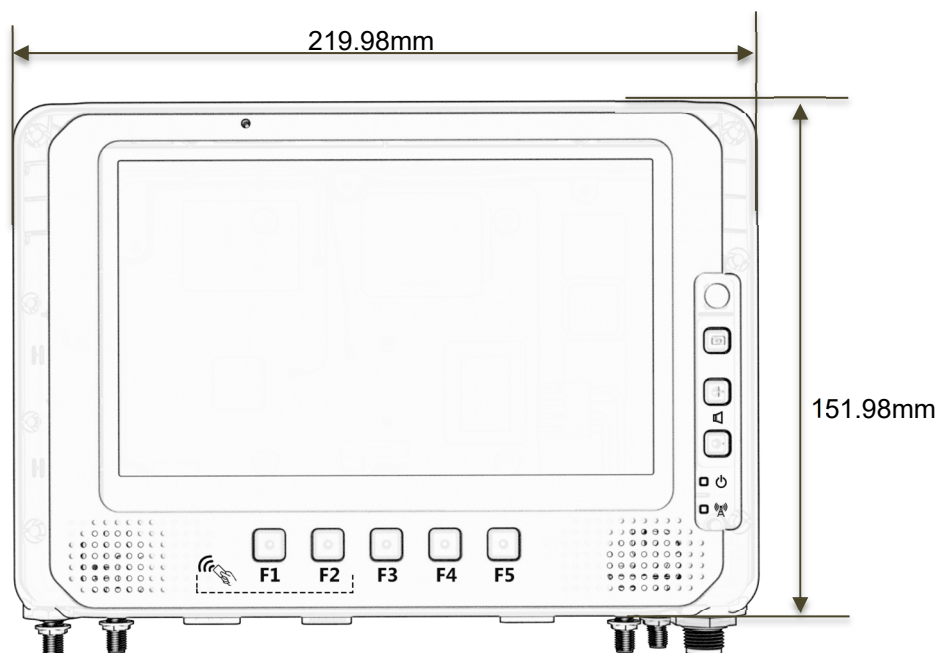

Side View Dimension

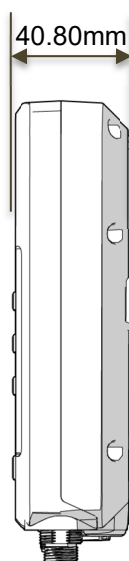

Package List

Before you begin the installation or configuration process, make sure to inspect all the components and accessories. Contact your representative if there are any missing or damaged items.


Please verify the delivery of the contents upon receipt

- VIKING in-vehicle terminal
- Quick Start Guide
- 2M Power cable with fork terminals

NOTE: The packaging material has been selected to optimally protect your device. After unpacking, store the original packaging material in the event that you need to return for shipment.

Chapter 3. Hardware Mounting

The VIKING supports a standard VESA version MIS-D, 75, C (75mm distance quadrate order, M5 thread, deepness 6mm) through the four drill holes on the back side of the device.

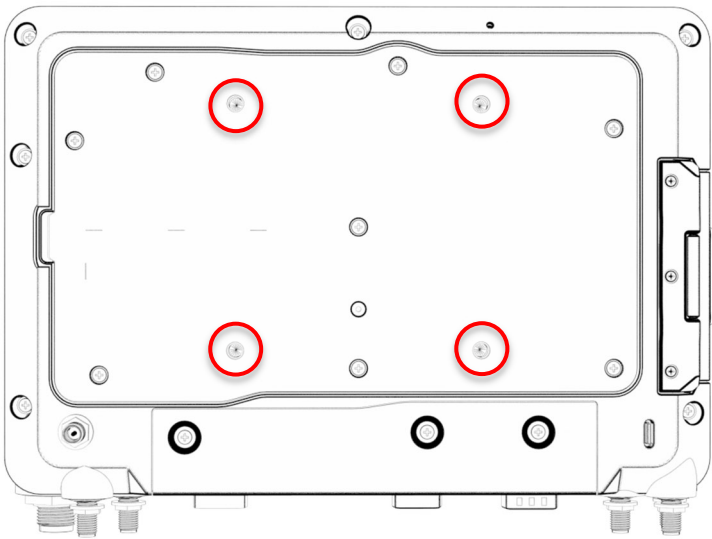

Notes: *To prevent any damage or injury, make sure the mounting bracket is securely attached.*

Chapter 4. Start up

Powering the System

Installation Instructions


Fuses are required in connecting the power cable and battery in series and add 3A fuse in ACC/ignition line to avoid the risks of wire damage and vehicle burning.

Notes:

5A for 24VDC power input

10A for 12VDC power input


Please refer to the diagram below for VIKING installation.

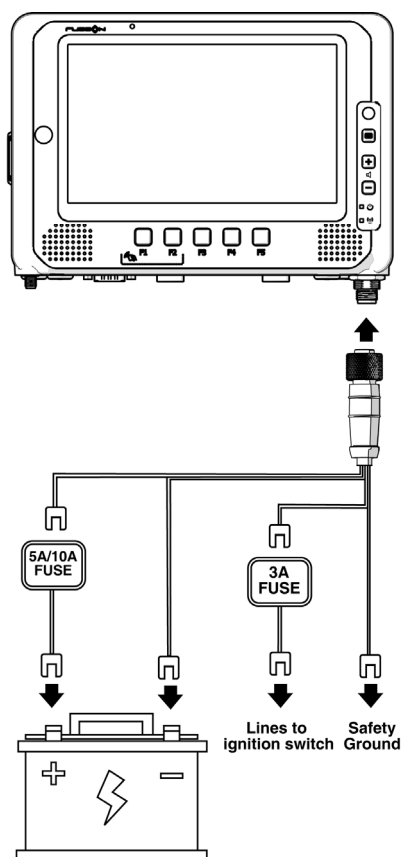

Connector Power

VIKING allows a wide range of DC power input from 9~36V via a 5-pin M12 A-code power cord. There are two options to start up the VIKING, either via car power cable or external power adapter.

Here is the 5-pin M12 A-code power cord.

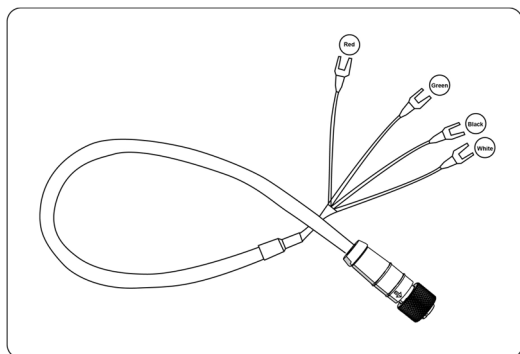


1. Use only power cables verified and supplied by RuggON to meet the specific requirements for voltage, current, low-temperature flexibility, UV resistance, oil resistance, etc.
2. Do not bend or kink the power supply cables and make sure they are securely protected against crushing and abrading.
3. Make sure power cables are correctly connected to the safety ground
4. Directly connect the power cable to vehicle battery through appropriate fuse instead of sharing any power supply lines of other equipment to avoid interference.
5. To compensate the voltage drop of the power supply cable, make sure that it is left with adequate cross-section area for sufficient ampacity.

The wire definition


Wire Color	Description
RED	V+
BLACK	V-
GREEN	PE (Safety Ground)
WHITE	ACC/ Ignition

Power source from car power cable

1. The bare wire lead cable allows you to directly wire 12 V or 24 V car power supply.
Please follow the wire definition to connect to your power source.
Please refer to the installation diagram on page 20 to install the 5A or 10A fuse between the power cable and power source.
2. Plug the power code into the power connector on the top of the arrow mark.

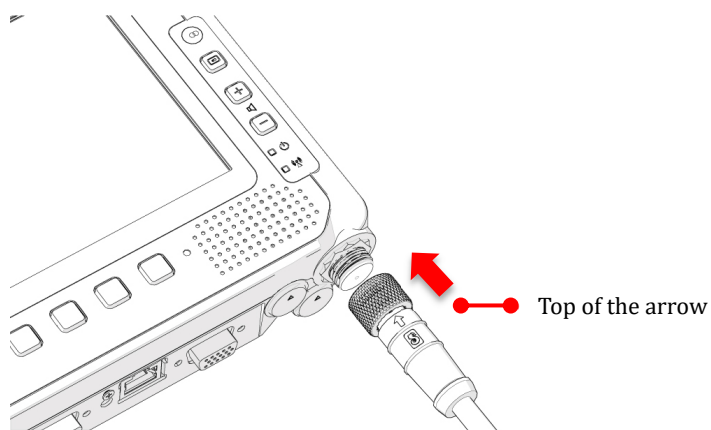

3. Twist the nut to lock the power connector to the device.

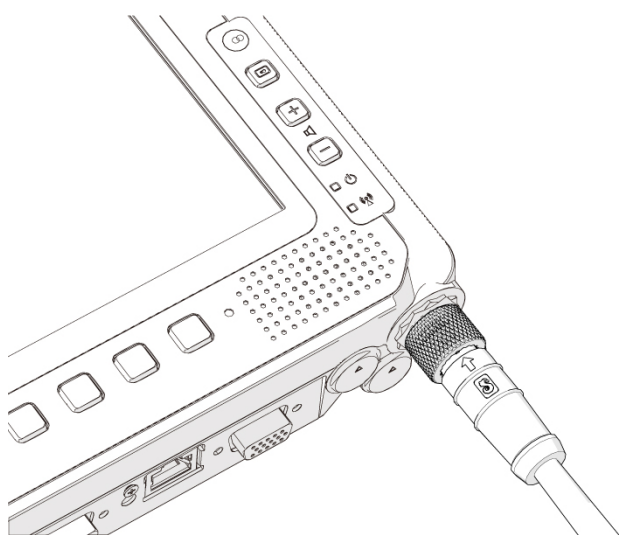

4. VIKING will turn on automatically when ACC is switched ON. If you use software to power off the system, to turn on the VIKING you need to press and hold down the power button at least for 3 seconds.

Power source from external power adapter

If your power source is from external power adapter, it means the power source isn't controlled by AAC/Ignition signal. Please short red (V+) and white (ACC/ Ignition) wires.

VIKING will turn on automatically when power is connected.

If you use software to power off the system, to turn on the VIKING you need to press and hold down the power button at least for 3 seconds.



Make sure that all the power supplies are disconnected when you plug the power cord into the power connector.

Please press the power button to turn off the system. If you directly remove the power source, the system will consume UPS battery instead and perform a graceful shutdown in one minute. It will reduce the battery life

Backup Battery

The purpose of internal backup of VIKING is for graceful shutdown or sustain the system for seconds in conditional mode while the external power supply is suddenly removed or gone. This internal battery is not to sustain the system running in the normal mode. After the external power supply is gone, the system running is shifted to the mode below until it completes the shutdown or the external power resumes.

- (1) Type-C interface disable
- (2) Lateral side USB disable
- (3) Turn off the COM1 power output
- (4) Backlight is forcibly turned dark

When the external power is in presence, an internal charger will automatically charge the backup battery. The ratio of the internal battery charged time against its discharged time is around 5 times. It means it takes 5 minutes to charge the battery after discharging the battery for 1 minute.

Powering Down the System

When VIKING is connected to vehicle battery

- When system is on, switch the ignition from on to off to turn off or delay off the system.
- When system is on, press the power button to turn off the system. To turn on the VIKING you need to press and hold down the power button at least for 3 seconds.

When VIKING is connected to power adapter

When system is on, press the power button to turn off the system. To turn on the VIKING you need to press and hold down the power button at least for 3 seconds.

Unexpected Power Outage

The system will follow your delay off setting first, and then perform a graceful shutdown up to six minute.




Please press the power button to turn off the system. If you direct remove the power source, the system will consume UPS battery instead and perform a graceful shutdown in one minute. It will reduce the battery life

LED Status

The LEDs on VIKING are status indicators that show the operating status of your system. The status indicators can help pinpoint possible failed hardware components causing specific symptoms. There are two status indicators in the front panel. Refer to the description below.


LED	Status	Description
Power	Blink Green	Power up
Power	Blink Yellow	Load boot loader
Power	Solid Green	System ready for use
Power	Blink Red	Vehicle battery abnormal
Communication	Solid Green	TBD

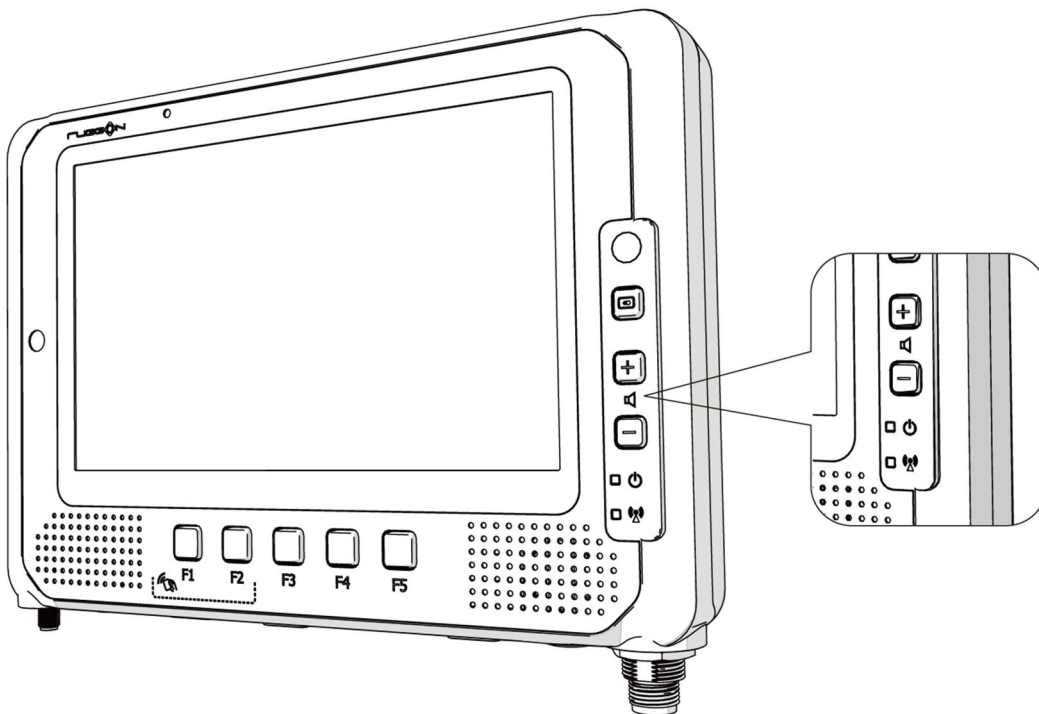

Adjust the Speaker Volume

VIKING provides the volume control buttons to adjust the speakers' volume; you can also control the overall level of sound using Android Setting. When you press the top part of the volume button, it makes the volume louder; pressing the bottom part makes the volume lower

- Press the  button to increase the volume.
- Press the  button to decrease the volume.

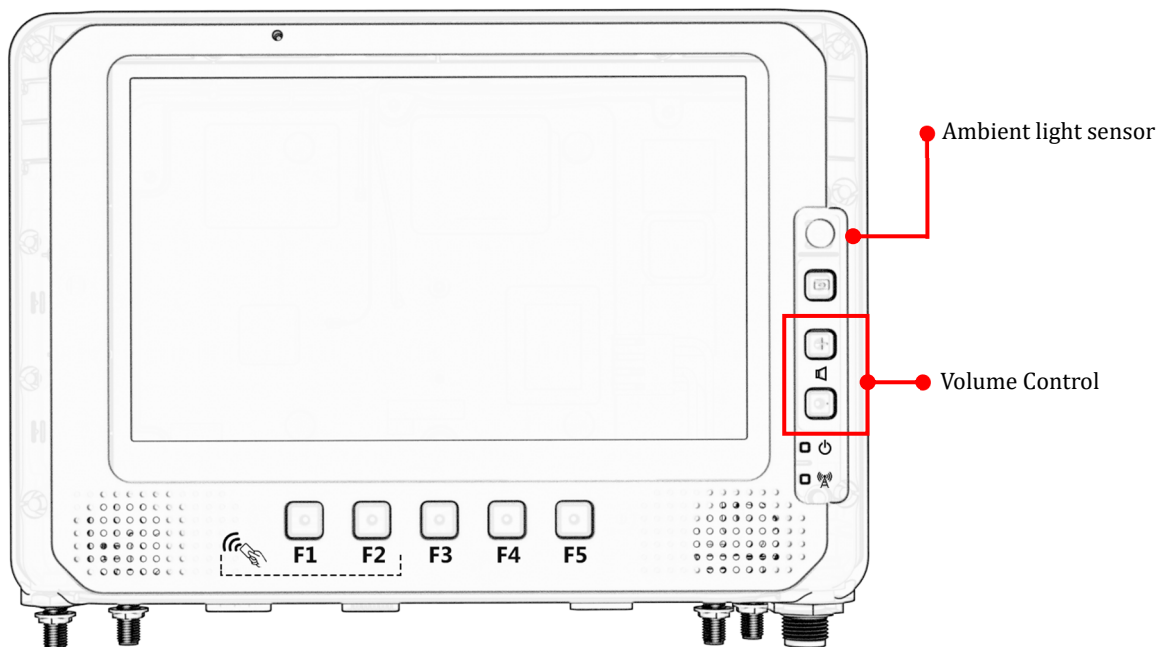

Auto-Brightness Adjustment


When you use VIKING, you may well encounter different lighting conditions that make it difficult to see the information on screen. VIKING's built-in ambient light sensor on the front panel supports auto-dimming, which you can also disable to manually adjust the screen's brightness; this setting can be done via Android Setting.

Internal Microphone

VIKING is equipped with 2 internal microphones (one at the front and the other at the rear) for better audio reception, so you don't need an external one. In addition to the built-in speaker and microphones, you can plug external headsets in the audio jack.

Programmable Buttons

VIKING provides default commands for five programmable buttons. You can configure the programmable buttons via Android Setting to different commands or keyboard shortcuts to better fit your work style.

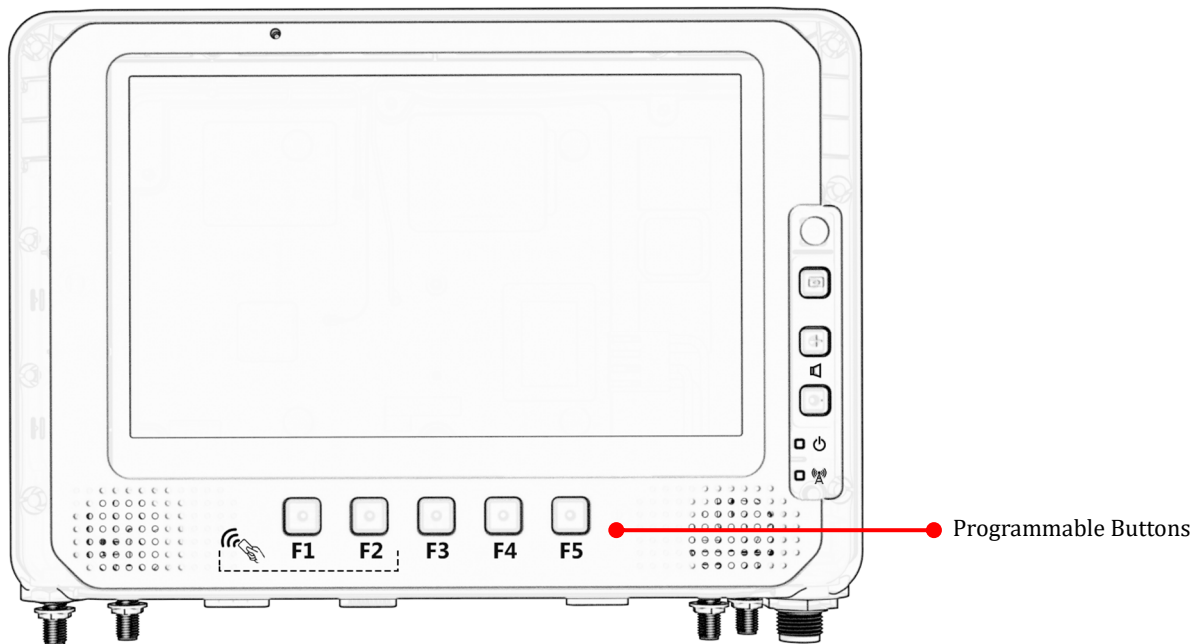


Power Management

VIKING provides Android Setting for configuration which includes power management and system setup.

Chapter 5. Jumpers and Connectors


Bottom View

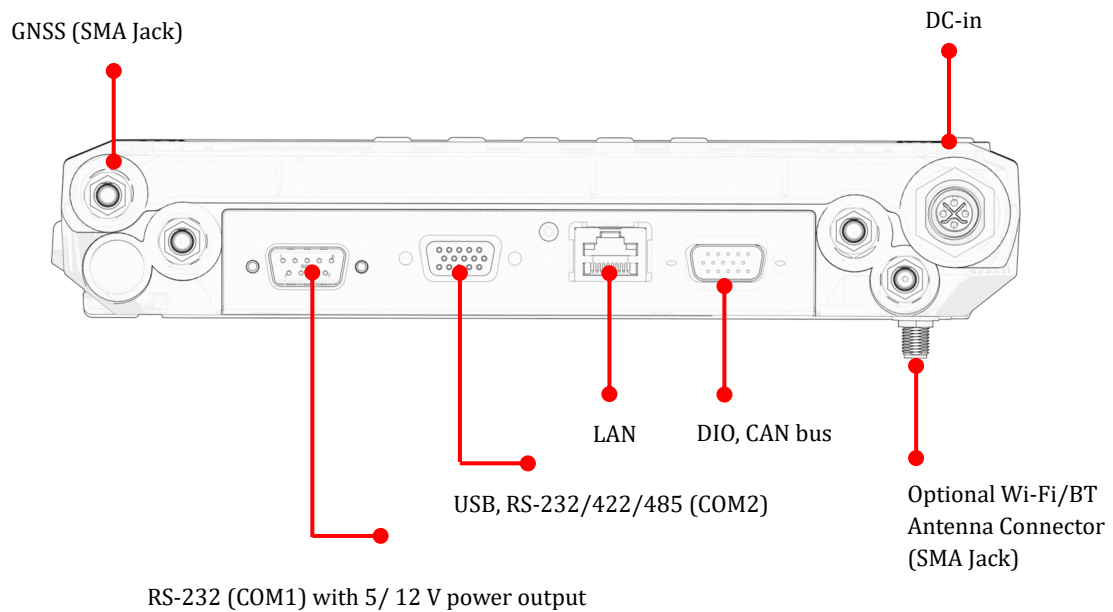

External Connectors Pin Assignments

Use this section as a reference for the pin assignments of the various ports available on the VIKING.

Power Connector

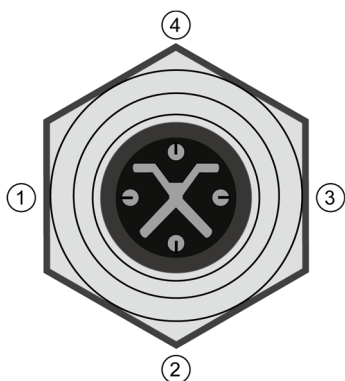


TYPE: M12 S-CODE 4-PIN male connector

Pin	Signal
1	V+
2	ACC
3	V-
4	NC


Note: Please refer to Power on through vehicle power cable on page 20 for connecting the external power cable to power source.

RS-232 Port (COM1)

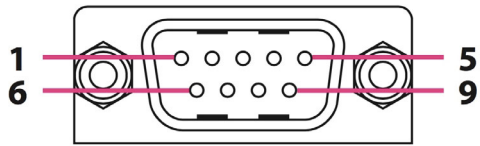

Pin	Signal	Description
1	DCD	Data carrier detect (input)
2	RXD	Receive data (input)
3	TXD	Transmit data (output)
4	DTR	Data terminal ready (output)
5	GND	Signal/power ground
6	DSR	Data set ready (input)
7	RTS	Request to send (output)
8	CTS	Clear to send (input)
9	PWR	12V/300mA or 5V/600mA

USB and RS-232/422/485 Port (COM2)

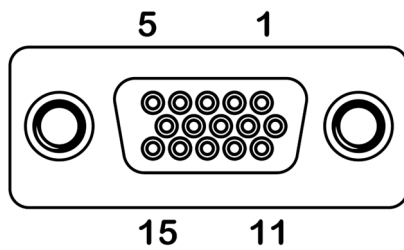

Pin	Signal
1	RS-422 TX+
2	RS-422 RX+
3	RS-485 TX+
4	RS-232 TX
5	GND
6	RS-422 TX-
7	RS-422 RX-
8	RS-485 TX-
9	USB 5V
10	RS-232 RX
11	GND
12	USB DP
13	USB DM
14	USB 5V
15	NC


We provide Y-cable with DB15 male connector which is the RS232/422/485 and USB converter. Please contact your local sales representative for ordering information

RS-232/422/485 and USB Cable

This Y-cable with DB15 male connector is the RS232/422/485 and USB converter. The other end of this Y-cable contains one USB type A jack for USB2.0 and one DB9 male connector for RS232/422/485. If you like to use RS232 or RS422 or RS485, please refer to the pin definition below.




Cable Drawing

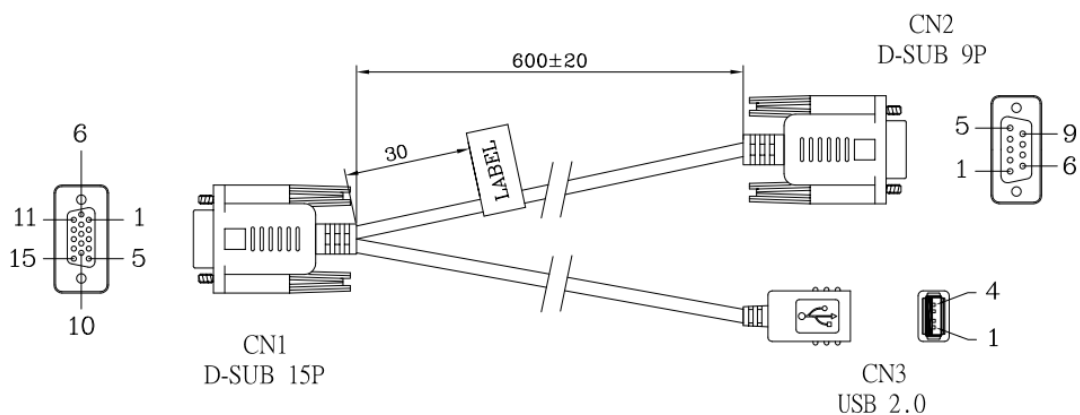

Pin Definition of DB9 (CN2) connector:

Pin	Signal	Pin	Signal
1	RS-422 TX-	6	RS-485 TX+
2	RS-232 RX	7	RS-422 TX+
3	RS-232 TX	8	RS-422 RX-
4	RS-422 RX+	9	RS-485 TX-
5	GND		

Digital I/O, CAN bus and Video Port

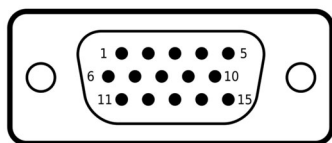

Pin	Signal	Pin	Signal
1	CAN_H	9	N/A
2	CVBS IN1	10	N/A
3	CVBS GND	11	SOS
4	ISO GND	12	DIO_OUT1 (5V 10mA)
5	N/A	13	DIO_IN1 (5V 100mA)
6	CAN_L	14	DIO_IN2 (5V 100mA)
7	CVBS GND	15	DIO_OUT2 (5V 10mA)
8	CVBS IN2		

Notes: Connect SOS, CAN, and DIO GND to ISO_GND.

Connect **CVBS** GND to **CVBS_GND**

We provide the DB15 female connector to multiple pins without termination cable. Please contact your local representative for ordering information

*DI: 5V TTL Compatible Logic,

withstand max 36V input, also accept external OC/OD driving circuit.

*DO: 5V TTL Compatible Logic, max sink 30mA while driving low,

internal pull up 5V thru 330 ohm, also accept external 4.7K ohm resistor pull to 36Vmax.

Chapter 6. Technical Support

We provide the Partner Zone for technical documents information; please contact your sales representative to authorize the use of the RuggON Partner Zone.

Postal address: 4F, No. 298, Yang Guang St., Neihu Dist., Taipei City, Taiwan