

封面

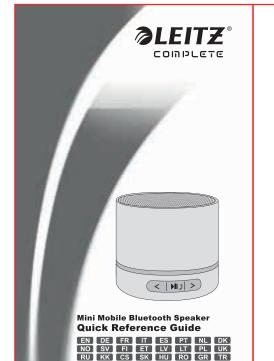

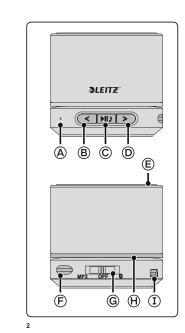

Features of the speaker

Speaker grille
 microSD card slot

EN

Pairing the speaker with a device

4. If prompted, enter "0000" as a code or password.

Controlled in the following mainter:

Start/stop playback Press the "Play/Pause/Phone" button.
Skip to the next track Press the right arrow button (>).
Skip to the previous track Press the left arrow button (<).

Adjust the volume Switch (
 Switch between microSD
 Press and hold the "Play/Pause/ card and AUX IN Probe" button for vos seconds.

EN

subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly

generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the territories by one or more of the following measures:

-- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver -- Connect the equipment into an outlet on a circuit different from

that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician or help





封底

书面纸, 封面封底80克, 内页70克, 胶订