

■ Contents

1. Operation Instructions	2
1.1 Introduction	2
1.2 Application list	4
1.3 Settings	5
1.3.1 Wireless & networks	5
1.3.2 Sound	6
1.3.3 Display	6
1.3.4 Apps	7
1.3.5 Language & input	7
1.3.6 Backup & reset	8
1.3.7 Date & time	8
1.3.8 About tablet	9
1.4 HDMI	9
1.5 Video Player	10
1.6 Music	10
1.7 Gallery	11
1.8 Camera	11
1.9 Browser	11

1. Operation Instructions

1.1 Introduction

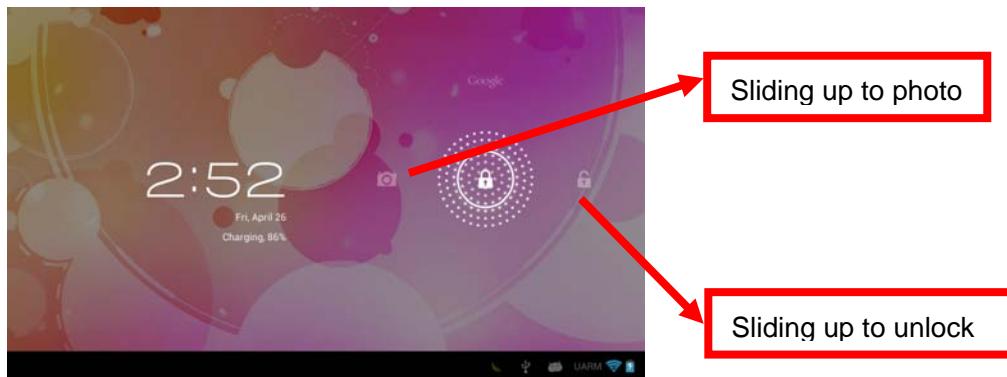

There are five main interface, sliding around can switch to a different page

Long pressing a shortcut which needs to remove, and dragged it into the icon Remove:

	USB Connected		WIFI Signal		Return
	Battery Capacity		Time		Google Search
	Voice Input		Application Menu		Home
-	Volume-/+		Running program under background		

1.2 Application list


Click  icon into applications menu:



Note:

Long pressing an application icon can add shortcut to the desktop automatically.

Click **WIDGETS** icon to view widgets:

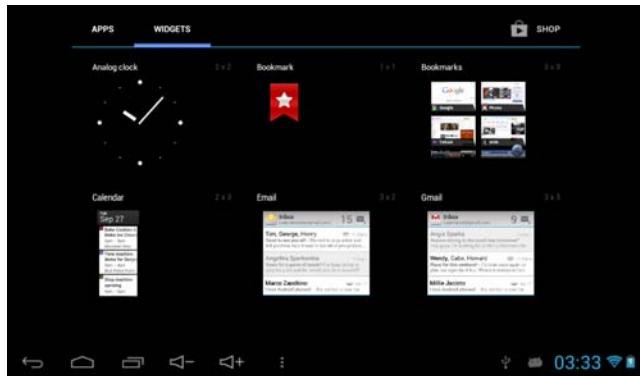

Note:


Long pressing any widgets; you can create a shortcut on the desktop

1.3 Settings

1.3.1 Wireless & networks




Click **Settings** icon, then select wireless & network:

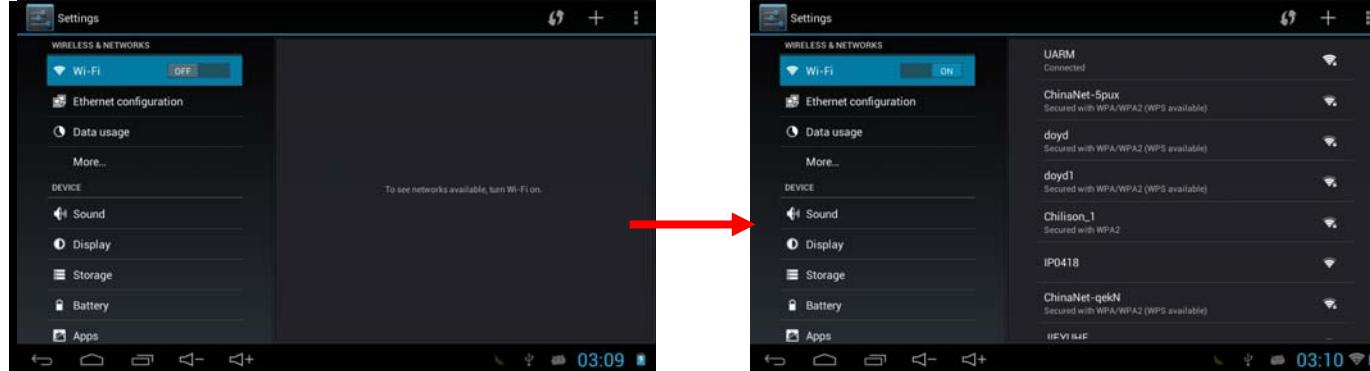

● Wi-Fi settings


Turn on Wi-Fi **ON**. Device can search for nearby Wi-Fi network automatically and display related network information. Choose the WIFI router.

If it displays locked as , you need type password to connect:

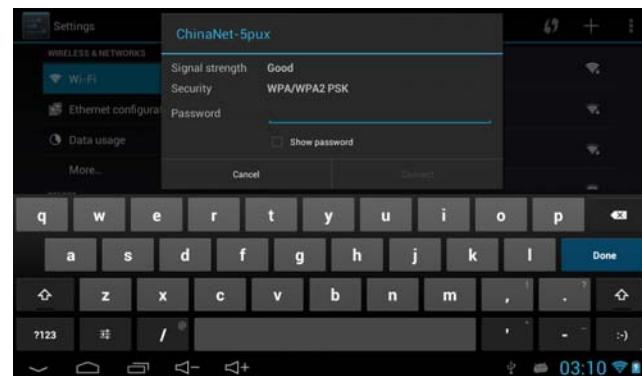


1.3.2 Sound

 ● Sound settings

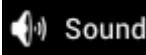Click  Sound to set volume



Click **Volumes** icon to adjust the volume

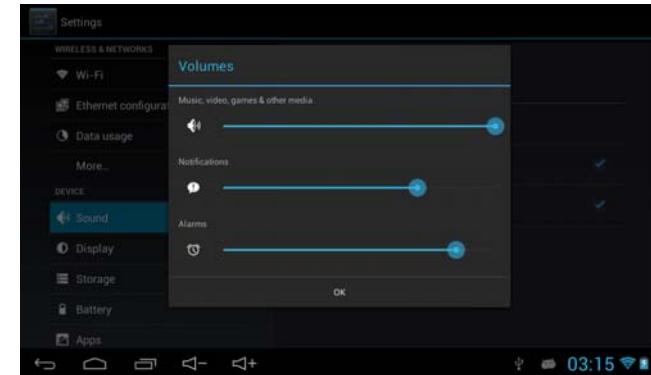

1.3.3 Display



Brightness

Brightness setting

Wallpaper

Set wallpaper

Using different direction for Gsensor Game

Game setting

Calibrate G-sensor

Calibrate

Sleep
After 10 minutes of inactivity

Set sleep interval

Font size
Normal

Adjust font size

Launcher scroll speed
fast


Choose scroll speed

1.3.4 Apps

- Manage applications



Click **Apps** into application settings interface:

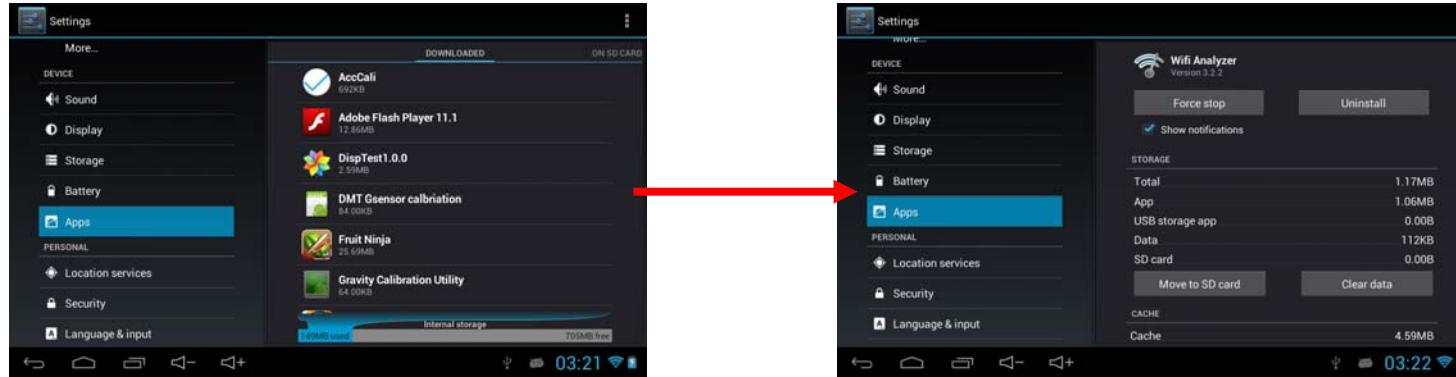


You can see application details and uninstalled programs from the system completely.

1.3.5 Language & input

- Select language




Click **Language & input** to set native language.

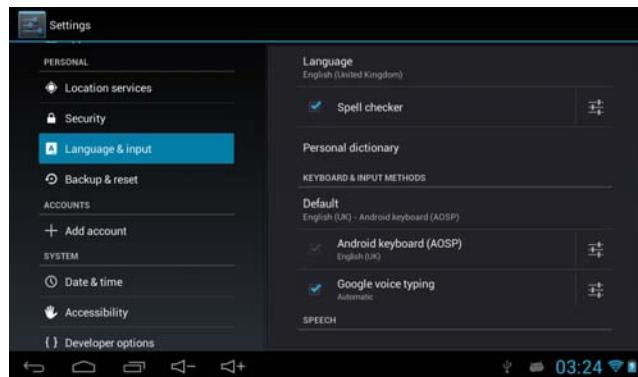

Click to select your language to display.


1.3.6 Backup & reset

Click  **Backup & reset** → **Factory data reset** → **Reset tablet** → icons restore factory settings:

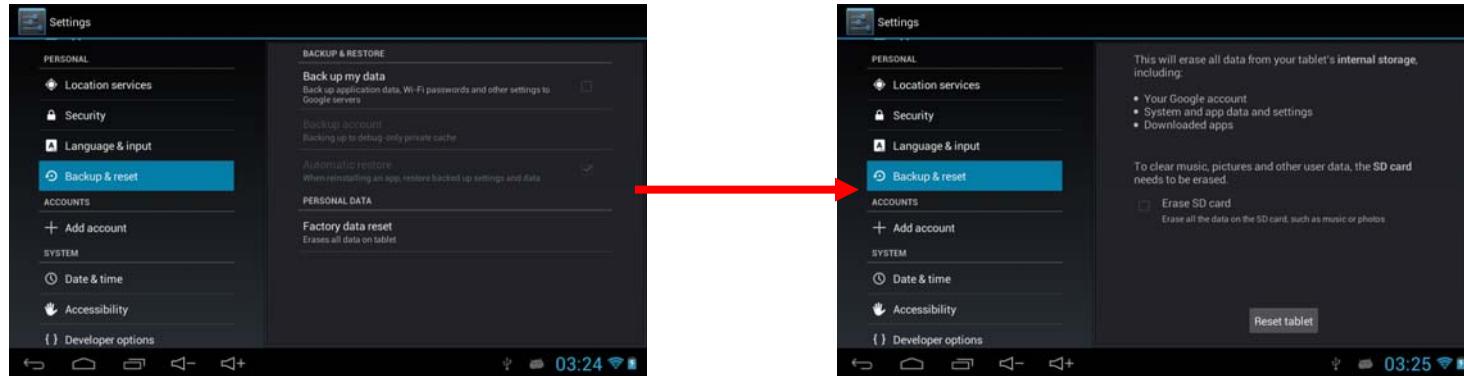

1.3.7 Date & time

Click  **Date & time** to set date and time:

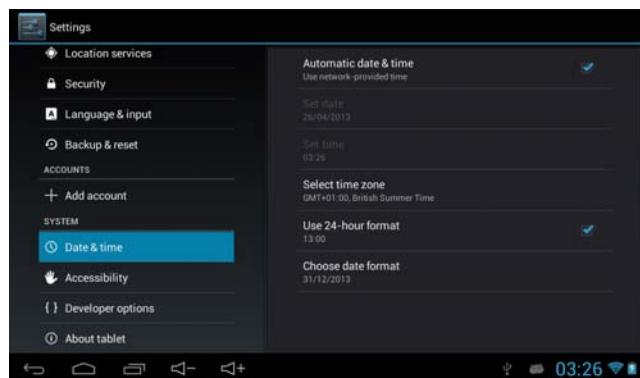

Automatic date & time
Use network-provided time

Set date

5/9/2012

Set time

06:24

Select time zone

GMT+00:00, GMT+00:00

Use 24-hour format

13:00

Choose date format

31/12/2013

Obtain the time automatically

Set current date

Set current time

Select time zone for your location

24/12 hour format

Select right date format

1.3.8 About tablet

You can check the device detail information:



1.4 HDMI

Connect television/projector with device by HDMI cable.



1.5 Video Player



Click  icon to browse picture and video:





Note: It needs some time to load all files at first time. Press one file 2S for more advanced operation.

1.6 Music




Click  icon to play music:

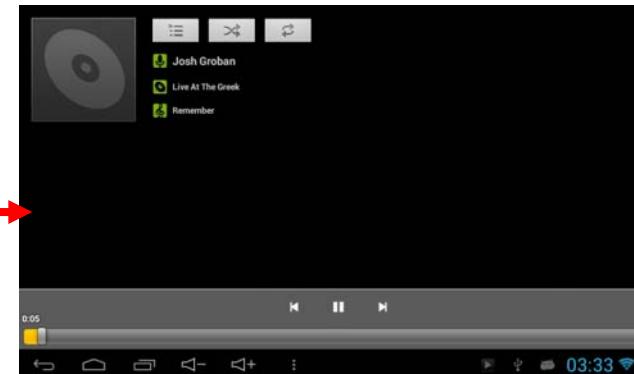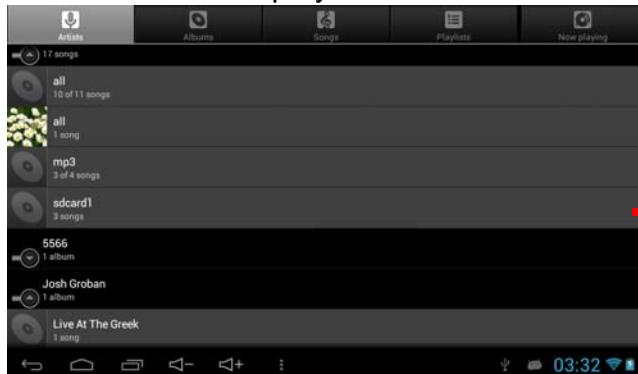

1.7 Gallery

Click  icon to browse picture:

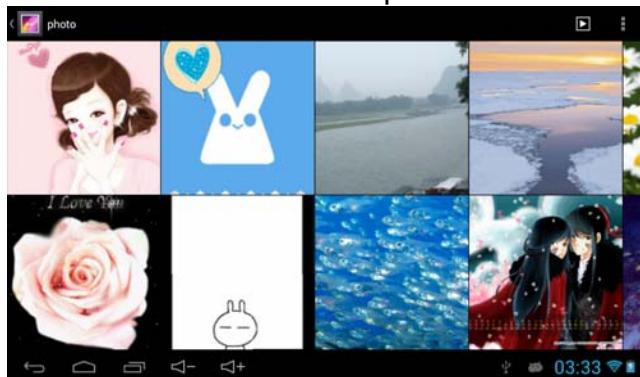

1.8 Camera

Click  icon into camera interface:



photo album



Switch camera/video recorder



Switch Front camera/ Back camera



Camera settings



Take photo



zoom out/zoom in

 


Switch view mode

1.9 Browser



Click icon to browse web page:



Google

Hong Kong



- Make sure the internet is connected.

Click address field to input other Uniform Resource Locator:



Open a new window



Close present web page

Show the hidden items



settings

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.