

Welcome!



Enjoy Wireless Sound for your Bluetooth Device

Thank you for purchasing a Powerwerks Bluetooth Mobile Speaker. Please read through this guide to help you understand all the features of this new product. We wish you many years of enjoyment with your Powerwerks wireless speaker.

Powerwerks™

**PWDBT**  
Bluetooth Mobile Speaker



**USER GUIDE**



#### Power/Charge Indicator

This light is GREEN when power is on.

This light will turn RED when the unit is plugged in and battery is charging.

When the battery falls below 20% full capacity, Red LED will flash to indicate low power. The unit will shut down after about 5 minutes of low power indication. After connecting the AC adaptor to the speaker, the battery begins charging and red LED will stay lit. The red LED will be off after fully charged.

**Please Note:** When the unit is powered ON and the battery is charging, this light will be YELLOW.

#### Power Button

Push this button to turn the Power On and Off.

#### Volume (-) and Volume (+)

The unit is set to a default volume level the first time it is powered on. Press Volume - and Volume + to adjust the music volume.

When the volume reaches the minimum or maximum level, the green LED will flash when pressing the volume buttons. If the battery runs out of power, the default volume will be restored.

#### Bluetooth Indicator

When no devices are connected to the unit, the Bluetooth Indicator will flash quickly and is waiting to pair. After paired successfully, the indicator will flash slowly with a beep. At this time you can play music through the speaker.

If the Bluetooth connection is lost, the unit will go into Reconnect Mode to try to restore the previous connection. At this time, the light uses a quick, double-flash to indicate Reconnect Mode. After the connection is restored, the light will flash with a beep. At this time, you can resume playing music using the Bluetooth connection.

#### Bluetooth Button

Pairing to the Bluetooth speaker is controlled by your Bluetooth device.

When playing music via Bluetooth connection, pushing the Bluetooth button can mute the sound and pause the music player. Push again to restart play.

Holding this button for 2 seconds or more disconnects from a Bluetooth device.



#### PAIRING TO A BLUETOOTH DEVICE

1) Power on this unit, and make sure the bluetooth indicator is in quick- flash mode

2) Make sure your Bluetooth device has the Bluetooth function enabled and find the device ID "Powerwerks" and pair it. The speaker will beep after successfully connecting.

3) To disconnect from a Bluetooth Device, hold the Bluetooth button for more than 2 seconds. The speaker will return to "waiting to pair" status. You may then pair new device with the unit.

*If the Bluetooth connection is lost for more than 15 minutes, the Bluetooth will be shutdown and the unit will power off after 2 minutes.*

#### Reconnecting to a Bluetooth Device

Reconnect Mode means the bluetooth device can connect again with this unit if its Bluetooth function is on and has been paired with this unit before.

After turning on the unit, first you can hear the initial Bluetooth sound, then another beep. This indicates the Bluetooth connection between the device and the unit has been reconnected.

During Bluetooth play, if the device has been moved far from the unit and the connection is lost, the unit will work in Long Distance Reconnect Mode. If the device moves back during the 15 minutes, the connection will be restored.

If Bluetooth connection is lost for more than 15 minutes, the bluetooth will be shutdown and the unit will power off unit after 2 minutes.

If the Bluetooth device switches off the Bluetooth function the connection will be lost. The connection can not be established automatically, it needs to be restored manually.



#### Aux In

3.5mm stereo input jack for audio devices.

Plugging into this jack disables Bluetooth audio.

#### 15V Adapter Jack

Use only the included 15V adapter for charging and powering the unit.

When power/charge indicator blinking, it means the battery power is lower than 20%, and it needs to be charged.

Charging time typically takes 2 to 2 1/2 hours. The red LED will be off after fully charged.

#### Tips for Lithium Battery Life

• It is not recommended to regularly play the speaker with the AC adapter connected.

• The standby time is about 20 days after battery is full charged. If the indicator does not turn on, use the AC adaptor to recharge battery.

• Please do not use this unit when the temperature is higher than 40 Degree Centigrade.

#### Specifications

##### AC Adaptor

**Input:** 100-240Vac 50/60Hz 0.5A

**Output:** 15Vdc 1.0A

**Maximum Power:** 2x10W

**Bluetooth Distance:** ≥20M (visible distance)

**Dimension:** 23.6cm(L) x 12cm(H) x 6.3cm(D)

**Weight:** 770g