

RADIO INTERFERENCE
- Sometimes erratic behavior or loss of control of the vehicle is the result of interference caused by high tension wires, high voltage transformer, certain types of buildings, concrete walls or narrow places where radio signals sent from your transmitter may be scattered, thus making it difficult for your vehicle to receive a good radio signal.
- If you encounter this type of behavior or loss of control, CHANGE TO A DIFFERENT LOCATION YOU WILL ENCOUNTER INTERFERENCE IF ANOTHER RADIO CONTROL VEHICLE IS OPERATING NEARBY ON YOUR SAME FREQUENCY.

CAUTION!
- After prolonged use, battery will become "HOT". Do not recharge battery pack immediately after use. Allow 20 minutes until battery has cooled before recharging.
- Avoid short circuits. Short circuits will cause overheating, burning to the wires and other damage to the battery pack, charger and user.
- The Ni-MH battery charger should be used for charging only one battery pack at a time. Do not use the charger for charging other types of batteries and battery packs.
- Do not use the battery charger as a direct power supply for other electrical products, appliances or machines.
- Make sure the battery pack and charger are kept out of reach from small children and infants at all times.
- Do not use older batteries, where the temperature is or may become extremely high, or where it is known to have overheated.
- The charger and the battery will become slightly heated while charging. Make sure to allow sufficient free space around the battery and charger when in use.
- If the battery pack is weak after proper charging, the batteries may be worn out from repeated use. Replace the battery pack with a new Ni-MH battery pack of the exact voltage and amperage.
- Dispose of the battery packs correctly. NEVER dispose of battery in a fire. Only dispose of batteries in accordance with local regulations.
WARNING: AGAINST RECHARGING OF NON-RECHARGEABLE BATTERIES. NEVER attempt to recharge non-rechargeable batteries. - This could cause an explosion and fire.
- Only use the battery charger supplied with this product to recharge the Ni-MH battery pack supplied with this product.
SPECIAL CARE AND PRECAUTIONS
- Store and operate this product away from excessive heat and moisture.
- Battery and charger are for indoor use only.

KEEP THIS MANUAL FOR FUTURE REFERENCE!

INSTRUCTIONS

TOYABI™

IT'S A TOY...
IT'S A HOBBY



CAUTION

DO NOT remove truck foam box by pulling on the PVC body. The truck should never be carried or lifted by the PVC body as well.



CAUTION

* Not recommended for children under 8 years old. As with all remote control vehicles, there is a risk of injury from the vehicle hitting and/or the user or remote control itself.
* Do not use the vehicle near water, as water damage may be performed by the vehicle.
* Keep all electrical parts and batteries away from water.
* Do not use the vehicle near children under 8 years old and other children. Don't lets children (borders, children, adults or teenagers) touch the vehicle.
* Do not drive the vehicle into people or animals.
* Do not use the vehicle in areas with sharp objects. Surface injury can result.
* Battery must be recharged or disposed of properly.
Notes:
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

MADE IN CHINA

OPERATING THE TRANSMITTER

Most R/C products advise you to avoid, dirt, grass, rocks, sand, or puddles. With your new TOYABI Monster Truck, hit some dirt, grass, rocks, sand, or puddles and go for it! Just be sure to be operating on the safety of the terrain. (Always on smooth surfaces, never on rocky or bumpy terrain.)

HOLD TRANSMITTER WITH BOTH HANDS

- Forward:
Using both thumbs, push the right and left Steering and Throttle Controllers forward at the same time to go forward.

- Reverse:
Push the right and left Steering and Throttle Controllers back at the same time to go in reverse.

- Turn Right:
Push only the right Steering and Throttle Controller to turn right.

- Turn Left:
Push only the left Steering and Throttle Controller to turn left.

*When steering the vehicle while it is coming toward you, remember left and right are reversed!

SPECIAL DRIVING FEATURES!

* 360 DEGREE SPINNING ACTION OR "DONUTS":
Push the right Steering and Throttle Controller forward and pull the left Steering and Throttle Controller back to make the vehicle spin in a circle to change the spinning direction.

KEEPING ROLL OVER - SWERVE!

While driving forward or in reverse, momentarily releasing the right or left Steering and Throttle Controller will allow the vehicle to veer in that direction. *This is especially useful for making slight corrections to the driving direction.

*ADVANCED DRIVING SKILLS!

* What is it?
While driving forward or in reverse at full speed, immediately changing the direction of both Steering and Throttle Controllers will cause your vehicle to stand up on two wheels. This is referred to as "Popping a wheelie".

*TOP ROCKS!

*Practice different combinations using the Steering and Throttle Controllers to develop pinpoint driving skills and compete against your friends! With practice you can pop wheels and stand your vehicle on its rear wheels, then spin it around!

*By slowly bumping your vehicle into a wall, you can literally climb the wall placing your vehicle on its front bumper!



RECHARGING

WARNING: RECHARGE UNDER THE DIRECT SUPERVISION OF AN ADULT*

*Your new Ni-MH battery pack is not charged. Please charge the battery pack before use.

1. Connect the wall charger to the Ni-MH battery pack paying attention to the polarity. Do not force the connection.

2. Plug the wall charger into an electrical outlet of the same voltage as the wall charger.

3. Recharge for 1 to 3 hours.

4. When charging is complete, first remove the wall charger from the electrical outlet, and then detach the connector from the battery pack.

Battery characteristics and charging tips

*When playing for the first time or after product has not been used for long intervals, the battery pack may be weak. Even after recharging the playing time may be relatively shorter than desirable. The battery will gradually regain longer usability after 2 or 3 uses.

*DO NOT overcharge your battery pack. This will not improve running time and could cause serious damage to your battery and charger.

*WARNING: The charger is not a toy and is not intended for use by children under 8 years old.

*Inspect the charger regularly, especially the wires (leads) and connectors. Do not use if there is any sign of damage.



Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

*BE CAREFUL NOT TO PINCH THE WIRES WHEN CLOSING THE COVER. THIS COULD CAUSE A SHORT CIRCUIT RESULTING IN A DANGEROUS SITUATION, WHICH COULD CAUSE A FIRE AND DAMAGE TO THE VEHICLE.

RECHARGING

WARNING: RECHARGE UNDER THE DIRECT SUPERVISION OF AN ADULT*

*Your new Ni-MH battery pack is not charged. Please charge the battery pack before use.

1. Connect the wall charger to the Ni-MH battery pack paying attention to the polarity. Do not force the connection.

2. Plug the wall charger into an electrical outlet of the same voltage as the wall charger.

3. Recharge for 1 to 3 hours.

4. When charging is complete, first remove the wall charger from the electrical outlet, and then detach the connector from the battery pack.

BATTERY & CHARGER

BATTERY

Rechargeable Battery

CHARGER

Plug in Charger

□ Reorient or relocate the receiving antenna.
□ Increase the separation between the equipment and receiver.
□ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

□ Consult the device or experienced radio/TV technician for help.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Shielded cables must be used with this unit to ensure compliance with the Class B FCC limits