 


Frio Speaker Cooler

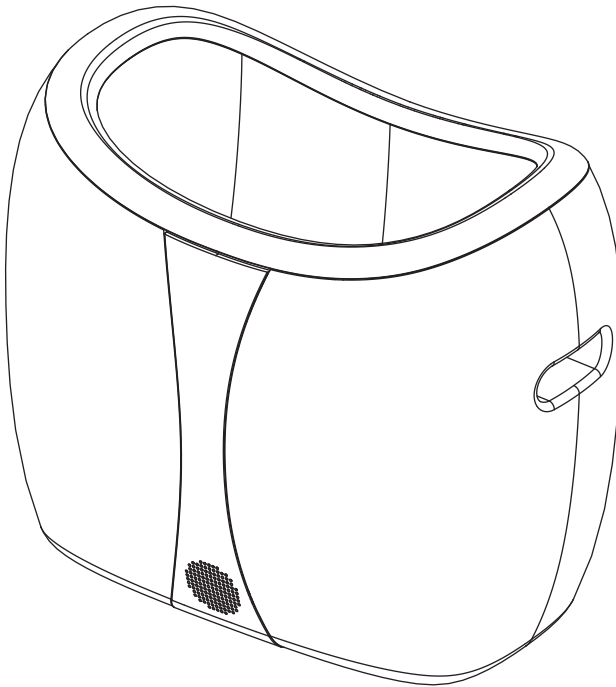

Please read these instructions carefully before using and keep for future reference.

Imported By: Forward Industries, 33401. U.S.A

Issue 1-24/07/20

Technical Specification

Ambient temperature for operation:	-14° C to 35° C
LEDs:	12pcs RGB+9pcs White, 7 Colours
LEDs Rated Watt:	0.2W max per piece
Battery:	7.4V Lithium 2000mAh
Remote control battery:	CR2025 (3V)
Remote control effective distance:	3.15~3.94 inches
Charging time:	around 4 hours
Operation time:	Light only up to 10hrs, 60% volume + Light around 5.5hrs
Charger - USB Cable	Input: 5V
Speakers:	2x12W base + 2x6W tweeters
IP protection:	Speaker: IP44 USB cable: IP20
Classification of radiation:	EN 55032, EN55035, EN61000-3-2, EN61000-3-3

Contents


- | | |
|--------------------------------|----------------------|
| 1. Speaker Cooler x1 | 3. Remote control x1 |
| 2. USB cable charging cable x1 | 4. User manual x1 |

Battery Charging

1. Please charge the battery fully before first use.
2. Connect your USB adapter (Use Output 5V ONLY!) to the speaker using the charge port on the underside of the light. During battery charging the indicator will be red.
3. Charge the speaker until the indicator light is off. Cover the charge port after it is fully charged.
4. After the battery has been charged, turn on the speaker using the ON/OFF button on the underside. The indicator should be blue. Then follow Bluetooth function instructions.

NOTE:

 1. The built-in battery is not replaceable. Please do not remove or replace it in the trash. If you must dispose of this speaker, bring it to your local recycling center.
2. Disconnect the external adapter from the charge port when not in use or when the speaker is fully charged.

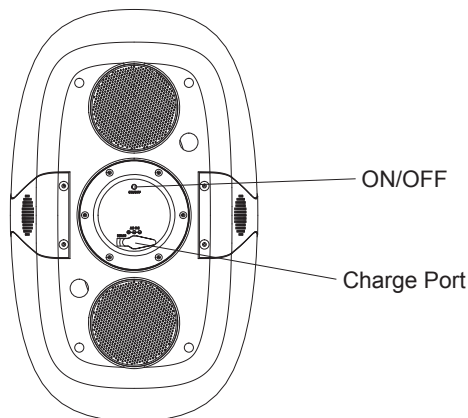

Bluetooth Function

1. Make sure the battery is fully charged before attempting to connect the first time.
2. For stereo sound, it is possible to connect and pair up to 2 speakers to your device at the same time.
3. To connect the 1st speaker, press the ON/OFF button on the bottom of the speaker. There will be an audible activation beep and the blue indicator light will flash.
4. On your phone/smart device, turn Bluetooth to ON and select "KBPB Speaker Cooler" from the device list. Once your device is connected, you will hear a second audible beep from the speaker and the indicator light will be blue.

PAIRING Max. 2pcs:

- 1) To connect with the 2nd speaker, press and hold the ON/OFF button on both speakers. You will hear a beep sound from the speakers. The one on which the Bluetooth indicator light flashes rapidly, will be the main unit. The other one will flash slowly, to become the secondary unit.
- 2) Now repeat Point 4 above to connect the Bluetooth on your phone. Once connected, the Bluetooth indicator light of the main speaker will stay blue. Both indicator lights will turn off automatically when music is playing.
- 3) To cancel the pairing, press and hold the ON/OFF button until a beep is heard.
- 4) To turn off the Bluetooth function, press the ON/OFF button.

TROUBLESHOOTING

1. Under Pairing mode, short press the ON/OFF button on the main unit. The secondary unit's music will be off but the light is on; Turn off the secondary unit, the main unit's music and light will keep working individually and out of the pairing mode in 10 seconds.
2. To switch the Main unit setting, disconnect the Bluetooth in your device list firstly and then long press the ON/OFF on the new unit that you want to be the main unit.
3. If your Bluetooth device is more than 30ft away from the main speaker, they will disconnect. If you move the main speaker within 30ft, then they can be paired automatically and resume playing music. If you move the secondary speaker more than 30ft(10 m) away from Bluetooth device and within 19ft of the main speaker, the secondary can still play music. If you move secondary more than 19ft away from the main unit, it can not play music. They can pair automatically and play music again when you move it back within 19ft.
4. This LED BT Speaker Light has a memory storage function (if the batteries are not fully exhausted), when you turn on speaker, the light and speaker will maintain the same settings and pairing as the last time used. If the battery is exhausted there will be no memory storage function and you will need to pair the speakers.

SETTING TIMER


The Timer function allows the product to automatically turn off after a set amount of time. In order to set the timer, press the TIME Button (located on the Remote Control) once to change color, each color indicates a different Timer Duration. The Speaker will stay lit the LED Color that is chosen for the entire Timer Duration. Follow the Guide Below:

LED Color	Timer Duration
Red	30 min.
Green	60 min
Blue	90 min
Yellow	120 min.
Light Blue	150 min.
Pink	180 min.

Note: To deactivate the Timer, Press the ON/OFF Button

Remote control

 Before using the remote control remove the small plastic sheet from the battery cover.

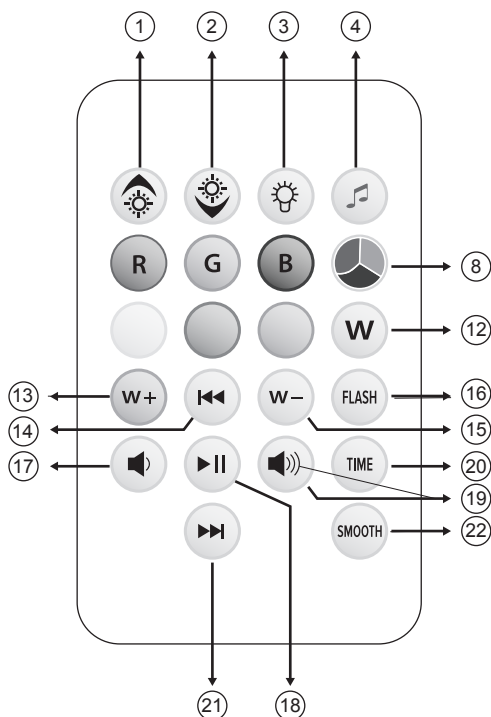

- 1 Brightness Up
- 2 Brightness Down
- 3 LED ON/OFF
- 4 Bluetooth-See CONNECTING VIA BLUETOOTH
- 5 Red LED
- 6 Green LED
- 7 Blue LED
- 8 Manually Switch LED Color
- 9 Yellow LED
- 10 Light Blue LED
- 11 Pink LED
- 12 Warm White LED
- 13 Warm LED-Increase White
- 14 Previous Track
- 15 Warm LED-Decrease White
- 16 Flash-Dancing LED Colors along with Music
- 17 Volume Down
- 18 Play/Pause
- 19 Volume Up
- 20 Time-See SETTING TIMER
- 21 Next Track
- 22 Smooth-Automatic Smooth Transition of LED Colors
- 23 Remote control effective distance: 8-10 meters

REPLACING REMOTE CONTROL BATTERIES

- Removing the old battery by pressing the tab on the side of the battery cover and then sliding off the cover from the remote control.
- Take notice of the positive (+) and negative(–) direction of the battery. Make sure that the new battery (CR2025) is inserted the right way.
- Dispose of the old battery responsibly.

Warnings and Cautions

These products and their packaging are not toys; please keep out of reach of children.

- The remote control and USB Cable/charger are not waterproof and must be kept in a dry location at all time.
- Never charge the product in a pool, water or rain; charge in a dry, indoor location.
- Disconnect the power adapter from main power outlet when not in use.
- Do not stand or jump on this product.
- Do not sit on this product if it is cracked or damaged.
- Keep the product away from chemicals and heat.
- Do not attempt to disassemble the product.

Outdoor Use:

- The external adapter should not be used outdoor, not exposed to rain, humidity, any liquid, or heat.
- The remote control should not be exposed to rain, humidity, any liquid, or heat.
- Do not use these products outdoors if they are cracked or damaged;
- Never charge this product outdoor.
- Floating Pool speaker has a waterproof level of protection, but should NOT be fully submerged as it may damage the speaker/light.

General Care:

It is recommended that after use the products are turned off, rinsed using clean water and dried using a soft cloth. Store these products out of reach of children and direct sunlight when not in use.

Care of the environment



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Warranty Information

- 1 year for electronic part
- 2 year for housing

After Sales Support / Product Returns

If you have questions regarding the operation of your purchase, or in the unlikely event you need to return the unit because it is faulty or is no longer wanted, please contact our product returns department at customerservice@forwardindustries.com, or 561-465-0030, Option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401



 
FCC Information

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

Frio Speaker Cooler

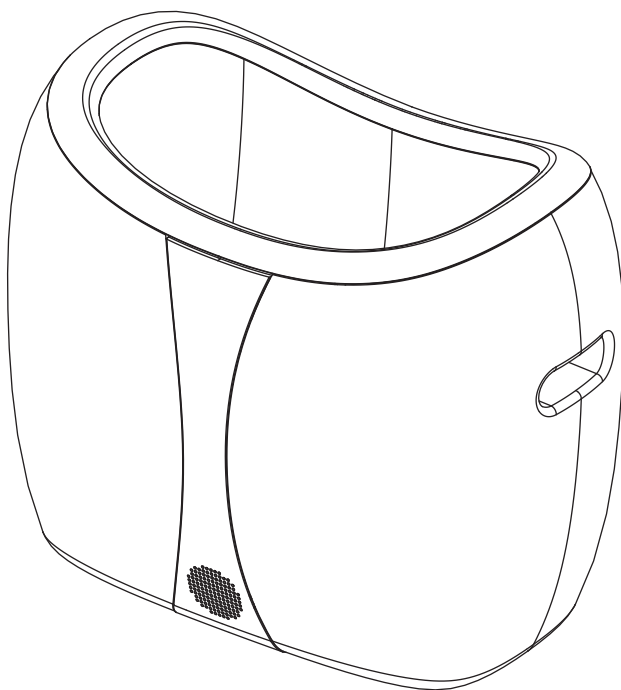

Please read these instructions carefully before using and keep for future reference.


Imported By: Forward Industries, 33401. U.S.A

Issue 1-24/07/20



LED:
12pcs RGB +
9pcs White,
2.4W MAX
Speakers:
2x12W base +
2x6W tweeters

 IP20

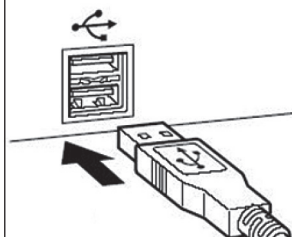

Le chargeur et la télécommande ne sont pas étanches et doivent être gardés à l'intérieur dans un endroit sec. Ne pas charger ce produit à l'extérieur.

The charger and the remote control are not waterproof and must be kept indoor in a dry location at all time. Never charge this product outdoors.

Batterie rechargeable (lithium)	7.4V Lithium 2000mAh
Radio fréquence	2.402GHz-2.480GHz
Puissance max de la fréquence radio	MAX +4DBM
Pile de la télécommande	CR2025 (3V)
Distance d'utilisation maximale de la télécommande	3.15~3.94 inches
Durée de charge	4-5 h
Alimentation chargeur	5V 0,5-2A
Durée d'utilisation	4 à 6 heures en fonction de l'éclairage et de l'intensité sonore

Avant la première utilisation, chargez le produit pendant 6 à 8 heures.

L'indicateur de charge LED est rouge pendant la durée de charge et devient s'éteint lorsque le produit est complètement chargé.

Débranchez l'adaptateur lorsqu'il n'est pas utilisé ou lorsque l'enceinte est complètement chargée.

Refermez l'alimentation du chargeur une fois qu'il est complètement chargé.

Avant d'utiliser la télécommande, retirez la petite feuille de plastique du couvercle du compartiment à piles.

Le produit ne doit PAS être complètement immergé car cela pourrait l'endommager.

CONNEXION VIA BLUETOOTH/CONNECTING VIA BLUETOOTH

1. Assurez-vous que l'enceinte est sous tension et complètement chargée avant de tenter de vous connecter pour la première fois.

Make sure the Speaker is powered ON and fully charged before attempting to connect the first time.

2. Appuyez brièvement sur le bouton ON/OFF au bas de l'enceinte ou appuyez sur la touche Bluetooth (4) de la télécommande. Il y aura un bip sonore d'activation et le voyant lumineux clignotera.

Short press the ON/OFF button on the bottom of the speaker or Press the Bluetooth Key (4) on the Remote control. There will be an audible activate beep and the indicator light will flash.

3. Sur votre téléphone, activez "Bluetooth" et sélectionnez "KBPB Speaker Cooler" dans la liste de vos appareils Bluetooth. Une fois le périphérique connecté, vous entendrez un second bip sonore de l'enceinte et le voyant sera éteint.

On your phone, turn Bluetooth to "ON" and select "KBPB Speaker Cooler" in your Bluetooth device list. Once device is connected you will hear a second audible beep from the speaker and the indicator light will be off.

4. **COUPLAGE:** Pour vous connecter à une autre enceinte, maintenez enfoncé le bouton ON/OFF des deux enceintes jusqu'à ce que le bip d'activation sonne, l'enceinte principale (son voyant lumineux clignote rapidement) essaiera d'apparier avec la seconde (son voyant lumineux clignote lentement). Une fois couplé, vous devriez entendre un autre bip et le voyant de la première enceinte reste bleu, le voyant de la seconde clignote lentement. Lors de la lecture de la musique, les voyants sont éteints. Pour annuler le couplage, maintenez le bouton ON/OFF enfoncé. Un bip retentira.

PAIRING: To connect with another speaker, press and hold the ON/OFF button on both speaker until the activate beep comes out, the master one (its indicator light quick flash) will try to pair with the vice one (its indicator light slow flash). Once paired, you should hear another beep and the master's indicator light keep blue, the vice's indicator light slow flash. When playing the music, the indicator lights will be off. To cancel the pairing, press and hold the ON/OFF button. A beep will be heard when canceling the pairing.

5. Pour éteindre l'enceinte, appuyez brièvement sur le bouton ON/OFF.
To turn off the speaker, short press the ON/OFF button.

SUPPORT TECHNIQUE/TROUBLESHOOTING

1. En mode couplage, appuyez brièvement sur le bouton ON/OFF de l'enceinte principale. La musique de l'autre sera éteinte mais le témoin est allumé. Désactivez la seconde enceinte, la musique et la lumière de l'enceinte principale continueront de fonctionner individuellement et hors du mode couplage pendant 10 secondes.

Under Pairing mode, short press the ON/OFF button on the master speaker, the vice one's music will be off but the light is on; Turn off the Vice speaker, the master's music and light will keep working individually and out of the pairing mode in 10 seconds.

2. Pour changer le réglage de l'enceinte principale, déconnectez d'abord le Bluetooth de votre liste d'appareils, puis appuyez longuement sur ON/OFF sur le nouvel appareil dont vous souhaitez qu'il soit le principal.

Switch the Master setting, disconnect the Bluetooth in your device list firstly and then long pressing the ON/OFF on the new one that you want it to be the master.

3. Cet appareil possède une fonction de stockage de mémoire (si la batterie n'est pas complètement épuisée). Lorsque vous allumez l'enceinte, la lumière et le haut-parleur conservent les mêmes paramètres et le même couplage que lors de la dernière utilisation. Si la batterie est épuisée, il n'y aura pas de fonction de stockage de mémoire et vous devrez coupler l'enceinte avec une autre.

This LED BT Speaker Light has a memory storage function (if the batteries are not fully exhausted), when you turn on speaker, the light and speaker will maintain the same settings and pairing as the last time used. If the battery is exhausted there will be no memory storage function and you will need to pair the speaker with another speaker.

REGLAGE DE LA MINUTERIE/SETTING TIMMER

La fonction Minuterie permet au produit de s'éteindre automatiquement au bout d'un certain temps. Pour régler la minuterie, appuyez une fois sur le bouton TIME (situé sur la télécommande) pour changer de couleur. Chaque couleur indique une durée différente de la minuterie. L'enceinte restera allumée avec la couleur de LED choisie pendant toute la durée de la minuterie.

Pour désactiver la minuterie, appuyez sur le bouton ON/OFF.

The Timer function allows the product to automatically turn off after a set amount of time. In order to set the timer, press the TIME Button (located on the Remote Control) once to change color, each color indicates a different Timer Duration. The Speaker will stay lit the LED Color that is chosen for the entire Timer Duration.

To deactivate the Timer, press the ON/OFF Button.


couleur de LED/LED color	Durée de la minuterie/Timer duration
Rouge/Red	30 min.
Vert/Green	60 min
Bleu/Blue	90 min
Jaune/Yellow	120 min.
Bleu clair/Light blue	150 min.
Rose/Pink	180 min.

Après utilisation, il est recommandé d'éteindre le produit, de le rincer à l'eau claire et de le sécher avec un chiffon doux. Rangez-le hors de la portée des enfants et de la lumière directe du soleil lorsqu'il n'est pas utilisé.

It is recommended that after use the product are turned off, rinsed using clean water and dried using a soft cloth. Store these product out of reach of children and direct sunlight when not in use.

TELECOMMANDE/REMOTE CONTROL

 Before using the remote control remove the small plastic sheet from the battery cover.

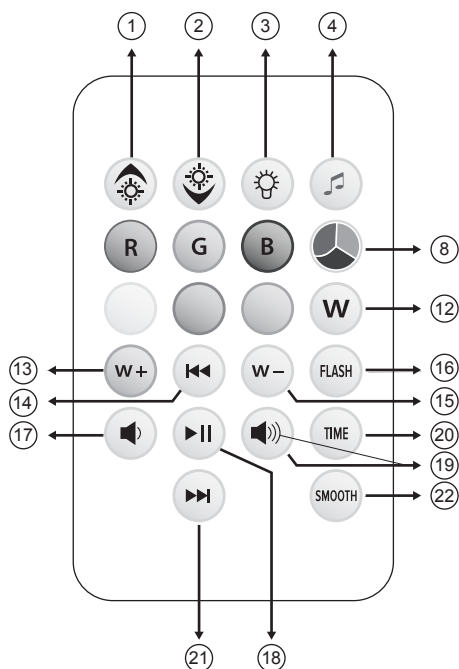

- 1 Augmenter la luminosité/Increase brightness
- 2 Diminuer la luminosité/Decrease brightness
- 3 LED ON/OFF
- 4 Bluetooth - Voir CONNEXION VIA BLUETOOTH/
See CONNECTING VIA BLUETOOTH
- 5 LED rouge/Red LED
- 6 LED verte/Green LED
- 7 LED bleue/Blue LED
- 8 Changer manuellement la couleur des LED/
Manually change LED color
- 9 LED jaune/Yellow LED
- 10 LED bleu clair/Light blue LED
- 11 LED rose/Pink LED
- 12 LED blanche/Warm White LED
- 13 Augmenter la blancheur/Increase whiteness
- 14 Piste précédente/Previous track
- 15 Diminuer la blancheur/Decrease whiteness
- 16 FLASH - Les couleurs de LED changent avec la
musique/LED colors change with music
- 17 Diminuer le volume/Decrease volume
- 18 Play/Pause
- 19 Augmenter le volume/Increase volume
- 20 TIME - Voir REGLAGE DE LA MINUTERIE/See
SETTING TIMER
- 21 Piste suivante/Next track
- 22 SMOOTH - Transition automatique en douceur
des couleurs de LED/Automatic smooth transition
of LED colors

REEMPLACEMENT DES PILES DE TÉLÉCOMMANDE

- Retirer l'ancienne pile en appuyant sur la languette située sur le côté du couvercle de la batterie, puis en faisant glisser le couvercle de la télécommande.
- Prenez compte du sens positif (+) et négatif (-) de la batterie. Assurez-vous que la nouvelle batterie (CR2025) est insérée dans le bon sens.
- Éliminez l'ancienne batterie de manière responsable.

Avertissements et mises en garde

Ces produits et leur emballage ne sont pas des jouets; S'il vous plaît garder hors de la portée des enfants.

- La télécommande et le câble / chargeur USB ne sont pas étanches et doivent être conservés dans un endroit sec à tout moment.
- Ne chargez jamais le produit dans une piscine, dans l'eau ou sous la pluie; charger dans un endroit sec et intérieur.

- Débranchez l'adaptateur secteur de la prise de courant principale lorsqu'il n'est pas utilisé.
- Ne vous tenez pas debout ou ne sautez pas sur ce produit.
- Ne vous asseyez pas sur ce produit s'il est fissuré ou endommagé.
- Gardez le produit à l'écart des produits chimiques et de la chaleur.
- N'essayez pas de démonter le produit.

Utilisation en extérieur:

- L'adaptateur externe ne doit pas être utilisé à l'extérieur, à l'abri de la pluie, de l'humidité, de tout liquide ou de la chaleur.
- La télécommande ne doit pas être exposée à la pluie, à l'humidité, à aucun liquide ou à la chaleur.
- N'utilisez pas ces produits à l'extérieur s'ils sont fissurés ou endommagés;
- Ne chargez jamais ce produit à l'extérieur.
- L'enceinte de piscine flottante a un niveau de protection étanche, mais ne doit PAS être complètement immergée car elle pourrait endommager l'enceinte / la lumière.

Soins généraux:

Il est recommandé qu'après utilisation, les produits soient éteints, rincés à l'eau claire et séchés à l'aide d'un chiffon doux. Conservez ces produits hors de portée des enfants et de la lumière directe du soleil lorsqu'ils ne sont pas utilisés.

Soin de l'environnement



Votre produit contient des piles couvertes par la directive européenne 2006/66 / CE, qui ne peuvent pas être jetées avec les ordures ménagères normales. Veuillez vous informer des règles locales relatives à la collecte séparée des piles car une élimination correcte permet d'éviter des conséquences négatives pour l'environnement et la santé humaine.



Lorsque ce symbole de poubelle sur roues barrée est attaché à un produit, cela signifie que le produit est couvert par la directive européenne 2002/96 / CE. Veuillez vous renseigner sur le système de collecte sélective local pour les produits électriques et électroniques. Veuillez agir selon vos règles locales et ne jetez pas vos anciens produits avec vos ordures ménagères normales. Une élimination correcte de votre ancien produit aide à prévenir les conséquences négatives potentielles pour l'environnement et la santé humaine.

Service après-vente / retours de produits

Si vous avez des questions concernant le fonctionnement de votre achat koble, ou dans le cas peu probable où vous auriez besoin de retourner l'unité car elle est défectueuse ou n'est plus souhaitée, veuillez contacter notre service de retours de produits à www.koble@forwardindustries.com, or (561) 465-0030, option 0.

Address: Forward Industries, 105 South Narcissus Avenue Suite 412, West Palm Beach, FL 33401

FCC Information

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.