



Quick Start

Button Functions

Gaming Mode	Video Mode	Bottom Panel
1 Left Click	1 Left Click	8 Off / On / LED Switch
2 Right Click	2 Right Click	9 250Hz / 500Hz
3 Scroll Wheel	3 Volume Adjust	Video Mode Switch
4 Double-Click	4 Play / Pause	10 Optical Sensor
5 Page Up	5 Fast Forward	11 Battery Compartment
6 Page Down	6 Rewind	12 No-Slip Feet
7 DPI Adjust	7 Screen Clear	

Gaming Mode

To use the Mouse in Gaming Mode, make sure the Mouse is "On," and the mode switch is set to "250Hz" or "500Hz."

Video Mode

To use the Mouse in Video Mode, make sure the Mouse is "On," and the mode switch is set to "Video Mode."

4 Double Click
Use the turbo double click button to rapidly click without additional left clicks.

5 / 6 Page Up / Page Down
Side buttons allow you to quickly scroll through content.

7 DPI Adjust
Cycle through 4 DPI settings to customize the Mouse to your preferred sensitivity – use 800, 1600, 2400, or 4000DPI.

9 250Hz – 500Hz
Adjustable polling rate lets you customize the speed of data transmission between your computer and the Mouse.

4 Play / Pause
While in Video Mode, use this button to play or pause video.

5 Fastforward / Rewind
Use the side buttons to fastforward or rewind video.

9 Video Mode Switch
Video mode allows you to control videos in various video programs.

3 Volume Adjust
Using the scroll wheel in Video Mode lets you adjust the volume.

7 Screen Clear
The Screen Clear buttons minimizes all windows and takes you to the desktop.

Troubleshooting

Q1: Mouse is not functioning.
1. Ensure that the batteries are installed correctly in the compartment.
2. Try a different USB port on your computer.
3. Check that the power switch is set to either "On" or "Light" mode.

Q2: Power Saving
The Edge Mouse uses a power-saving chip that allows for a battery life 5 times that of an ordinary wireless mouse. The Mouse can standby for over 36 months. The Mouse will enter standby mode after a half hour of no operation, consuming only 0.0005mA

Q3: Mouse Drift
If you experience the cursor drifting when using the Mouse, perform the following steps to alleviate the problem:
1. Open "Control Panel"
2. Click the "Mouse" icon
3. Select "Pointer option"
4. Uncheck "enhance pointer precision"

Specifications

Data Rate:	1Mbps
Frequency:	2402.3MHz ~ 2480.3MHz
Channel:	32
Range:	98ft
Voltage:	3V
Current:	15mA
Size:	4.6" x 2.9" x 1.6"
Weight:	4.2oz
Working Current:	15mA
Standby Current:	1.3mA
Dormant Current:	50uA
Polling Rate:	250Hz-500Hz
Acceleration:	20G
Resolution:	800/1600/ 2400/4000 DPI

System Requirements

- USB Port
- Windows 2000/ME/XP/Vista/7/8
- Mac OSX >v10.4

Warranty Information

Limited Warranty

Satechi warrants this product to be free from defects in materials and workmanship for 1 year. If this product is found to be defective within that time, we will repair or replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Satechi liable for loss of, or damage to devices; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Satechi has been informed of their possibility. This warranty does not affect your statutory rights.

If you have any questions, comments, or concerns about your Satechi product, please contact us first.

Phone: 858-268-1800
Email: sales@satechi.com
www.satechi.net

©2014 SATECHI

FCC Statement
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.