


Crop

- Click menu key to display menu selection.
- Then click crop, click and drag related area to adjust the cropper.
- Click cropper and drag it inside and outside to adjust the image.
- After adjust the size you want, click crop.
- If you wish to give up to crop, click cancel to return to picture browse.

Edit

- Click menu key, display the menu selection.
- Click edit.
- Adjust the brightness, style, color, antialias setting in selection.
- Click save.
- If you want to give up to edit, click return key, click not to return to picture browse.

5.4 Camera

In the main interface or desktop, click camera application procedure  enter into camera

- Operation of camera. Switch camera: choose Menu key, click switch front/back camera, as Picture 5.4

Picture 5.4




6. Communication Function

6.1 Phone

- 1 Click Phone application procedure
- Operate as Picture 6.1

 Picture 6.1

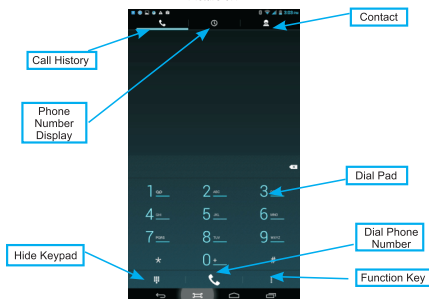

3.8 Typing Words

Use the screen keyboard

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:

- Android keyboard
- Google voice typing

3.9 Operation Technique

Enter widgets interface

In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Reminder: If the target position has no space, the widget won't be add in the main screen.


4. Basic Setting

4.1 SIM Management

4.1-1 Voice call


Click settings in main menu, choose SIM Management, as Picture 4.1

 Picture 4.1

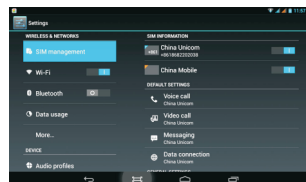

Click voice call, choose defaulted SIM card, as Picture 4.2

 
Picture 4.2

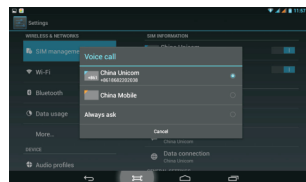

4.1-2 Video Call

Click settings in main menu, choose SIM Management, and click video call, choose default SIM card when makes video call, as Picture 4.3

 
Picture 4.3

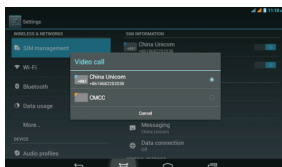

4.1-3 Message

Click settings application in main menu, choose SIM Management, click messaging choose the default SIM card when sends message, as Picture 4.4

 
Picture 4.4

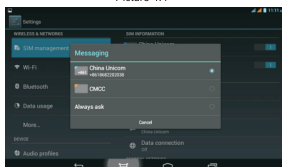

4.1-4 Data Connection

Click setting application in main menu, choose SIM management, click data connection, choose the default SIM card, as Picture 4.5

 
Picture 4.5

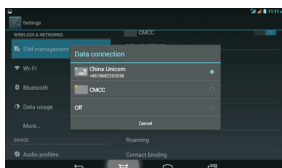

4.2 Wireless and Internet

1. Connect Wi-Fi

 
- In the main menu or interface, choose setting application procedure.
- Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 4.6
- Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

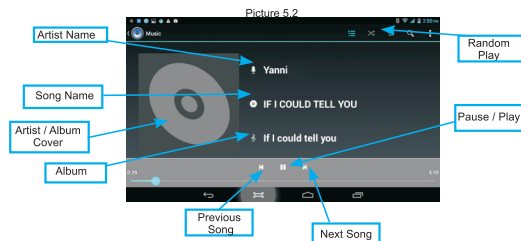

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.2

5.2 Video

 - Enter video player: choose application in main menu, choose the video you want to play.
- Operation of video player button as Picture 5.3

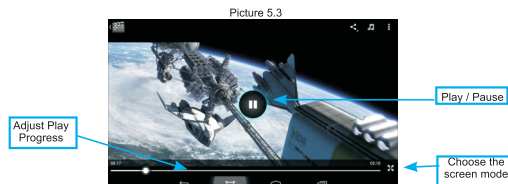

5.3 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

- Click gallery application in main interface.
- Enter into gallery, click the folder you want to view.
- Click the picture you want to view, the system will play it in full screen mode automatically.
- The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers (gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

Slide Show

- Open a picture, use virtual key to click menu key, display menu selection.
- Click slide show, it will auto loop play (or choose button in picture folder)

4.19 Developer Options

4.19-1 USB Adjustment

- After opening USB adjustment, you can use some software to read MID software, but when USB adjustment is turned on, USB storage needs to manual adjust.

4.19-2 Keep awoken state

- If you open keep awoken state, it will never auto sleep when your MID is charging.

4.19-3 Pointer Location

- If you open pointer location, it will display touch vertical and horizontal direction.

4.19-4 Show touches

- If you open display touch screen operation, it will display touch operation on the screen. It is suggested to use with same direction as pointer location.


4.19-5 Show screen update

- If you open screen refresh, it will display related area when the area is refreshing.

4.19-6 Show CPU usage

- After open CUP usage, in the right top of MID will show CPU usage situation.

 Picture 4.51

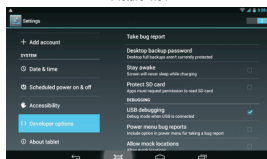

4.20 About Tablet

Check MID state


- Check Setting application.
- Click about tablet, check state message, model, Android version, version No and so on.
- Click state message, check battery state, battery volume, SIM state, IMEI number, IP address.

5. Multi-Media

5.1 Music

- Enter into music player: in menu or desktop click music icon to enter into music player, click the music you want to play, as Picture 5.1

 Picture 5.1

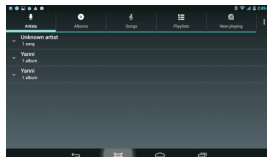


Picture 4.6



2.Add Network

- Click  icon in right top, as Picture 4.7

 Picture 4.7

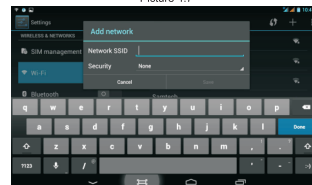

- Input network SSID, the wireless network name, click save.
- Click user name already saved, click connect to use network, as Picture 4.8


Picture 4.8




3. Network Notice

- If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 4.6

4.Keep Wi-Fi on during sleep...

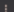- Click  icon in right top of Picture 4.8, select advanced.
- Click Keep Wi-Fi on during sleep, as Picture 4.9

 Picture 4.9

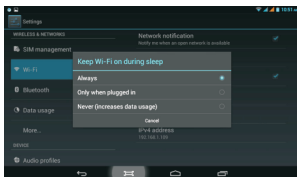



4.3 Bluetooth

Bluetooth function operation

- Click Setting in main menu interface—Click Bluetooth and open it.
- If somebody opens bluetooth in your surroundings, click search device in right above, then MID will automatically search the bluetooth device nearby. As picture 4.10

 Picture 4.10

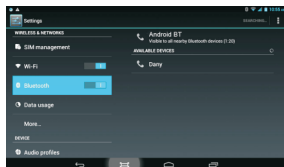


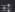- Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
- After match successfully, choose the operation you want to, click  to enter into Picture 4.11.

Picture 4.11



 Picture 4.48

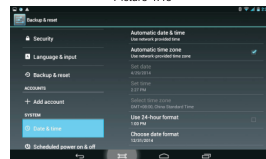


Note: If you use the time internet provided, you will not able to set the date, time and time zone.

4.17 Scheduled Power On & Off

- Click Setting application procedure
- Click Scheduled power on & off.
- Operate as below Picture 4.49

 Picture 4.49

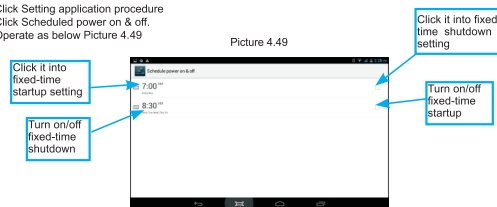

4.18 Accessibility

4.18-1. Large text

- Click it to make system font large size


4.18-2. Click power button to end calls

- When Click call, press "power" button, call will end but not hold.

4.18-3. Touch and hold delay

- Click touch and hold delay to increase time

 Picture 4.50

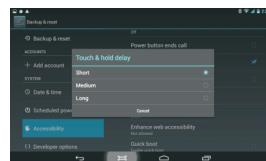

4.18-4 Install webpage script

- It will allow you install webpage scrip when you open system., but it will increase the risk when you are browsing webpage.


Picture 4.46



4.15 Add Account

- Select setting application--Open Add account
- Click add an account, as Picture 4.47

 Picture 4.47

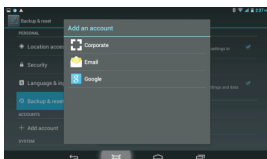


4.16 Date and Time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.


Manual set date, time and zone

- Click Setting application procedure.
- Slide down the screen, then click date and time.
- Turn off 'auto setting of date and time'.
- Turn off 'auto setting zone'.
- Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
- Click Date setting, then click upper or down button to adjust date, month, and year, click setting when you finish selection.
- Click Time setting, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you set 24-hour format). Click Setting to finish.
- Click 24-hour format, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
- Click date format setting, then choose the time format you want to show on MID.

Bluetooth Setting- Rename tablet

- Click  icon in right top of Picture 4.10, as Picture 4.12, select rename tablet, you can rename it

 
Picture 4.12

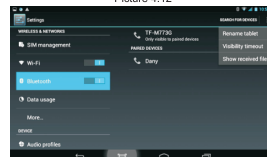

Check visibility timeout

- Select visibility timeout setting in Picture 4.12, choose the time you want to set, as Picture 4.13 (Note: check overtime setting is the time setting when Bluetooth is checked)

 Picture 4.13

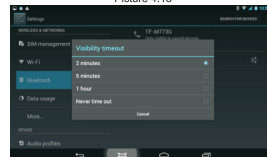

- Display the file you received
- Choose display the file you received in Picture 4.12, you can view download and upload files.

4.4 Data Usage

- Check SIM card data usage, as Picture 4.14

Picture 4.14

