

Open the screen when it is closed.

- If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.

Picture 3.1



3.4 Usage of Touch Screen

The User Instructions guide you to operate the touch screen as follows:

- Tap: Tap to select an icon or option.
- Tap and hold: Tap and hold an icon to drag it to the desktop.
- Drag and drop: Drag and drop on the desktop to switch among different interfaces.
- To avoid scratching or breaking the screen, do not put any object on it.

3.5 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

1. Search
2. Wifi
3. Battery Volume
4. Time
5. Set the system and other menus & display recently browsed history
6. Home
7. Return

Picture 3.2



c. Send E-mail

- Click to display your mail box.
- Click the inbox, it will refresh the new emails automatically; click it to read new email.
- Press Menu key, Menus will popup.
- Click Edit to enter into new email editing interface.
- Input the receiver's email address.
- Input the subject and email content.
- If you want to add attachment, click menu key, the menu popup.
- Click "Attach file" (photo,music, video,contacts).
- Click "send" to send the email out.

Picture 7.3



8. GPS Function

GPS Navigation

- Map of the third parties is required for MID internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, meet the needs of outdoor navigation.

9. Other Application Procedures

9.1 Clock

- Click Clock procedure, enter into below interface as Picture 9.1.
- There are clock, picture, music and homepage buttons.

Picture 9.1



9.2 Calculator

- Click .
- Enter into the basic board of calculator.
- Soft touch the numbers or operator in calculator to calculate.

Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 7.1.2 and you can click the menu you can refresh ,save to bookmarks, share page,bookmarks, history and setting the webpage.


Picture 7.1.2



7.2 Email

Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163), as Picture 7.2

Picture 7.2

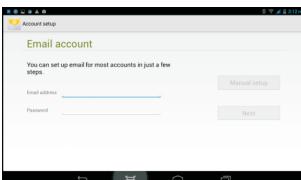

- a. *Email Setting*
 - After you click the sending email icon , you can see the email setting guide, which can help you to set.
 - Input your email address and password.
 - Click 'Next Step' button, choose your email type is POP3 or IMAP.
 - Click 'Next Step' button to check whether the email box service can receive or send emails.
 - Input the email account and display the email subject, and click finish.
 - If the email box is available, you will enter into your mail box automatically.

- b. *Delete the email account*
 - You can delete setted POP3 or IMAP email account from your MID.
 - Click .
 - Enter into your mail box.
 - Press Menu key.
 - Click Account
 - Press the account you want to delete.
 - Click confirm to remove.

The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 3.3.

Picture 3.3



The shortcut icons management in desktop application.

Create folder icon in desktop

- Drag the icons need to be put together on one icon(can also overlay several icons) as Picture 3.4.
- Then click the overlayed icons, the applications can be folded, as Picture 3.5.

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similar with Apple IOS system), the icons position can be changed through long press.

Picture 3.4



Picture 3.5



Remove the icons in desktop

- Long press the icons need to be removed, then on the right above of the screen, it will appear  icons.
- Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

- In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
- Click the gallery or wallpaper gallery to select the wallpaper.

3.6 Visit Application Procedures

Click  in right top of Picture 3.2, enter into main interface as Picture 3.6, choose the application procedure you want to visit.

Picture 3.6




3.7 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

- Connect the MID and computer by USB cable, the reminder column will show the remind information.
- Open the reminder board; please view the MID status and reminder to learn how to open the board.
- In the reminder board, click the "USB Connected", it will as below Picture 3.4, then click "open USB storage configuration".
- Now the USB is connected successfully.

Picture 3.7

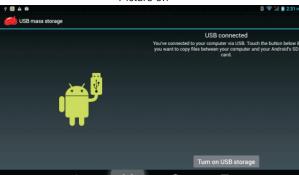

Copy the document into memory card

- Connect the MID to computer with USB cable.
- As MID storage configuration is connected with computer successfully.
- Open the "My computer" in your computer, check the items in "removable disc".
- Copy the documents you need into "removable disc".
- After copying finishes, click "shutdown the USB storage configuration" to uninstall.

Notice: When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

6.2 Text Message

- Enter into main menu, choose  application procedure.
- Click "Edit new message"

Picture 6.2



6.3 People

- Click People  in the main interface, enter into the contact list as Picture 6.3

Picture 6.3



7. Internet

7.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 7.1

Picture 7.1

