

# REMIX

USER'S MANUAL

Remix Speaker



REGISTER NOW AT  
[V-MODA.com/REGISTER](http://V-MODA.com/REGISTER)





## CAUTION

If **serial number** on manual cover or  
bottom of packaging is missing or defaced,  
please **return to retailer** immediately.

IMMORTAL  
**LIFE**  
PROGRAM      **1YR**  
WARRANTY

english

To acquire a printable version of this manual, please visit [V-MODA.com/manuals](http://V-MODA.com/manuals)

español

Para adquirir una versión impresa de este manual, visite por favor [V-MODA.com/manuals](http://V-MODA.com/manuals)

français

Pour obtenir une version imprimable de cette manuel, veuillez consulter [V-MODA.com/manuals](http://V-MODA.com/manuals)

italiano

Per ottenere una copia stampabile di questo manuale, visitare il sito [V-MODA.com/manuals](http://V-MODA.com/manuals)

deutsch

Eine Handbuch zum Ausdrucken erhalten Sie unter: [V-MODA.com/manuals](http://V-MODA.com/manuals)

수동의 인쇄판을 얻으려면 [V-MODA.com/manuals](http://V-MODA.com/manuals)

要获得说明书的打印件, 请访问 [V-MODA.com/manuals](http://V-MODA.com/manuals)

要獲得說明書的打印件, 請訪問 [V-MODA.com/manuals](http://V-MODA.com/manuals)

本取扱説明書の電子版を以下のページからダウンロード・  
プリントアウトすることができます [V-MODA.com/manuals](http://V-MODA.com/manuals)

## ROCK SAFELY

Enjoy your music responsibly. According to the American Speech-Language-Hearing Association (ASHA), “listening to personal music players, stereos and headphones at high volumes for extended periods of time can directly result in lifelong hearing loss”. At V-MODA we are dedicated to providing an enjoyable listening experience, but we also care greatly about your personal health and safety. We recommend that you listen to your Remix® speaker at comfortable volume levels for reasonable periods of time.

### How to enjoy your music responsibly


- Turn down the volume. A good point of reference is half volume
- Limit listening time. Give your hearing a “time out”

Caution around children. Keep out of reach of children, the parts included with this product can be a choking hazard. This product is not intended for children under 7 years of age.

## WELCOME

Welcome to V-MODA, the music lifestyle. We sincerely hope you enjoy our Remix speaker, the pinnacle of sound and quality design. With the essence of music at the foundation of all we do, we have precisely engineered our Remix speaker to provide an enjoyable and natural sound signature, which invokes the sense of listening to your music live. **Play Hard. Rock Harder.**

## Package Contents

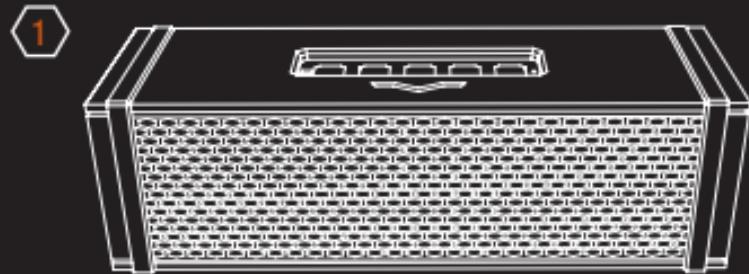


1. Remix Wireless Speaker
2. USB to Type-C™ charging cable
3. Daisy Chain cable
4. 4x Remix Rings

## CHARGING THE SPEAKER

The Remix speaker has a built-in lithium-ion rechargeable battery. Fully charge the Remix speaker for 10 hours before using it for the first time.

Note that Remix is equipped with USB to Type-C charging cable for faster and safer charging. Do not use any other type of charging cables to charge the Remix speaker.

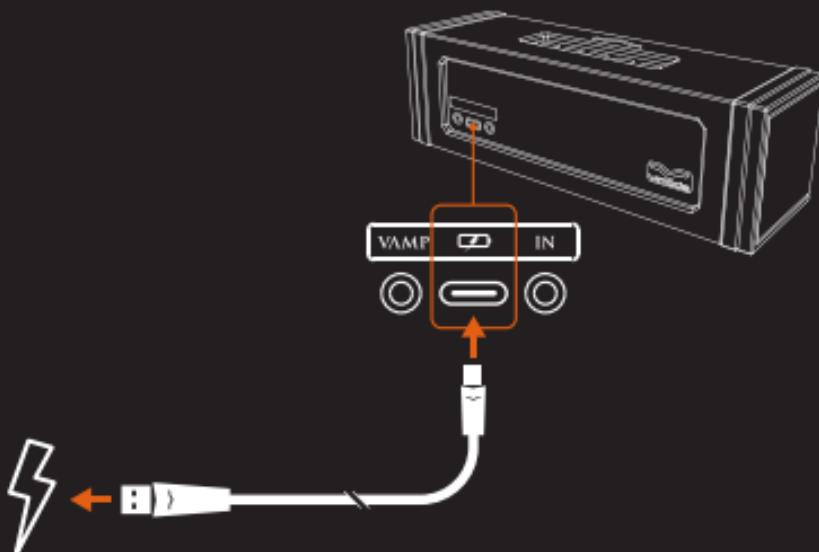

- Fading orange LED = charging
- White LED = charging complete
- Blinking orange LED = low battery

## TURNING ON/OFF THE REMIX SPEAKER – BATTERY STATUS

When turning on the Remix speaker, the orange LED indicates the battery level.

1. Press the  button to turn on the Remix speaker. Power on tone plays and the orange LED flashes a number of times based on the battery level:




- Battery 100-81%: orange LED flashes 4 times
- Battery 80-61%: orange LED flashes 3 times
- Battery 60-41%: orange LED flashes twice
- Battery <40%: orange LED flashes once
- Low battery: orange LED flashes twice in 30 seconds while operating


2. Press the  button to turn off the Remix speaker. Power off tone plays and all LEDs turn off

## WIRELESS MODE

TOP VIEW

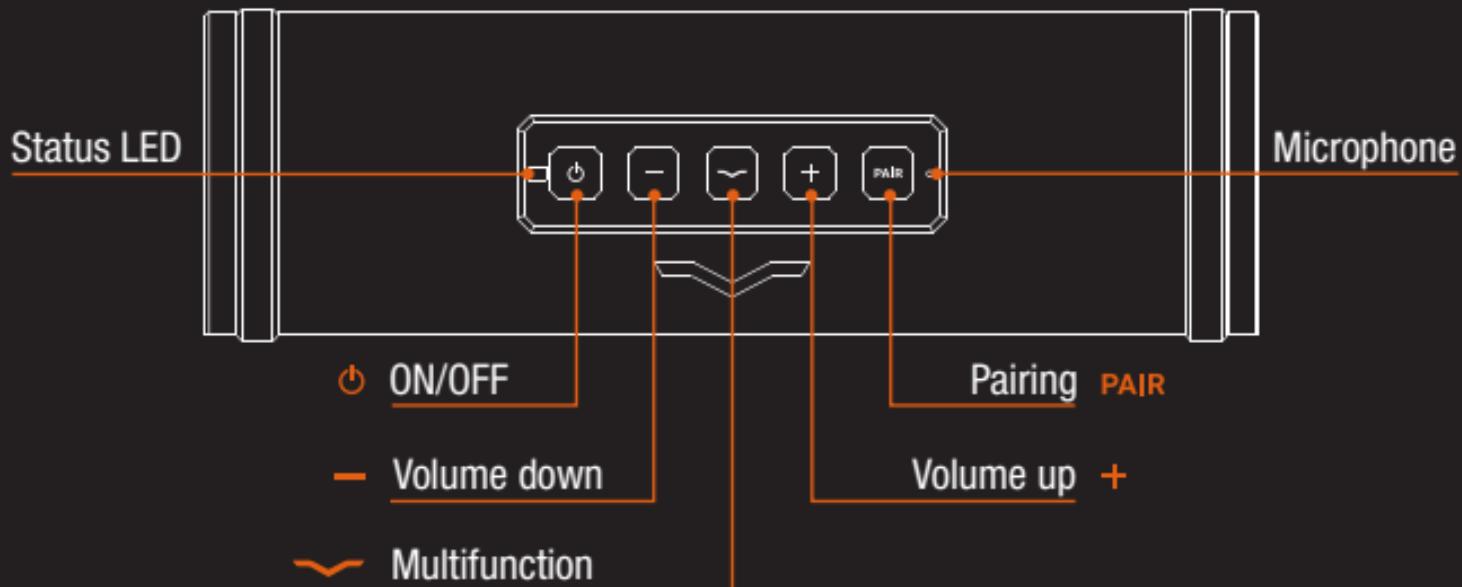

## BACK VIEW

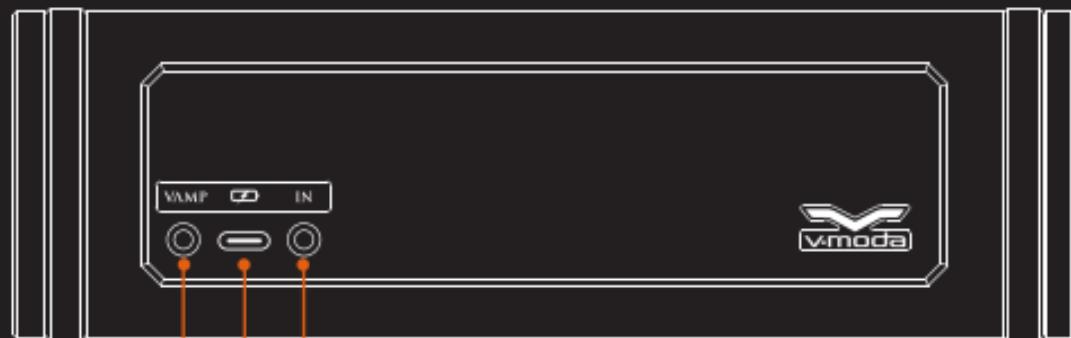

VAMP port + LED

AUX-IN

USB Type-C port

## PAIRING AND CONNECTING WITH A BLUETOOTH DEVICE

When pairing with one, two or more Bluetooth devices, perform the following pairing procedure every time you pair a new device.


1. Press the  button to turn on the Remix speaker.

Power on tone plays, battery level orange LED flashes, then white LED flashes twice every second while the VAMP orange LED is on

2. Press the  button to connect the new Bluetooth device.

Once “V-MODA Remix” appears in the “new/available Bluetooth devices” section on your phone, select it to begin pairing. If passkey input is required on the display of a Bluetooth device, type “0000”

3. **Ready to rock.** When the Bluetooth connection is established, connected tone plays and white LED on the Remix speaker stays lit

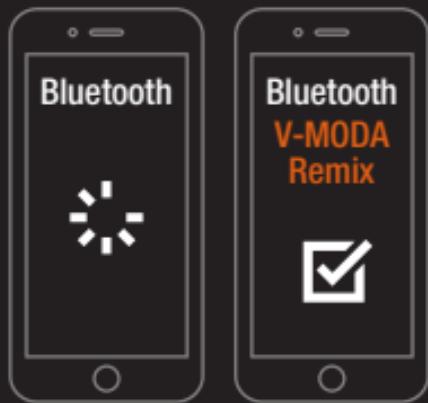

## CONNECTING WITH A PAIRED BLUETOOTH DEVICE

When pairing with one, two or more Bluetooth devices, perform the following procedure every time you connect the Remix speaker with an already paired device.

1. Press the  button to turn on the Remix speaker. Power on tone plays, battery level orange LED flashes a number of times based on the battery level
2. **Ready to rock.** When the Bluetooth connection is established, connected tone plays and white LED on the Remix speaker stays lit

## LISTENING TO MUSIC



Start playback on the paired/plugged device and adjust the volume with the and buttons on the Remix speaker



Press and hold for 8 seconds to reach max volume



Press and hold for 8 seconds to reach min volume



Press once to play and pause


Press twice for next track

Press 3 times for previous track

Track controls may vary based on device and settings.

## MAKING A CALL / RECEIVING A CALL

### ANSWER A CALL

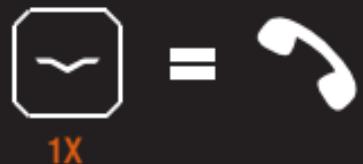

Press  once to answer (music pauses automatically)


### REFUSE / HANG UP



To refuse an incoming call or to hang up an existing call, press and hold  for 2 seconds, then release

## MAKING A CALL / RECEIVING A CALL

### CALL ON HOLD

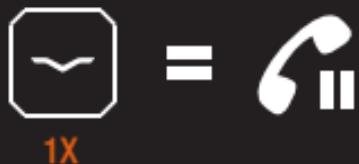

Press  once to put the ongoing call on hold and connect to the second incoming call; long press  for 2 seconds to connect the second call and hang up the first call; short press  twice to refuse a second call while attending one

Making a call/ Receiving a call functions do not work in wired mode.

## WIRED MODE

When connecting an audio device via LINE IN, plug in the device with the included audio cable.

1. **Plug in an audio device and Remix speaker via V-MODA audio cable.** All LEDs are off



2. **Press the  button to turn on the Remix speaker.** Power on tone does not play, battery level orange LED flashes a number of times based on the battery level
3. **Ready to rock.** When the LINE IN connection is established, both white LED and VAMP orange LED stay lit; audio device is ready to play Hi-Res audio

Audio compatible with smartphones, tablets, iPhone®, iPad®, iPod®, Android™ devices, portable gaming, computers and any device with a 3.5mm audio port. Visit [V-MODA.com/SOUNDCHECK](http://V-MODA.com/SOUNDCHECK) as functionality may vary.

## VAMP MODE

VAMP Mode transforms the Remix speaker into a headphone amplifier for stunning sound quality.

1. Plug in an audio device into Remix speaker's LINE IN via audio cable. All LEDs are off
2. Press the  button to turn on the Remix speaker. Power on tone does not play, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit
3. Plug in headphones into Remix speaker's VAMP via audio cable
4. Press the  button once to switch to VAMP mode. Orange LED stays lit
5. Ready to rock. Audio device is ready to play Hi-Res audio via headphones and Remix speaker is now an amplifier



## DAISY CHAIN MODE - BLUETOOTH


Two or more Remix speakers can be linked together and play (Hi-Res audio if in wired mode) seamlessly via the same audio player.

1. Press the  button to turn on the Remix speaker. Power on tone plays, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit
2. Bluetooth connect Remix speaker 1 and audio player following the instructions on page 10
3. Plug in Remix speaker 1's VAMP and Remix speaker 2's LINE IN
4. Press the  button to turn on the Remix speaker 2. Power on tone plays, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit
5. Remix speakers are now in “daisy chain” mode. You can adjust the output volume on either one of the speakers and enjoy music from both speakers at the same time
6. (optional). Repeat steps 3 and 4 if adding more Remix speakers to the “daisy chain”


## DAISY CHAIN MODE - WIRED

1. Plug in an audio device and Remix speaker 1 via V-MODA audio cable for wired Hi-Res audio
2. Plug in Remix speaker 1's VAMP and Remix speaker 2's LINE IN
3. Press the  button to turn on both Remix speaker 1 and Remix speaker 2. Power on tone plays, battery level orange LED flashes a number of times based on the battery level. Then white LED stays lit on both Remix speakers
4. Remix speakers are now in “daisy chain” mode. You can adjust the output volume on either one of the speakers and enjoy Hi-Res audio from both speakers at the same time
5. (optional). Repeat steps 2 and 3 if adding more Remix speakers to the “daisy chain”

## DAISY CHAIN MODE - BLUETOOTH

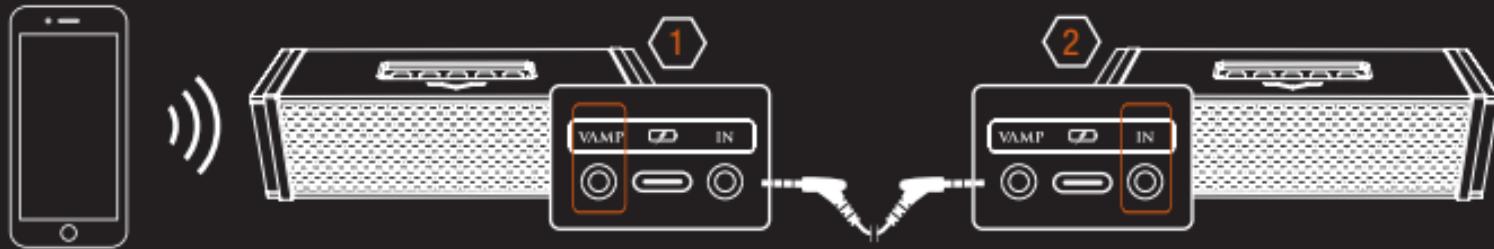

## DAISY CHAIN MODE - WIRED

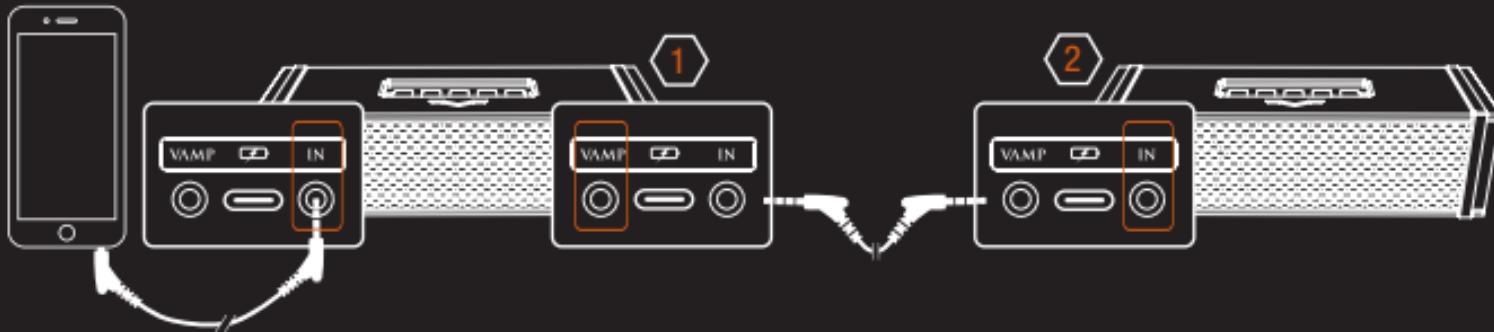

## ONE AUDIO DEVICE, TWO REMIX SPEAKERS

An audio device can be connected with two Remix speakers at the same time and play alternatively from both speakers.


1. Bluetooth connect Remix speaker 1 and audio player following the instructions on page 10
2. Bluetooth connect Remix speaker 2 and audio player following the instructions on page 10
3. Remix speakers 1 and 2 will be both shown as “V-MODA Remix” on the audio player
4. Easily shift the playing Remix speaker by pressing the  button once



## ONE REMIX SPEAKER, TWO AUDIO DEVICES

The Remix speaker can be connected with two audio devices at the same time and play alternatively from both audio devices.

1. Bluetooth connect Remix speaker and audio player 1 following the instructions on page 10
2. Bluetooth connect Remix speaker and audio player 2 following the instructions on page 10
3. Re-connect Remix speaker and audio player 1 by holding the “PAIR” button for 3 seconds
4. Shift the audio player from 1 to 2 by controlling the play/pause buttons on the audio players
5. The  button on the Remix speaker will control only play/pause of the playing audio player

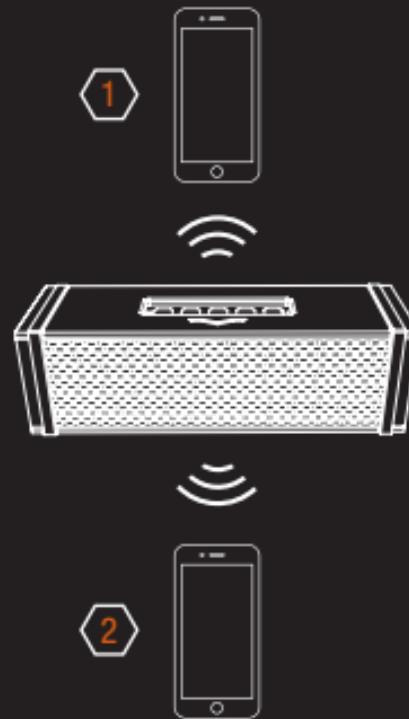

## OTHER USEFUL FUNCTIONS

### CLEAR THE PAIRED DEVICES HISTORY



HOLD 3sec

To clear the paired devices history press and hold   for 3 seconds. White and orange LEDs flash alternatively twice

### POWER SAVING MODE



If no device is paired with the Remix speaker in 2 minutes, white LED flashes once every 3 seconds, VAMP orange LED stays lit for **standby mode**. To resume the Remix speaker simply press the  button. If no audio signal is detected or no device is paired with the Remix speaker in 10 minutes, power off tone plays and all LEDs turn off. The Remix speaker is now switched off

## CONNECTION OUT OF RANGE



If the audio device is outside the connection range "Out of Range" tone plays for 2 minutes every 5 seconds, white LED flashes twice per second and VAMP orange LED stays lit until the device automatically connects when back within the connecting range. If no device to be connected is detected in 2 minutes, speaker will switch to standby mode

## HOW TO CHECK YOUR BATTERY STATUS



To easily check the Remix speaker battery status, hold the  button for 2 seconds. VAMP orange LED flashes 4 times if battery life is between 81-100%; 3 times if battery life is between 61-80%; twice if battery life is between 41-60%; once if battery life is less than 40%; twice every 30 seconds if battery life is less than 20% (low battery)

## USING YOUR REMIX RINGS AND 3D PRINTED CUSTOM PARTS


With the 3D printed custom sides, housing and grill you can revolutionize your Remix speaker and forge your own personal relic which will be 3D sculpted in Italy and 3D printed in NYC.

1. Install Remix Rings to ensure that 3D printed sides are stable
2. 4x Remix Rings are included with the Remix Speaker to change the look of the Remix Speaker
3. Remix Rings cover the screws on the Remix Speaker and ensure stability when the Remix speaker is put on whatever type of surface
4. Make sure that the thinner end with two F printed on it is facing the front of the Remix Speaker




## USING YOUR 3D PRINTED CUSTOM SIDES (SOLD SEPARATELY)

1. Slide Remix Rings onto their housing
2. Slide 3D printed custom sides onto the Remix speaker until the sides cover the Remix Rings and cannot slide any further creating a snug fit

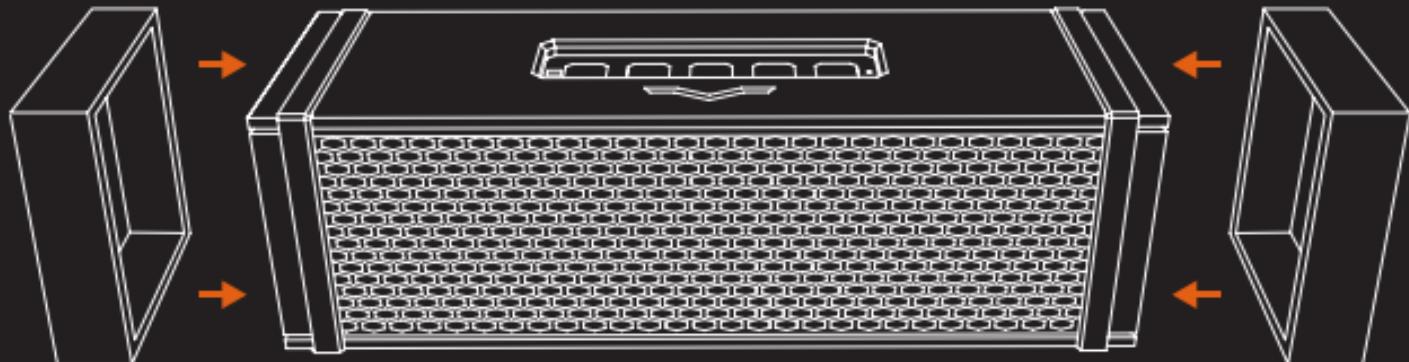


## USING YOUR 3D PRINTED CUSTOM HOUSING (SOLD SEPARATELY)


1. Remove the Remix Rings from their housing if present
2. Unscrew screws from the surface of Remix Speaker

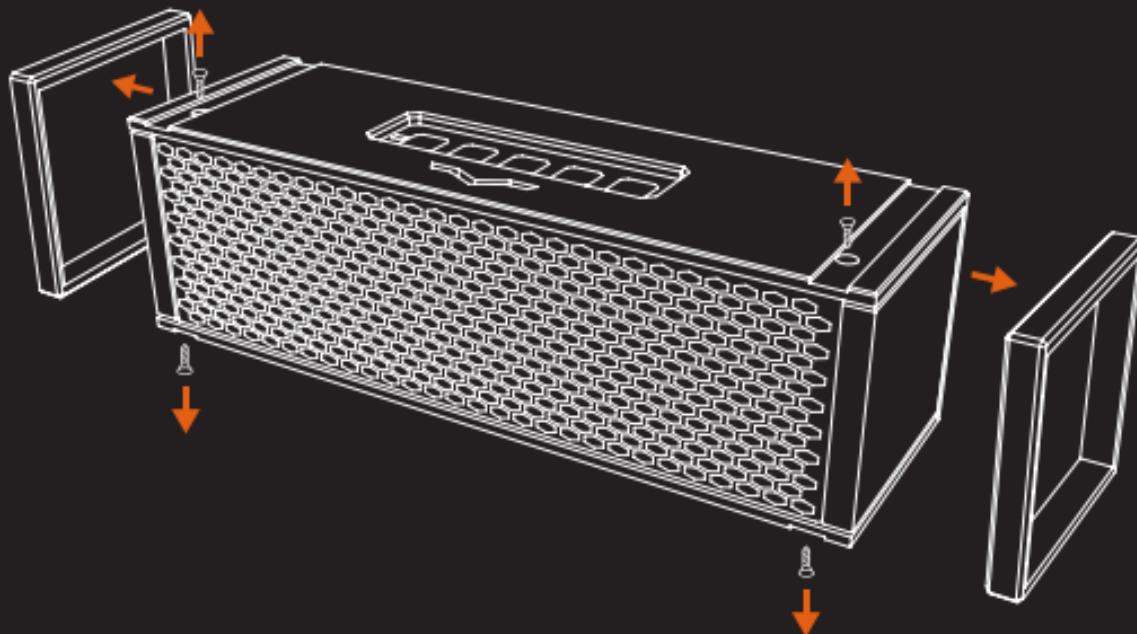

3. Remove the pre-installed housing
4. Install and adjust the 3D printed custom housing onto the back of the Remix speaker
5. Screw the screws in for a snug fit

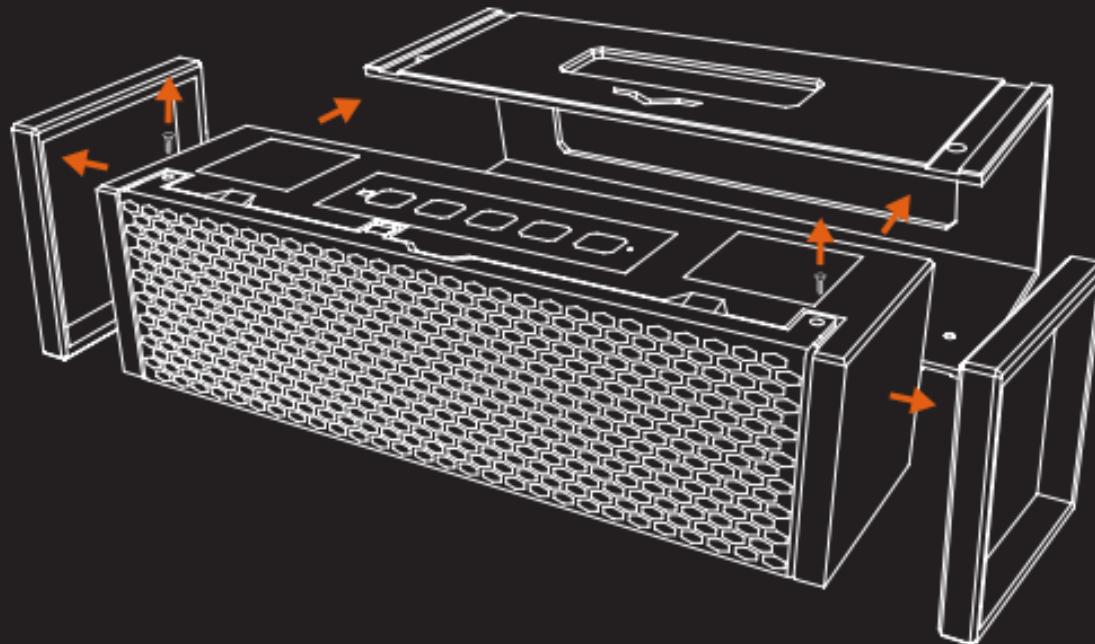

## USING YOUR 3D PRINTED CUSTOM GRILL (SOLD SEPARATELY)

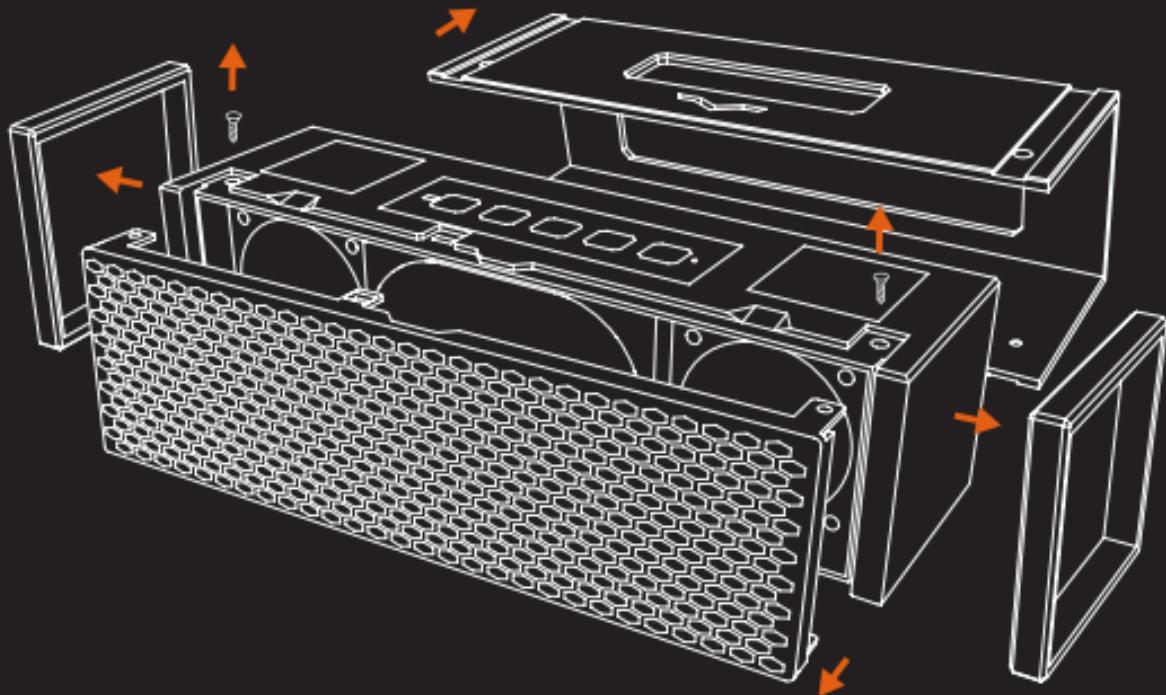

## USING YOUR 3D PRINTED CUSTOM GRILL (SOLD SEPARATELY)

1. Remove the Remix Rings from their housing if present
2. Unscrew screws from the surface of Remix Speaker
3. Remove the pre-installed housing
4. Remove the pre-installed grill
5. Install and adjust the 3D printed custom grill onto the front of the Remix speaker
6. Install and adjust the housing (3D printed custom or the included one) onto the back of the Remix speaker
7. Screw the screws in for a snug fit

The sound quality and acoustics performance of the Remix speaker may vary when 3D parts are installed in place of the original parts. V-MODA will not be responsible for the product reliability and acoustics performance after the 3D customization

## Troubleshooting

If you are experiencing trouble with your Remix speaker, please refer to the troubleshooting guidelines below. If the problem persists, please contact the V-MODA Six Star Service at [V-MODA.com/SUPPORT](http://V-MODA.com/SUPPORT) or 1.888.VMODA.LA.

TROUBLE	SUGGESTIONS
No audio (in wired mode)	Check that the Remix speaker is on. Make certain the audio device's Remix speaker jack is free of debris and that the headphone plug is securely connected.
Lack of or excessive bass or treble (in wired mode)	Turn off any audio enhancement features on audio device. Make sure cable is firmly connected to the Remix speaker and device. If the problem persists, try another cable.
Uneven Sound (in wired mode)	Make sure cable is firmly connected to the Remix speaker by ensuring male 3.5mm is inserted into female 3.5mm all the way.

TROUBLE	SUGGESTIONS
Headphones deliver mono sound (in wireless mode)	Make sure to properly follow the procedure to connect headphones in VAMP Mode.
Distorted sound	Check to make sure the problem is not with the audio device or the file to which you are listening. Ensure the EQ settings on the device are set properly.
Remix speaker will not charge	<ul style="list-style-type: none"><li>Make sure the Charging cable and source are functioning properly</li><li>Make sure both USB plugs are firmly connected into their sockets</li><li>Disconnect and reconnect the USB charging cable</li><li>If charging with your computer, be sure the USB port is powered and remember to plug in your computer</li></ul>

TROUBLE	SUGGESTIONS
Trouble during the pairing process	<ul style="list-style-type: none"><li>- Be sure the Remix speaker is not connected to the charger and the power switch is on</li><li>- Turn your Remix speaker off, then on again</li><li>- Remember to turn on the <i>Bluetooth</i> feature on your device</li><li>- Turn off the <i>Bluetooth</i> feature on any other device which has been previously paired (can only pair with one device at a time)</li><li>- Clear the history of paired devices by pressing and holding Volume + and Volume - for 3 seconds</li><li>- Try to pair with another device to be sure that both the Remix speaker and your Bluetooth device are working properly</li></ul>
Audio and video do not match	There may be a delay from some sources or applications. Try streaming from another device or select another track.

TROUBLE	SUGGESTIONS
Receiving no audio or low quality audio from a streaming audio source	<ul style="list-style-type: none"><li>Check the battery</li><li>Check the pairing</li><li>Be sure the audio source is playing</li><li>Try streaming from another device or select another track</li><li>Be sure the volume on the device is not muted or turned down</li><li>Move the device and Remix speaker closer (max 33 feet or 10 m)</li><li>Keep away from any possible interference (wireless routers, other <i>Bluetooth</i> devices, microwaves etc)</li><li>Close any applications on your device that are not in use and disable the Wi-Fi</li></ul>

## CLEANING YOUR REMIX SPEAKER

To clean the exterior surface of the Remix speaker, you can wipe it using a soft and dry cloth. Do not use solvents, chemicals, or sprays and do not allow liquids to spill on the product.

## **Limited Warranty**

For a period of one (1) year from the date of retail purchase by the original end-use purchaser, V-MODA warrants that this product is free from any defects in manufacturing, materials and workmanship, under the following conditions:

- V-MODA will repair or replace the product within a reasonable period of time and free of charge for one (1) year from the date of retail purchase by the original end-use purchaser
- Product must be purchased from a V-MODA authorized reseller and delivered to you in new condition, in original packaging. This warranty does not cover products purchased open box, sold as-is, sold by private party resale or any other third party purchases from unauthorized resellers

- This Limited Warranty does not cover defects resulting from cosmetic damage, acts of God, misuse, accidents, commercial use, unauthorized alteration or modification of the product, improper connection, improper use or attempted repair by unauthorized distributors or resellers
- This warranty is void if the label bearing the serial number has been removed or defaced
- To obtain service under this limited warranty, visit [V-MODA.com/WARRANTY](http://V-MODA.com/WARRANTY) to fill out the online warranty form and obtain further information
- To acquire a printable version of this warranty, please visit [V-MODA.com/WARRANTY](http://V-MODA.com/WARRANTY)
- For other customer service inquiries, please e-mail [support@V-MODA.com](mailto:support@V-MODA.com). You may also call 1.888.VMODA.LA Monday through Friday, 9:00 am to 5:00 pm (Pacific Standard Time)

- This limited warranty gives you specific legal rights, and you also may have other rights that vary from state to state or country to country. Some places do not allow limitations on implied warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you

## V-MODA Immortal Life Program - Lifetime 50% discount

We do not judge. If you abuse your Remix speaker crowdsurfing, stage diving, spelunking or otherwise, the V-MODA Immortal Life Program has your back.

All we ask is that you send the Remix speaker (or what's left of it) to us and we will email you a 50% off VIP Code towards a comparable product from V-MODA.com.

Visit [V-MODA.com/Immortal](http://V-MODA.com/Immortal) for information on the lifetime 50% discount.

Visit [V-MODA.com/Support](http://V-MODA.com/Support), e-mail [support@V-MODA.com](mailto:support@V-MODA.com) or call 1.888.VMODA.LA, Monday through Friday, 9:00am to 5:00pm (Pacific Standard Time), for information on how to get your 50% off VIP Code.

## COMPLIANCES

NOTE: This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by V-MODA could void the user's authority to operate this equipment.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



V-MODA Milano Design

©2016 V-MODA. All rights reserved.

V, V-MODA, the V-MODA logo, BLISS, Crossfade and V-PORT are trademarks of V-MODA LLC.

U.S. Pat. Nos. D683212, D698333, D625703 and patents pending.

iPhone®, iPad®, iPod® are trademarks of Apple Inc., registered in the U.S. and other countries.

The trademark "iPhone" is used with a license from Aiphone K.K.

Android™ is a trademark of Google Inc. and is in no way affiliated with V-MODA

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

and any use of such marks by V-MODA is under license.

Other trademarks and trade names are those of their respective owners.



IMMORTAL  
**LIFE**  
PROGRAM



**1 YR**  
WARRANTY

For more support please contact V-MODA's  
**Six Star Service [V-MODA.com/SUPPORT](http://V-MODA.com/SUPPORT)**

©2016 V-MODA. All rights reserved. V, V-MODA, Remix and VAMP are registered trademarks of V-MODA, LLC.  
U.S. patent pending application no. 14/740107.

iPhone®, iPad®, iPod® are trademarks of Apple Inc., registered in the U.S. and other countries.  
The trademark "iPhone" is used with a license from Aiphone K.K.

Android is a trademark of Google Inc. and is in no way affiliated with V-MODA.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.  
and any use of such marks by V-MODA is under license.

Other trademarks and trade names are those of their respective owners.



RoHS  
Compliant



## PLEASE DO NOT RETURN TO RETAILER

For any issues relating to your V-MODA product,  
please contact our Six Star Service directly.

visit

[V-MODA.com/SUPPORT](http://V-MODA.com/SUPPORT)

email

[support@V-MODA.com](mailto:support@V-MODA.com)



twitter

@VMODASixStar

skype

V-MODASixStar

call

1.888.VMODALA



# ACTIVATE YOUR WARRANTY

---

AND

---

## 50% IMMORTAL LIFE PROGRAM

REGISTER NOW

AT

[V-MODA.com/REGISTER](http://V-MODA.com/REGISTER)



IMMORTAL  
**LIFE**  
PROGRAM