 


60*100mm

 
 
无线K歌音箱
使用说明书

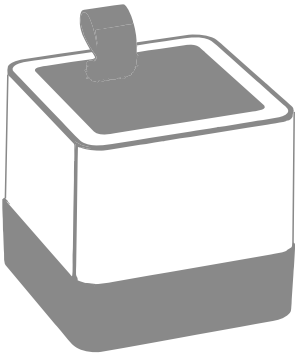


蓝牙名称：K18

结构和功能

1. 开关/暂停 2. 模式/消原声 3. 下一曲/音量+
4. 上一曲/音量- 5. 灯光

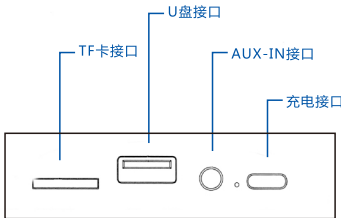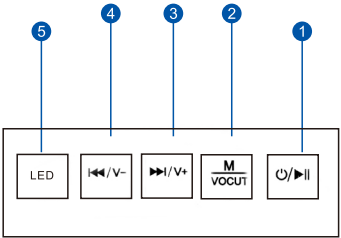

话筒功能操作

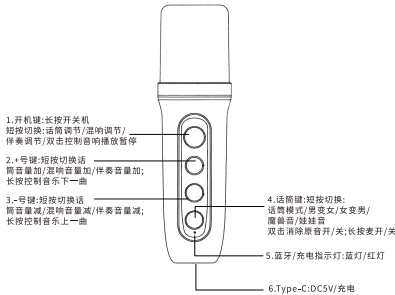 

按键功能

开关/暂停: 长按开机关, 短按暂停或播放音乐。

上一曲音量- & 下一曲/音量+: 短按调节音量大小, 长按切换上下曲。

模式按键/消原声: 短按切换蓝牙、MicroSD(TF)卡、U盘、AUX模式。长按可消除歌曲里的人声, 只留下伴奏。

灯光按键: 按下切换灯光模式。长按开关灯光。

音效切换: 循环切换原声、男声、女声、娃娃音、魔音音效。

5. 播放音乐: 打开手机里的音乐APP如“全民K歌”, 选择喜欢的歌曲或伴奏开始播放。音乐的音量也可通过手机调节。按下音箱上的消原声按键可以消去歌曲的人声。

注: 与手机连接一次后, 蓝牙具有记忆功能, 开机后可以自动回连。

如需断开蓝牙连接, 可在手机端设置断开蓝牙。

 
如何充电

- 当电池电量过低, 产品会自动关机。
- 使用DC 5V充电器, 连接音箱或麦克风的充电口进行充电。充电时充电指示灯会亮红色, 充满后指示灯会熄灭。

技术参数

频率范围: 20Hz-20kHz
总谐波失真: <1%, 1kHz
供电方式: 内置锂电池
充电电源: DC 5V



LED PARTY KARAOKE SPEAKER
User manual

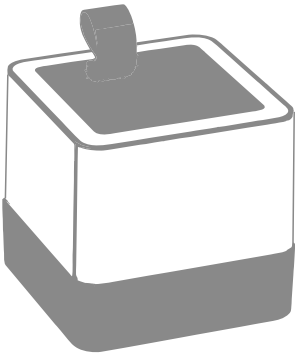


Bluetooth name : K18

Parts and controls

  1. Power/Pause 2. Mode/Vocal cut
3. Next track/Volume+ 4. Previous track/Volume-
5. LED

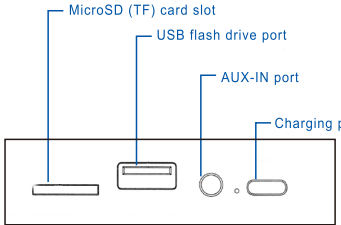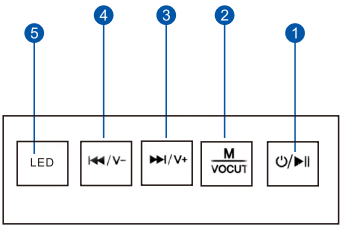

Microphone function operation

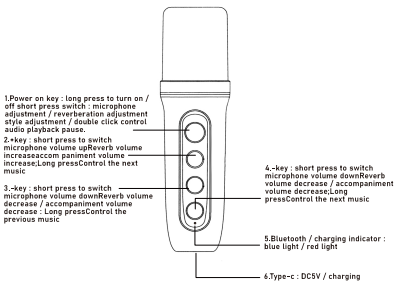 

Button function details

Power/Pause: Press and hold to turn on/off the power. Press to pause or play the music.

Previous track/Volume- & Next track/Volume+: Short press to adjust the volume, long press to switch between up and down tracks.

Mode button/Vocal cut: Press to switch between Bluetooth mode, USB drive mode, MicroSD(TF) card mode and AUX mode. Press and hold to remove vocals from the song leaving only the background music.

Change tone: Press to switch between, original, male, female, child, magic sound effect.

How to use

Sing by Bluetooth

1. Turn on the speaker: Press and hold the power button to turn on the speaker. The power indicator will start flashing.

2. Bluetooth connection: Turn on the Bluetooth on your smart phone. In the Bluetooth setting, find the device name " K18 " and pair. The speaker will make a tone if the pairing is complete.

3. Turn on the microphone: Press and hold the power button on the microphone. The microphone will be connected to the speaker automatically and the corresponding indicator on the speaker will be on.

4. Adjust sound effect: Adjust the volume of the speaker and microphones and choose appropriate sound effects.

5. Play music: Open a music app on your smart phone and play any music you like. The volume of the music can also be adjusted on your phone. Pressing the Vocal Cut button can remove vocals from the song.

Note: Once you pair the speaker with your smart phone via Bluetooth, they will pair automatically when the next time you use.

The Bluetooth can be disconnected in the Bluetooth setting on your phone.

How to charge

1. When the battery is low. The device will shut down automatically.

2. Connect a DC 5V charger to the charging connector to charge the speaker or microphones. The charging indicator will turn red when charging and turn off when fully charged.

Parameters

Frequency range: 20Hz-20kHz
THD: <1%, 1kHz
Power supply: Built-in lithium-ion battery
Charging voltage: DC 5V

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide Reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by Cotton On USA Inc

may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.