

D80620003 Toy Fi Teddy IS
Size: 370 x 210mm
Date: 28th Feb 2014



TOY-FI TEDDY INSTRUCTION SHEET

Caution: changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Dragon-i Toys Limited is under license. Other trademarks and trade names are those of their respective owners.

BATTERY SAFETY INFORMATION

- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted in position according to polarity.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Do not attempt to burn batteries.
- Dispose of batteries safely and correctly
- Remove batteries if the toy will not be used for a long period of time.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Batteries should be replaced under adult supervision.
- Do not dispose of in fire.
- Different types of batteries are not to be mixed.


Dragon-i[®]
www.dragon-itoy.com

D80620003

STEP 1 Power Up

Under Toy-Fi Teddy

Turn power to "ON" Position,
to activate your Toy-Fi Teddy.

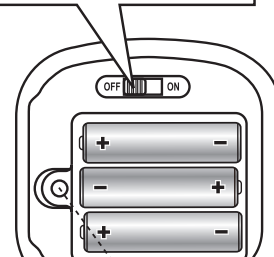

Operates on
3 x "AA"/LR6
batteries.

Note: When toy is powered on correctly the heart will flash 2 times during initial power up.



Additional Notes Step 1:

- Ensure batteries are placed in battery slots properly and in marked direction
- Ensure to use fresh batteries
- Ensure power switch is ON

STEP 2 Set-Up the Toy

Download ToyFi APP on an iPhone, iPad, iPod Touch or Android device. Once the APP is downloaded it will ask you to go through the registration process. Confirm your email and you will be able to connect the Bear. Now follow the steps on your app! Please be within 3 meters of toy to ensure strong connection.

- Please ensure that you iOS or android device is compatible to connect to Toy-Fi Teddy. iPhone4S and Later, Ipad 3 and later, iPad Mini, Ipad 5 – Later, Select Android devices – Please reference www.toy-fi.com for list of Android devices supported

- ! If light on Toy starts blinking and APP informs you that Toy-Fi firmware is updating please keep APP open and stay within 10 meters. Toy-Fi firmware update takes around 2 minutes.



Additional Notes Step 2:

- Enter a valid email address so it can be verified. If you did not receive an email, look in trash or spam as some emails can be filtered! We need a valid email so we can create a key that locks your child's toy to your device. Child safety is important to us!
- Ensure you have a data connection. Wifi or cellular data.
- Ensure Bluetooth is ON in you settings of your iOS or Android device.
- Toy-Fi APP is on Android and Apple APP stores, search Toy-Fi.
- Ensure you are within 10 meters of Toy-Fi Teddy.

STEP 3 Send a Local Message

You can send local messages and long distance messages to Toy-Fi Teddy through out Toy-Fi Cloud.

1. Go to messages on your Toy-Fi APP and record a message. You can now send the message to Toy-Fi Teddy.



2. When a message is received from Toy-Fi Teddy, the heart will blink fast. Wait until the heart blink slowly and press the left paw (green button) to play the message.



3. Once the message plays, you can answer, press the right paw one time (blue button). The heart will turn on. Record your message and press the button again to stop recording. The message is sent automatically !




4. The APP will then receive the message and inform you a message has been received. You can now listen to this message on your smart device.



STEP 4 Connecting with more people

From the Toy-Fi Teddy APP you can invite friends to connect with your Toy-Fi Teddy. Follow the instruction in the Toy-Fi Teddy APP. An email will be sent to your friends to download the APP with a security key to get connected.

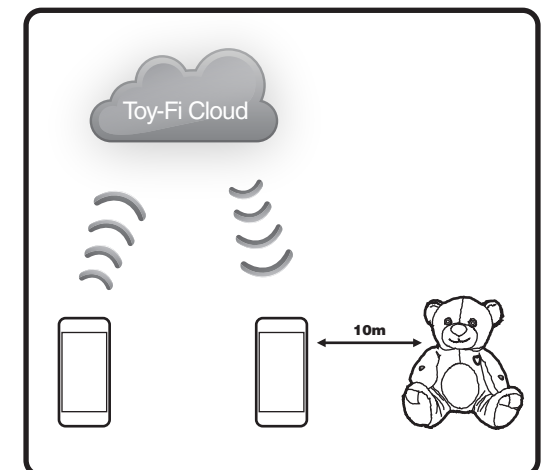

Additional Notes:

- Toy-Fi Teddy requires a Bluetooth connection with a mobile device. A device with the Toy-Fi APP needs to be within 10 meters of Toy-Fi Teddy.
- In step 4 you can enable more devices to connect to Toy-Fi Teddy and enable friends and family to send messages to Toy-Fi Teddy.
- You can send a reply to a message after you listen to them. You can not originate a recording message from the Toy without listening to a message first.
- Any other question ? Please ask us on Toy-Fi.com