

045B USER MANUAL

(Read before proceeding)

Charging and low battery power warning

1. The product should come with enough power to pair with your device. If you are having trouble on pairing or powering it, please make sure it is fully charged.
2. Use the USB charge cable connecting to this unit from its type-C charging socket to your computer or charger. (The charging input is 5V 500mA.)
3. The red light beside the charging socket will turn off when power charging completes.
4. The product will be shut off automatically in 5mins if there is no connection or music playing.

Music Playing: (Bluetooth Mode)

1. Press and hold the “>||” button for 2 seconds to power it on.
2. Once power on, the unit turns default into Bluetooth mode.
3. The unit will automatically connect to the last Bluetooth device firstly. If no found, it will enter pairing mode and wait for a new Bluetooth device to connect.
4. On the Bluetooth device, switch on Bluetooth setting and search for “BT Speaker”. For the first-time connection, select “BT Speaker” to start connection. If necessary, enter the pass code 0000 or 1234. There is a warning tone once connected successfully.
5. To disconnect the unit from current Bluetooth device, choose to “Disconnect” or “Forget this device” from its connected Bluetooth device.
6. Under this mode, press one time the “>||” button to play or pause the music.
7. Under this mode, short press the “+” or “-” button to switch forwards or backwards to skip songs, long press the button to control the volume.
8. Once connected, you can listen to music from the unit wirelessly (<33feet). The music streaming may be interrupted by obstacles between the device and the speaker, such as walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency.

Speakerphone

1. When there is an incoming call, music will pause automatically. Pick up or hang up the phone call by press “M” button one time. Music play resumes when your call ends.
2. Press the “M” button twice quickly to redial the last calling-out number.
3. The Speakerphone function is only available under Bluetooth mode.

True Wireless Speaker function (TWS)

1. Before using TWS function, please make sure there is no any Bluetooth connection on both two units.
2. Turn on the two items, double click “>||” button on one of them and they will search for each other automatically. Once connecting successfully, blue light on one of them will keep on all the time, other one blue light flashing. Then follow Bluetooth mode to connect and play music.

FM radio

1. Short press “M button” to enter FM radio mode.
2. Insert the provided USB charging cable. This acts as an antenna.
3. Press the button “>||” one time to search through FM channels automatically. When searching finishes it will save all available stations.
4. Press one time the “+” or “-” button to switch between channels.
5. Long press the “+” or “-” button to adjust the volume.

Specification

- Speaker Power: 1X5W
- Battery Capacity:3.7V 300mAh
- FCC ID: 2ACCE-045B

FCC Warning Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment