

## PORTABLE WIRELESS SPEAKER WITH LED LIGHT

### USER MANUAL

(Read before proceeding)



- Switch on or off unit by switch the “power” button on the top of the unit to be in “ON” or “OFF” position.
- The item should come with enough power be powered on. If you are having trouble pairing or powering-on it, please make sure it is fully charged.
- Use the USB charge cable connected to the item from its Micro USB port to your computer or charger. The charging input power is 5V 500mA.
- The red light will turn off when charging completes.
- Long press the “M” button to change LED light mode or turn on or turn off the light.

#### Bluetooth Mode:

- Once powered on, the item turns into Bluetooth Mode by default while there is no other connection.
- The item will automatically connect to the last Bluetooth device first. If nothing found, it will search for a new one.
- On the Bluetooth device, switch on Bluetooth setting and search for “BT SPEAKER”. For the first-time connection, select “BT SPEAKER” to start connection. If necessary, enter the pass code 0000 or 1234.
- To disconnect from current Bluetooth device, switch off Bluetooth from current Bluetooth device.
- Once connected, you can listen to music from the unit wirelessly (< 33 ft.). The music streaming may be interrupted by obstacles between the device and the item such as walls, metallic casing that covers the device or other devices nearby that operate in the same frequency.
- Press “>||” button one time to play or pause the music; short press “-” or “+” button to skip songs; press and hold “-” or “+” button to adjust volume.

#### Stereo Pairing Function (requires a 2<sup>nd</sup> unit):

- Turn on the 2 different units and ensure they are in Bluetooth mode.
- Double click the “>||” button on one of the units and wait for them to connect with each other.
- Once both units are paired with each other, follow the “**Bluetooth Mode**” steps the connect them to your device.
- To disconnect the two units actively, double click the “>||” button on any of the units.

#### Auxiliary Input Mode:

- Once powered on, connect the item to the audio device through the 3.5mm aux-in cable, the unit will turn into Aux mode automatically. Press “>||” button one time to enter silent mode.
- Press and hold “-” or “+” button to adjust volume.

#### TF Card/USB Drive Mode:

- Once a TF card/USB drive is inserted, the unit will turn into TF card/USB driver play mode and plays music automatically. Press the “>||” button one time to play or pause the music.
- Short press the “-” or “+” button to skip songs; press and hold “-” or “+” button to adjust volume.

#### FM radio mode

- Once powered on, short press the “M” button to change to “FM Radio” mode.
- Insert USB charging cable as antenna.
- Press the “>||” button one time to search and lock all possible FM channels automatically. When searching finishes, there will be no channel changing.
- Press the “-” or “+” button one time to select a channel.

Press and hold the “-” or “+” button to adjust volume.

### Specification

- Speaker Power: 1X5W
- Battery Capacity: 3.7V 500mAh
- FCC ID: 2ACCE-20096

## **FCC Warning Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.