

MI-S007B Bluetooth Speaker
USER MANUAL(Read before proceeding)

Power On/Power Off, Charging and low battery power warning

- Switch ON/OFF button at the rear of the item to power it on or off. The item should come with enough power be powered on. If you are having trouble on pairing or powering-on it, please make sure it is fully charged.
- Use the USB charge cable connecting to the item from its micro charging socket to your computer or charger. The charging input power is 5V 400mah.
- The red light will turn off when power charging completes.

Bluetooth Mode:

- Once power on, the item turns default into Bluetooth Mode, while there is no other connection.
- The item will automatically connect to the last Bluetooth device first. If not found, it will search a new one.
- If the LED blue light flashes at intervals, it means ready to pair.
- On the Bluetooth device, switch on Bluetooth setting and search for “MERKURY S007B”. For the first-time connection, select “MERKURY S007B” to start connection.
- To disconnect the item from current Bluetooth device, switch off Bluetooth from current Bluetooth device.
- Once connected, you can listen to music from the item wirelessly (< 33 ft.). The music streaming may be interrupted by obstacles between the device and the item, such as walls, metallic casing that covers the device, or other devices nearby that operate in the same frequency.
- Press “>” button one time to play or pause the music.
- Press and hold “Forwards” or “backwards” button one time to skip songs.
- Press “Forwards” or “backwards” button to adjust volume.
- Press “M” button to change to other modes.

True Wireless Speaker function

- Before using TWS function, please make sure there is no any Bluetooth connection on both two items.
- Turn on the two items, double click “M” button on one of them and they will search for each other automatically. Once connecting successfully, blue light on one of them will keep on all the time and the other will flash quickly and wait for pair. Then follow Bluetooth mode to connect and play music.
- Next time once turn them on, the two items will connect to each other automatically.
- The Speakerphone function is only available under Bluetooth mode.
- Distance between the two items shall be within 33ft.
- To disconnect two speakers, double click “M” button once to switch one of them into another mode.

Aux-in Input Mode:

- Once power on, press “M” button to change to AUX mode.
- Connect the item to audio device with a 3.5mm aux-in cable, play music on your audio device.
- Press “Forwards” or “backwards” button to adjust volume. Press “Play/ Pause” button one time to mute the speaker.

TF card/USB drive Mode:

- Once a TF card/USB drive is inserted, the unit will turn into TF card/USB drive play mode and plays music automatically.
- Press “Play/ Pause” button one time to play or pause the music.
- Press and hold “Forwards” or “backwards” button one time to skip songs.
- Press “Forwards” or “backwards” button to adjust volume.
- Press “M” button to change to other modes.

Speakerphone

- When there is an incoming call, music will pause automatically. Pick up or hang up the phone call by press “>” button one time. Music play resumes when your call ends.
- Double click “>” button to redial the last phone number.
- To reject an incoming call, please press and hold the “>” button.
- The Speakerphone function is only available under Bluetooth mode.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator your body: Use only the supplied antenna.