

Figure 7
Inside Configuration of the EUT



Figure 8
Inside Configuration of the EUT

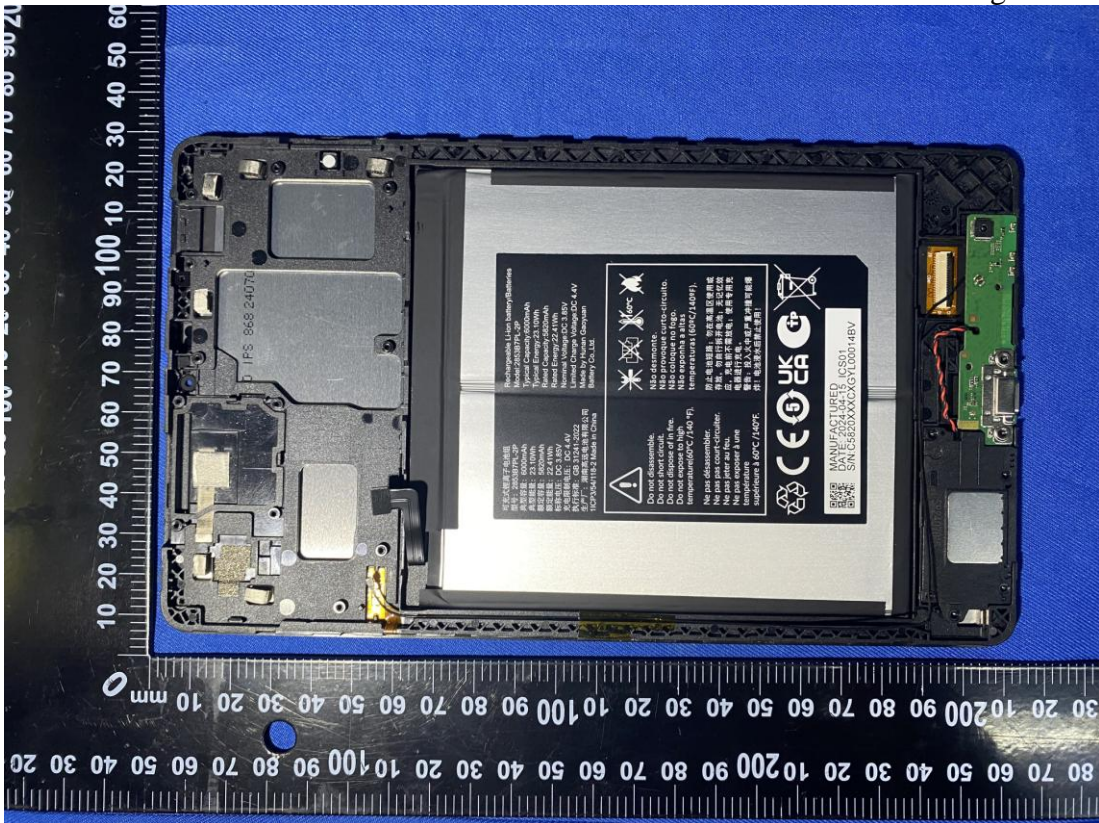


Figure 9
Inside Configuration of the EUT

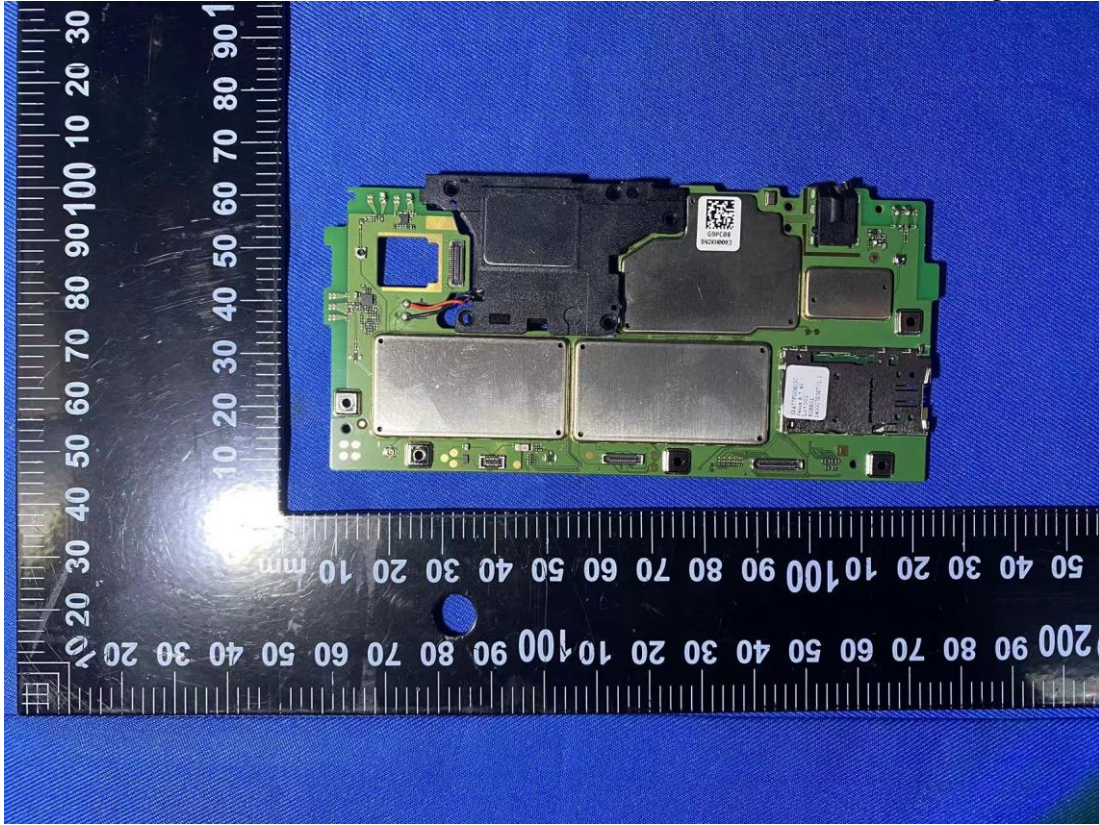


Figure 10
Inside Configuration of the EUT

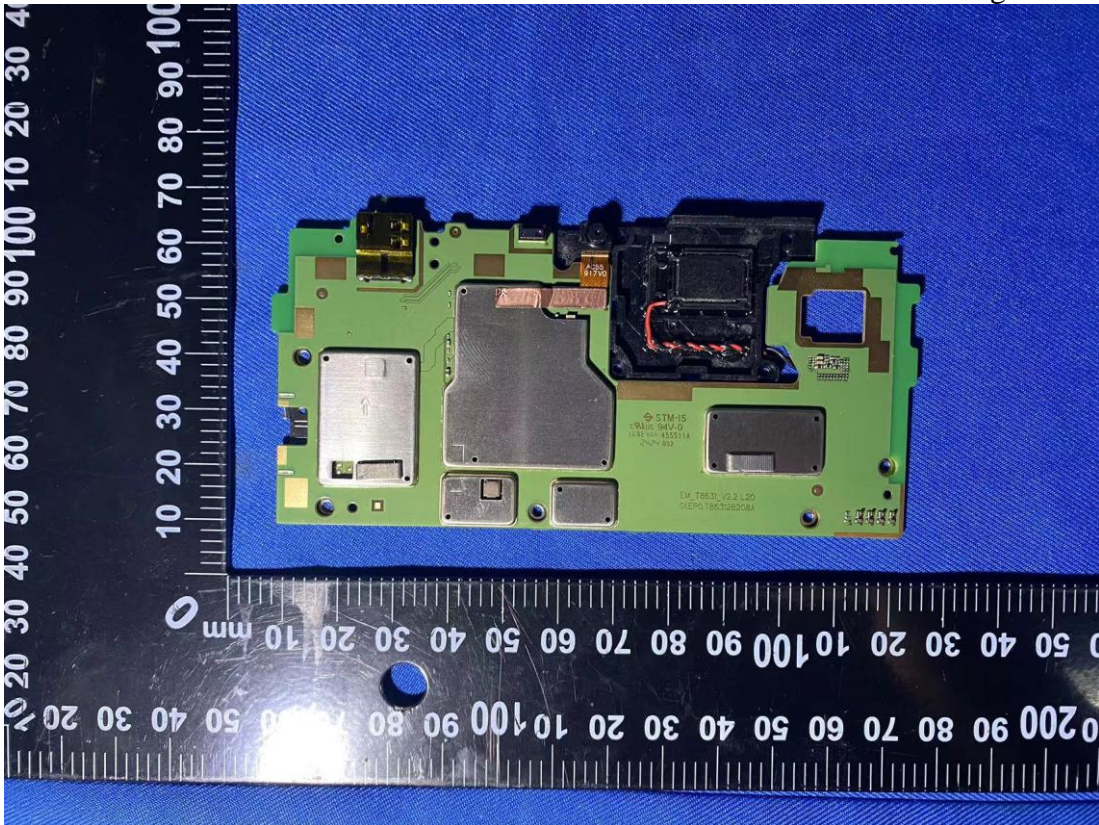


Figure 11
Inside Configuration of the EUT

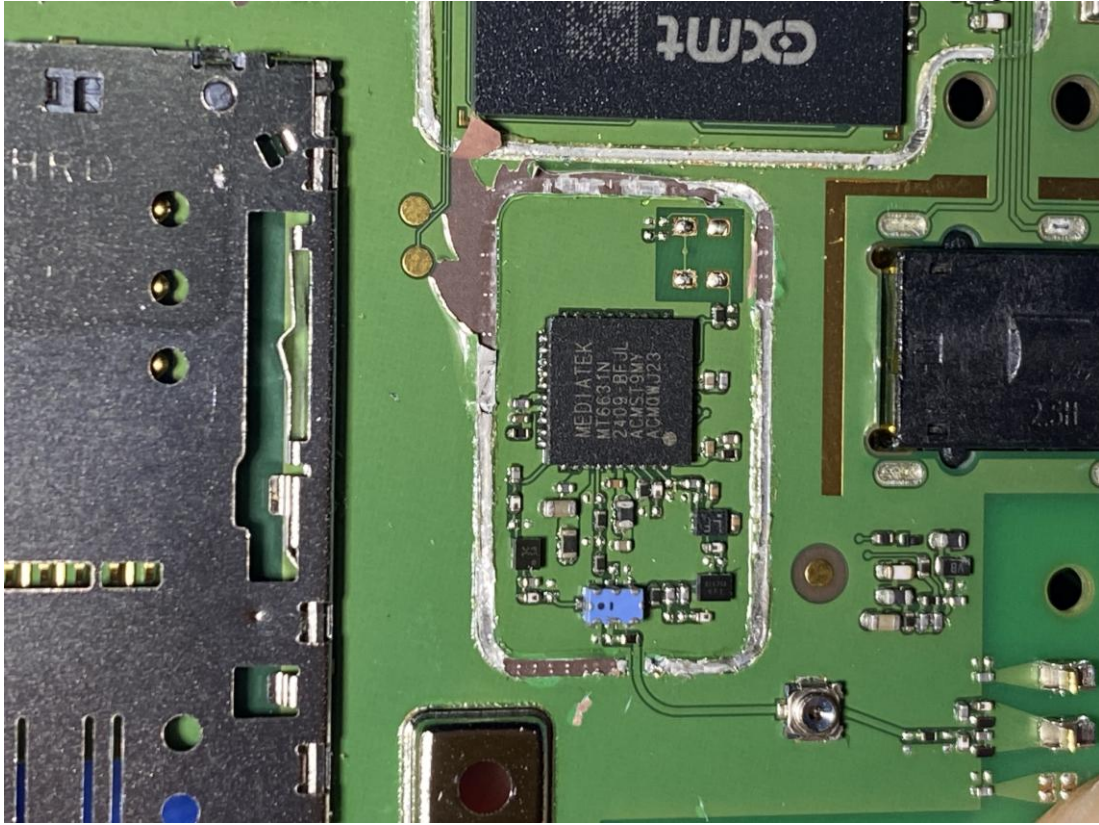


Figure 12
Inside Configuration of the EUT

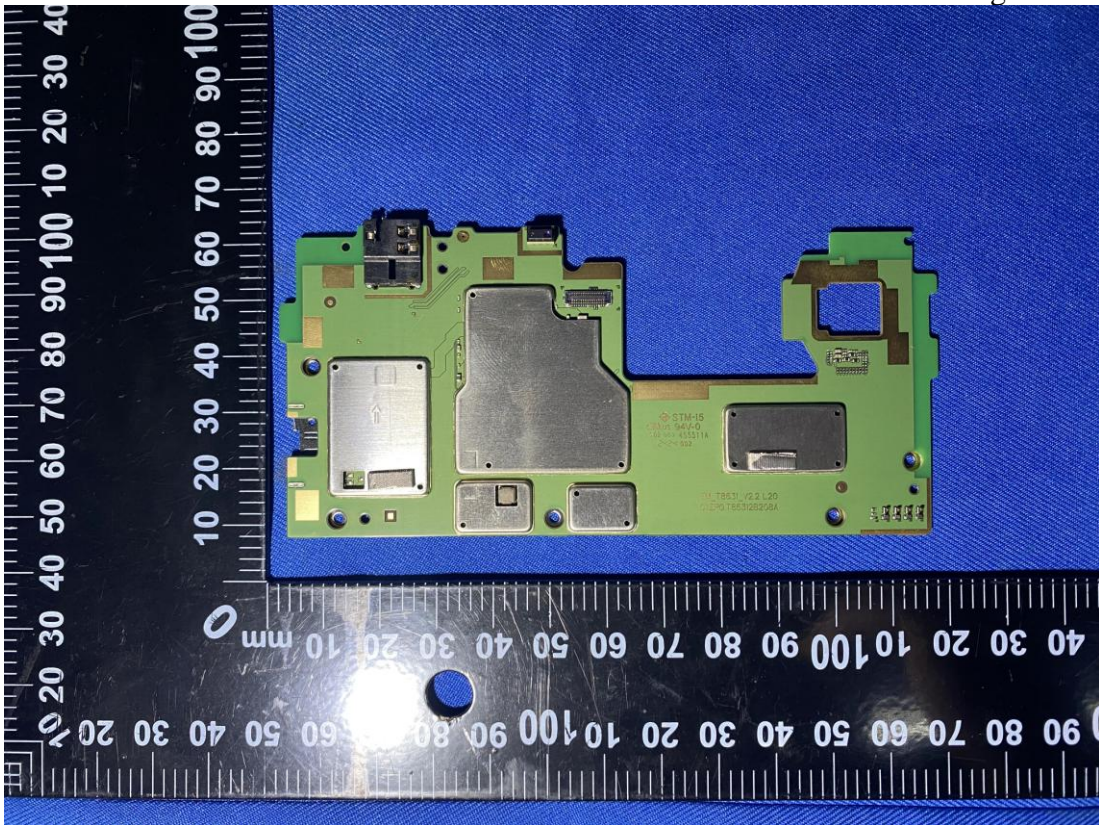


Figure 13
Inside Configuration of the EUT

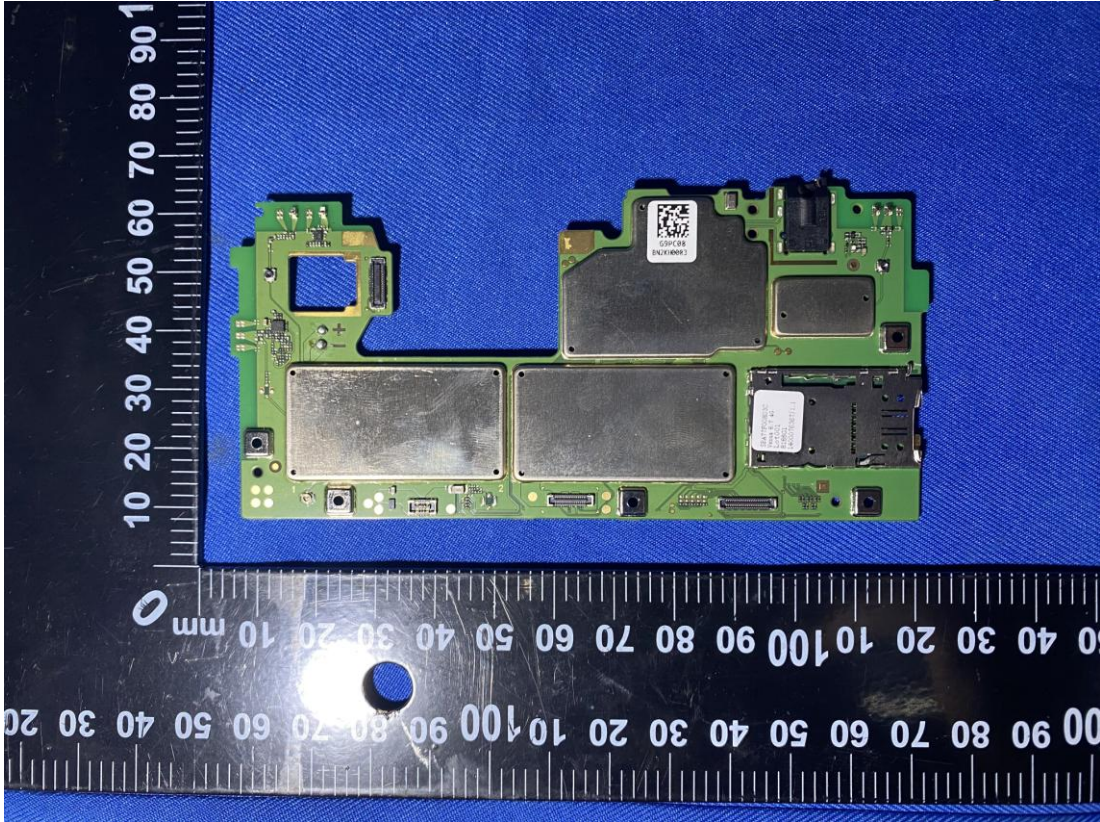


Figure 14
Inside Configuration of the EUT

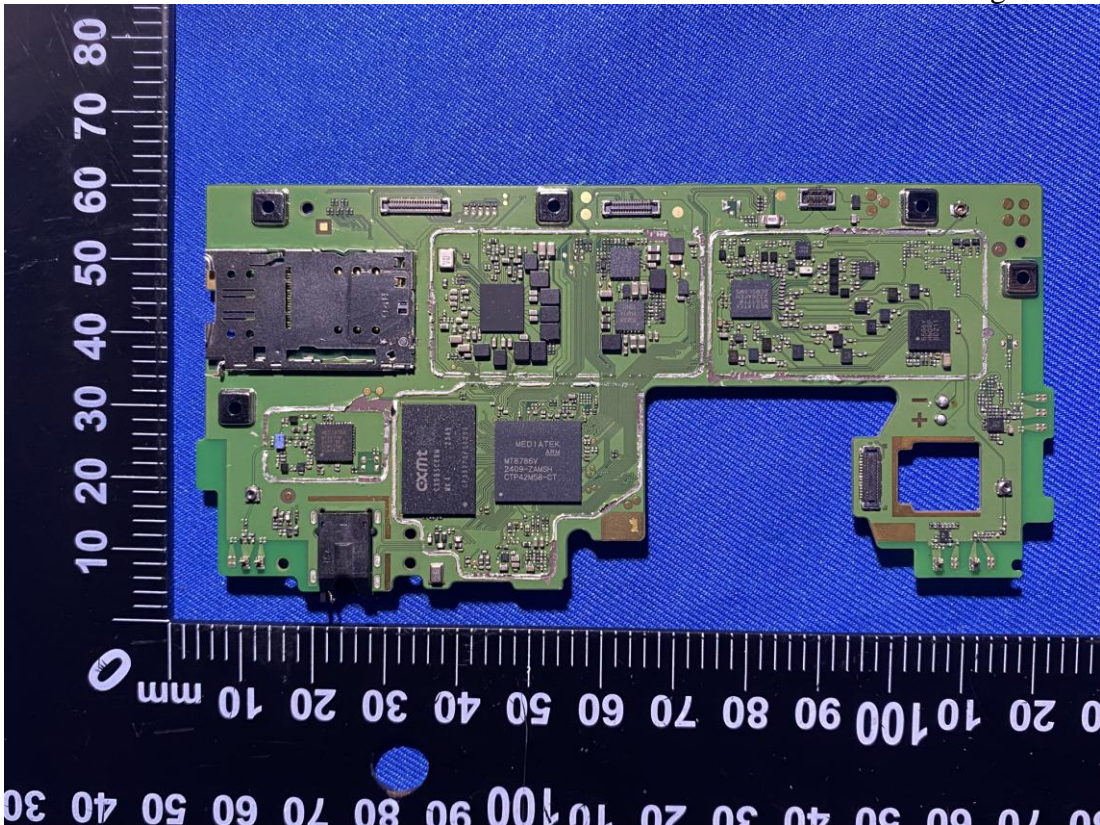


Figure 15
Inside Configuration of the EUT

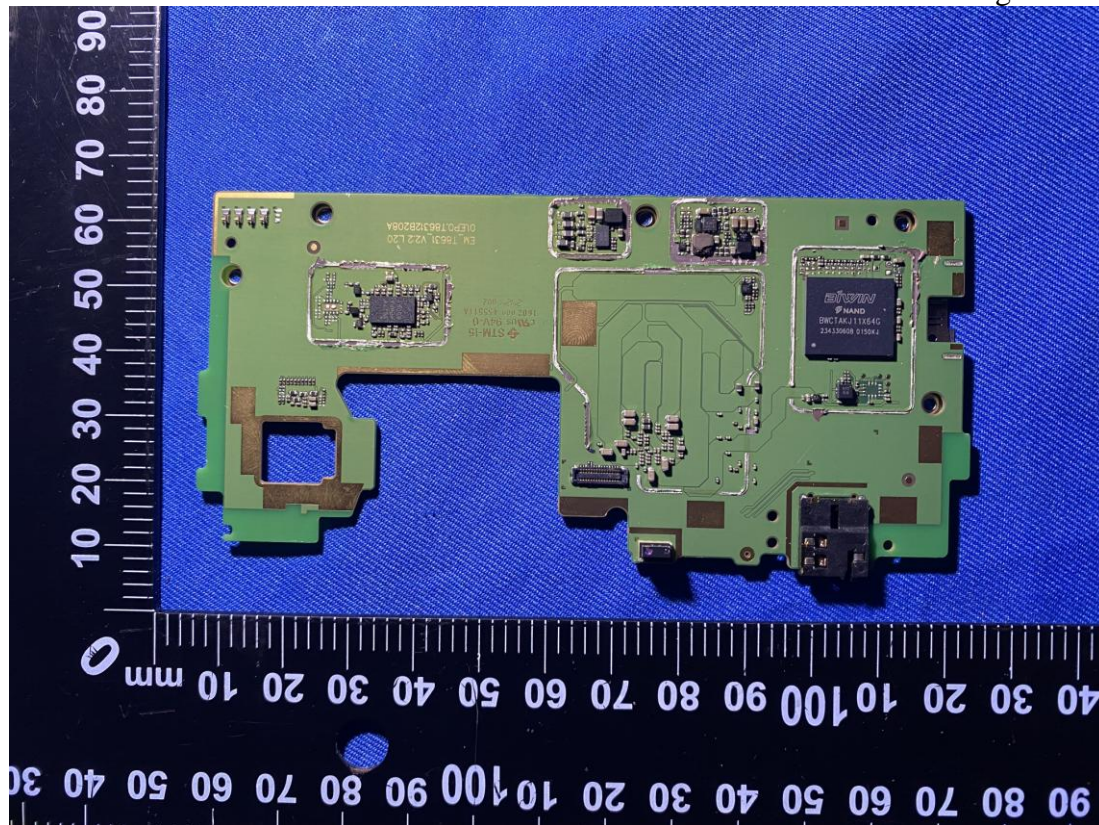


Figure 16
Inside Configuration of the EUT

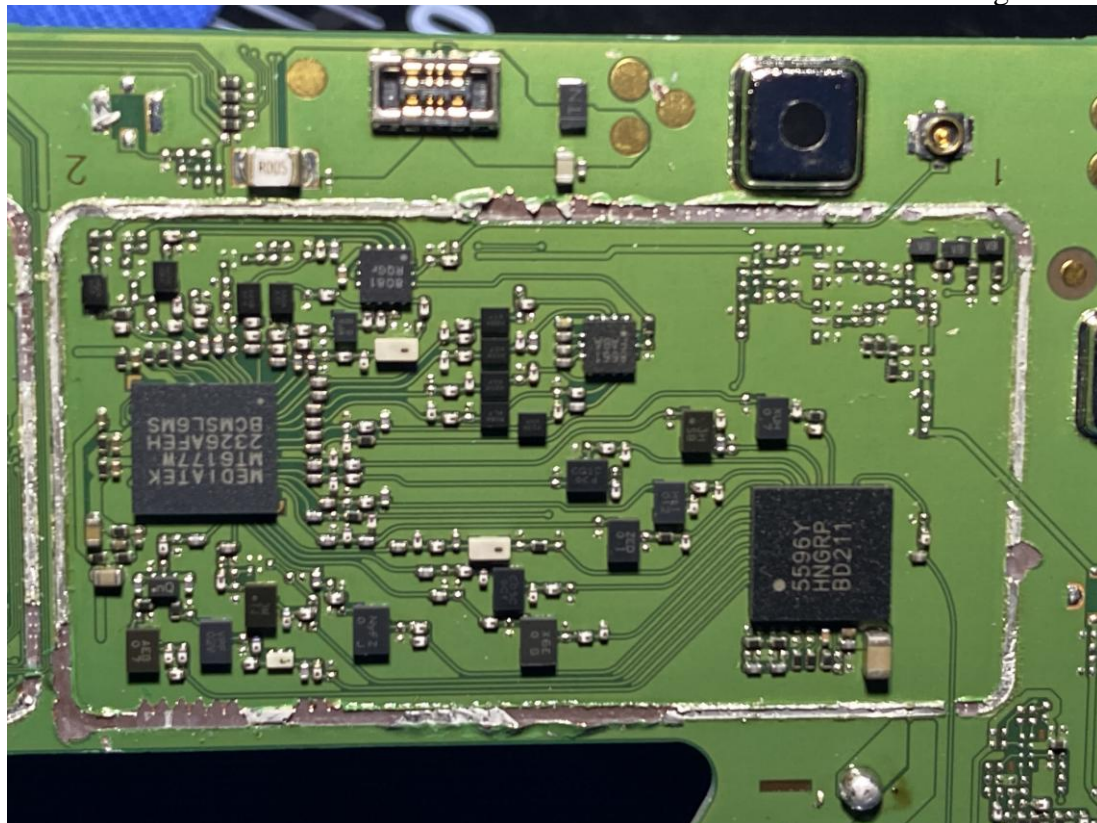


Figure 17
Inside Configuration of the EUT

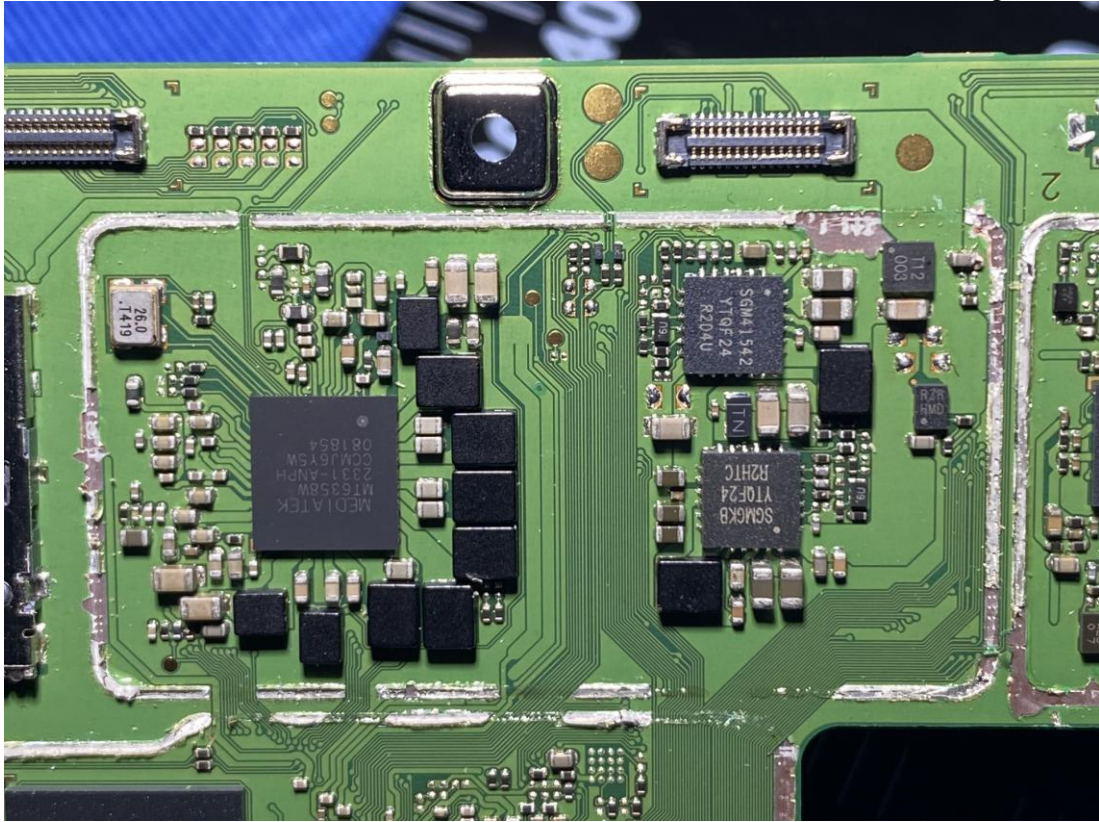


Figure 18
Inside Configuration of the EUT

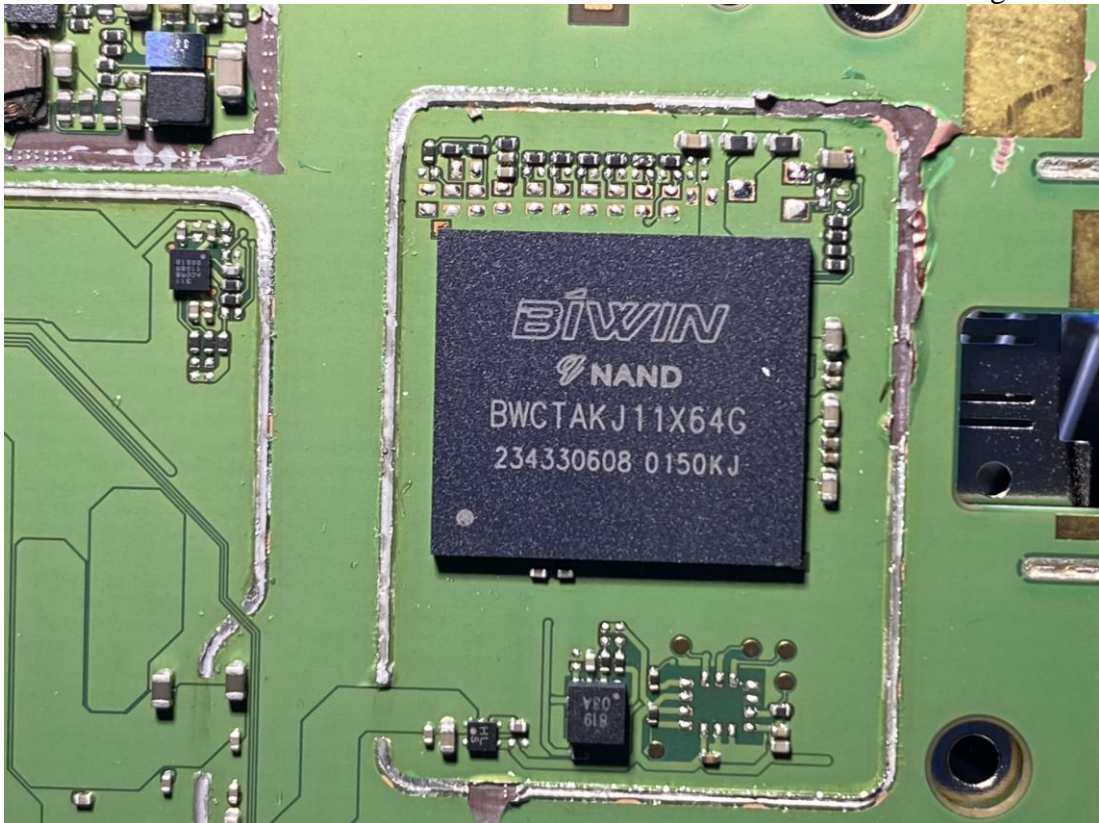


Figure 19
Inside Configuration of the EUT

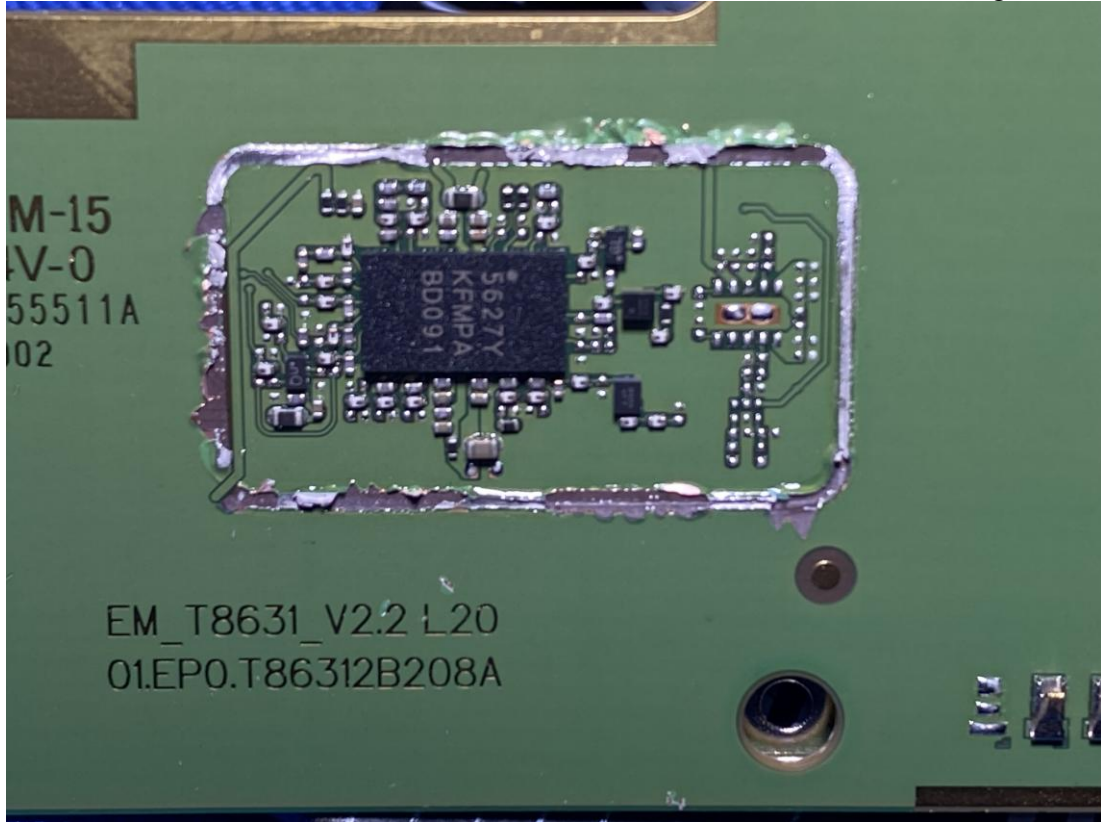


Figure 20
Inside Configuration of the EUT

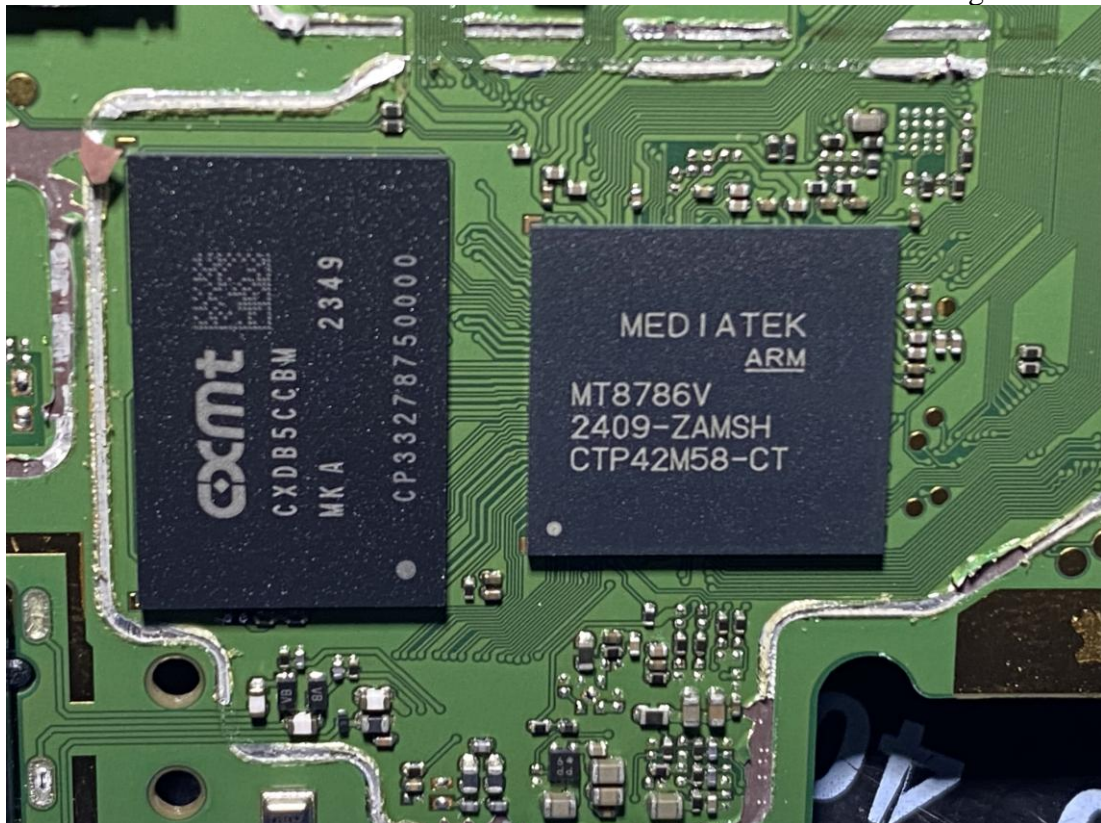


Figure 21
Inside Configuration of the EUT

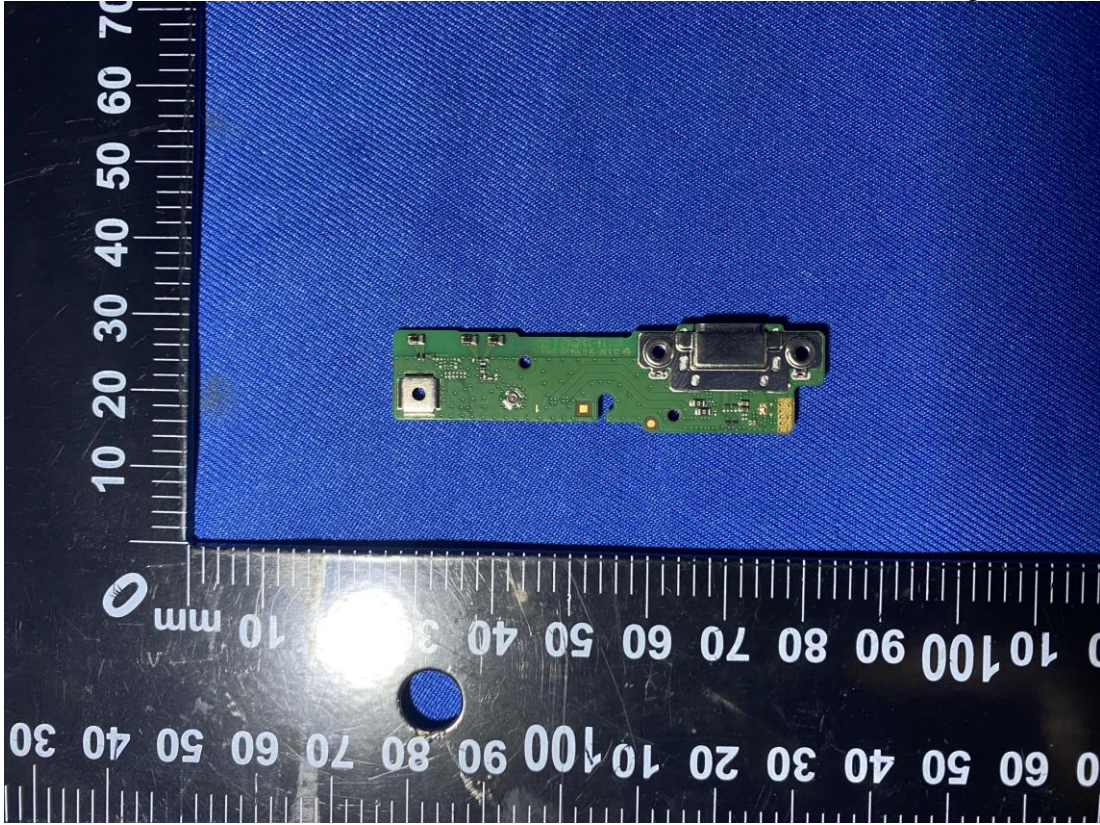


Figure 22
Inside Configuration of the EUT

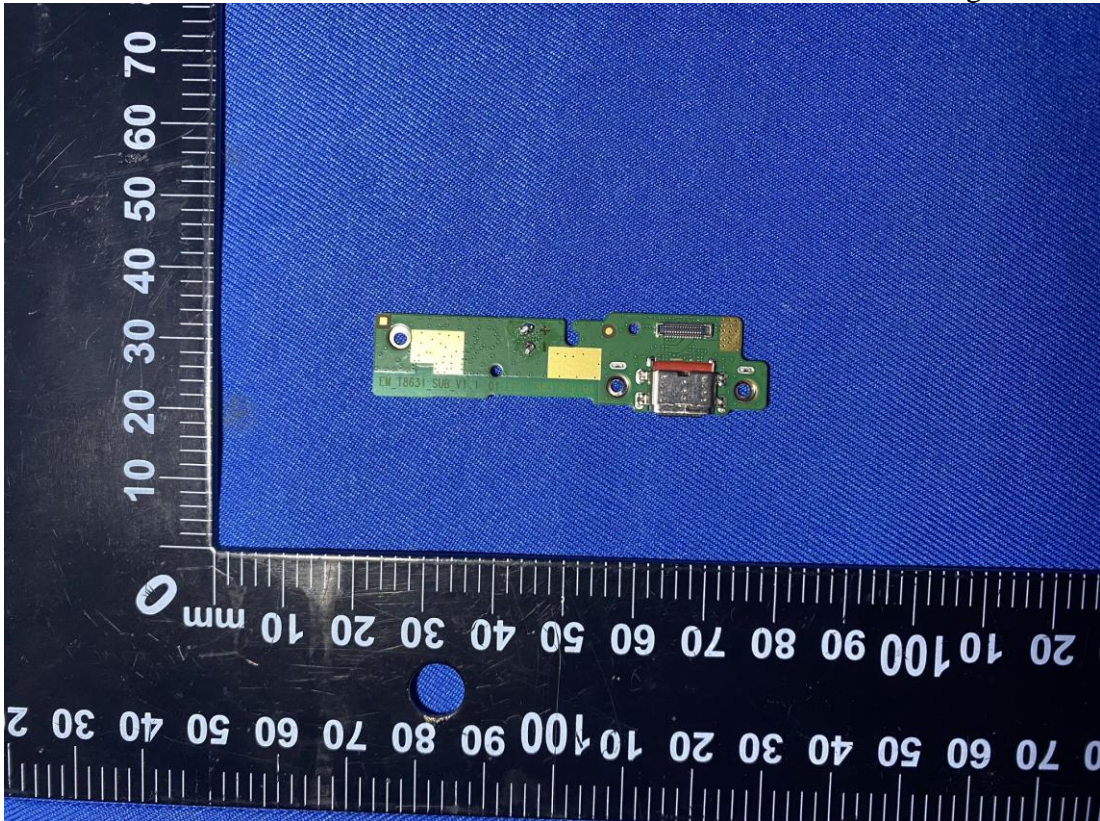


Figure 23
Inside Configuration of the EUT



..... **THE END**