Quick Start Guide

Alcatel APPRISE™



More information

On the web

Detailed support information including device specifications and a full user's manual are available at www.cricketwireless.com/support/devices.

On the phone

- Call Customer Care at 1-855-246-2461 or
- Dial 611 from your cell phone.

Accessories

For more information about accessories, please visit vour local Cricket store or ao to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary.

Product meets FCC Radio Frequency Exposure Guidelines--FCC ID 2ACCJH124. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

© 2020 Cricket Wireless LLC. All rights reserved. Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners, microSD logo is a trademark of SD-3C, LLC. Alcatel is a trademark of Nokia used under license by TCL Communication Technology Holdings Limited. APPRISE™ is a trademark of TCL Communication Technology Holdings Limited. © 2020 TCT Mobile Limited. All rights reserved. TCL Communication Technology Holdings Limited reserves the right to alter material or technical specification without prior notice.

All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NU TROPIC (Amar Kabouche)

Getting to Know your Alcatel APPRISETM



Enjoy clearer conversations and reduced background noise

2. Type a name or phone number, or select one of the

(): To choose from a list of people who you have recently

Phone Setup

1. Remove back cover by gently pulling up on the indentation on the bottom left of the cover.



2. Insert the nano SIM card and microSD™ card* with gold contacts facing down.



3. Ensure that nano SIM and microSD™ cards have been properly secured.



4. Put the back cover on.

* microSD™ card sold seperately

Send a text message

new text message.

your message

Favorites or All Contacts.

5. Tap > to send the message.

Messaging

1. From the home screen, tap

2. Tap •• New message button to start a

4. Tap the **Type message** field and enter

contact name, or select a contact from

3. In the **To** field, enter a number or a

WARNING: To avoid damage to the phone, only use the standard NANO SIM card provided by your service provider.

Text and picture messaging

Touch screen

Navigating your phone

- Use your fingertip to tap the screen.
- Use quick flicks of your finger on the touch screen to swipe up, down, left, or
- Tap

 Back to return to the previous
- Tap **Home** at any time to return to the home screen
- Tap Recent apps to access recently viewed apps
- Swipe up to access applications on your phone.

Notification panel

Email

FINISH

Gmail setup

then tap M Gmail.

tap **NEXT** again.

To access alerts, including new messages, emails, and software updates:

- From the top of the home screen, drag your finger down to view the notification panel.
- Swipe right or left to clear individual notifications or tap CLEAR ALL to clear
- With the notification panel open, tap the top of the screen again and drag down to see the Quick Settings menu.
- Tap to access the complete Settings menu

1. From the home screen, tap **Google**,

NEXT and enter your password and then

3. Confirm email account settings and tap

4. Enter your name which will be displayed

on outgoing mails, and then tap

2. Enter your email address and tap

Personalize

Set wallpaper

- To change your home or lock screen wallpaper, touch and hold a blank part of the home screen and tap WALLPAPERS.
- wallpaper to set the image and then select whether you want it to appear on the lock screen, home screen, or both. You can also tap Wy photos for additional options.

Add to home screen

• To add app shortcuts, swipe up to access applications, press and hold the desired app, and drag it to the home screen.

Organize home screens

- To move an app shortcut, press and hold it and then drag it to a new location. To delete it, drag it on top of «X Remove» at the top of the screen.
- To create a folder, press and hold an app shortcut and drag it on top of another, then release.
- To rename a folder, press the folder title to type a new name.



0

Additional Features

Cricket Services

palm of your hand.



Convenient Services & Features

These services make using Cricket even better and easier.

myCricket: Check account balance, make a quick

payment, view usage and access support from the

Visual Voicemail: Quickly view, access and play

respond to messages by calling back or texting.

back your voicemail messages. Easily save

important numbers to your Favorites list and



Camera and video Take a picture and video

- 1. From the home screen, tap **Camera** . 2. Zoom in and out by pinching with your
- fingers. 3. Tap the **Shutter** or press the **Volume Key** to take a photo.
- 4. In Video mode, tap Record

 to start recording. Tap it again to stop recording.
- 5. Take a photo while in Video mode by tapping Shutter (a).



Modes and settings

Slide left or right on the camera screen to switch between modes.

Tap Filter to apply a live filter to your photos.

Tap **Pano** to capture a panoramic photo. Tap the shutter button and move the phone steadily along in the direction indicated on the screen. The photo will be saved when all the slots are filled, or when pressing the shutter button

Google applications

Google apps are preinstalled on your phone to improve work efficiency and help you enjoy life.

* Face recognition may not be as secure as Pattern, Pin, or Password locks

Access Google applications

From the home screen, tap 🛟 Google.

Google Go

Google Go is a web browser you can use to surf the

YouTube

YouTube is an online video-sharing application where users can upload, view, and share videos. Available content includes video clips, TV clips, music videos, and other content

Assistant

Press your phone's dedicated Google Assistant button to quickly ask for help, check the news, make a phone call, and more.

Maps

Google Maps offers satellite imagery, street maps, 360° panoramic views of streets, real-time traffic conditions, and route planning.

Google Pay

Google Pay is a simple and fast secure payment service that provides the necessary functions for checkout, allowing you to settle your bills online and in stores with ease.

Check voicemail

1. From the home screen, tap 🕓 Phone, then tap 📵

2. Press and hold the 1 key 1

called or have called you.

Calls and Voicemail

1. From the home screen, tap () Phone.

: To manually enter a phone number.

.: To make a call from your contacts list.

: To choose from frequently called contacts.

HD Voice Capable

following options:

with HD Voice*

Make a call

Call waiting

Call waiting allows you to answer a second call while putting your existing call on hold. While on a call, you will hear a tone if another call comes in.

: To answer the incomina call.

M: To switch between active calls. T: To merge calls.

🔼: To end a call.

To experience Cricket HD Voice, both callers must have a compatible HD Voice capable smartphone and make the call over Cricket's LTE Network or a compatible network. Cricket's LTE coverage is not equivalent to its overall network coverage. HD Voice calls made on a compatible device and on the LTE network may not experience an HD Voice connection at times of network congestion. Other carriers' networks may interoperate with Cricket's LTE network to support an HD Voice call.

Send a picture message

- 1. Follow steps 1-4 above.
- 2. Tap the Paper Clip.
- 3. Tap Picture and select desired picture or tap the O Camera icon to take a picture to attach.
- 4. Tap > to send the message



Q' W E' R' T' Y' U' I' O' F

ASDFGHJKL

* Z X C V B N M ©

Create and send an email message



- 2. To compose a new message, tap 2. 3. Tap the **To** field and enter email address or name.
- 4. Enter a subject and email message. 5. To attach files to the email message,
- your selection. 6. Tap **Send icon** to send the message.



0

WARNING: Please don't text and drive.







