

User Manual

4056W

4056Z

About this Manual

Thank you for choosing the GOFLIP4 device. In order to maintain your device in optimal condition, please read this manual and keep it for future reference.


Table of Contents


1	Your Device	5
1.1	Overview.....	5
1.2	Set up.....	8
1.3	Home Screen.....	9
1.4	Status Bar.....	10
2	About Your Phone	11
2.1	Power on your phone	11
2.2	Power off your phone.....	11
2.3	Charging.....	12
2.4	Battery.....	12
3	Personalize Your Phone	13
3.1	Language	13
3.2	Change font size	13
3.3	Date & Time.....	13
3.4	Sounds	14
3.5	Wallpaper, Brightness and Screen Timeout	14
4	Application	16
4.1	Phone	16
4.2	Contacts	18
4.3	Messages.....	22
4.4	Email	25

4.5	Camera.....	27
4.6	Gallery	28
4.7	Utilities.....	29
4.8	Clock	30
4.9	Calendar	31
4.10	Music.....	32
4.11	Video	33
4.12	FM Radio.....	33
4.13	Note.....	34
4.14	File Manager.....	35
4.15	QR Reader.....	35
5	KaiOS Applications	36
6	Security.....	37
6.1	Lock/Unlock your screen.....	37
6.2	SIM Security	37
6.3	Anti-Theft	37
7	Account.....	38
7.1	KaiOS Account	38
7.2	Software Update.....	39
8	Safety and Regulatory Information	40
9	Troubleshooting.....	49

1 Your Device.....

  1.1 Overview

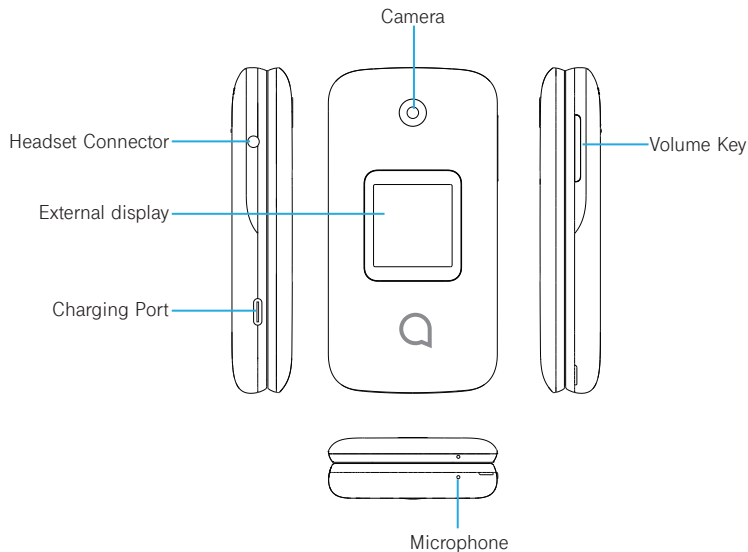

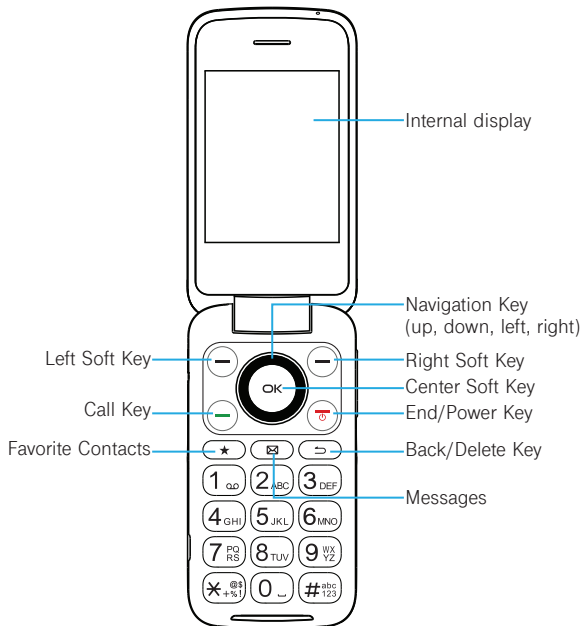



Left Soft Key

- Press: access Notices



Right Soft Key

- Press: access Contacts



Center Soft Key

- Press: access app list (from the Home screen)
- Confirm an option at the middle of the bottom of the screen



Navigation Key

- Menu selection moves up, down, right, and left
- Press Up: access Ringtones & Alerts settings
- Press Left: access KaiOS-Store
- Press Right: access Camera



Call Key

- Pick up/send a call
- Press: enter call log (from the Home screen)



End/Power Key

- Press: end a call, return to the Home screen
- Press and hold: to Restart and Power on/off



Back/Delete Key

- Move back wards through Menus
- Delete entered number or letter

 


Volume Keys


- In call mode, adjusts the earpiece or headset volume
- In Music/Video/Streaming mode, adjusts the media volume
- In general mode, adjusts the ringtone volume
- Mutes the ringtone of an incoming call

1.2 Set up

Attaching or removing back cover

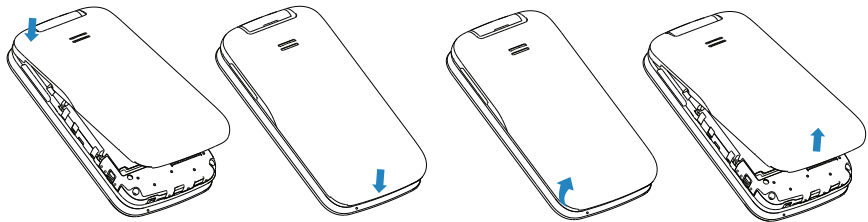


Inserting or removing battery

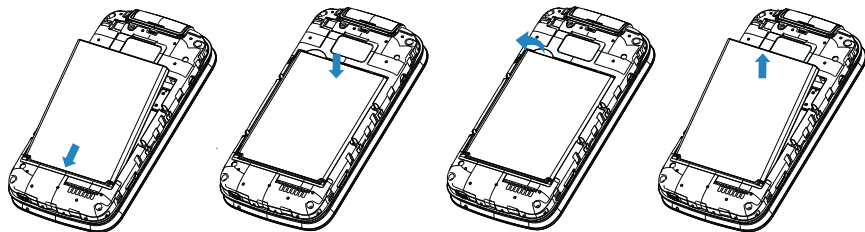 

Inserting or removing Nano SIM card and microSD™


You must insert your Nano SIM card to make phone calls using your network.

 - Insert a SIM or microSD™ card into the card slot with the gold-colored contacts facing down.
- To remove the SIM or microSD™ card, push down on the plastic spring and pull the SIM or microSD™ card out.

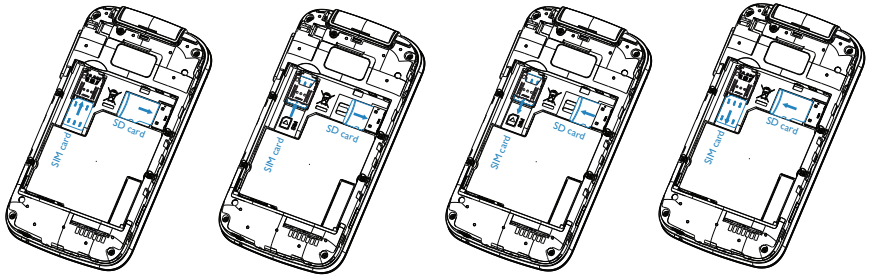

Your phone only supports Nano SIM cards. Do not attempt to insert other SIM types, otherwise you may damage your phone.

 1.3 Home Screen

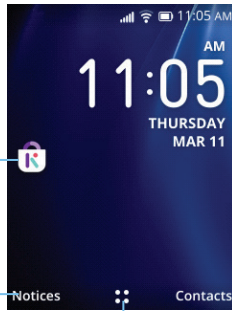

Status bar

- Status/Notification indicators

Press the Left of the
Navigation Key to access
KaiOS-Store



















Press the **Left Soft Key** (⊖) to show **Notices**

Press the **Center Soft Key**
(OK) to enter all app list

Press the **Right Soft Key** (⊕) to enter **Contacts**

1.4 Status Bar

From the status bar, you can view both phone status (to the right side) and notification information (to the left side). Here is a list of the icons you might see and their meanings:

	New text or multimedia message		Missed call
	New Email message		Upcoming event
	4G LTE connected		Alarm set
	4G connected		Bluetooth® active
	EDGE connected		No SIM card installed
	2G connected		Headset connected
	Silent mode		GPS is on
	Wi-Fi® active		Vibrate mode
	Signal strength		Battery is very low (red bar)
	No signal		Battery is low
	Airplane mode		Battery (fully charged)
	Roaming		Battery (charging)
	Song is playing		New voicemail