

CONTENT

1. WARNINGS	- 1 -
2. GETTING STARTED	- 2 -
3. YOUR PHONE	- 3 -
3.5 KEYPAD DEFINITION	- 3 -
4. FILE MANAGER	- 3 -
5. PHONE BOOK	- 4 -
6.1GAMES THE PHONE OFFERS INTERESTING GAMES, FOR DETAILED OPERATION, PLEASE VIEW GAME OPERATION SPECIFICATION	- 4 -
7. CALL CENTER	- 4 -
8. MESSAGING	- 4 -
11 SETTINGS	- 7 -

1. Warnings

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTERFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

2. Getting Started

2.1 SIM Card Installation

When you subscribe to a cellular network, you will receive a plug-in SIM card complete with your subscription details, such as your PIN, and available optional services.

Caution: Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

Tips: Face the gold color contact point of SIM card towards the cell phone and push the SIM card into the slot.

2.2 Battery Installation

Caution: Install according to the illustration above to avoid breaking the battery connectors.

2.3 Charging the Battery

Insert the charger; the flash symbol on the charger plug must face upwards.

Connect the charger to a standard wall outlet and the battery power icon in the up-right corner of the screen will start scrolling. When the battery bar stops scrolling, the battery charge is complete. Press the two sides of the charger plug and disconnect the charger from the phone.

2.4 T-flash Card

Insert the T-Flash card into phone. This will expand the Flash memory of the phone. Tap Multimedia menu, you can browse MP3, MP4, picture, etc.

2.5 USB Cable

You can transfer and store files, such as MP3, MP4 and pictures from PC, through USB cable, to the U-disk in phone or identified SD card that is inserted.

3. Your Phone

3.1 Making a Call

In standby mode, press numerical keys to input phone number to dial phone number. When you finish inputting phone number, press the dial key, SIM2 key to make a call. If you're making a long distance call, add the area code preceding the telephone number. During a call, you can press navigation keys to adjust volume. Press left soft key to access Options.

3.2 Emergency Service

You can dial an emergency call without the SIM card. Contact your service provider to get the emergency call number.

3.3 Answering a Call

When you receive a call, the phone will ring or vibrate and will display an incoming call indicator. Press the dial key, key to answer. Press left soft key to access options.

3.4 Rejecting/Ending a Call

Press end key to reject an incoming call or end current call.

3.5 Keypad Definition

- CENTER key: To enter main menu
- Dial key: Dial the number or answer calls
- End key: Cancel or reject calls; by long pressing can turn on/off the phonemethod in editing mode

4. File Manager

Enter this menu; you can check the files store on T-flash card. Press left soft key, you can do options.

5. Phone book

You can store contacts' personal information and numbers while also search for previously stored contacts. Press left soft key to access Options.

6.Fun&Games

6.1Games The phone offers interesting games, for detailed operation, please view game operation specification

7. Call center

In the call history menu, you can check dialed calls, received calls, missed calls, rejected calls, delete all, check call time, call cost, and GPRS counter.

8.Messaging

8.1 Write message Please setup the correct message center number before creates the message.

Enter into the create message sub-menu to create the message, press “confirm” key to enter into the “Options” menu. You can access the Send to, Insert template, Insert number, Insert name, Insert bookmark, Save to Drafts, Input method, Add Input Method on the text editing and set operations

8.2 Inbox Enter into the inbox sub-menu to check the received message in the SIM card 1, SIM card 2. Press “OK” key to enter into the menu. The information you can Reply, Call sender, Forward, Delete, Delete all, Use number, Advanced, Edit options operation

8.3Drafts The drafts box storage the SMS which not yet ready to send, you can revise and send again.

8.4Outbox Enter into the Outbox to view the message which you save in the phone (SIM card1/ SIM card 2/ Phone), also included failed to sent messages.

8.5Templates Press “OK” key to enter into the template list, you can edit, delete or create new message while you selected the template.

8.6 SMS settings To set parameters of SMS

8.7 MMS (MMS) Multimedia messaging services, the most outstanding feature is that it can support multimedia message functions. It can send text, sound, picture message etc .

8.8 Voice mail server This will automatically direct incoming calls to the voice mail centre when you cannot accept a call so that the caller can leave a message on the voice mail system of service network. If a message is left, you can access the message by visiting the voice mail system.

8.9 Broadcast message Broadcast messages refer to public messages sent by your network operator. If you use the broadcast message service you can receive messages on all different subjects from your network operator such as: the weather, taxis, hospitals, etc. Please contact your network operator for available subjects.

9.Multimedia

Press side key to adjust volume. Press left soft key to access Options.

9.1 Camera:Press camera icon in the main menu select the function. The photo can be previewed in the screen; press OK key to shoot and right soft key to back, left soft key to access Options. Use navigation keys, you can choose and enter the

functions list on screen.

9.2 Image viewer Select the album sub-menu, you can quickly view files stored in an album . Please refer to the specific use of camera features in the album operation

9.3 Video recorder Enter the Shoot Mode to shift camera to video recorder. Press left soft key to access Options. Use navigation keys, you can choose and enter the functions list on screen.

9.4 Video Player Preview the videos. Press Next on the navigation key and navigation key to adjust volume. Press navigation keys to select and then press OK key confirm to enter. Press left soft key to access to "List", then press left soft key again to access options.

9.5 Audio Player This function menu is used to store and play the multimedia file. Press the left soft key or OK key to enter and use the Navigation keys, OK key, or Music Control Keys to operate.

9.6 Sound Recorder You can take a recorder in this function. In the play mode, use side key to adjust the volume. Press OK button to record. After record, access Options. After entering the file list, select one file, access to Options.

9.7 FM Radio Enter FM radio (insert earphone). Press left/right key to change frequency, press side key to adjust volume. Press the left soft key to access Options.

10 .Organizer

10.1 Calendar Enter into the calendar menu, to see the schedule, new issues, skip to the specified date, to view a week and the operation of Lunar New year.

Notice: Lunar will not display while setting the phone language to English.

10.2 Alarm The phone can setup 5 alarm clocks (still effective while the phone is switch off), the default settings is off. Select anyone of the alarm clock, press ok key to select edit to setup.

10.3 World clock Enter into the world time menu; the screen will display the world time zone map, View current time of corresponding zone of various countries in the world through left right key

11 Settings

11.1 Dual SIM settings In the submenu, you can select Dual SIM open, Only SIM1 open, Only SIM2 open or Flight mode.

11.2 Phone settings Enter the “Phone settings” submenu. Here you can make the following settings:

11.2.1 Time and Date This menu includes options for setting the time and the date.

Set time zone there are many international city for select

Set time/date setup the clock and date of the phone

Set format setup the time to 12-hour or 24-hour format. Also can setup the date format.

11.2.2 Schedule power on / off Setup the specified time to power on/ off the phone, you can setup 4 times,

11.2.3 Language Setup the phone language. It contains a number of national language

11.2.4 Preferred input method Touch the leftup icon may setUP the input method, There are kinds of types of input method

11.2.5 Misc. setting Setup the time length of LCD backlight.

11.3 Display Can operate Wallpaper, Analog clock Screen

saver, Screen saver, power on & off display, Show date and time the picture settings

11.4 Network settings Enter into the menu; you can select re-search, network and mode method to get the network service. Select mode can select “auto” or “menu” mode by press left soft key

11.5 Security settings Enter into the “security settings” menu, you can setup the SIM card 1/ card 2 security options to avoid mobile phone or SIM card be illegal use.

11.6 Restore factory settings Enter the security code, the phone will restart and the menu settings will reset to their original values.

11.7 Sound effects You can setup the audio effect.

12 User profiles

Your mobile phone provides many different user profiles for you to set your mobile phone’s ring tone, according to case and environments.

In the main menu interface, select “User profiles”. Press the Left soft key to enter the “profiles” main menu where you will be able to see the options: “normal”, “silent”, “Outdoor”, “Indoor”, “vibrate” .

Note: These five profiles have already been set and the default profile is “normal” when the mobile phone leaves the factory.

13 Extra

13.1 Bluetooth

You can connect your phone to the compatible device through Bluetooth wireless technology; the longest distance is 10 meters. Because it is through radio waves to communicate, so your phone and other Bluetooth devices

are not required to keep face to face, but it may interfere by the wall and other electronic equipment.

In some areas, it may be limit to use the Bluetooth wireless technology, please consult local department or network service provider.

Notice: use the Bluetooth wireless function and running other applications in the background, these features may faster consume the battery voltage, and short the battery life.

13.2 Calculator

Your mobile phone provides a calculator with 4 basic functions to facilitate simple calculations.

14 Services

In the main menu interface, press the navigation key to select “Services”.

14.1 SIM1/2 STK* Press the **up/down keys** to select “STK”. Press the **Ok key** to enter the “STK” main menu. Here you can use the value-added services provided by your network operator. Your mobile phone supports STK functions. This service is provided by your network operator. If your SIM card and network operator do not provide this service, then you will not be able to use this function. For more information please contact your network operator.

15 Shortcuts You can set the shortcut operation

Note: In kind function shall prevail

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause

harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: BRIO F25 (FCC ID: 2ACEVF2BRIOF25) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.370W/kg and when properly worn on the body is 0.507W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 10 mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 10 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.