
Tablet PC User Manual

Attention:.....	3
1. About Tablet PC.....	4
1.1 appearance and button:.....	4
1.2 Touch panel.....	4
1.3 POWER.....	4
1.4 earphone jack.....	4
1.5 TF card.....	4
1.6 Mirco USB.....	4
1.7 Video output interface.....	4
1.8 Reset.....	4
2. First use.....	5
2.1 Battery management and charge.....	5
3. Equipment operation interface.....	5
3.2 status bar describe.....	7
3.3 Use touch panel.....	7
4. Equipment basic set.....	8
4.2 security.....	9
4.3Backup& rest.....	10
4.4 Storage.....	10
4.6. Date & time setting.....	11
5. Apps Install and manage.....	12
5.1 App installer.....	12
7. Problem solutions.....	12
8. Basic function.....	12
9. FCC NOTE.....	13

Attention:

This handbook contains important security measures and the correct use of the product information, in order to avoid accidents. Pls make sure to reading the manual carefully before use the device.

- Please don't be in high temperature, moisture or very dust place
- Please don't be in high temperature, Especially in summer don't put the device in the car when Windows closed.
- Avoid fall or Violent collision of the device, don't make the TFT display screen were violent tremor, This could cause TFT display screen abnormal or damage.
- Please choose the appropriate volume, Use headphones should not be too big volume, If feel tinnitus, Lower the volume or stop using it
- please charge In the following condition,
 - A、The battery power ICONS shows have no power
 - B、The system automatically shut off, startup after power off soon
 - C、Operation buttons no response
 - D、The machine that the top right corner show red icons
- When the device in the format or ongoing upload and download file, please don't suddenly disconnect, This could cause application error.
- For those who because of damage to the product, repair, or other causes of erased the memory, The company shall not be liable for any responsibility, please follow the user manual for the standardized operation to use the device.
- Don't disassemble the product, don't use alcohol、Thinner or benzene to scrubbing products
- Don't use the device one of the place of prohibit to use electronic equipment in regional (such as the plane)
- Please don't using the Tablet PC when you in driving or walking down the street,
- USB just only be used for data transmission

The company reserves the right to improve product, products specification and design have any change, The information is subject to changes without prior notice.

(This tablet is no waterproof function)

【Remark】All pictures in this manual is just for your reference. products specification and design have any change, The information is subject to changes without prior notice.

1. About Tablet PC

1.1 appearance and button:

1.2 Touch panel

7" Capacitive touch panel: In The Operation, to click, dragging on the touch panel

1.3 POWER

startup: Long Press and hold the power button, the system will enter the main interface

shutdown: In the main menu interface, Press the power button about 5 second to shutdown, The system can hint "power off" option, Click "ok". you can safely shutdown.

Lock screen: Short press Power button to lock screen or unlock screen.

Remark 1. When power is empty, system will shut down automatically.

2. Illegal turn off the device, restart will scan and restore the disk, it may take longer time to enter into system

1.4 earphone jack

3.5 mm standard earphone jack

1.5 TF card

TF-CARD Slot: external T-FLASH card

1.6 Mirco USB

Mirco USB jack: you can use it to connect the computer for data transmission, charging and external connection USB flash drive

1.7 Video output interface

HDMI output interface

1.8 Reset

When the Tablet under the condition of the crash, use the small objects to short press RESET button, Tablet will force to shutdown.

【Remark】: unless unable to shutdown, otherwise don't use the reset, suggest you to shutdown by normal, if no will easy to damage the machine system.

2. First use

2.1 Battery management and charge

Before first use, please set the device's battery is fully charged

Just need to connect the adaptor or USB interface, then you can charge

The first two times charging please keep about 6 hours, after that you just need 4 hours to charge.

【Remark】 : This tablet using Built-in type polymer battery, Charge must be to choose standard adaptor (Input: AC110~240V 50/60Hz Max : 180MA.. Output: DC5.0~5.5V/1.5A), this device without supply DC charging, USB interface can charge, Choose USB interface to charger

During the charging, the battery icon will scroll

When finished charging, battery icon will become green and stop rolling

In order to prolong the service life of the machine, suggest use out battery power before charge it

【Remark】 : 1. If you long time don't to use this Tablet, ,in order to avoid power consumption caused damage, pls charge/play the battery once a month.


2. After low battery shut down, connect DC adaptor, device will remind low battery, charging, need to wait some time until the battery is enough power to enter into main menu.


3. Device charging should be in standby status for reach normal charging time.

Because with device and screen consumption, it may cause longer charging time.

2.2 Connection with PC

U Use USB cable to connect device to PC, device will pop up the USB connection window, click Turn on USB storage to connect to PC

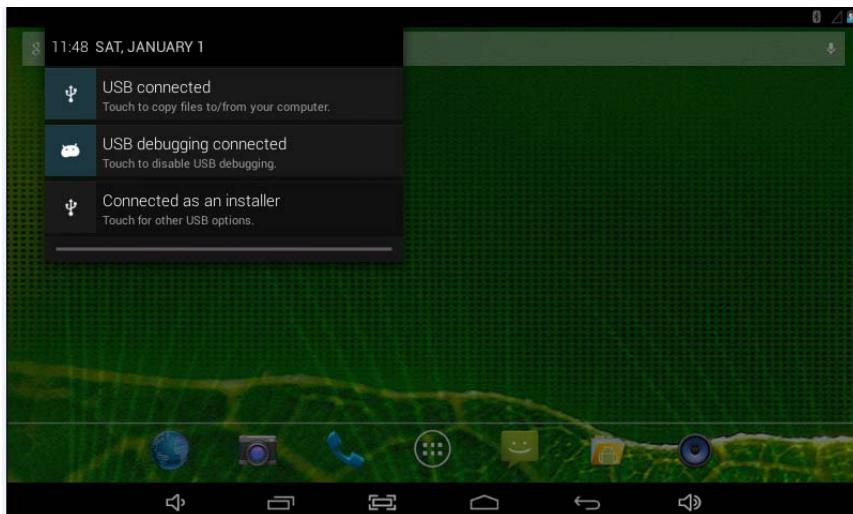

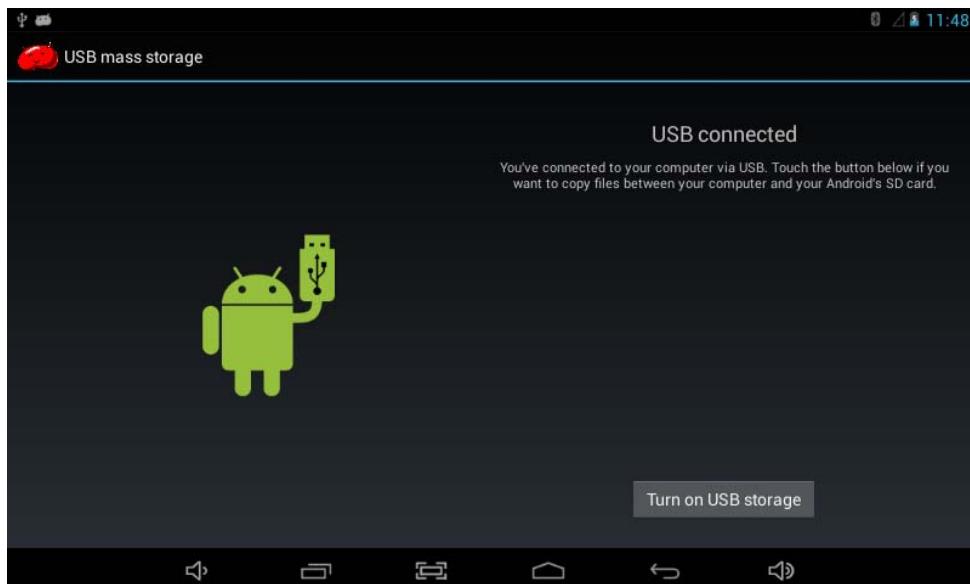


Into the load mode, you can copy, delete the file on the device and the file on the memory card.

3. Equipment operation interface


3.1 Main interface describe

After startup will enter the main interface

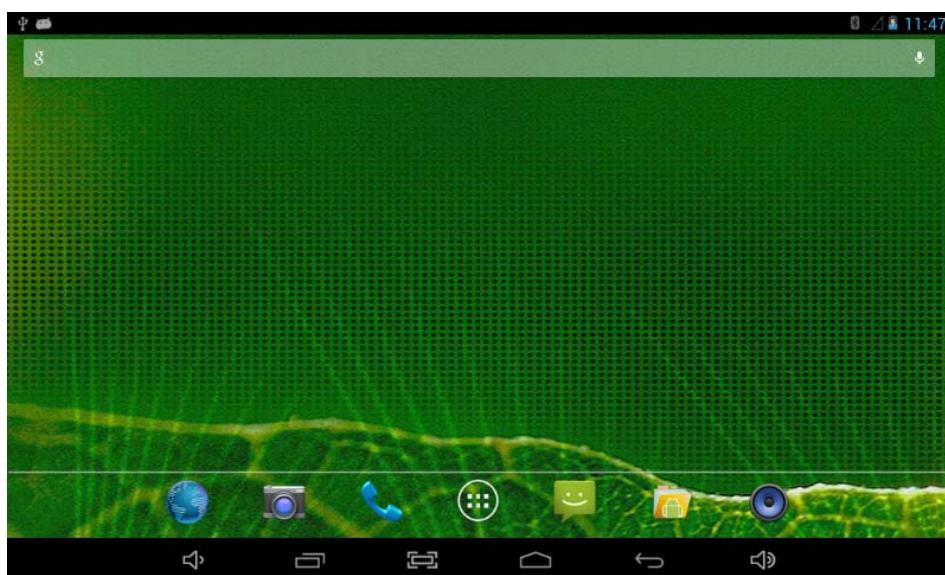


In the main interface, you can :

Management main interface software ICONS: long press the icons 3 second, after the icons will bigger, then you can drag anywhere in the interface.

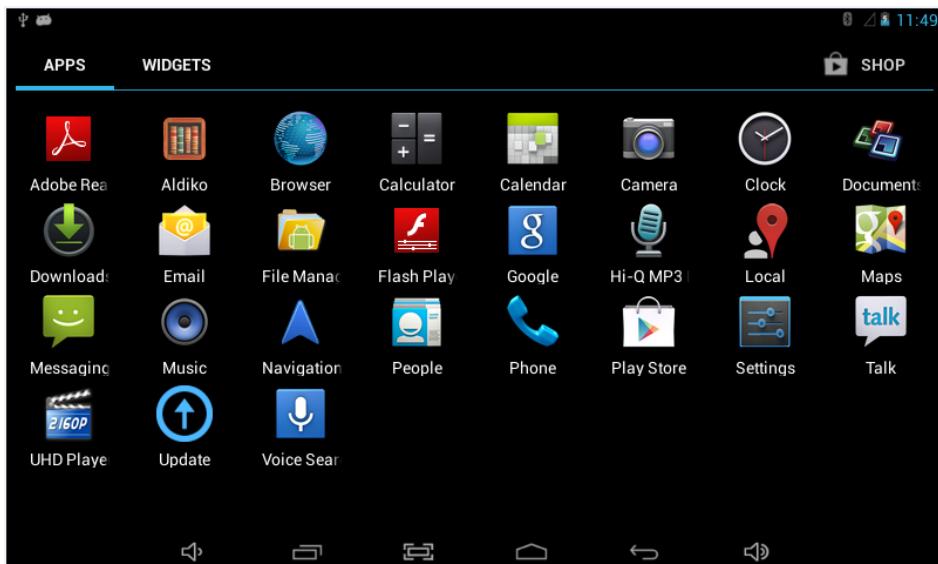

Delete icons: long press the icons 3 second, drag the icons to the Recycle Bin icon, once it become red, Loosen your hand, after that you can delete icon

You touch the screen keep a time, appear the dialog box "Add to Home screen" as shown below:

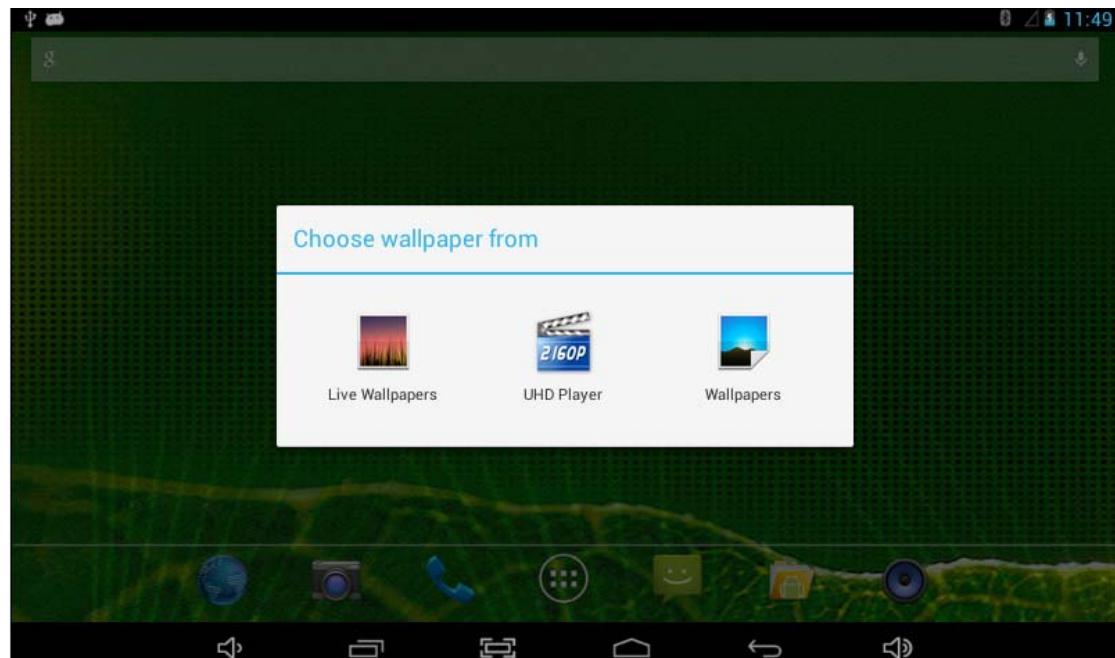

3.2 status bar describe



- The status bar above of the screen
Top left display main interface software, T-Flash card, USB connection status and so on
Top right display the battery, battery charge icons, current time,

set time, Settings Menu, ESC button.

3.3 Use touch panel


Device equipped with a 7 " touch screen. Following the main touch screen area is described, and describes some of the tips for how to use the touch screen.

No matter which interface you are on the screen, can go back to main screen through pressing the soft key  on the upper left corner of the main screen.

【Attention】 The main screen soft key  functions as the machine back key  In different applications, by tapping the back soft key  on the upper right corner on the touch screen, you can return to its interface on the up floor.

In different applications, by tapping the menu key  on the upper right corner of touch screen, the screen will appear the operation setting interface as follows,

【Remark】 : The main screen soft key  functions as the machine menu 

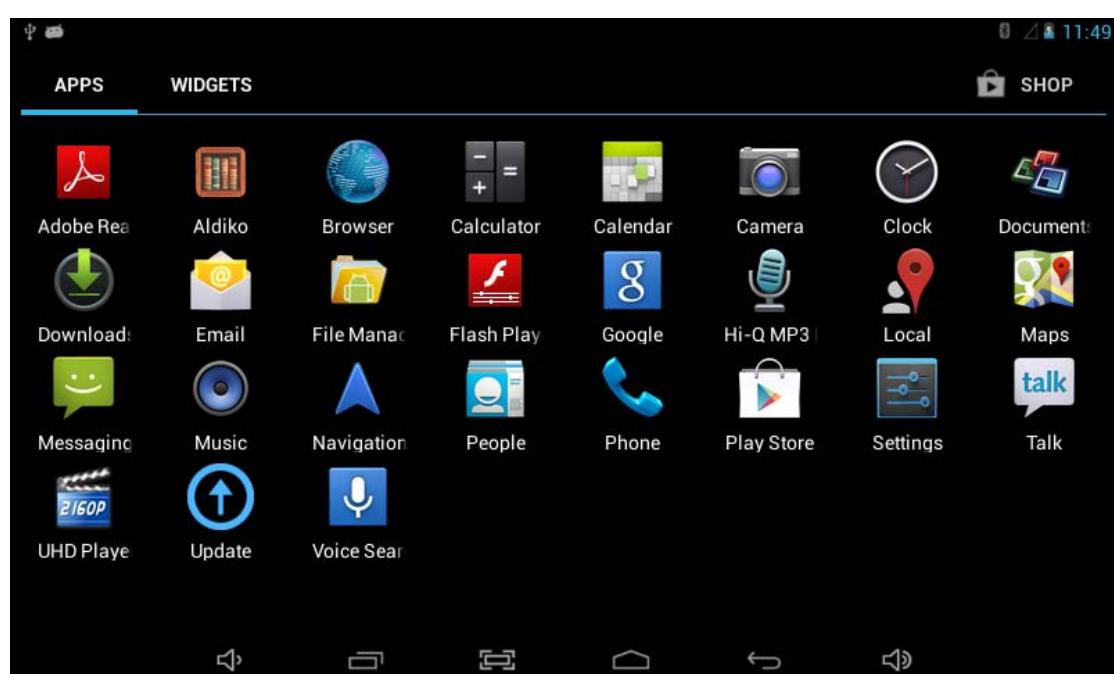

In the main interface, you can touch the icon to open the APPs

In different browser(file, music, video, pictures), You shift and drag the


scroll bar, so that the file list can up or down to roll.

4. Equipment basic set

Setting: Click setting icons , enter setting interface




4.1 Silent mode, Volume, Notification ringtone, Audible selection, Screen lock sounds,

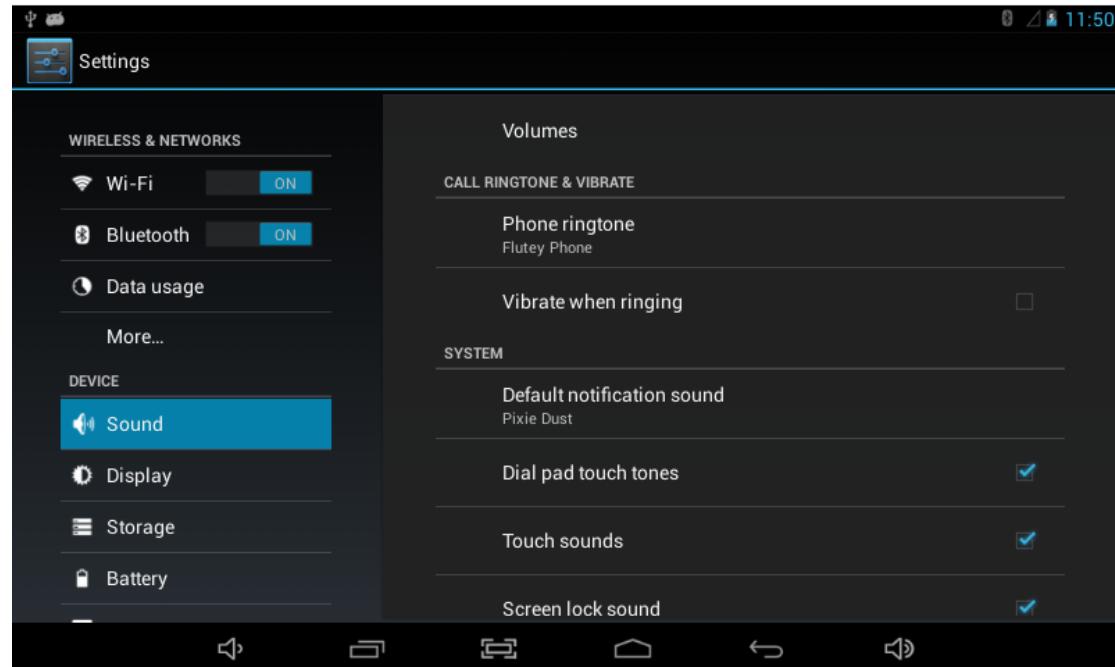

4.2 security

Unknown sources: Click “Unknown Sources”,

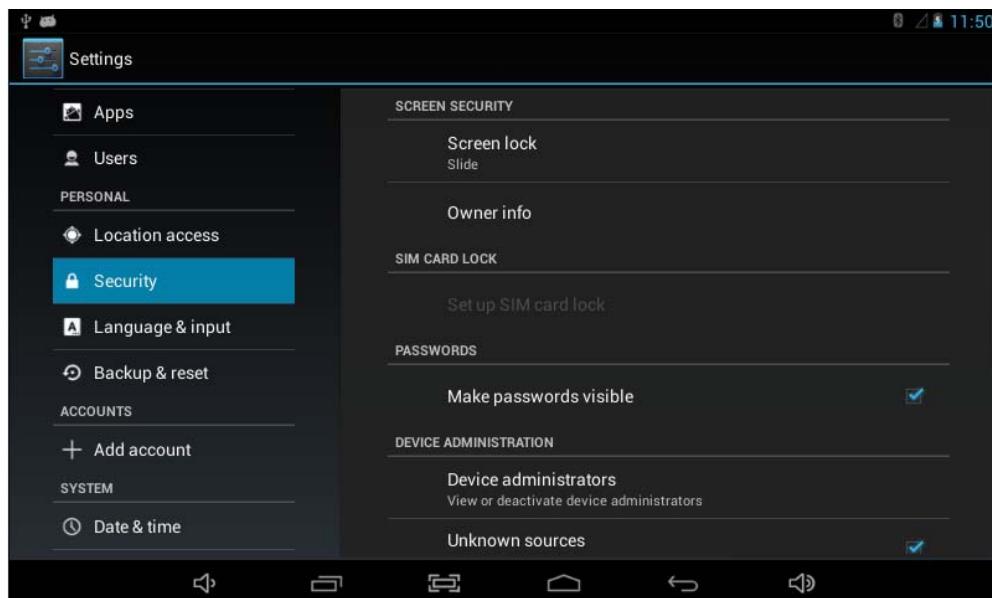


【Remark】: when you Firmware Upgrade, pls close the USB connect

How to uninstall?




1. enter “setting”>“Application”>“Manage application” And then there will be installed the program list
2. Click you want to uninstall icons, will enter the following interface
3. Click Uninstall, then you can delete the application

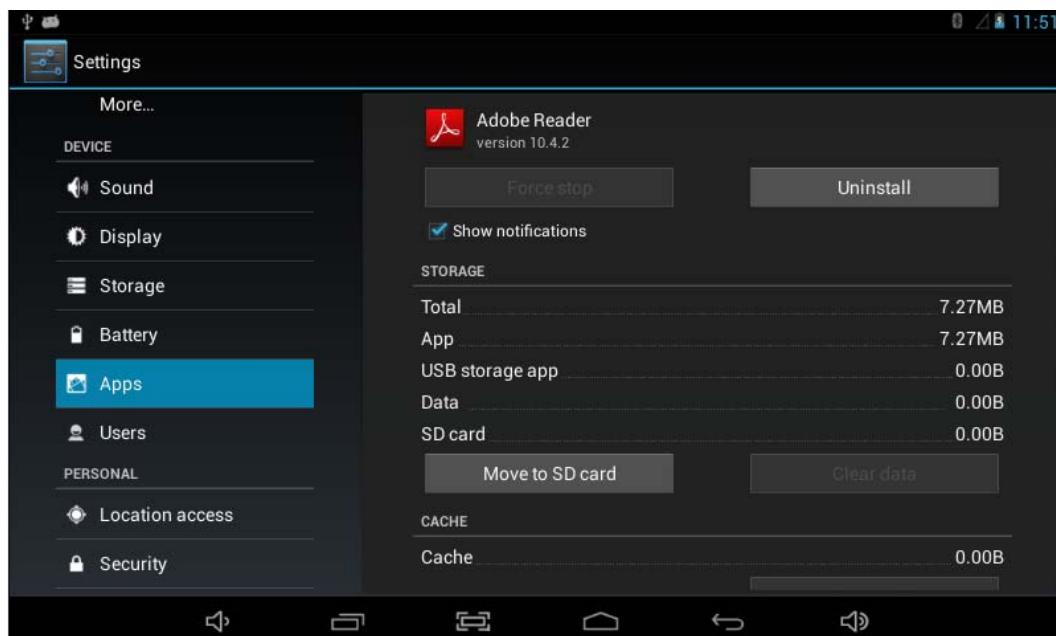

4.3 Backup& rest
Factory data reset

4.4 Storage


Remove TF card, view of the available storage space

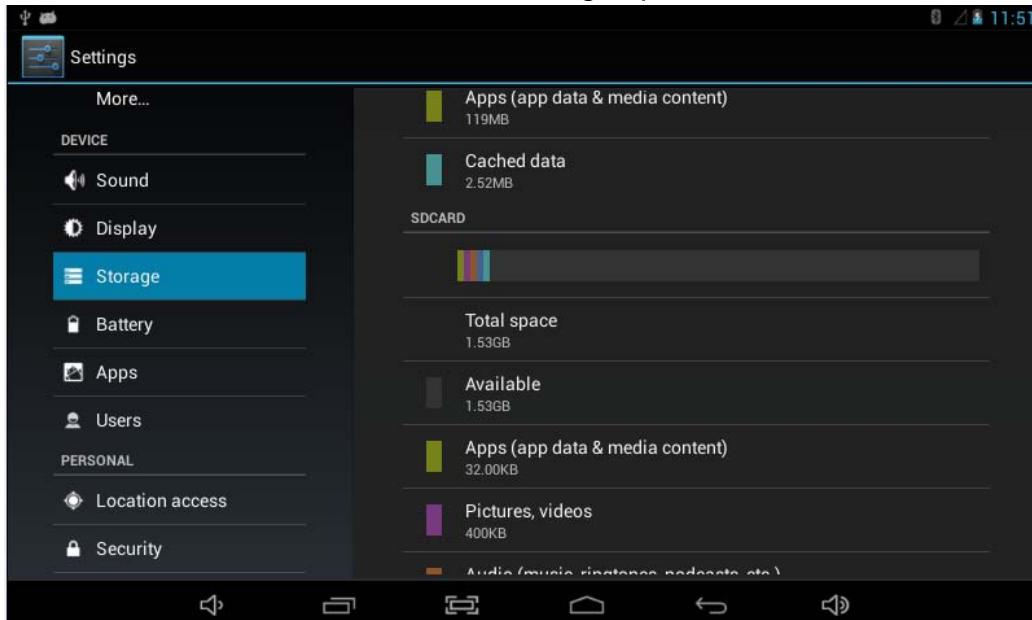

【Remark】: pls touch option "dismount SD card", so that can safety to remove SD card

4.5. Language & keyboard

Setting: (Language), text input and automatic error correction options;

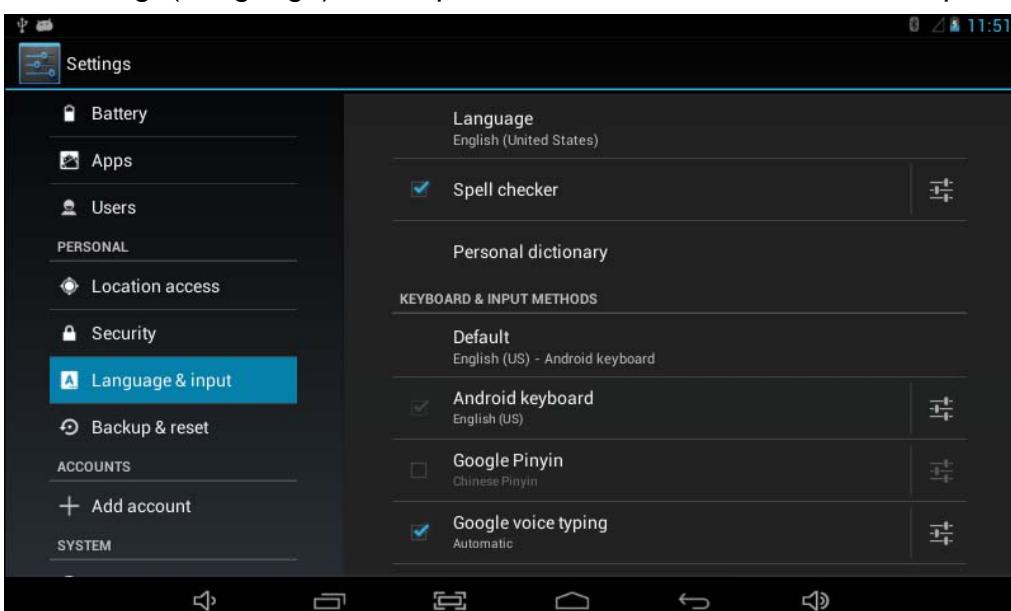

Select Language: 54 kind of national languages are available

Remark: Android system can support 54 kind of language, now menu interface just support 14 kind of language,


Keyboard & input method : Android keyboard setting

Show suggestions: Display suggested words while typing

Auto-complete: Specebar and punctuation automatically insert highlighted word

4.6. Date & time setting

Set date, set time, Select time zone and select date format

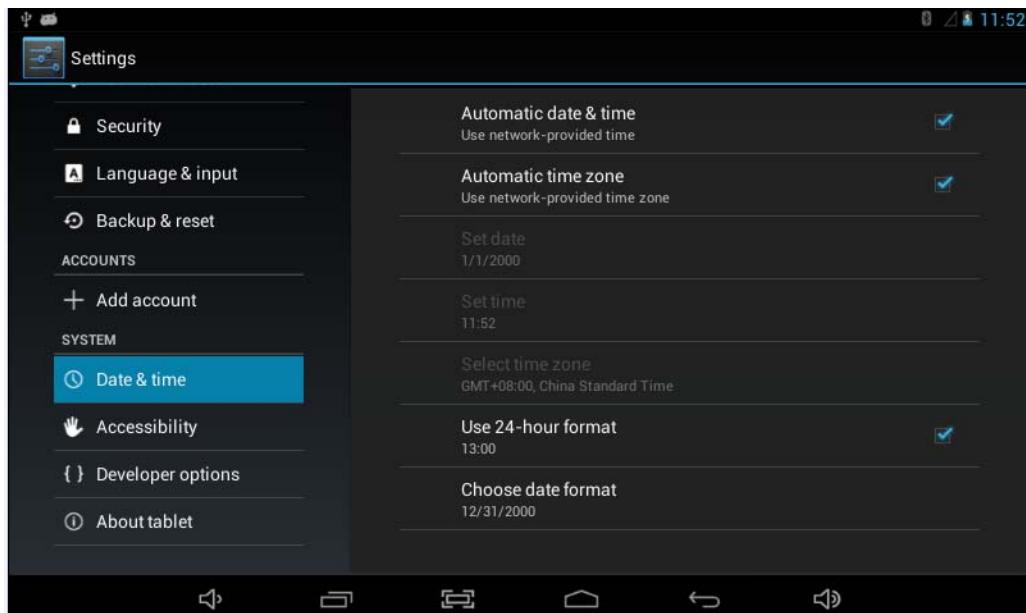

4.7 About Tablet



5. Apps Install and manage

5.1 App installer

This Tablet can support Android APP in market by third party, most Apps can

install in the network, can copy to NAND FLASH or SD card.

Click App installer icon, will appear Install, manage, Exit options.

Install: Click install, enter Apk install interface

Separately for Internal Memory disk and SD Card disk.

Select the APK you would like to install, click it to install, go back to main menu, will display the installed app you just selected.

Remark: some 3rd APP must install properly by memory card, downloaded 3rd party app may not install properly on device.

Manage: click manage, enter third party interface

Click install icon, will enter Action interface

6. Problem solutions

Device can't to open

1. Check the battery power
2. Connect adaptor first, then check again
3. After charging then can't to open, pls contact with the supplier

After startup the screen or the opening picture has been appear , the the device appear shutdown

1. Power is not enough, please charge

Headset can't hear the voice

1. Pls check the volume whether set to 0
2. Check the music file whether damaged. Try playing other music, if the file have damaged may lead to serious noise or hop sounds.

Can copy file or play music and so on

1. Pls check between computer and device is correct connection
2. check the memory storage space is already full
3. check the USB cable is good or not
4. USB connection is disconnected

8. Basic function

hardware configuration

Size: (length* wide*thick) 192*117*10.7mm

CPU processor speed: 1.2 Ghz

Memory: 8GB

RAM: 512MB

TF card: 128M-16G

Display screen: 7"(Capacitive multi-touch)

Resolution: 800*480

Battery and capacity: rechargeable Built-in type polymer battery, 2800Mah

USB: Micro USB, OTG

G-sensor 3D

Record: built-in microphone

Operation System: Android 4.2

Video: MKV(H.264HP).AVI.RM/BMVB.FLV.MPEG-1/2

Music: MP3.WMA.APE.FLAC.AAC.AC3.WAV

Pictures: JPEG.BMP.GIF.PNG.TIF

9. FCC NOTE :

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.