
User Guide

Music cooler (Model No.: Music cooler K2)

Kool Wavez™



Cutomer' s information such as website address, telephone, company address etc.

Thank you for purchasing our portable speaker. Please read these instructions completely, before operating this product.

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions - All the safety and operating instructions should be read before the appliance is operated.

1. Clean only with dry cloth - The appliance should be cleaned only as recommended by the manufacturer.
2. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
3. Close the power switch and take out the batteries during lightning storms or when unused for a long periods of time.
4. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the Enclosure through openings.

5. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

BATTERY PRECAUTIONS

Follow these precautions when using batteries in this device:

1. Warning-Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
2. Use only the size and type of batteries specified.
3. Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
4. Do not mix different types of batteries together (e.g. Alkaline, Rechargeable and Carbon-zinc) or old batteries with fresh ones.
5. If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
6. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions.)
7. Clean the battery contacts and also those of the device prior to battery installation.
8. Remove batteries promptly if consumed

Package Contents

Pls. make sure that all of the contents listed below are found in the box:

- 1 Water cooler speaker with a Micro USB cable

Specifications

Speaker	3.5 "X1 full frequency speaker
MW	4W (THD 10%) for Speaker
Battery	3.7V/2200mA/h 18650 Li battery
Audio In	Bluetooth AUX IN
Jack	MICRO USB Power supply (DC 5V/1000mA) /AUX IN/ USB (DC 5V/500mA-1000mA)
Play time	>5 hours (Based on the 50% average music power)
LED	LEDX2 POWER-REDBLUETOOTH-BLUE
Amp IC	Single channel Class D support 5V
Input sensitivity	

Frequency response (audio)	80Hz~20kHz (+/-3dB)
S/N	>70dB'A'Weighted
Type A USB 端口	5V/500mA out

How to use this portable speaker?

Press  Power ON, The Bluetooth light will be flashing.

Open your phone's Bluetooth and connect to the speaker.

If connect successful the blue light is on.

Now you can play music on your phone.

Press  is volume up.

Press  is volume down.

Press  is disconnect Bluetooth and go in paring mode.

Press  is power off.

When you use the AUXIN the Bluetooth will be disconnect.

Quality and certification

Safety	FCC
Environmental	RoHs
Energy	ERPII; Energy star
Other requirements	Bluetooth BQB certifications

FCC compliance statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Troubleshooting

SYMPTOM	POSSIBLE SOLUTIONS
No sound	<ol style="list-style-type: none">1. Volume on external player is set to minimum, increase volume.2. Power is off, turn on; the Power indicator will turn to orange.3. External unit is not on, turn on and start playback.4. Audio cable is not connected, connect it.5. The batteries are weak or dead.

Warranty card

Serial No.	ONE YEAR LIMITED WARRANTY	Kool Wavez™
Model:	Store Name:	
Name:	Store Address:	
Address:		
Date of Purchase:		

THIS DOCUMENT IS NOT FOR EXTERNAL DISTRIBUTION.
STRICTLY FOR INTERNAL USE ONLY.