

## ALL RIGHTS RESERVED

HIPERTRONICS S.A ©2014. All rights are reserved. No part of this document can be reproduced without permission. All trademarks and brand names mentioned in this publication are property of their respective owners.

While all the efforts have been made to ensure the accuracy of contents in this manual, we presume no responsibility for errors or omissions or statements of any kind, whether such errors are omissions or statements resulting from negligence, accidents, or any other cause. We operate a policy of continuous development and reserve the right to make changes, modifications and improvements to the device, device features/specifications or any of its parts without prior notice.

Your device may have preinstalled bookmarks and links for third party internet sites and may allow you to access third party sites. These are not affiliated with Spice, and Spice does not endorse or assume liability for them. If you access such sites, take precautions for security or content.

The limited warranty does not cover user manuals or any third party software, settings, content, data or links, whether included/ downloaded in the product, whether included during installment,

assembly, shipping or any other time in the delivery chain or otherwise and in any way acquired by you. To the extent permitted by applicable law(s), Spice does not warrant that any Spice software will meet your requirements, will work in combination with any hardware or software applications provided by a third party, that the operations of the software will be uninterrupted or error free or that any defects in the software are correctable or will be corrected.

** Note: User's Manual is provided just to guide the user about the functionality of the device. This does not seem to be any certificate of technology. Some functions may vary due to modifications and up-gradations of software or due to printing mistake.**

## TABLE OF CONTENTS

SAFETY PRECAUTIONS.....	5
UNDERSTANDING YOUR DEVICE .....	7
GENERAL INFORMATION .....	7
FUNCTION OF KEYS .....	7
STATUS ICONS.....	9
GETTING STARTED .....	10
INSTALLING SIM CARD AND BATTERY.....	10
INSTALLING MEMORY CARD.....	10
CHARGING THE BATTERY.....	11
SWITCH ON/OFF THE DEVICE .....	12
AUTOMATIC CUSTOMER REGISTRATION.....	12
BASIC OPERATIONS.....	12
TO MAKE CALLS .....	12
TO DIAL INTERNATIONAL NUMBER .....	13
ANSWER/REJECT AN INCOMING CALL.....	13

MAIN MENU .....	13
CALL LOGS .....	14
CONTACTS.....	15
MESSAGES.....	16
FM RADIO .....	18
FILE MANAGER .....	18
MULTIMEDIA.....	18
ORGANIZER .....	20
SERVICES .....	22
SETTINGS.....	24
SUPPORT AND CONTACT .....	28
ENVIRONMENTAL CONCERN.....	29

## SAFETY PRECAUTIONS

Please read the following safety guidelines before using the device.

- Do not use the phone while you are driving.
- Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.
- Keep your phone and its accessories away from children.
- Mobile phones can interfere with the functioning of medical devices such as hearing aids or pacemakers. People having active medical implants should keep their cell phone at least 15 cm away from the implant.
- Permanent hearing loss may occur if you use earphones or headphones at high volume.
- Use a wireless hands-free system (headphone/ headset) with a low power Bluetooth emitter.
- Make sure the cell phone has a low SAR.

- Keep your calls short or send a text message (SMS) instead. This advice applies specially to children adolescents and pregnant women.
- Use cell phone when the signal quality is good.

#### **Notice:**

- Do not dismantle the device or accessories otherwise, manufacturer is not liable to pay for damages as the device and accessories are not covered by warranty.
- Use only original batteries and charging devices.
- Please back up your important data timely and keep them properly. The company is not liable for any failure to call or loss of data due to miss-operation, poor signal or power cut, etc.
- All the screens in this manual are for reference only, and some contents actually displayed may depend upon the presetting of the service provider or the network operator, or the SIM card. If any functions referred to in this manual are different from those of your device, please follow your device.
- Do not put use it in a place with flammable gas such as a petrol pumps. The temperature recommended for using the device is 5-35°C. Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

 **If your phone or any of its accessories do not function normally, then please visit your nearest authorized service facility. The qualified personnel will assist you, and if necessary, will arrange for the service.**

## **SAR (Specific Absorption Rate)**

Your device conforms to the Indian guidelines for exposure to radio waves. The limits are given in terms of a unit referred to as the Specific Absorption Rate (SAR), which is a measure of the amount of radio frequency energy absorbed by the body when using a mobile phone. The SAR value as per the Indian guidelines standard is 1.6 watts per kg (Watt/kg), averaged over a 6 minutes period and taken over a volume containing a mass of 1 gram of human tissue.

## **UNDERSTANDING YOUR DEVICE**

### **General Information**

Your device encloses features, such as **Digital Camera, Video Player, Audio Player, Wireless FM**. Three cards can be inserted in this phone.

### **Function of Keys**

<b>Key</b>	<b>Description</b>
------------	--------------------

<b>Master SIM Key</b>	To make/answer a call from Master SIM.  In the standby mode, press this key to view Call Logs.
<b>Slave SIM /LSK/ Menu Key</b>	To make a call from Slave SIM.  In the standby mode, press the key to access Main Menu.
<b>RSK/Right Soft Key</b>	Use RSK to execute the functions indicated at the right of the prompt bar on the screen.
<b>End/Power Key</b>	End an ongoing call. Press and hold this key to turn on or off the device.
<b>Navigation Keys</b>	In the editing mode, use the keys to move the cursor.  In the standby mode, press the keys to access the function assigned to these keys.
<b>Keypad</b>	Use to enter numbers, letters and special characters.

	<p>In the standby mode, long press <b>0 Key</b> to switch on the FM Radio.</p> <p>Press <b>RSK and # key</b> to lock/unlock screen.</p> <p>Long press <b>*</b> key to switch on the torch.</p>
--	--

## **Status Icons**

The table below lists various icons that might appear on the status bar while using the device. Apart from the icons for signal strength level and the power, other icons are displayed as per the current mode and priority of the device.

<b>Icon</b>	<b>Description</b>
	Indicates the network signal strength of SIM.
	Indicates the current battery capacity.
	Indicates that there is an unread SMS.
	Indicates that there is a missed call.
	Indicates that Alert type of current profile mode is Vibrate.
	Indicates that Alert type of the current profile mode is Silent.

	Indicates that the current profile is Headset mode.
	Indicates that alarm clock is set as activated.

## GETTING STARTED

Please switch off your device before inserting or removing the battery/SIM card or memory card.

### Installing SIM Card and Battery

Your device is provided with Multi SIM slots for Multi different SIM cards.

- Remove the back cover of the device.
- Hold the phone with the front facing downwards; pull the cover.
- Insert the SIM cards and battery in the device.
- Attach the battery.
- Push the battery cover until it clicks into place.

### Installing Memory Card

Your device supports T-Flash card, which is a multimedia memory card used to multiply the memory of the device. The T-flash card is small and should be pulled out and installed carefully and prudently in order to avoid any kind of damage.

- Switch off your device.
- Remove the battery cover.
- Slide the T-Flash card into the slot.
- Attach the battery.
- Push the battery cover until it clicks into place.

## **Charging the Battery**

The device prompts a warning tone and message stating insufficient battery when the battery power of your device is low.

Please follow the instructions mentioned below to charge your device:

- Plug the connector of the charger into the jack of the device.
- Plug the charger into a standard AC wall outlet.

*Note: When  is shown on the screen, it indicates that there is not enough power and you should now charge your device. When charging is complete, the battery icon will stop flashing. You must fully charge the battery before using the device for the first time. It is recommended to charge the battery for four hours before using the device for the first time. If the device is turned on during charging, you can still make or answer calls, but this will consume battery power, thus will extend the charging time of the device.*

## **Switch On/Off the Device**

To turn on/off the device, press and hold the **End/Power Key**. If you have enabled the SIM Lock function then enter the PIN code (4 to 8 digits secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain a code from your network operator.

## **Automatic Customer Registration**

After 4 hours of usage a SMS from the device will be sent automatically for the customer registration. *Note: standard SMS charges apply.*

## **BASIC OPERATIONS**

### **To Make Calls**

If the icon  appears on the screen, then you can make or receive calls.

- Input the phone number (should affix the international/national/regional code or district code if necessary) and then press the call key to make a call.
- You can select a number from Contacts and call the Contacts person.

*Tip: The signal strength may influence the quality of connection.*

## To Dial International Number

Your device supports dialing the international emergency phone number, such as 112. With the device, you can dial an emergency call in any country or region under the normal situation regardless of SIM card inserted when the device is located within the coverage of the GSM network. Input the emergency phone number and press **Call Key** to dial. The device will select the main network automatically after powered on if it is located within the coverage of the main network. The device can use other network, called as roaming, if the device is not located within the coverage of the main network when the network operator protocol permits. You can dial or answer a call when the symbol of the network operator appears on the screen.

## Answer/Reject an Incoming Call

- Press **Call Key** to receive the incoming call. You can use the earphone to answer the call when the generic headset is inserted in the device.
- Press **End Key** to reject an incoming call.

## MAIN MENU

Menu guides you to the various applications, features and utilities available in your device. In the idle mode, press Menu key to access the main Menu. Use the navigation keys to choose the desired operation and press Ok to enter the selected operation.

Call logs	Contacts	Messages
FM radio	File manager	Multimedia
Organizer	Services	Settings

## CALL LOGS

Call logs sub-menu lets you view the call details i.e. the missed, dialed, received & rejected call logs. In the standby mode, press Menu key to access Menu > Call logs.

### **Missed Calls**

With this function, you can check recent missed calls. Scroll the Up/Down keys to select a missed call. Press OK key to enter options to perform operations.

### **Dialed Calls**

With this function, you can check recent dialed calls. Press OK key to enter options to perform operations.

### **Received Calls**

With this function, you can check recent received calls. Press OK key to enter options to perform operations.

## **Rejected calls**

With this function, you can check recent rejected calls. Press OK key to enter options to perform operations.

## **Delete all**

Clear call logs.

## **Call timers**

In this menu you can check during time of last call, dialed calls, received calls and you can reset all.

## **GSM counter**

View the correlative information of GSM counter.

# **CONTACTS**

Contacts refer to the directory where in all the Contacts are stored in an alphabetical order. You can view, edit, delete, send message and perform various other functions on each contact of your phonebook. Press Menu key in the standby mode and then select Contacts.

## **Add New Contact**

- Go to main Menu > Contacts > Options > New
- Press OK and enter the Contacts details

## **Search Contact**

- Go to Contacts and input the initials of a name to be searched.
- Select a desired entry from the list.

Select a contact from the list and press OK key to perform the following operations:

- View: View the contact details.
- New: add new contact.
- Write message: send message to the contact.
- Call: call the contact.
- Delete: delete the contact.
- Delete multiple: delete multiple contacts.
- Import/Export: import/export the contact.
- Send vCard: send business card as SMS/via Bluetooth.
- Others: You can perform the others operations.

## **MESSAGES**

Your device features, sending and receiving of SMS. Press Main key to access main Menu and then select Messages.

### **Write message**

You can create and send SMS to a particular contact using this sub-menu.

## **Inbox**

Inbox sub-menu enables you to view all the messages received on your SIM cards.

## **Outbox**

All the sent but failed messages get stored in the Outbox folder.

## **Drafts**

The created messages can be saved to drafts folder for future use. After selecting a message from the Drafts folder, select Options to edit/delete or send the saved message from the desired SIM.

## **Sentbox**

All the sent messages get stored in the sent message folder.

## **Security inbox**

Security inbox save the security messages. If you use this function, you need to enter the password. The default password is "1122".

## **Templates**

Your device is provided with some commonly used pre-defined messages. These messages can be edited and send instantly.

## **Broadcast message**

Cell broadcast is the service that the network operator sends

messages such as weather report and traffic to the GSM subscribers in specified area.

### **Voice mail server**

You can edit your voice mailbox and call it.

### **FM Radio**

You can use your device to listen to FM radio stations after inserting the headphones. Go to main Menu > Multimedia > FM radio. When in the radio interface, press Options to perform operations, such as auto search and save, channel list, save, manual search, open speaker, background play, record, timing record, record file list, storage and help.

### **File manager**

File manager enables you to browse, open and manage the data saved in Memory card. The device provides a certain space for users to manage files and supports the Memory card. You can use the file manager to conveniently manage various directories and files on the Memory card. Choose File manager to enter the root directory of the memory. The root directory will list the default folders and user files.

## **MULTIMEDIA**

This menu is specifically designed for the entertainment purpose of the user. To enter this menu, go to the main Menu and select Multimedia. The various multimedia features offered by your device include **Camera**, **Video recorder**, **Image viewer**, **Audio player**, **Video player**, and **Recorder**.

### **Camera**

Your device is provided with Camera, which supports the photographing and video shooting functions.

### **Video Recorder**

In standby mode, select Menu > Multimedia > Video recorder to launch the video recorder and shoot your videos.

### **Image viewer**

Pictures taken can be accessed quickly through Image viewer. Select an image to view and press LSK to perform operations, such as set as wallpaper, delete, share, rename, slide play and details.

### **Audio player**

Audio player allows you to play audio files. Please save your audio files in the Audio folder of the memory card. You can stop, pause, play and switch to the next/previous song by using the navigation keys.

## **Video player**

Your device supports playing various video formats. Please save your audio files in the Video folder of the memory card. To access the Video player, go to Multimedia and select Video player. Select a video clip and press OK key to open it.

## **Recorder**

Your device supports recording. You can record conversations, which will be saved to the Audio folder under File Manager. In the standby mode, press Menu key to access Menu > Multimedia > Recorder, you can press Options to perform operations, such as start recording, record file list, storage and file format.

# **ORGANIZER**

The organizer menu gives you access to a number of features including **Alarm**, **Calendar**, **Calculator**, **Torch**, **sokoban**, **World clock**, **Timer**, **Unit conversion** and **Ebook**, **bluetooth**.

## **Alarm**

Your device provides 3 alarms and you can set them as per your need. If you have configured an alarm, an icon indicating that you have configured the alarm will appear on the status bar.

## **Calendar**

You can view and edit the memo of a specified date with this function.

## **Calculator**

The mobile phone is provided with a calculator with basic functions. You can carry out the basic arithmetic operations using the in-built calculator of your device.

## **Torch**

Go to organizer > torch to turn on /off the torch. In the idle mode, long press \* key to switch on the torch.

## **World clock**

User can view the local time of some cities around the world.

## **Timer**

This mobile phone provides Timer.

## **Unit conversion**

You can use the function for the unit conversion.

## **Ebook**

You can read eBooks with this function.

## Bluetooth

Your phone is designed to be compliant with Bluetooth technology. Bluetooth technology enables wireless connections between electronic devices. The Bluetooth connection can be used to listen to stereo music, send images, video, texts and vcard.

- Bluetooth: You can open or close your Bluetooth device.
- Bluetooth visibility: Set to show or hide the Bluetooth device of your phone. When set to hide it, the external phone cannot search for your Bluetooth device even you Bluetooth have been turned on.
- Paired device: Search for nearby Bluetooth devices which have enabled.
- Transferring files: You can check the transferring files.
- Device name: The display name of your Bluetooth when other people's devices have found your device after your Bluetooth is turned on.
- Bluetooth file storage: Select "Memory card" to store the received files via Bluetooth to the memory card.
- Help: Provides help information related to Bluetooth.

## SERVICES

To access this menu, enter the main Menu in the standby mode and then select Services. You can use the network-related services with this function.

## Internet Services

The Internet Services is the application platform which combines the wireless communications and Internet and it enables you to get rich application by phone, such as Internet information resources and e-commerce.

In the standby state, enter the main menu and then select "Internet Services".

**Note:**

- 1 . Your Internet service provider may not support some functions, so please make sure your SIM card can support and have opened the Internet feature in order to ensure the normal operation of the browser.*
- 2. If you browse the web, you need to charge fees related to traffic.*

### **Bookmarks:**

The bookmark is blank as default and you are free to edit it. Commonly used website can be saved in the bookmarks with a simple name tag. Select one of the bookmarks and then you can connect to the current web site directly.

### **History:**

Record the web sites you have visited previously.

### **Offline pages:**

Record the web sites which you have set as offline page.

## **SETTINGS**

In the standby mode, press Menu key to access Menu > Settings.

### **Call Settings**

- Dual-SIM: Set the appropriate options of Dual-SIM.
- Call divert: This network service allows you to divert your incoming calls to another number. For details, Contact your service provider.
- Call waiting: Activate, the network will notify you of a new incoming call while you have a call in progress (Network Service).
- Call barring: Activate, this network service allows you to restrict incoming calls from your device. For details, Contact your service provider.
- Hide ID: The receiver hide your phone number when you make a call.
- Others: You can set the other options of the call settings.

## **Phone Settings**

- Date & time: Set time, set date, time format, date format and update time settings.
- Language settings: Select the phone display language (available options are English and Hindi). The default language is English.
- Shortcut settings: You can configure shortcut functions for the direction Up, Down, Left, and Right key respectively. In the standby mode, press any one of them to access the appointed function.
- Auto power on/off: Set scheduled power on/off time.
- Restore factory settings: Enter the default password 1122 to reboot the factory setting.

## **Display**

Set wallpaper /idle display /brightness / backlight/ keypad backlight time.

## **Security**

- PIN: You can switch on or off to activate the PIN lock function to protect your phone. And you can change the PIN code.
- Modify PIN2: You can change the PIN2 code.
- Phone locked: You can switch on or off to activate the phone lock function to protect your phone. If you switch

Phone Lock on, you need to enter the password to set the request on. The default password is "1122".

- Modify the cellphone password: You can change password here. The default password is "1122".
- privacy protection: This function can protect your phone's specific features to prevent unauthorized viewing by others. When activate password protection feature for Call logs, Message, Camera, Contacts, File management, eBook, Calendar, U disk, etc, you need enter the correct password after entry the corresponding main menu or submenus. The default password is "1234", you can also modify the password.
- Auto keypad lock: Enter into Menu > Settings > Security > Auto keypad lock to make the function on. In standby mode, if the time expires, the keypad will be locked automatically. Press the right soft key then # key to unlock the keypad.
- Lock screen by end-key: You can choose to enable or disable this feature. Open this feature, you can just press the end key to turn off the backlight and lock the keyboard automatically when the phone screen is bright. If the keypad is locked, you can unlock it by pressing the right soft key then # key.
-

- Fixed dialing: You can enable or disable the function of fixed dialing and set up the fixed dialing numbers. To enable this feature you must know the SIM PIN2 code for your phone.

## **Profiles**

The phone provides nine pre-defined user profiles that allow the operations of the phone to best suit the environment you are in. The profiles are **Flight mode, Power saving mode, General, Silent, Meeting, Indoor, Outdoor, Earphone and Bluetooth**. The phone will automatically enter the earphone/Bluetooth profile if you connect the headset/Bluetooth headset to your phone.

### **Flight mode**

Phone cannot receive any signal at Flight mode. You can activate flight mode in this menu.

### **Power saving mode**

Activate/deactivate power saving mode.

### **General**

Activate

Settings

You can choose Rename, Ring settings, Adjust volume, Ring type and Other alert rings.

### **Silent**

Select "Activate" in "Options".

### **Meeting**

Please select activate to enable the meeting mode on. In the standby mode, long press # key to enable/disable meeting mode.

### **Indoor**

Please refer to "General" for more details.

### **Outdoor**

Please refer to "General" for more details.

### **Earphone**

Please refer to "General" for more details.

### **Bluetooth**

Activate/deactivate Bluetooth mode.

## **Connections**

You can choose the GSM network account according by yourself. You can also add your own network accounts.

## **SUPPORT AND CONTACT**

You can visit [www.si2imobility.com/spicemobiles/](http://www.si2imobility.com/spicemobiles/) for additional information, downloads and services related to your Spice handset.

For further assistance or queries, you can call on SPICE customer helpline number **+91 11 42921000**;  
Or mail at **customercare@smobility.in** or **product@smobility.in**.

*Note: After sales service of the device is confined to the country in which the purchasing is done.*



## ENVIRONMENTAL CONCERN

**Help us save Our Environment...GO GREEN..!!**

All our endeavors are directed towards providing environment friendly products to you. The material used in our devices are recyclable and can be reused to make new products. We strive to make products that are safe for our consumers as well as the environment. Come join hands with us and make world a better place to live.

Preserve natural resources for future generations by recycling your phone. The phone contains some metals, when recycled properly; these can be put back into circulation, decreasing the need for new metal mining. Recycling reduces the need for raw materials, saves energy, helps mitigate Global Warming and reduces pollution,

reduces waste products in landfills; therefore preserving natural resources for the future and saving the planet.

Follow some simple steps and contribute towards saving the planet.

#### **DOs**

- Recycle your handset and its accessories.
- To protect natural resources and to promote re-use of the material, kindly separate batteries from other type of waste.

#### **DONTs**

- Do not dispose off your mobile and its battery in fire.
- Do not dispose your mobile with the regular waste.
- Do not over charge your handset. Remove the charger when battery is full.

**Don't trash your phone, instead RECYCLE It**



This logo signifies that this product and/or its constituents should not be disposed off with other household waste.

## **Hazards of Improper handling, accidental breakage, damage and /or improper recycling of hazardous elements**

If this product is improperly handled, broken or damaged or carelessly recycled or disposed off in the fire, can result in environmental and data security concerns, including the following:

- Affect nearly every system in the human body and result in birth defects, brain, heart, liver, kidney and skeletal system damage. They will also significantly affect the nervous and reproductive systems of the human body ;
- When burned, create cancer-producing dioxins which are released into the air we breathe ;
- If thrown in landfills, may leach into groundwater affecting your local community ;
- In warm climates, the oxidation of mercury in the environment can be accelerated, leading to the creation of oxidized Hg atoms that are known to be associated with ozone depletion; and
- Improper recycling additionally results in data security issues, as private electronic information remains on hard drive, if not properly removed before disposal.

## **How to Recycle**

Please get your electronics products recycled only through authorized recyclers, approved by Pollution Control Board. We provide facility of recycling of our products. For details of our collection centers, please visit our website or call our customer care.

**Help us to GO GREEN.**

**Constitution of Hazardous Elements In your Device:**

Your device does not contain the following hazardous elements in a proportion higher than the limits provided hereunder:

- maximum concentration value of 0.1% by weight in homogenous materials for lead, mercury, hexavalent chromium, polybrominated biphenyls and polybrominated diphenyl ethers ; and
- maximum concentration value of 0.01% by weight in homogenous materials for cadmium.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that

to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

#### FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Vulkan (FCC ID: **2ACG7VULKAN**) has also been tested against this SAR limit. The highest SAR value reported under this

standard during product certification for use at the ear is 0.652W/kg and

when properly worn on the body is 0.915W/kg. This device was tested

for typical body-worn operations with the back of the handset kept 5 mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5cm separation distance

between the user's body and the back of the handset. The use of belt

clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not

comply with FCC RF exposure requirements, and should be avoided

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **5 mm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.