
mini3 User Manual

1 Safety Notices	1
2 Device Overview	2
3 Basic Operation.....	4
3.1 Boot.....	4
3.2 Shutdown	5
3.3 Standby	5
3.4 Restart.....	5
3.5 Install SIM card and TF card	5
3.6 Connect Network	6
3.7 Connect to Bluetooth devices.....	7

1 Safety Notices

- ① Avoid dropping the unit on the ground or by other strong impact.
- ② Do not use in extreme cold, heat (<35 °C), excessively humid, dusty environment, long-term use, do not let the machine in the sun.
- ③ Try to avoid using in magnetic, strong electrostatic environment.
- ④ Once water or other liquids to spill on the unit, should be immediately shut down, the unit wipe dry before use.
- ⑤ Do not use any cleaner or other liquid containing chemical ingredients to clean the machine to avoid corrosion and moisture damage, if absolutely necessary cleaning, use a soft, dry cloth or paper towel.
- ⑥ The company's hardware and software were non-normal operation, the machine repair or other data loss resulting from unforeseen circumstances or delete is not responsible for, nor bear the losses caused.
- ⑦ When using the file card of T-Flash, do not remove the card to avoid damage to the memory card or device.
- ⑧ Please feel free to back up your important data to avoid loss.
- ⑨ Do not disassemble the unit, otherwise it will lose warranty rights.
- ⑩ Manual and related software updates at any time without notice, and Quick Start Guide found discrepancies, please prevail in kind.

2 Device Overview





- 1) **USB Interface:** USB interface can read and write U disk / removable hard disk and other equipment data.
- 2) **Headphone jack:** You can connect a 3.5mm stereo headset.

- 3) **Front camera:** You can take pictures and video.
- 4) **Handset:** Can be used for voice calls.
- 5) **Volume up key:** Press this button to increase the volume.
- 6) **Volume down key:** Press this button to decrease the volume.
- 7) **Power button:** You can use the power button to achieve on / off and sleep wake up the computer.
- 8) **Reset button:** Press this button to restart the machine.
- 9) **TF deck:** Support Micro SD, maximum capacity to 32GB.
- 10) **Rear camera:** You can take pictures and video.
- 11) **Flash Light:** Fill in the light in a darker environment.
- 12) **SIM card slot:** support at the same time insert two standard SIM card.
- 13) **Speakers:** Built-in speakers allow you to hear the sound without linking extra equipment.

3 Basic Operation

3.1 Boot

Press the On / Off button 3-5 seconds and release the seed.

(Note: There is no response when you press the power button, the device may need to recharge).

3.2 Shutdown

- ① Press and hold for 4 seconds to enter the shutdown screen, and then click Shut Down.
- ② Press for 10 seconds to force shutdown.

3.3 Standby

In the power-on state Short press the power button to enter standby or wakes up from standby.

3.4 Restart

Press and hold for 4 seconds to enter the shutdown screen, and then click Restart.

3.5 Install SIM card and TF card


● Install SIM card

- 1) When installing the SIM card, the board must be turned off first.
- 2) Then in the back of the tablet, the upper right corner of the position, open the SIM deck and TF deck cover.
- 3) Insert a standard SIM card into the SIM card slot in the direction shown below.
- 4) Finally press the boot button to start using the phone card to call and the Internet.




- **Insert TF Card**

Insert the TF card slot in the direction shown in the image below. Then you can read the contents of the TF card .Support insert or remove.

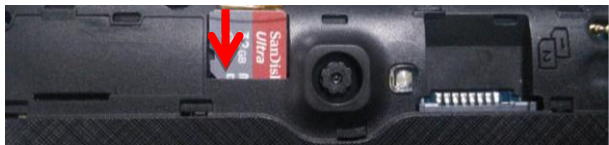

3.6 Connect Network

- 1) In the main menu or interface, choose **setting** application procedure.
- 2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet.

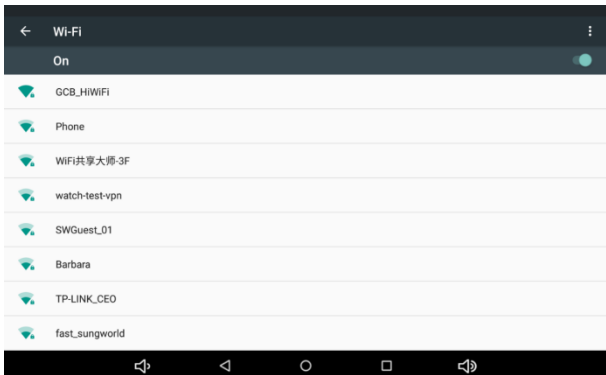

3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.

After you're connected, you're ready to set up email, browse the web, and do a whole lot more online.


If Wi-Fi isn't available, or you just want the assurance of a wired connection.

3.7 Connect to Bluetooth devices

Bluetooth function operation

1. Click setting application in main menu interface
2. Click bluetooth and open it.
3. If somebody open bluetooth in your surroundings, click search device in right above, then MID will automatically search the

bluetooth device nearby.

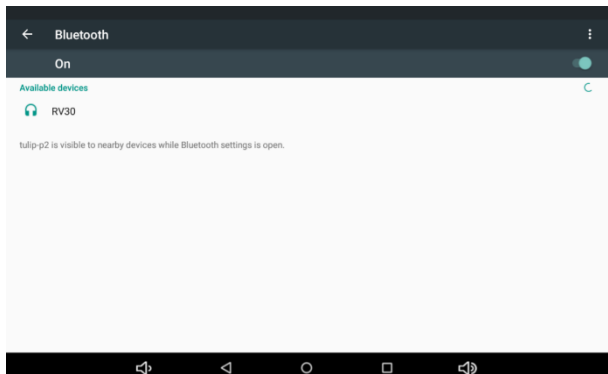

4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.
5. After match successfully, choose the operation you want to.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your tablet

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this tablet complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the tablet, or result in violation of FCC regulations. Do not use the tablet with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back/front of the tablet kept 0mm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the back/front of

the tablet, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories

that cannot maintain 0mm separation distance between the user's body and the back/front of the tablet, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable tablet is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless tablets. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)

Those standards were based on comprehensive and periodic

evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your tablet (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your tablet complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the tablet and may violate FCC regulations.

NORMAL POSITION:

Hold the tablet as you would any other tablet with the antenna pointed up and over your shoulder.

RF Exposure Information:

This product is compliance to FCC RF Exposure requirements and refers to FCC website

<https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm>

search for FCC ID: 2ACG9-MINI3 to gain further information include SAR Values.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to

radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or over maximum 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.