


PD001 User Guide

chapter one The desktop function

1.1 Introduction

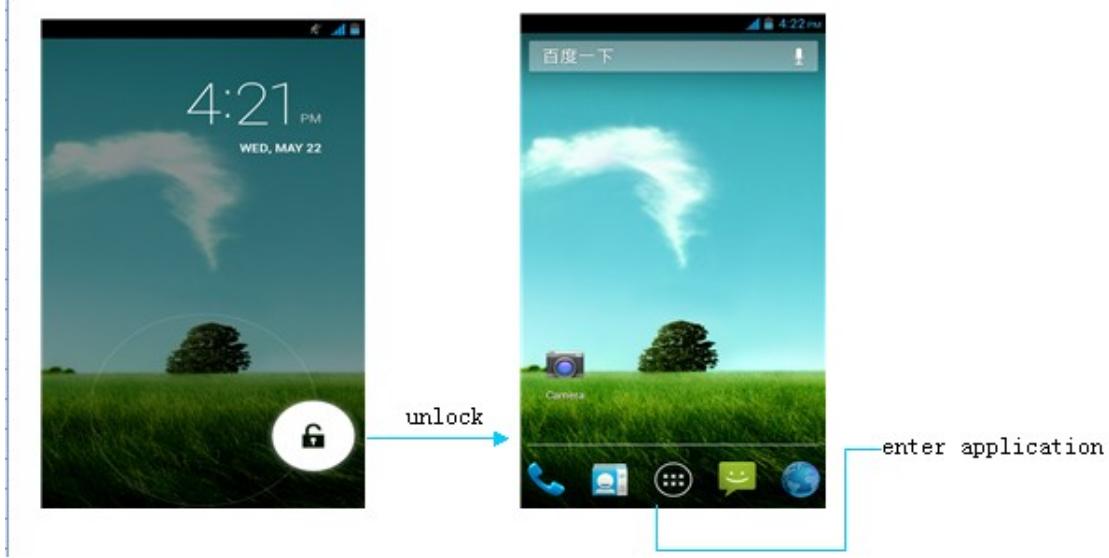

buttons:

Home button:

Located in the middle of mobile phone screen, press the Home key, the system default back to the main interface; long press Home key to enter the system interface to observe the running program recently.

Menu button:

Located on the left side of the mobile phone screen, long press the Menu key, from which menu options jump in the directory (such as touch the Menu key in the main interface, adding the control icon, management application, wallpaper, searching, notifications, setting etc jump out).

Back button:

Located on the right side of the mobile phone screen, touch the Back key on a return to operate.

Power button:

Located at the top of the mobile phone, press Power key to enter the lock screen,

Long press Power key into the mobile phone menu, "silent mode/offline mode/shutdown".

Volume button:

Located on the right side of the mobile phone, mainly on

	the various media sound size adjustment.
Unlock screen:	<p>Prompt: Press the Power key to the lock screen, then press the Power key to unlock the page.</p> <p>Unlock: Drag  to .</p> <p>Locked desktop using: Drag  to telephone or SMS icon to use this function.</p>
Status bar:	The black stripe on the top of the screen is status bar, the left display notification information, the right display connection status icon.
Add controls:	 icon: Add the interface into the main screen controls, long pressing a small portion of the window to the desktop can be successfully added.
Mobile desktop:	Long press the screen and slide left and right
Mobile icon:	Long press the icon, when the icon from the desktop amplifying , drag the icon, if it say "X delete", move here to red can be removed; if you want to move the icon to other screen, you can move icon to the screen left or right, the screen automatically jump, and then select the icon set position.

1.2 Status bar

Connections opened display at the top of the screen:

Show all connections, such as Bluetooth, WLAN, GPS etc, long press here, click to open or close the connection.

The ongoing:

Mobile phone display applications currently running (such as: USB data connection, Bluetooth, music player).

Notifications:

Display unhandled events and time, click the time into the corresponding event module (such as: uncheck messages).

Icons in the status bar:

Prompt information		Connection status	
	New message		Silent mode
	Send information unsuccessfully		Mobile phone connected to the computer through the USB line
	On call		mute in a call
	Missed calls		Speakers open
	Call waiting		Alarm
	Call transfer		GSM information, roaming, no signal
	Play		The GPRS service connecting, data exchanging
	Memorandum		The EDGR service connecting, data exchanging
	New mail		The Wi-Fi service has been connected, available network
	A new instant message		Charging
	The upload/download		Battery change sign
	The download is complete		Airplane mode
	more		Bluetooth is enabled, the service connection
	The enable debugging for developers		没有 SIM 卡 No SIM card

1.3 Wallpaper

In the IDLE interface, long press the blank can pop-up "Choose wallpaper from" dialog box.



- (一) Wallpaper: Choose the wallpaper in the selection system.
- (二) Live wallpaper: Choose the wallpaper in the selection system.
- (三) Gallery: Choose the wallpaper from the memory card.

Chapter two Phone


Prompt:

Whether you are in the service area and the signal intensity are displayed in the status bar at the top of the mobile phone. The more of the signals bars, the more stronger of the signal.

2.1 Making calls


There are many ways to make call: **call through the contacts list** (contact selected call, also can look at the contact details of the interface to call); **call through group** (select the contact call through the group contacts list); **call through call records** (through the call records, select number call);

Call through SMS; call through the existent telephone number in message; call through the numeric keypad etc. Following a detailed explanation of how to use the numeric keypad:

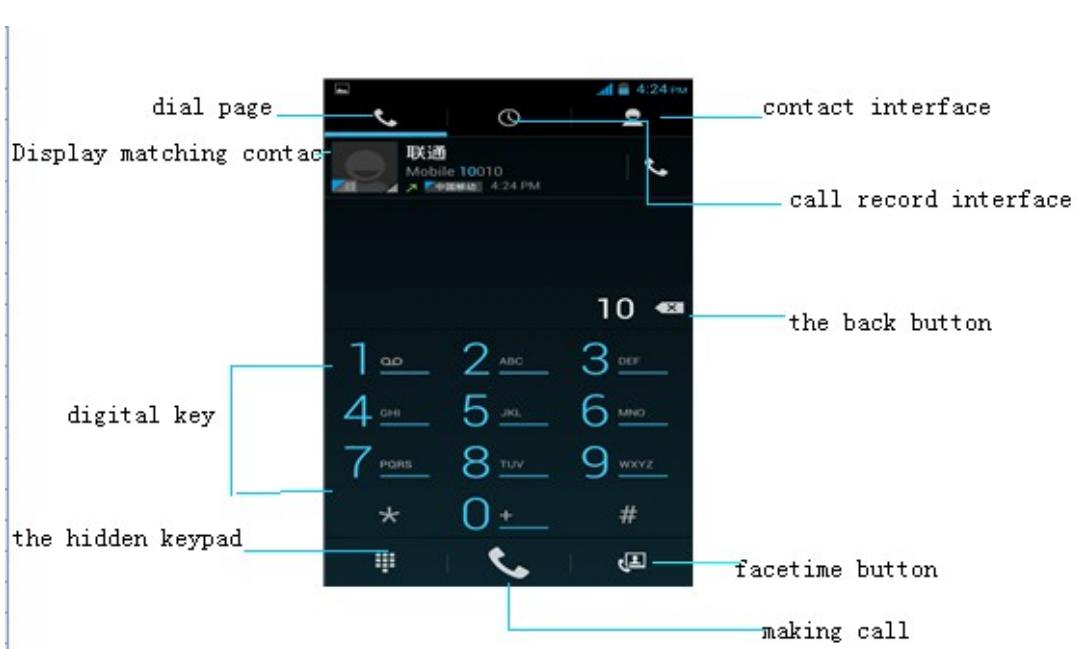

- Tap Keypad, enter the number, then tap Call (or tap the match number above the Keypad).
- If the mobile phone has no SIM card, the SIM icons show brown and can not call out.
- Input the wrong number, tap back key to correct.
- Tap the hidden keyboard icon to display or hidden the numeric keypad.
- Tap call record icon to enter the call record interface, you can view your recent incoming and outgoing calls etc.
- Tap contacts icon to enter the contact interface, choose the contact you want to call.

2.2 Conversation menu

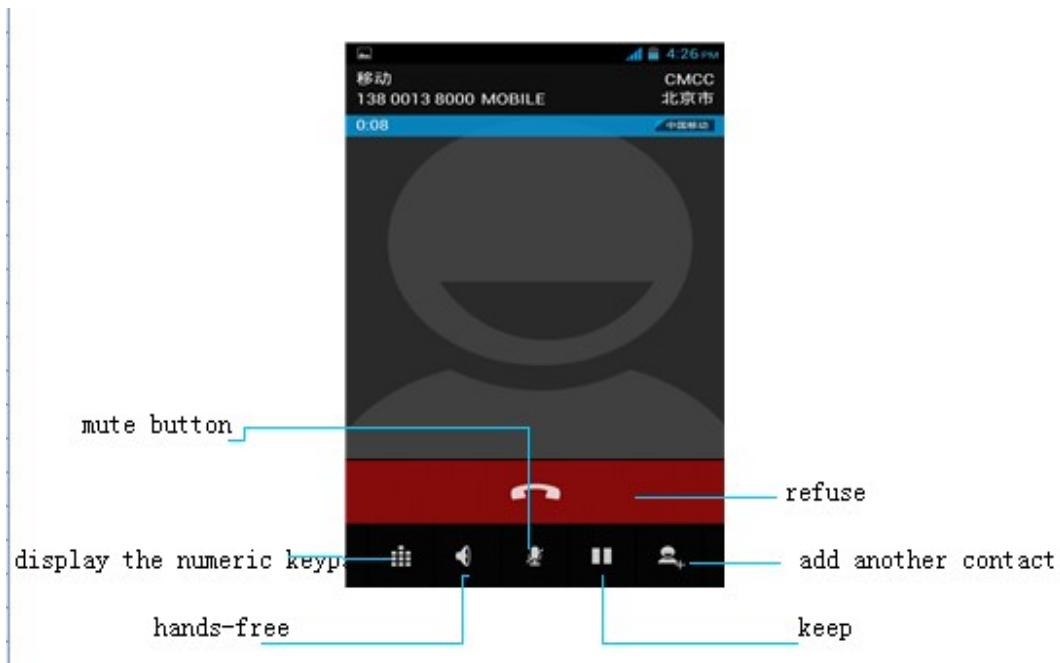


- ◆ **Keep call:** Press to keep you and the other can not hear the voice in the call, press the call again return.
- ◆ **Add another call:** Tap the icon back to dial interface, you can call another number again.
- ◆ **Sound recording:** Record the conversation.

Prompt:

When you are making call, press the "back" button on a return, can use other programs. For example, you can view the calendar or the phone book in a call. Choose "the call" in the notification bar, you can back to the call interface from other programs.

2.3 Receiving calls

When you receive a call from the contacts, the screen will display the caller's name and phone number. When you receive a call not from the contacts, the screen will only display phone number.

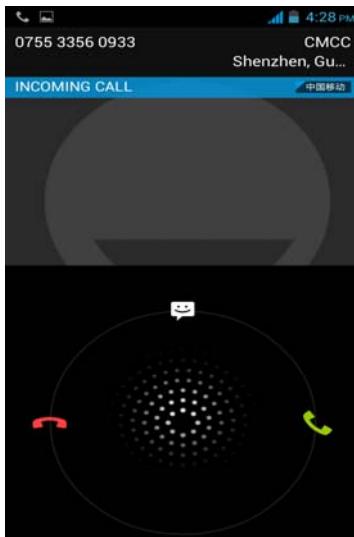

- ◆ **Answer a call:** Tap answer icon to answer the phone. If you are using your headset, you can also press the headset button to answer.
- ◆ **Decline a call:** Choose the reject or power button to reject calls. If you are using a headset, you can press the headset button to reject.
- ◆ **Decline and reply with message:** When you are inconvenient to answer the phone, you can drag the ring into the ring, mobile phone will automatically send message to inform the other party.

2.4 Emergency call

In any country using digital GSM network, if you are in the range of the network (can be acquired by the network signal intensity bar), you should be able to use the emergency services, even without the installation of mobile phone SIM card.

Notice:

Sometimes, you may not be able to call emergency telephone due to the influence of network, environment or disturbance events.

2.5 Contact lists



- ◆ **Create a contact:** You can add a contact to phone /SIM card /Gmail account.
- ◆ **Search a contact:** Tap the search field at the top of the contact lists and enter your search.
- ◆ **Contact type:** Contact type is displayed in contact lists, all contacts / China Mobile/ China Unicom /phone/user-defined can be chose.
- ◆ **Master's info:** Fill in the mobile phone owner's information.
- ◆ **Touch MENU button:**
 - Delete a contact:** You can delete a single or multiple.
 - Contacts to display:** you can choose to only display the SIM, mobile phone or a custom number.
 - Import / Export:** You can input telephone number in the card or phone to other card or phone.
 - Share the visible contact:** You can send the contact info by Bluetooth or text messages to other people.
 - Account:** Account management and synchronization settings.

2.6 Call records

Prompt: you can also open the notification panel (or click on the menu interface call record icon). Then it will display the missed call number or the contact's name.

(一) Delete call records

- ◆ To delete a record in the list, press the record and then click “Delete from the call records” .
- ◆ To delete all call records, click the Menu button, and then click Remove call records.
- ◆ Other operations:
Long press a record, can call, edit number before a call, send text messages, add to contact (check contact), add to speed dial, delete from call records etc.

2.7 Group

(一) Add group

- ◆ Click  Pop-up add box, enter the group name, save.

(二) Edit、 delete group 、 add group member

- ◆ Enter a group, press the menu button to jump out from menu, modify and delete options.
- ◆ Click modify, group member can be added.

(四) More

To see the details of a group, click the menu button, modify、share、 delete print、 set ringtones、 bind SIM card, automatic rejecting calls and messages etc.

Chapter three Messages

3.1 Messages list

You can send and receive text messages in the network signal coverage area at any time. You can use mobile phone with the SMS function to send text messages to any number of recipients.



1	Unread messages Indicates the number of unread messages.
2	Search messages: Search information you want to look for on all information.
3	Build messages: Edit new message.
4	Messages list: The status bar will display “”, if you have unread messages, enter the messages list interface, the unread messages display as  . The red font “draft” : Draft content stored in the text input box, can only replace save, that can only save the current draft of the latest information. The number “2” : show total amount of information transmission to a contact. Click  : Will display the contact card, you can call/send message/ video call/send mail/ view the contact details etc by the calling card.
other	An alert badge  appears if a message can't be sent. Long press the alert  in a conversation to copy the whole content, then send the message again.
menu touch menu button	
Delete all conversa	Select this option, you can delete all information

tion	
Setting	<p>Set the parameter information</p> <p>◆Messages settings</p> <p>(1)、Set the send report "on" or "off" (send SMS success / failure, there will be/no news report back)</p> <p>(2)、Manage SIM card (Text messages in SIM card can be copied or delete to mobile phone memory card)</p> <p>(3)、Edit common messages (can add messages commonly used, press the add phrases to modify or delete them)</p> <p>(4)、The message service center (can set a message service center number)</p> <p>(5)、Text message location (can choose to store in the mobile phone or SIM card)</p> <p>◆MMS settings</p> <p>(1)、A mass of information "on" or "off" (sending single MMS message to multiple recipients)</p> <p>(2)、Send reports "on" or "off" (sending and receiving MMS with / without report back)</p> <p>(4)、Automatic information retrieval "on" or "off" (auto / cannot automatically retrieve information)</p> <p>(5)、Automatic retrieval when roaming "on" or "off" (open while roaming can automatically retrieve information)</p> <p>(6)、Build model (limit, warning, available)</p> <p>(7)、MMS size limit (size of sending and receiving MMS)</p> <p>(8)、Priority (MMS received speed)</p> <p>◆Notification settings:</p> <p>(1)、Set notification "on" or "off" (There is a reminder notice when sending and receiving message in the status bar)</p> <p>(一)、Select ringtones (To send and receive text messages are ringing notification)</p> <p>(二)、Vibration setting "on" or "off" (To send and receive text messages when vibrating alert)</p> <p>(四)、Pop-up message settings "on" or "off" (when receiving message popup message prompt)</p> <p>◆Basic settings:</p> <p>(1)、Delete the old information when messages of receiving and sending to the maximum</p> <p>(2)、Each session limit storage message number</p> <p>(3)、Each session limit storage MMS number</p>

3.2 Edit messages

Send ordinary message or MMS, which includes photographs、video、audio、 sound recordings and slides etc.

(一) Operation on the content of message

1. The content of message contain the telephone number、 e-mail and web site etc; click the URL address will automatically open the webpage in the Google browser ; click on the telephone number to call the number; click e-mail will enter the interface of editing the message content of this email address.
2. You can also press text message, select "call XXX number、 add XXX mail

(二) Send MMS

Add attachments in the new SMS interface, click  and accessories will be sent according to an MMS. Add accessories can also be used to edit、 modify and delete the attachments. Then tap  to select a contact from the contacts, click and send. You can also click menu -- share -- information about image or video in the library you are viewing, switch to the multimedia editing interface.

(三) Other

Reply to a contact, enter the text editing interface, and press the menu button to display the other functions:

- ◆ **Facetime:** Make a facetime call to the contact.
- ◆ **Add theme:** Add themes to information.
- ◆ **Insert the phrase:** You can set to add the phrase.
- ◆ **Insert emoticons**
- ◆ **Insert contact:** Be convenient for you to send other contact's number for the contact.
- ◆ **Settings**
- ◆ **Add number to the blacklist:** If you do not want to receive contact's information, you can add this number to blacklist.


Note:

MMS additional video、audio、pictures and slides cannot exceed the maximum value, otherwise it can't be added.

Chapter four Mail

4.2 Log in e-mail

Click "email" icon in the menu to enter the email interface

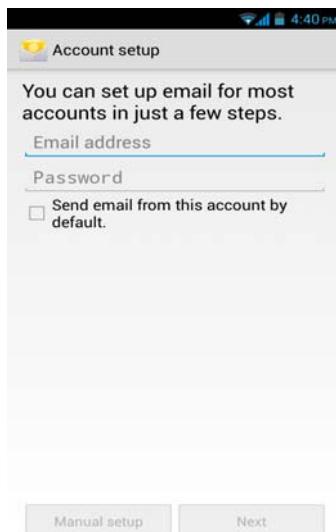

You can log in with the e-mail users which you are commonly used. Input the user's name and password, click the settings manually, to enter the next step

1. Click to enter the message, input the correct password.
2. Click enter settings manually, then to the next step.
3. According to the type of your email, setup your mailbox server, input and click next.
4. After input and click next.
5. Enter the account name, click finish, namely the mail success.

Prompt: Please confirm the POP3 or IMAP option set on the web webpage before enter the account password. The mailbox is generally using pop account,

gmail mailbox using IMAP account. In general, it is recommended that you enter the account password, click next, mobile phone will automatically set.

4.2 Mail box

You can send a message to any relatives and friends, who have email address, also can be sent to a person or a group.



- ◆ Click , enter mail editing interface.
- ◆ Click , search information in your inbox.
- ◆ Click , display your inbox/draft/sent mail etc.
- ◆ Click , refresh inbox.

(一) Sending mail

1. Enter one or more name or address in the recipient bar, press the function key, can add CC and BCC object.
2. Enter a subject, then enter the text content, if the user want to add attachments, you can press the function key to add images as attachments.
3. Click "send", if users feel sent in error, click "Cancel" to send.

Prompt:

You can also save a message in draft box, after the information is edited, click "cancel". Then "save".

You can find the mail in the "draft" and modify it, then send.

(二) Reading mail

If you set a reminder, mobile phone will prompt tone when you receive a new mail, not only  will appear on the interface, but also the message will appear at the top of your inbox, be convenient for you to check.

(三) Add contacts

Click sender avatar, prompt if the email address is added to your contacts

4.3 Settings


Click the Menu button to select the settings, enter the account settings interface:

- ◆ Account name: Here you can modify the name of the account before you input.
- ◆ Your name: Here you can modify the prior name.
- ◆ Signature: Mark mail.
- ◆ Quick reply: Often inserted text editor when you write e-mail.
- ◆ The default account: Use the account to send e-mail by default.
- ◆ Inbox check frame: Refresh time
- ◆ Download the attachments: Download the attachments by WI-FI.
- ◆ Email notification: Display notice in the system bar.
- ◆ Select ringtones: change to mail ringtones.
- ◆ Vibration: Whether the mobile phone vibration when new mail come.
- ◆ Receiving setting/outward settings: When there is a change in the content server, can be made corresponding change by receiving setting or outward settings, you can also check the inside of the options and modifications, here you can also set the type of security and the time message deleted from the server.
- ◆ Delete: Delete the account.

Chapter five Multi-media

5.1 Photos

Photos: Click the icon to enter the image reading.

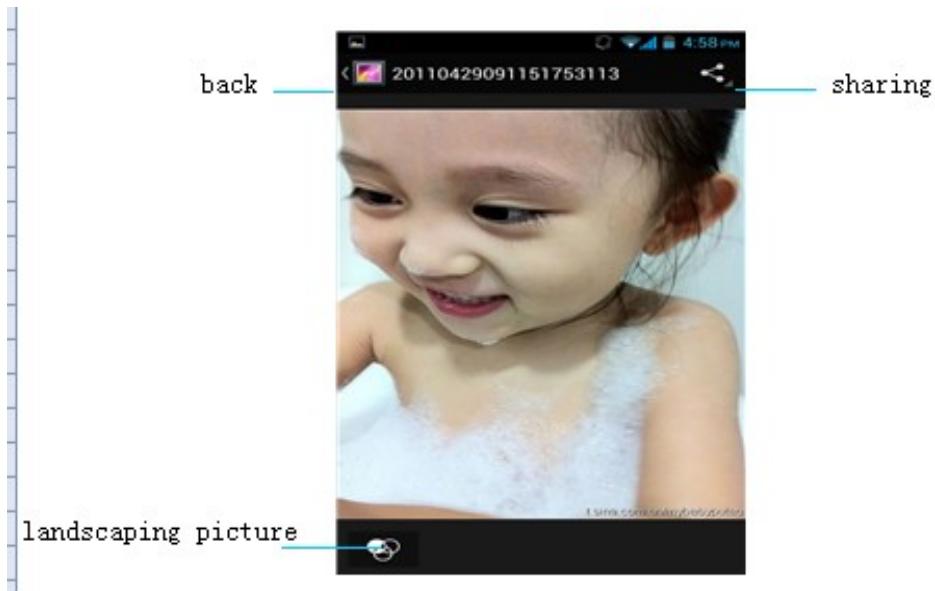


(一) Sharing

Share pictures through information/Bluetooth/e-mail.

(二) Press menu button

- 1、Delete
- 2、Slide show: All the pictures played in the form of slide.
- 3、Edit: Modify picture.
- 4、Prune: Crop the picture.
- 5、Set the photo: As wallpaper or contact head.
- 6、Details: Display the date and size of this image etc.

Video: Press video, windstorm image sound or video player can be chose to play.

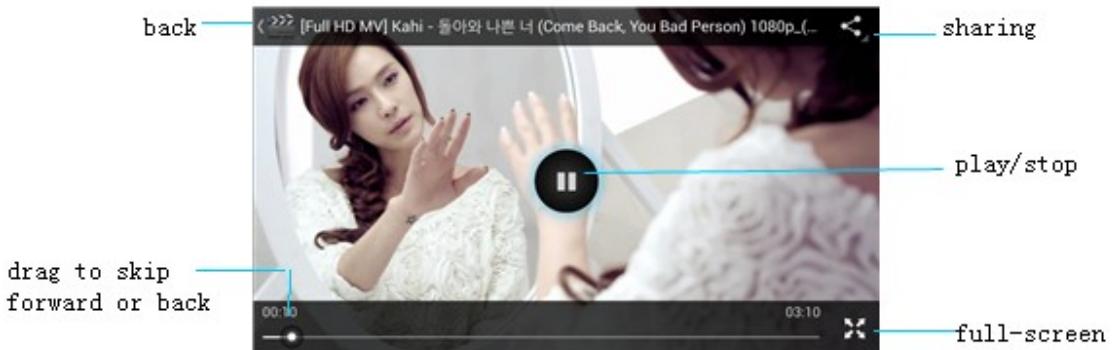


5.2 Camera

You can enter the camera by selecting the camera application in the menu, also can be entered by other means (such as add attachments in text message, enter camera from my gallery).

(一) Take a photo



(二) Take a video

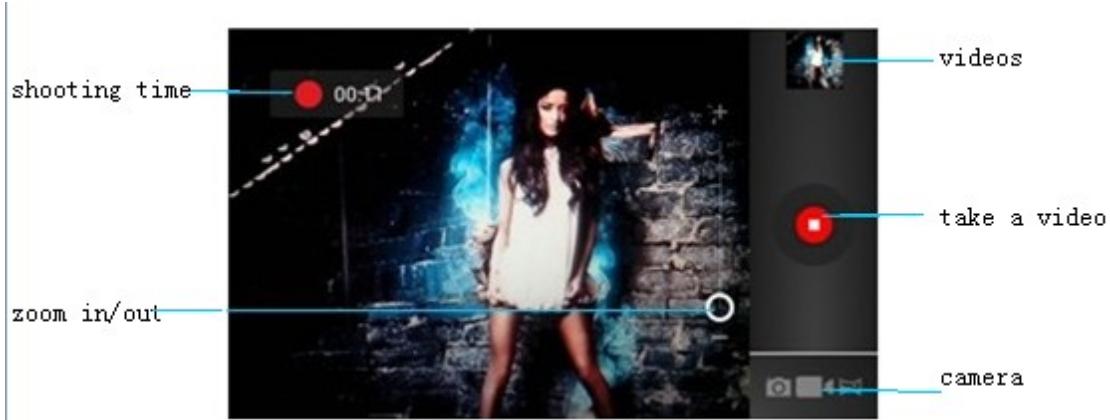


(四) Settings

- ◆ **Flash mode:** Auto / on / off
- ◆ **White balance:** Automatic / incandescent light / solar / fluorescence /cloudy / light / shadow / warm fluorescence.
- ◆ **Results:** No color / monochrome / tan / film / water blue / blackboard whiteboard.
- ◆ **Scene mode:** Automatic / night / sunset / party / portrait / landscape / night portrait / theater / beach / snow / shake / smoke / sports / candlelight.
- ◆ **Picture mode:** Normal/automatic scene detection / face beautification / smile shutter/ best pictures / photos / continuous exposure compensation.
- ◆ **Camera settings:** Save location / exposure value / self-timer timing / sharpness / hue / saturation / brightness / contrast / picture size /ISO sensitivity / metering mode / avoid flicker / restore default settings.

5.4 Music Player

Click music in the menu into the music player.

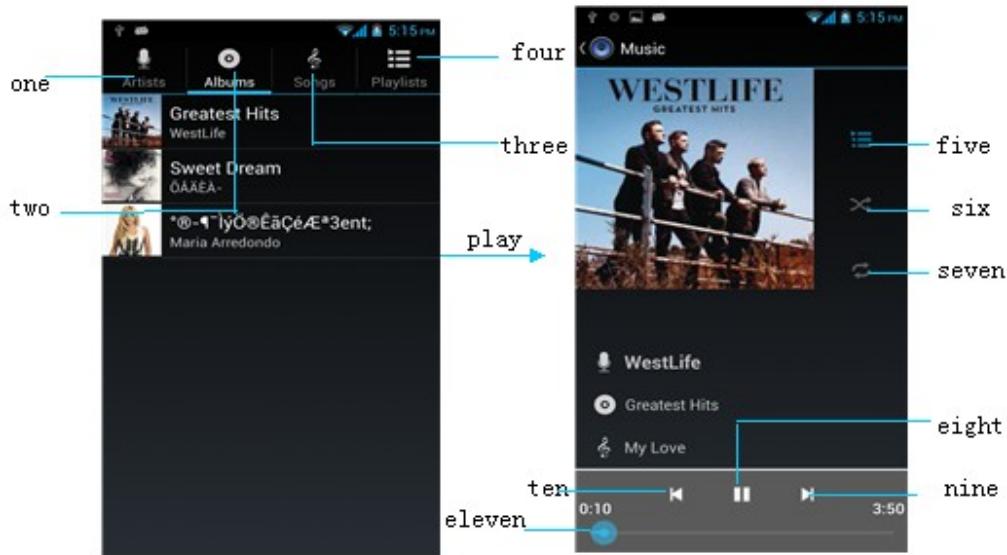

1	Artist: Arrange the display according to the singer name; long press a artist, can play, add to the playlists, delete and search etc.
2	Album: Arrange the display according to the album name; long press an album, can play, add to the playlists, delete and search etc.
3	Song. Arrange the display according to the title of the songs; long press a song, can play, add to the playlists, share songs, used as a mobile phone ringtone, delete, search etc.
4	Playlists: Arrange the display by the add list; long press a playlist, can play, edit etc.
5	Display playlists
6	✖: Close the random play
7	🔁: Turn on the random play
8	🔁: Close the repeat
9	🔁: Repeat all songs
10	🔁: Repeat the current song
11	Stop/Play
12	Advance
13	Back
14	Playback progress bar

Note:

Random party play is from the playlist, randomly select a part of the song to play, "all play at random" is random play all songs in a album or list.

5.4 The browser

(一) Basic operation

New window:

- 1、Lightly press the address bar, type a word or phrase that can describe the content you want to search for, and then press the ;
- 2、When you type your bookmarks or any history list contains the letters of the sites, will appear below.

Bookmark:

Press "bookmark" in the bookmark list, can add it as bookmark, and long press a bookmark popup functional block:

- *Open: Open the selected bookmark in the current page.
- *Open in new window: Keep the current page, open the selected bookmark in a new window.
- *Edit Bookmarks: Edit the name or web site of the selected bookmark.
- *Add a shortcut to the main screen: Use the selected bookmark to create a shortcut on the desktop.
- *Share the link: You can share with friends by sending links.
- *Copy the link URL: Copy the selected URL to clipboard.
- *Delete bookmark: Delete the selected bookmark bookmarks.
- *Set as home page: Set the selected bookmark as home page.

The most visited web site:

Record recently visited more sites. With the back , indicating the presence of bookmarks the site; followed , indicating not exist in bookmarks.

Historical records:

- Open: Open the selected URL in the current page.
- Open in new window: Keep the current page, open the selected web site in a new window.

Add Bookmark (removed from the bookmarks): Add URL for bookmarks; or delete saved bookmarks.

Share the link: You can share with friends by sending links.

Copy the link URL: Copy the selected URL to clipboard.

Delete from history: Delete the selected record.

Set as home page: After settings, open the default browser and enter the webpage.

Window: You can switch freely in the open window.

Refresh: Click the refresh icon to update the page, or network instability caused by incomplete page display. When open web page unfinished, the refresh button display stop.

Forward: Can proceed to the next page.

Note: Press the back key to return to the previous page, the forward button can only use when you browse many pages using the back key before they can use, otherwise the icon in the grey state cannot use (such as: when you visit the following three address: www.baidu.com、www.google.cn、www.sina.com.cn, when you want to look for some materials click Back page will return to the last page of www.google.cn. When you suddenly do not want to look for information click "forward" icon can return to the www.sina.com.cn without entering an address in the address bar).

More:

 ◎ **Find in page:**

Input the project you want to search, at the same time you input, the content will display, click  or , can skip the last or the latter project.

 ◎ **Select the text:**

Select the text on the page, prompt "The text has been copied to the clipboard", you can long press the address bar or the text column, select "paste" to operate the selected content.

 ◎ **Webpage information:**

You can view the name and address of the current page.

 ◎ **Share page:**

You can share the information or send email link with friends.

 ◎ **The download content:**

Display the records downloaded and records which is currently downloading. You can empty the downloaded records and select cancel download.

 ◎ **Historical records:**

Display the webpage previously viewed.

 ◎ **Settings**

Contain the content settings of page, privacy settings, security settings and advanced settings.

(二) The operation of browsing

Change the screen direction: Mobile phone will automatically change direction according to the direction of mobile phone of the page.

Browse the webpage:

1. You can use your finger to any direction sliding on the screen, other areas of the webpage browsing.
2. You can open the links step by step in the webpage.
3. You can choose URL with a download link to download operation.
4. Click twice to zoom in and out.

Browse pictures:

* Pictures contain no webpage links, long press can view pictures and save images.

* Pictures contain webpage links: short press directly open the corresponding link.

Long press can proceed as follows:

- 1、Open: Open the selected web site in the current page.
- 2、Open in new window: Keep the current page, open the selected web site in a new window.
- 3、Add link as bookmarks: can add the corresponding link address as bookmark.
- 4、Save the link: can save the corresponding link to the SD card.
- 5、Share the link: you can share with friends by sending links.
- 6、Copy the link URL: Copy the selected URL to clipboard.
- 7、Save picture: Save picture to the SD card.
- 8、View picture: View the original picture.


Input in the text box: Some webpage with a form or text box, you can enter the information in them.

- * Bring up the keyboard: Press in the text column
- * Submit form: After submitting the columns of text input form on the page, please click "OK".
- * Hide keyboard: Click "finish"
- * Copy / paste: can copy and paste the text in the text box

Chapter six Other application

6.1 My documents


Click "my documents" icon in the menu interface, select a SD card into:

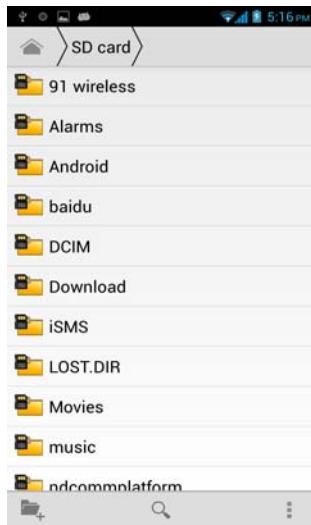

Press the menu button to popup function:

- ◆ **Sharing:** Share some files in my files via Gamil、message、Bluetooth, with others.
- ◆ **Create a folder:** Click the create folder to create a new folder, a new folder is created in the directory under which create a directory , such as create a new folder in `/mnt/sdcard/`, then the new folder will display in the following.
- ◆ **Delete:** Delete some of the things you want to delete.
- ◆ **View method:** Display the file in a certain way (such as list mode, thumbnail mode, lists and details mode).
- ◆ **Arrangement:** Arrange files according to a certain mode (such as time, type, name and size).
- ◆ **More:**
 - Mobile:** Moving folder or file to specified location.
 - Copy:** Copy the folder or file to the specified location.
 - Rename:** Rename some folder or file.
 - Settings:** Set whether to display extension, which interface is the main interface.

6.2 The radio

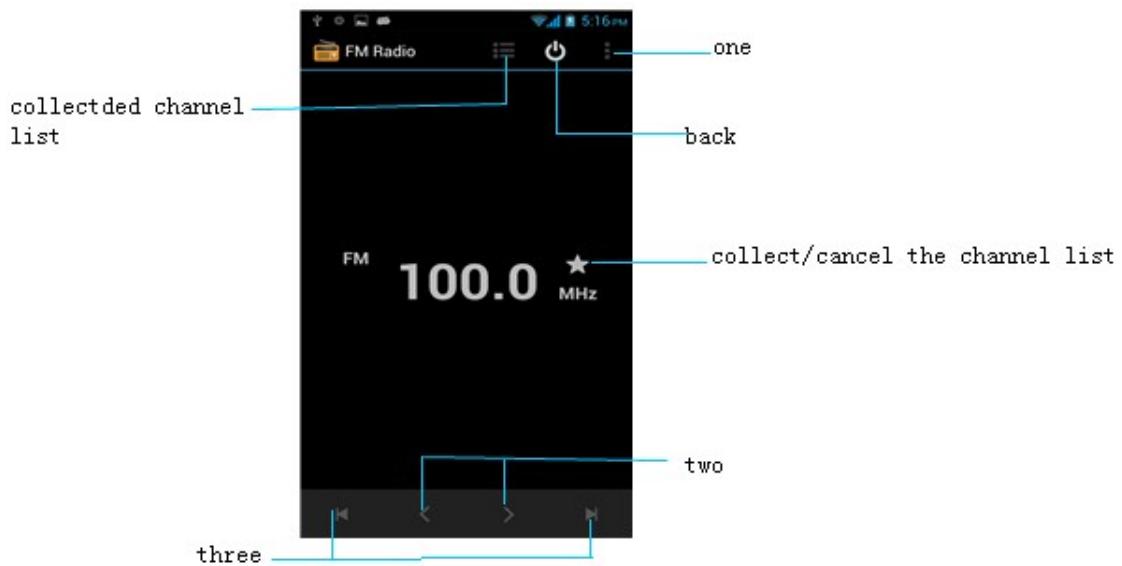

Tip: Need to wear headphones or install the antenna to receive.

1: Search/ROS setting /FM recording / exit, the search contains: search for all /ROS channel; ROS settings: channel information and automatic switching frequency settings.

2: Pointer sliding forward or backward one receives an uncertain whether receiving channel.


3: Click "◀" or "▶", cursor forward or backward search to a channel that can be received

Note:

1. With an asterisk channel is the channel of collection
2. Channel without an asterisk before the channel is not collected, is channel only use the search function to search that can be received.


6.3 Task Manager

Click the menu "task manager", you can view all installed, uninstall the program and manage the internal memory:

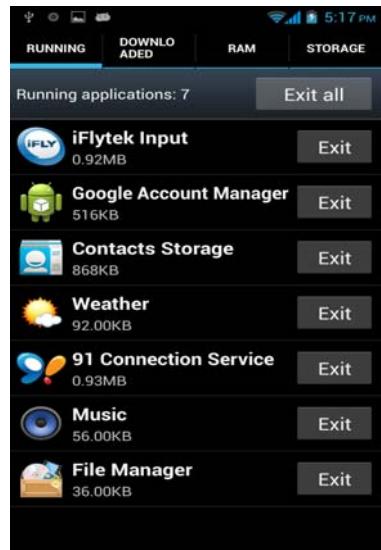

6.3 Calculator

Click the menu button to select clear history and advanced panel, the senior panel: added SIN/LOG and mathematical symbols, slide left screen can display the advanced panel:

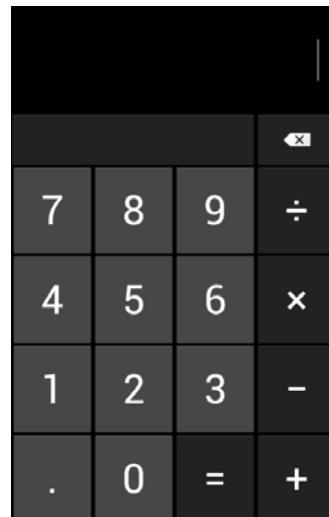


6.4 Clock



Click "set the alarm clock" to enter the alarm settings, click the menu button, you can add alarm clock and set operation:

- ◆ Reminder in silent mode: Remind when the mobile phone is in silent mode.
- ◆ Alarm volume: Set the alarm volume.
- ◆ Pause time: When the alarm sounded, the time interval after a pause between ring again is the snooze time setting.
- ◆ Side button behavior: Behavior of setting the side button (no act, stop alarm, turn off the alarm clock)

6.5 The tape recorder

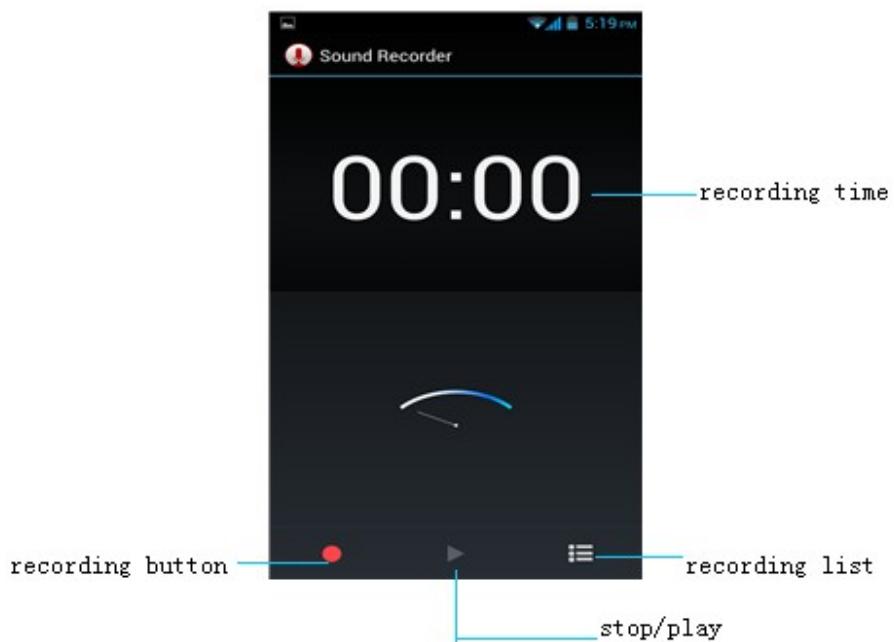

Press the menu button can also view the list of recordings and settings, including: can modify the type of recording file, whether to use high quality recordings and open sound.

6.6 Weather

Tip: Only search the weather on the condition of opening WLAN.



Click the menu button to refresh, arrange, add, delete, set operation

- ◆ **Refresh:** Update the city meteorological data.
- ◆ **Arrange:** Arrange the meteorological data of a plurality of city.
- ◆ **Add:** Add the meteorological data of a city.
- ◆ **Delete:** Delete the meteorological data of a city.
- ◆ **Settings:** Automatic Updates: Whether to start the city meteorological data automatic updates.


Scheduled updates: Set the city meteorological data automatic update interval.

Scale: Display to Celsius or Fahrenheit.

Automatic positioning: Whether to automatic positioning city weather according to the network location.

6.7 Screenshot

Press the POWER+ volume at the same time “-” to screenshot.

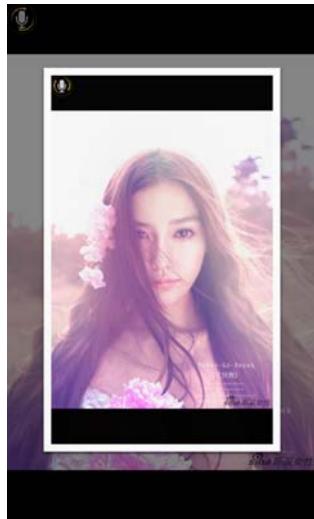

Chapter seven Settings

7.1 Wireless and network

(一) SIM card management

- ◆ When the mobile phone has SIM card, SIM card icon display highlight, if there is no SIM card, SIM card icon display in gray.
- ◆ The data connection: The manner in which the data connection.
- ◆ International roaming: Set SIM card to roam.
- ◆ Contacts and the SIM card: Bind contacts to specific SIM card (only saved contacts in the phone).

(二) WLAN

When the WLAN is not open, the other set of WLAN into grey unable to choose, when the WLAN is switched on, the other set becomes highlighted optional. Note: The WLAN can also open from the WLAN settings interface. Notice: when there is network where your stay, system in the status bar will inform you, and display in the WLAN network frame. **Click the menu button to scan wireless and advanced settings.**

Note: Some of the network requires a password to access the network, you need to click the enter password to access; some of the network does not require a password, you can directly access.

(三) Bluetooth

When the Bluetooth is not open, the other set into gray can not select the Bluetooth settings, when Bluetooth is open, the other set becomes highlighted

optional. Note: Bluetooth can also open from the Bluetooth settings interface. **The device name:** The name of each other display in the mobile photo when people search your Bluetooth to, the default for your mobile phone models can be changed.

Prompt: If open, the other using Bluetooth can search to your Bluetooth, if closed, the other side can not search to your Bluetooth.

(四) Usage of Web traffic

(五) More

Binding and portable hotspots:

- ◆ The USB binding can be opened, mobile phone network to share, so that the computer can access network.
- ◆ Select portable WLAN hotspot setting, your mobile phone will begin to broadcast its Wi-Fi network name (SSID), you can share Android data connection with 5 sets of equipment at the same time; cancel the selected portable Wi-Fi hotspot, can stop the data through the Wi-Fi connection sharing.
- ◆ Set the portable WLAN hotspot: before you set, please ensure that you have opened the WLAN hotspot functions: change the network SSID (name), other computer searching Wi-Fi network in the scan will see the name; touch "safety" menu to use WPA2 network security technology configuration with the pre-shared key (PSK) Wi-Fi secure. If you touch the security options of WPA2 PSK, dialog box of "configuration of Wi-Fi hot" will be more than a password field. If you enter the password, the hot plate computer connected to a computer or other equipment, you need to enter the password.
- ◆ Choose to open in the safety, delete password.

7.2 Equipment

(一) Scene mode

There are four scenarios, respectively the standard mode, silent mode, conference and outdoor mode.

- ◆ **Vibration:** After open, mobile phone calls with vibration.
- ◆ **Volume:** Set the call volume, notification volume and alarm volume; can respectively arrange call volume, notification volume and alarm volume, also can use the call volume for notifications volume(moderate volume).

- ◆ **Mobile phone ringtone:** You can set selected ring as ringtone, also can set incoming ringtone in the "music" module (moderate volume).
- ◆ **Notification ringtone:** Set selected ringtone as information tones (moderate volume).
- ◆ **The key operation sound:** Open, play key tone while dialing keyboard (moderate volume).
- ◆ **Selection operation sound:** Open, play a sound on the screen selecting (moderate volume).
- ◆ **The lock screen tone:** Open, play a sound when locking and unlocking the screen (moderate volume).
- ◆ **Touch:** After the start, vibration when press soft keys and on certain UI interactions.

(二) Display

- ◆ **Brightness:** Adjust screen brightness.
- ◆ **Wallpaper:** Change the desktop wallpaper, live wallpaper, photos and wallpaper can be chosen from.
- ◆ **Automatic rotary screen:** After open, the screen will automatically switch when the mobile phone is placed vertically.
- ◆ **Animation:** After open, display animation when opening and closing the window, part of the animation and the animation of all.
- ◆ **Dormancy:** Before the screen automatically turns off adjust the delay time, can choose: 15 seconds, 30 seconds, 1 minutes, 2 minutes, 10 minutes and 30 minutes.
- ◆ **Font size:** Set the system font size, small、ordinary、large and extraordinary large choice.

(三) Storage

Display the SD card: including the amount of space, space available, uninstall the SD card and SD card format; **internal storage space:** space of mobile phone available.

(四) Battery

Display the battery usage.

(五) Application program

Display applications that have been downloaded, SD card, the running and all applications.

7.3 Personal

(一) Account

- ◆ **Google:** After binding account, applications will synchronize data by itself.
- ◆ **Add account:** Can add or delete the Google account.

(二) Location services

- ◆ **The use of wireless network:** View application using wireless network (such as Google map) in position.

(四) Safety

- ◆ **Unlock screen:** Press power bright screen appears to unlock the page, including pattern, face unlock, voice unlock, PIN, password and no to choose.
- ◆ **The main information:** Input text that you want to display in the locking screen, screen lock will show that the set of information
- ◆ **SIM card lock:** In order to prevent the illegal use of SIM card, take the PIN code encryption protection; **locking the SIM card:** After opening, every time you boot must enter the PIN code, so you can unlock the SIM card, and then make or receive calls, users can also remove SIM protection; **change PIN Code of SIM card:** modified PIN code as password that you often use, so that memory (note that must be able to change the PIN in case of PIN opening). After modifying the PIN, please keep in mind the modified PIN code, if necessary, please contact the repair service providers.

(四) Language and input method

- ◆ **The language settings:** You can switch the language, support for multiple languages.
- ◆ **Keyboard settings:** Set the installed input method.
- ◆ **Input method:** Select the text input method, such as Google, Xunfei.

(五) Backup and reset

- ◆ **Backup my data:** After opening, backup some of your own settings and download some applications.
- ◆ **Automatic reduction:** When the backup data, reinstall an application, the system will restore backed up settings or other data.

- ◆ **Restore factory settings:** Factory data reset will restore to factory default value of the mobile phone, please be careful!

7.4 System

(一) Date and time

- ◆ **Set the date:** Select date by sliding digital in screen.
- ◆ **Select time zone:** Select the current time zone, China standard time (Beijing): GMT + 08:00.
- ◆ **Setup time:** Select time by sliding digital in screen.
- ◆ **Use the 24 hour format:** After selection, time format is 24 hours, not selected for 12 hour format.

(二) Timer switch machine

- ◆ **ON:** Set a specific time, when the time comes, the mobile phone will automatically startup.
- ◆ **OFF:** Set a specific time, when the time comes, mobile phone prompts whether to shut down, after 30 seconds, if no selection, the mobile phone will automatically shut down.

(三) The auxiliary function

- ◆ **Press the power button to end the call:** You can end the call by pressing power button.
- ◆ **Fast startup:** When shutdown restarts, not completely off, restart the speed will more quickly.

(四) Developers options

It is mainly connected USB debugging, other options for optimizing system.

(五) About the mobile phone

View state information of mobile phone, battery usage, product name, version number etc.

When using the USB data line to link the mobile phone and computer, mobile phones interface popup the following interface:



You can interact with the computer only by clicking to open the USB storage device, otherwise cannot interact, when you open a USB storage device, the icon will show off USB storage device, when you click again the mobile phone and the computer will stop interaction.

If the mobile phone interface does not jump out of the interface or you want to check whether they have a connection, you can pull out the status bar USB has been linked to the icon in the notification interface; click it to enter the interface view.

If you need USB mode, you only need open the mobile phone settings > applications > > >>USB development mode, and connects the mobile phone with computer through the USB data line.

FCC NOTE:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER' S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types PD001 (FCC ID: 2ACH5-PD001 has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use when properly worn on the body is 1.0913W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.